




Homemade angle grinder stand PLANS

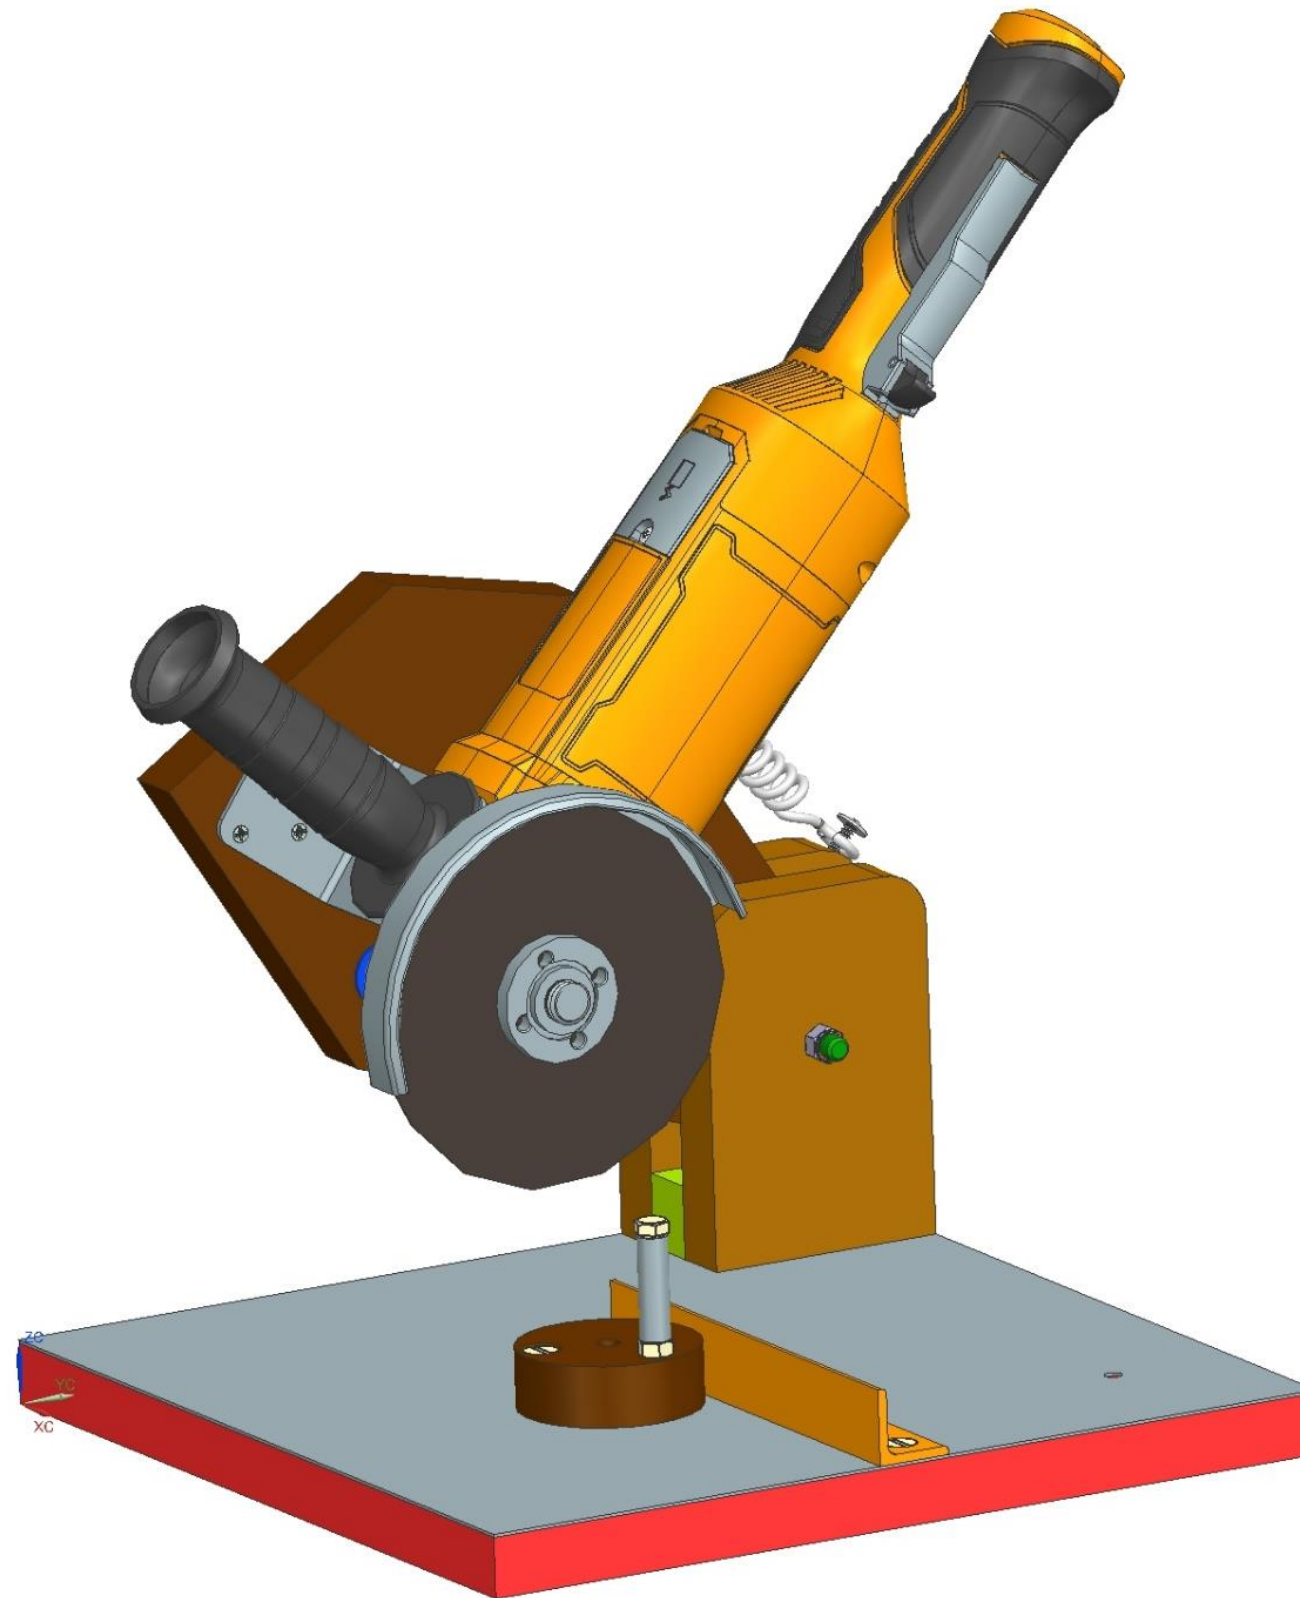


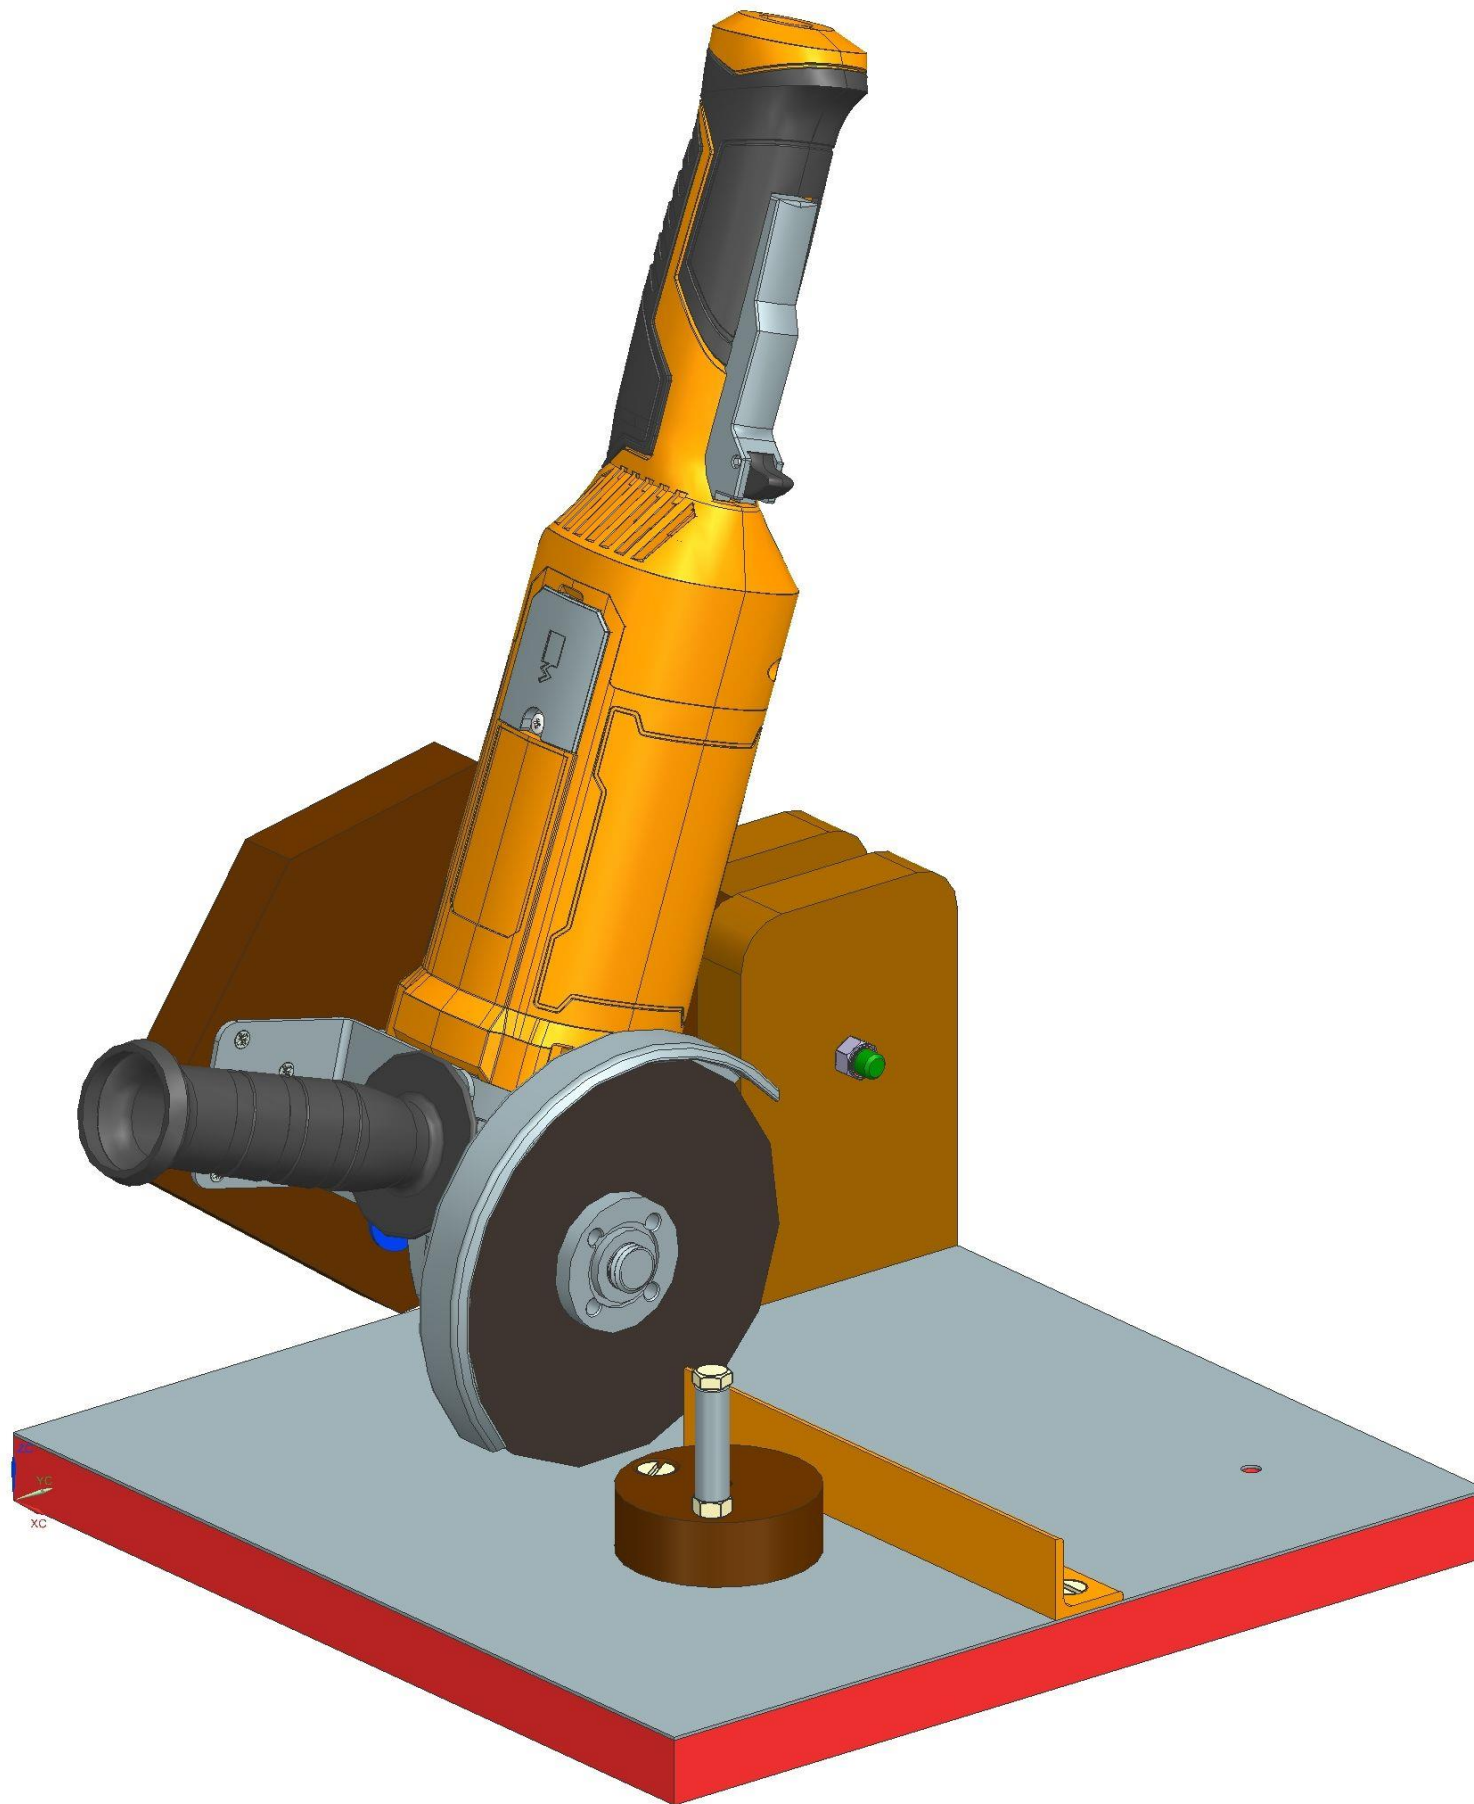



Materials:


1. [Bolt M6 x 60](#) x 1
2. [Bolt M8x12](#) x 1
3. [Bolt M8 x 40](#) x 1
4. [Bolt M8 x 60](#) x 1
5. [Flat Head Machine Screw M6x20](#) x 2
6. [Flat Head Machine Screw M6x30](#) x 1
7. [Locknut M8](#) x 2
8. [Nut M6](#) x 3
9. [Nut M8](#) x 2
10. [T-nut M8](#) x 2
11. [Spring](#)
12. [Threaded Insert M6](#) x 3
13. [Threaded rod M8](#), length=85 mm
14. [Truss head Wood Screw, L=32mm](#) x 2
15. [Galvanized Steel Sheet](#)
16. Plywood 20 mm
17. [Stainless steel tube](#) 10x1, L= (60+34) = 104 mm
18. Steel angle 50x58x2, L=650 x 2
19. [Steel angle 25x25x3 mm](#), L=145 x 1
20. [Wood Screws 3.5x19](#)

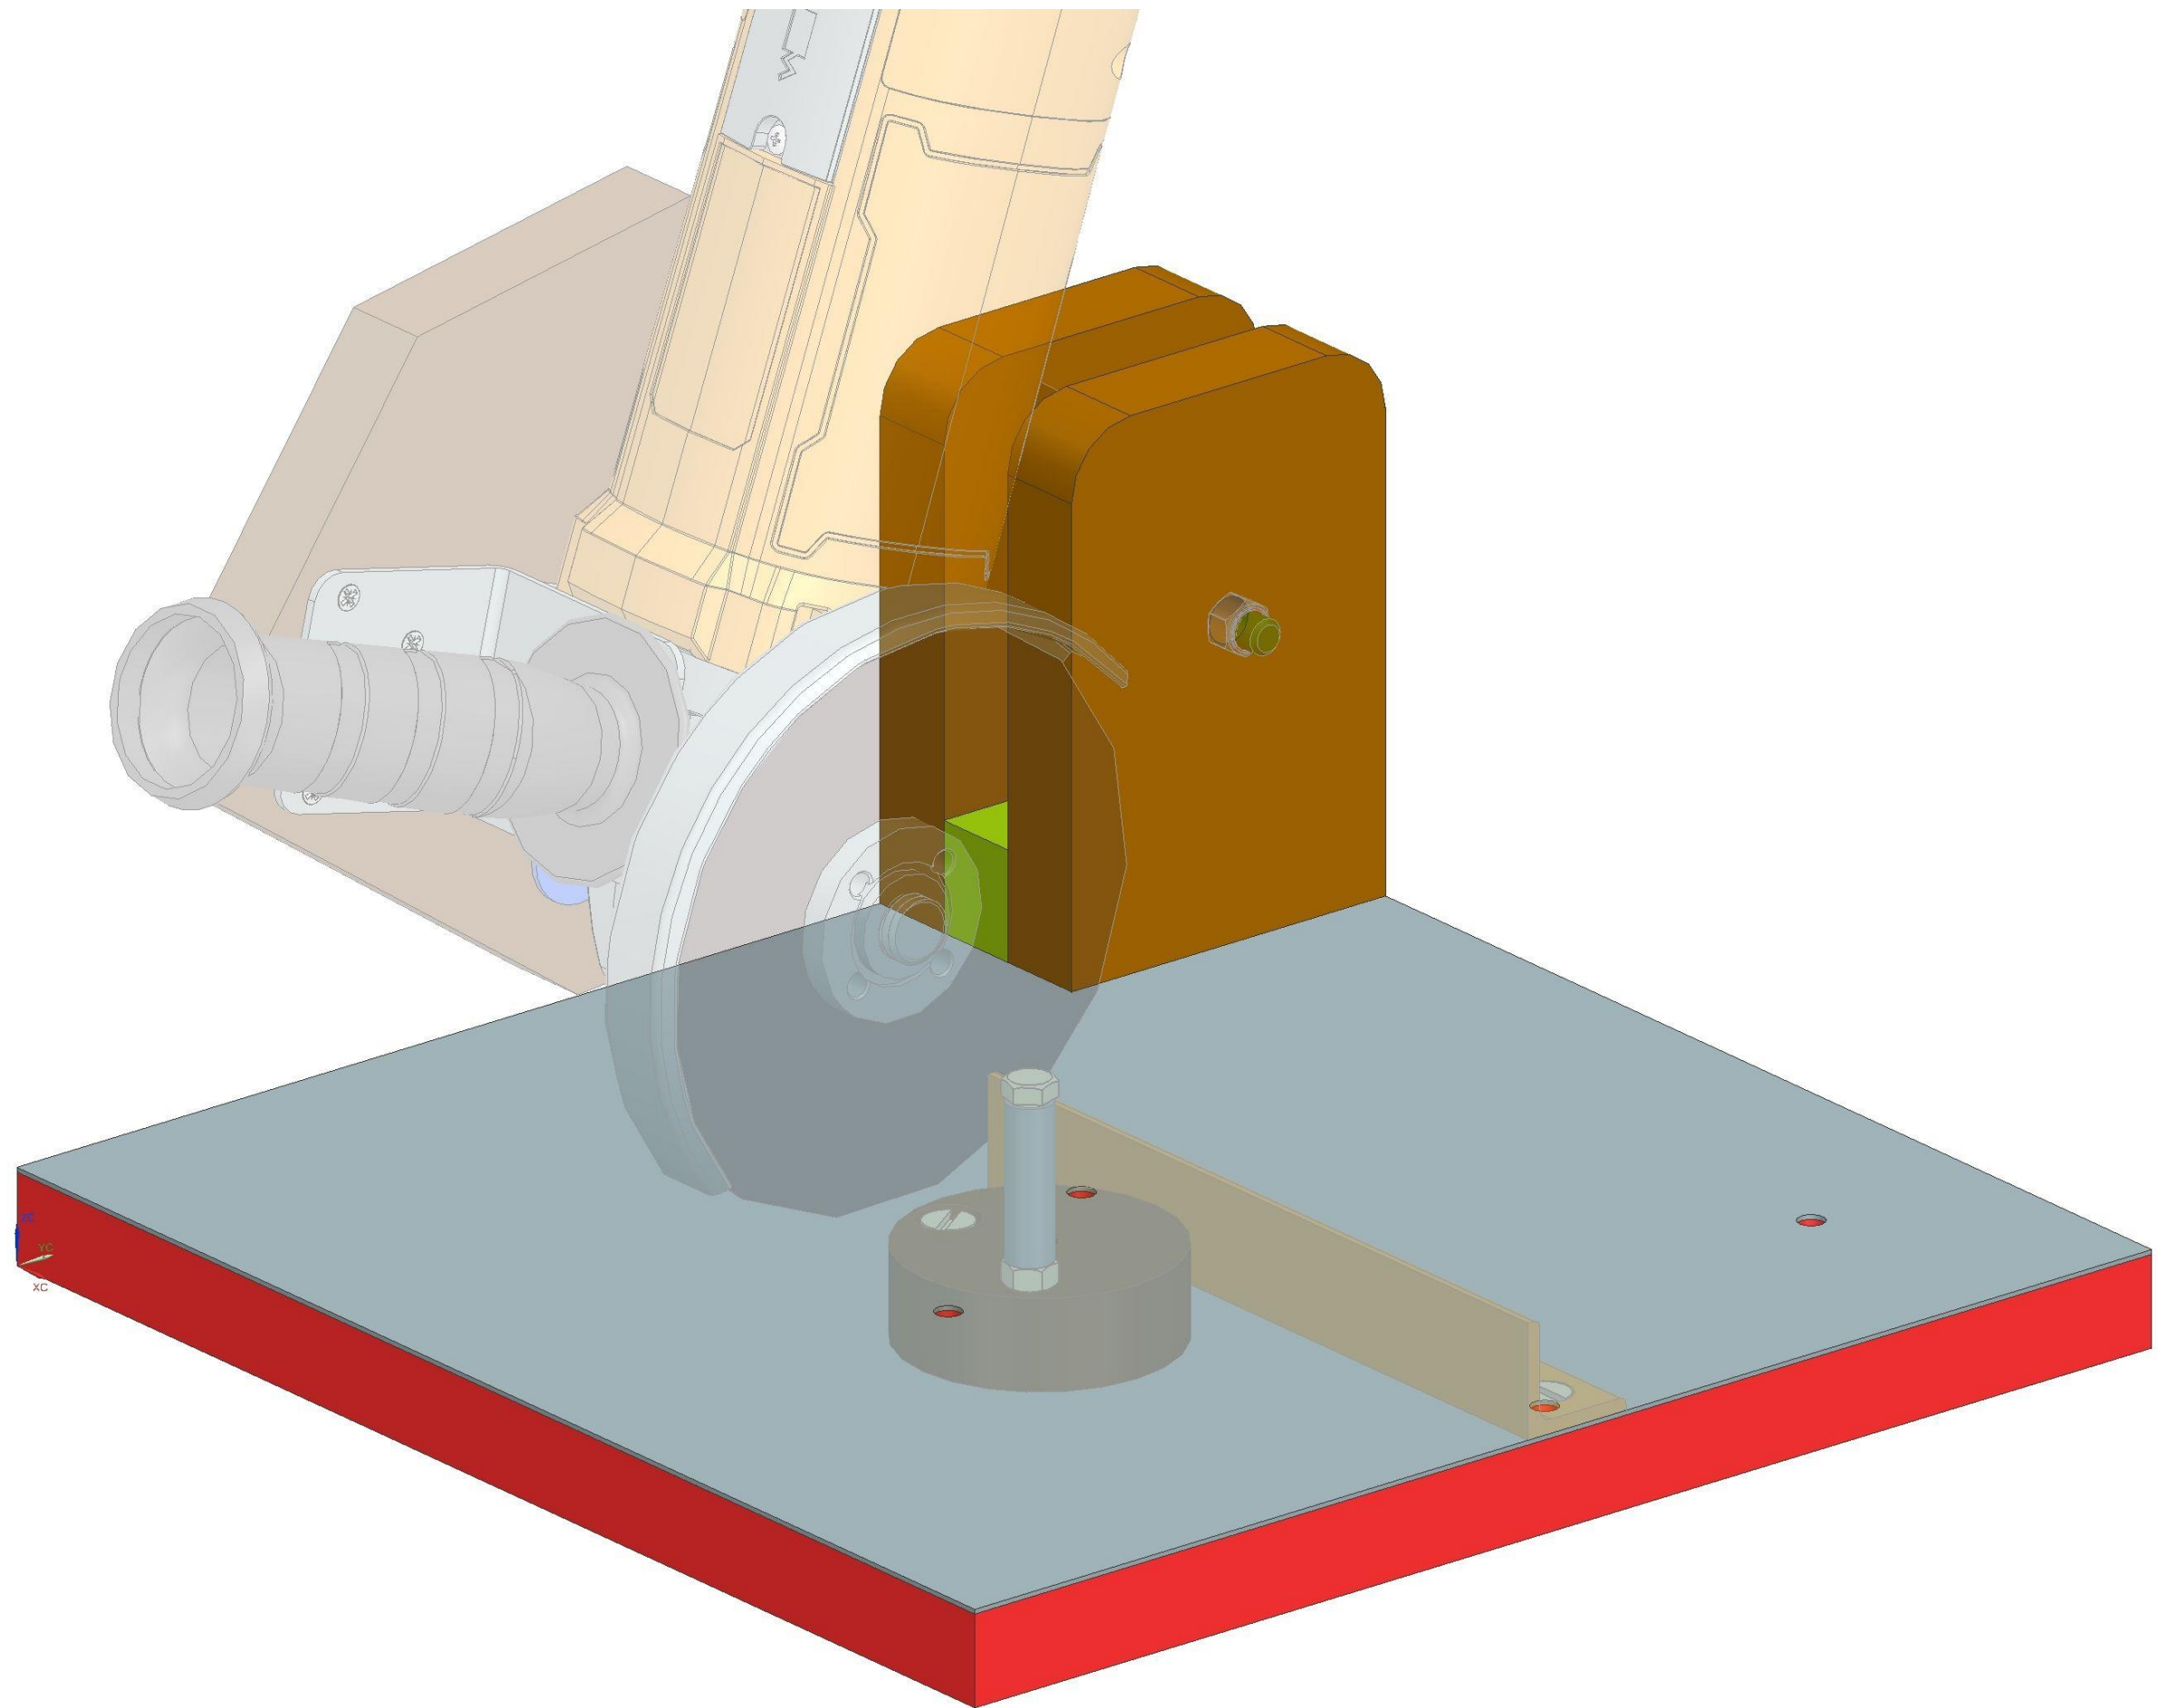


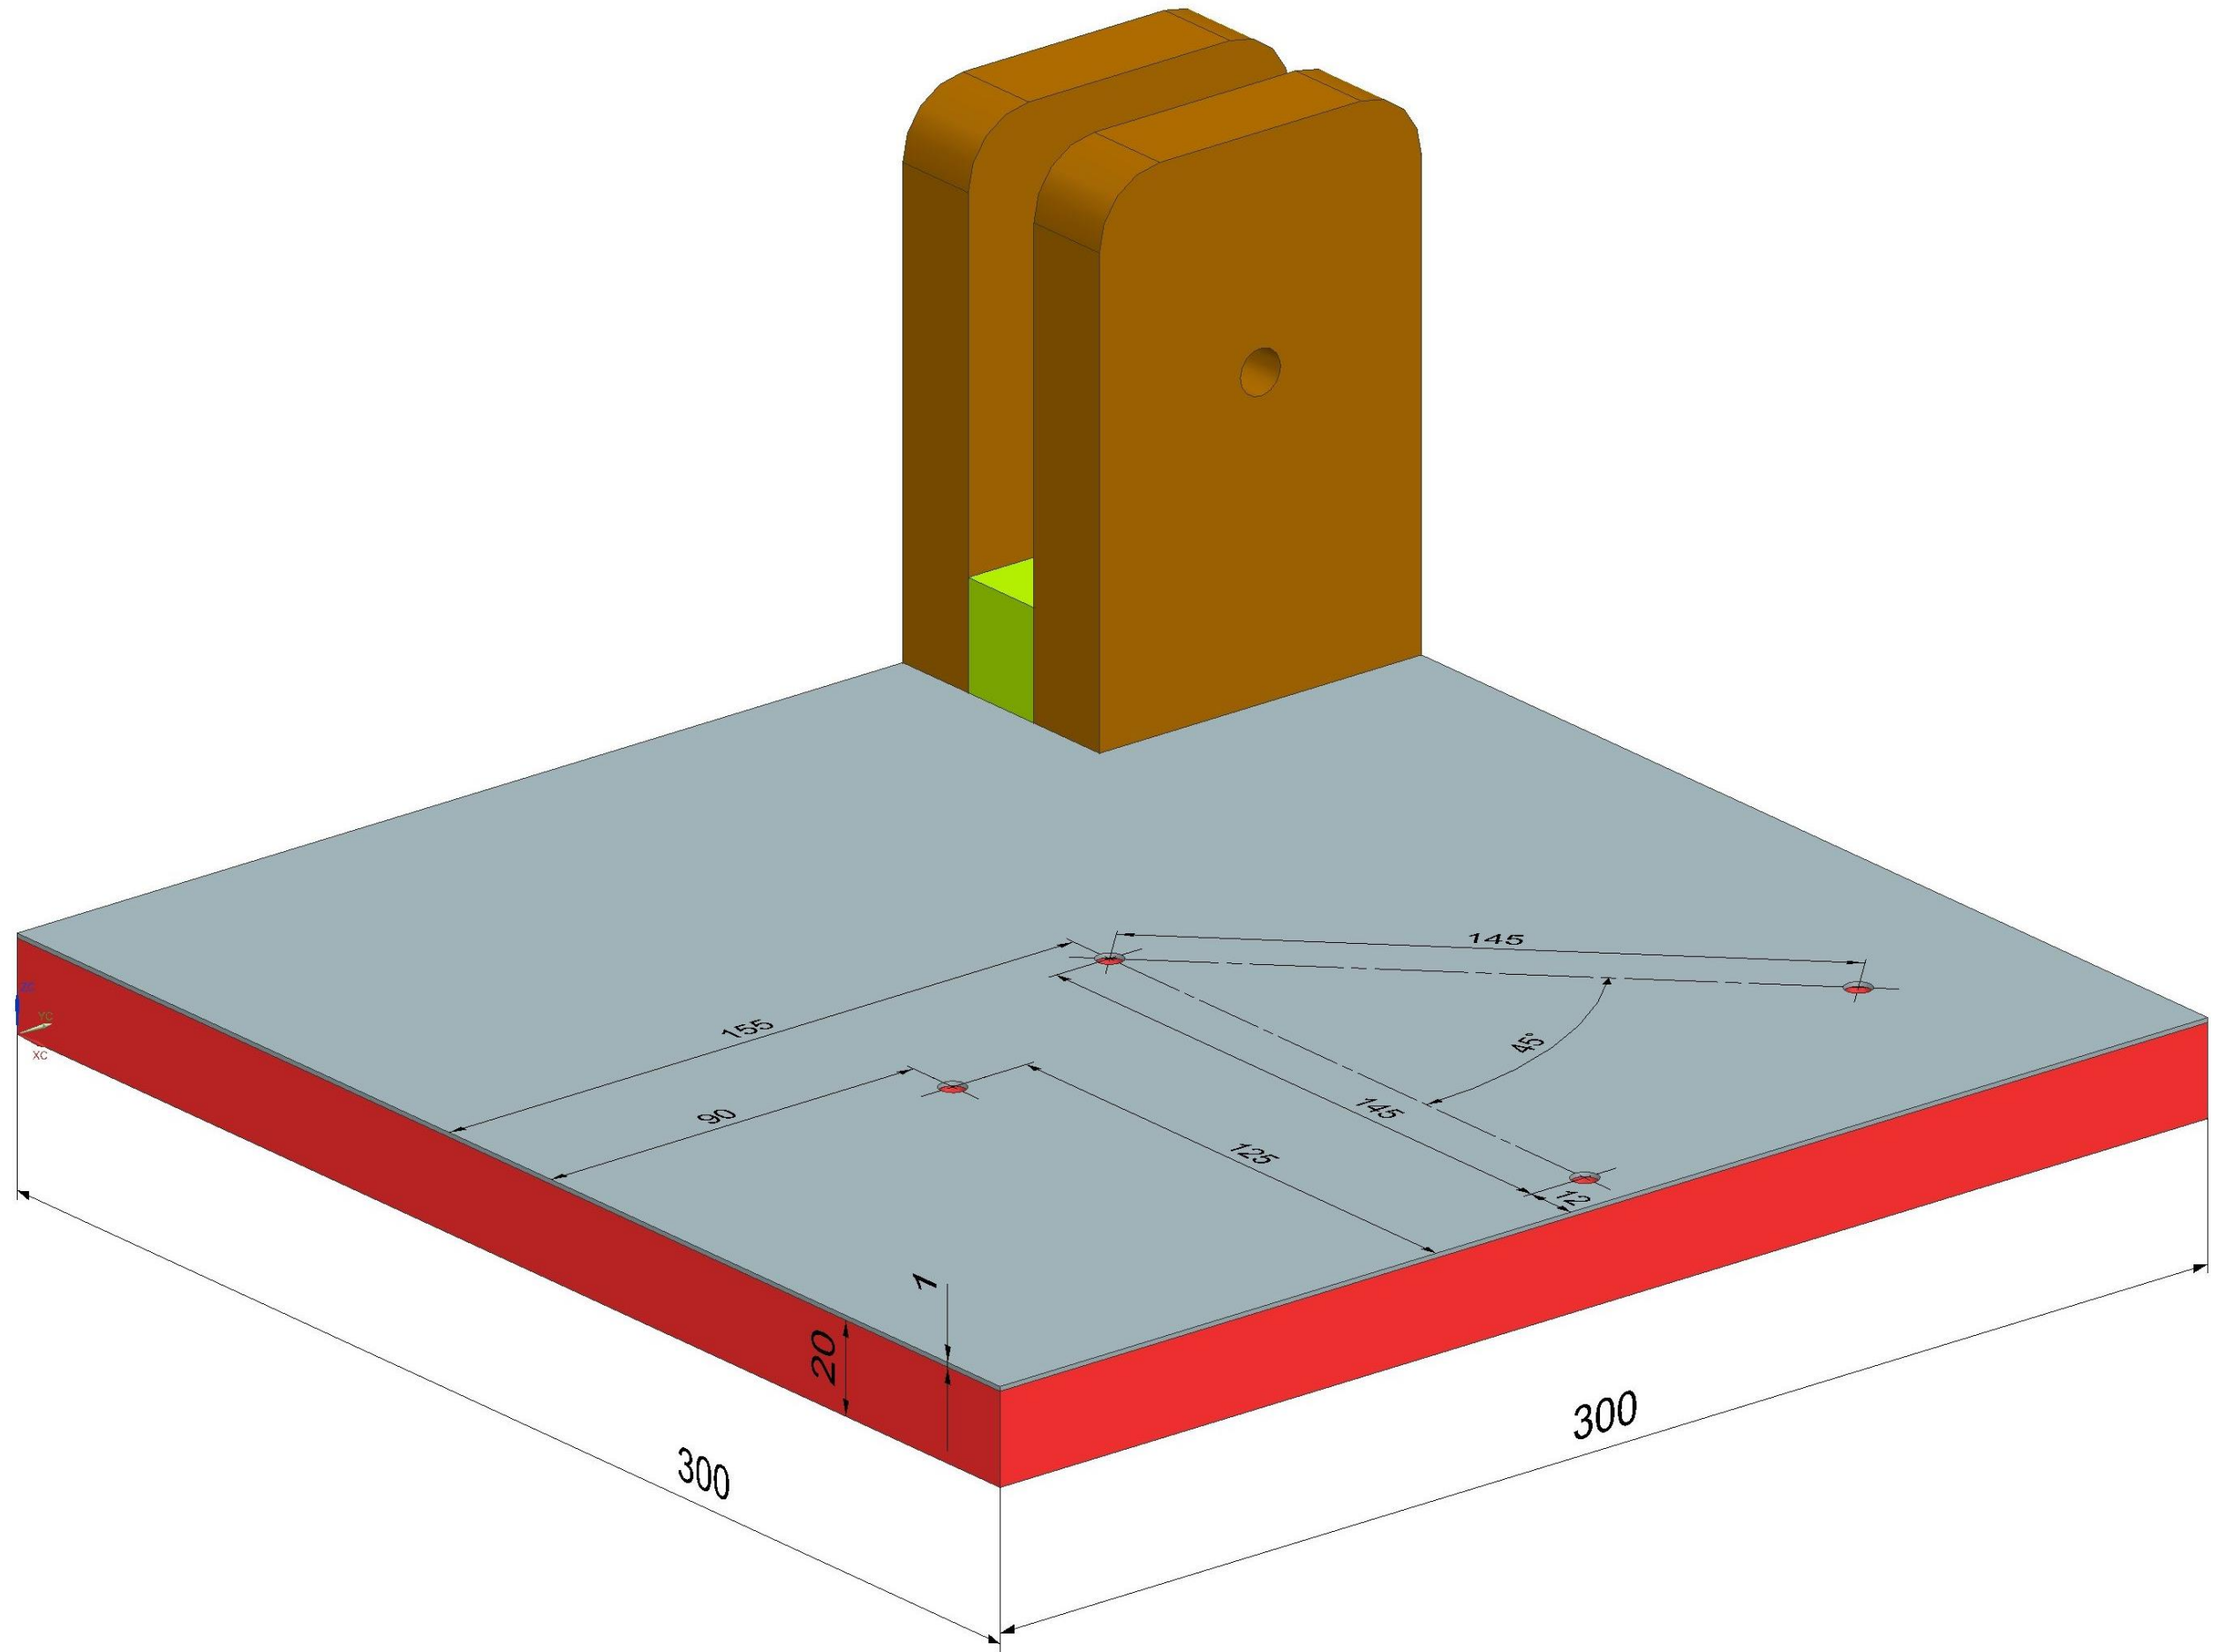


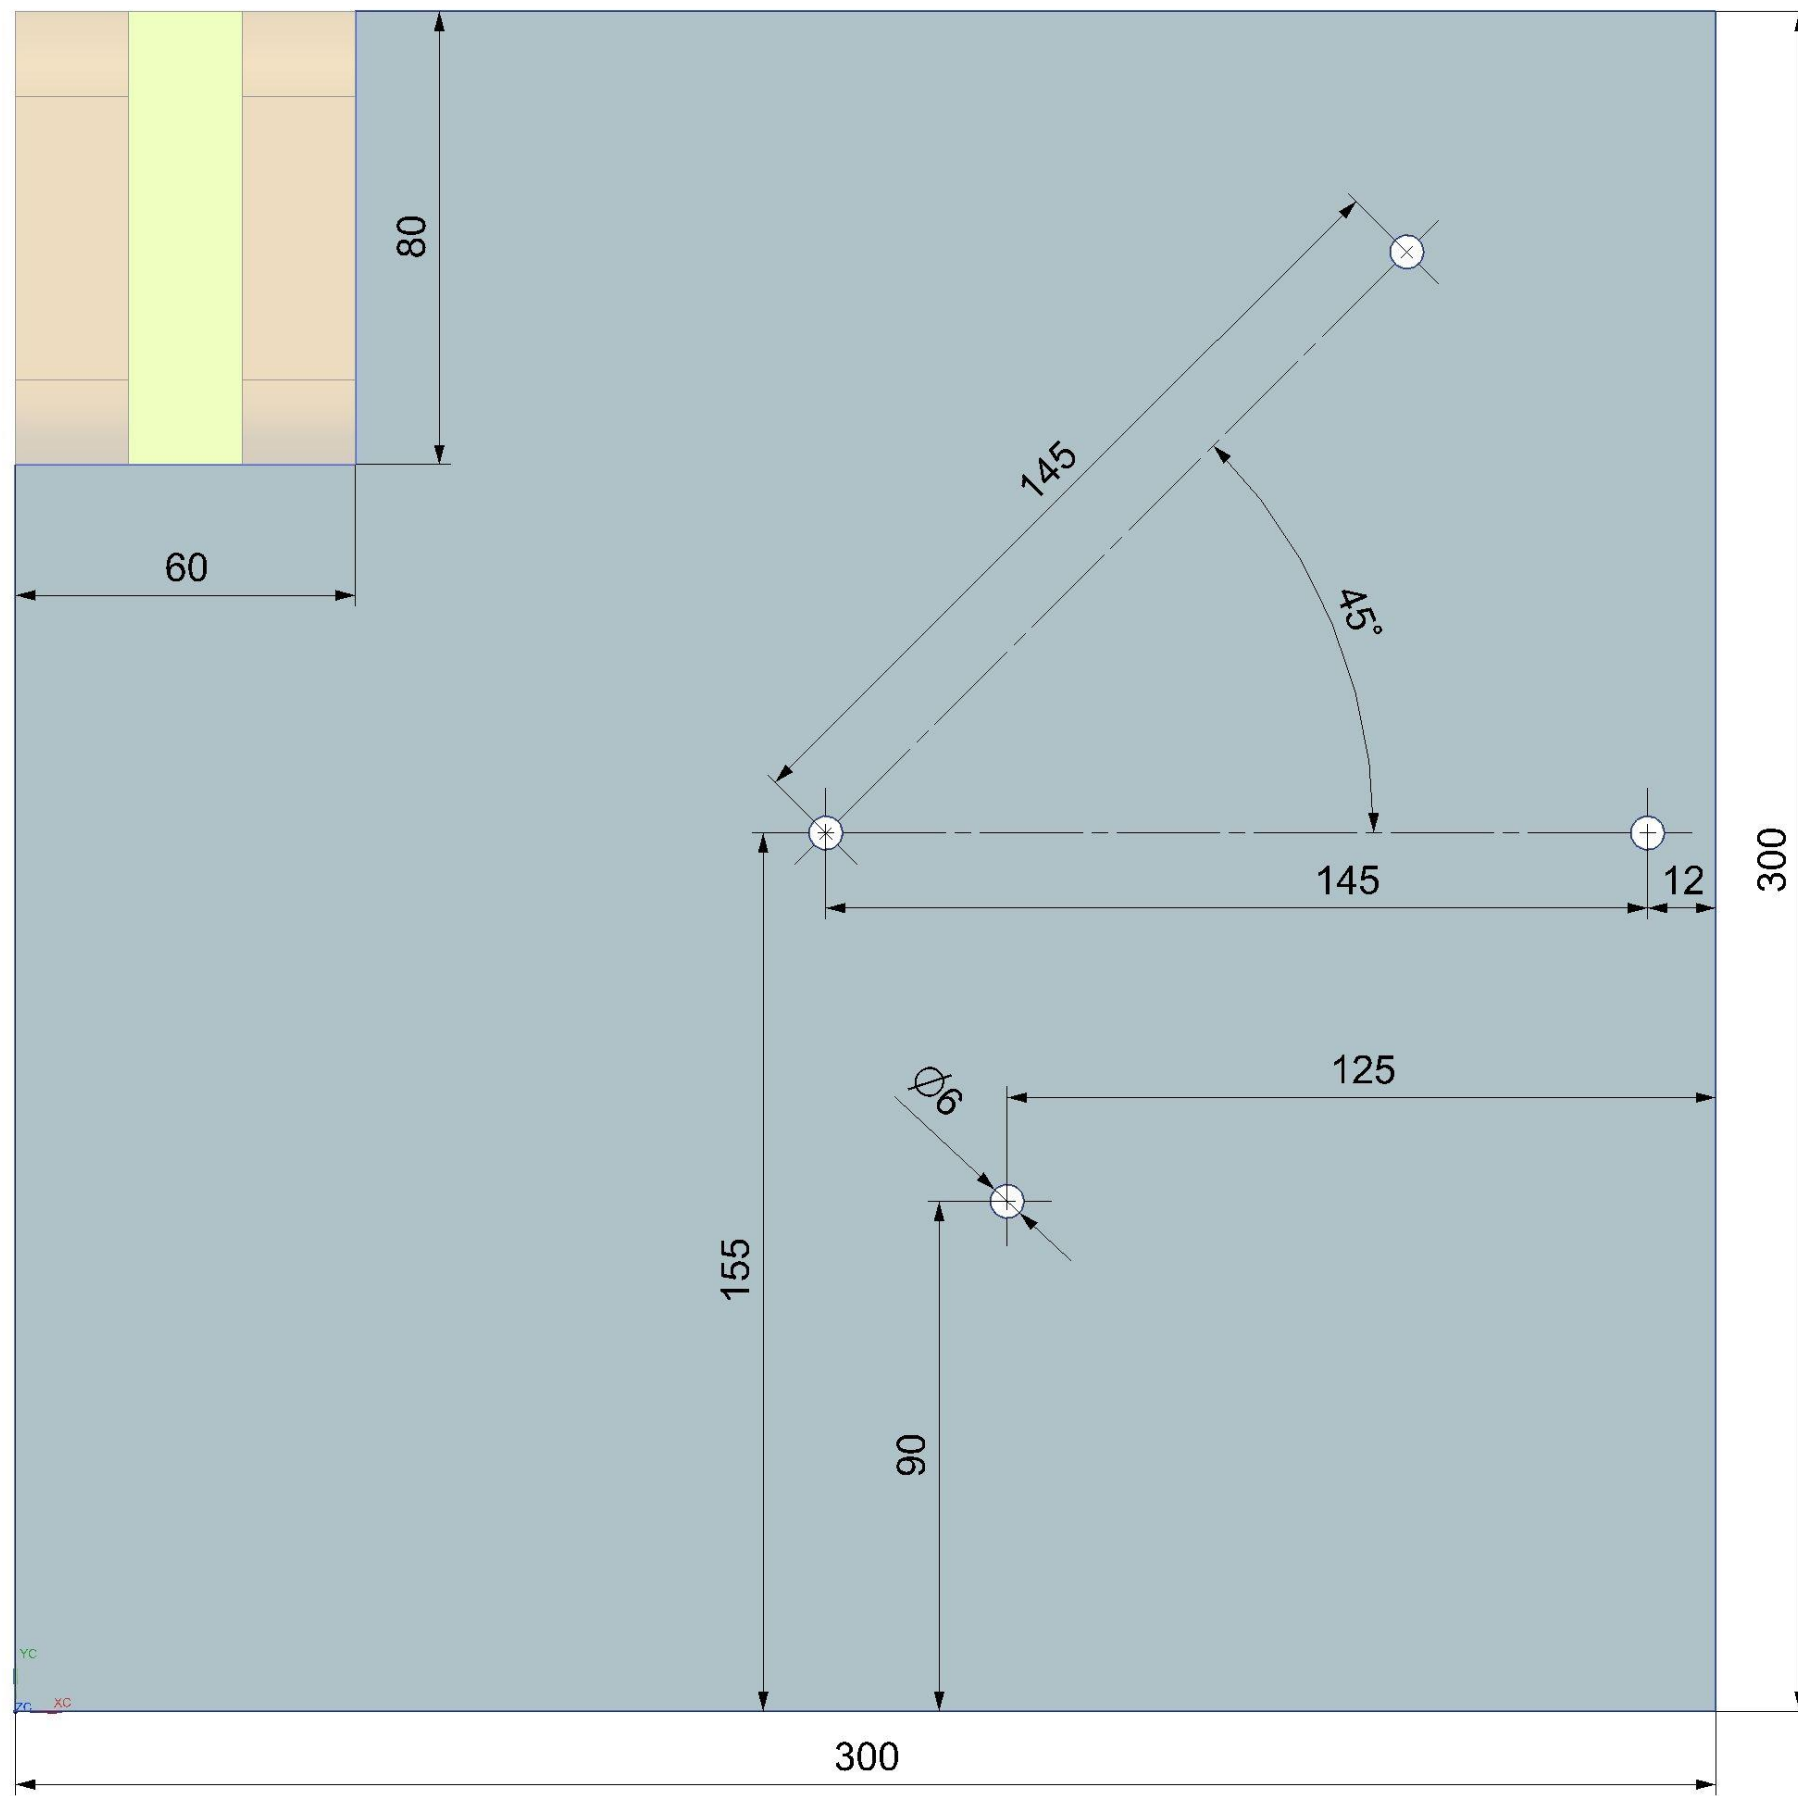


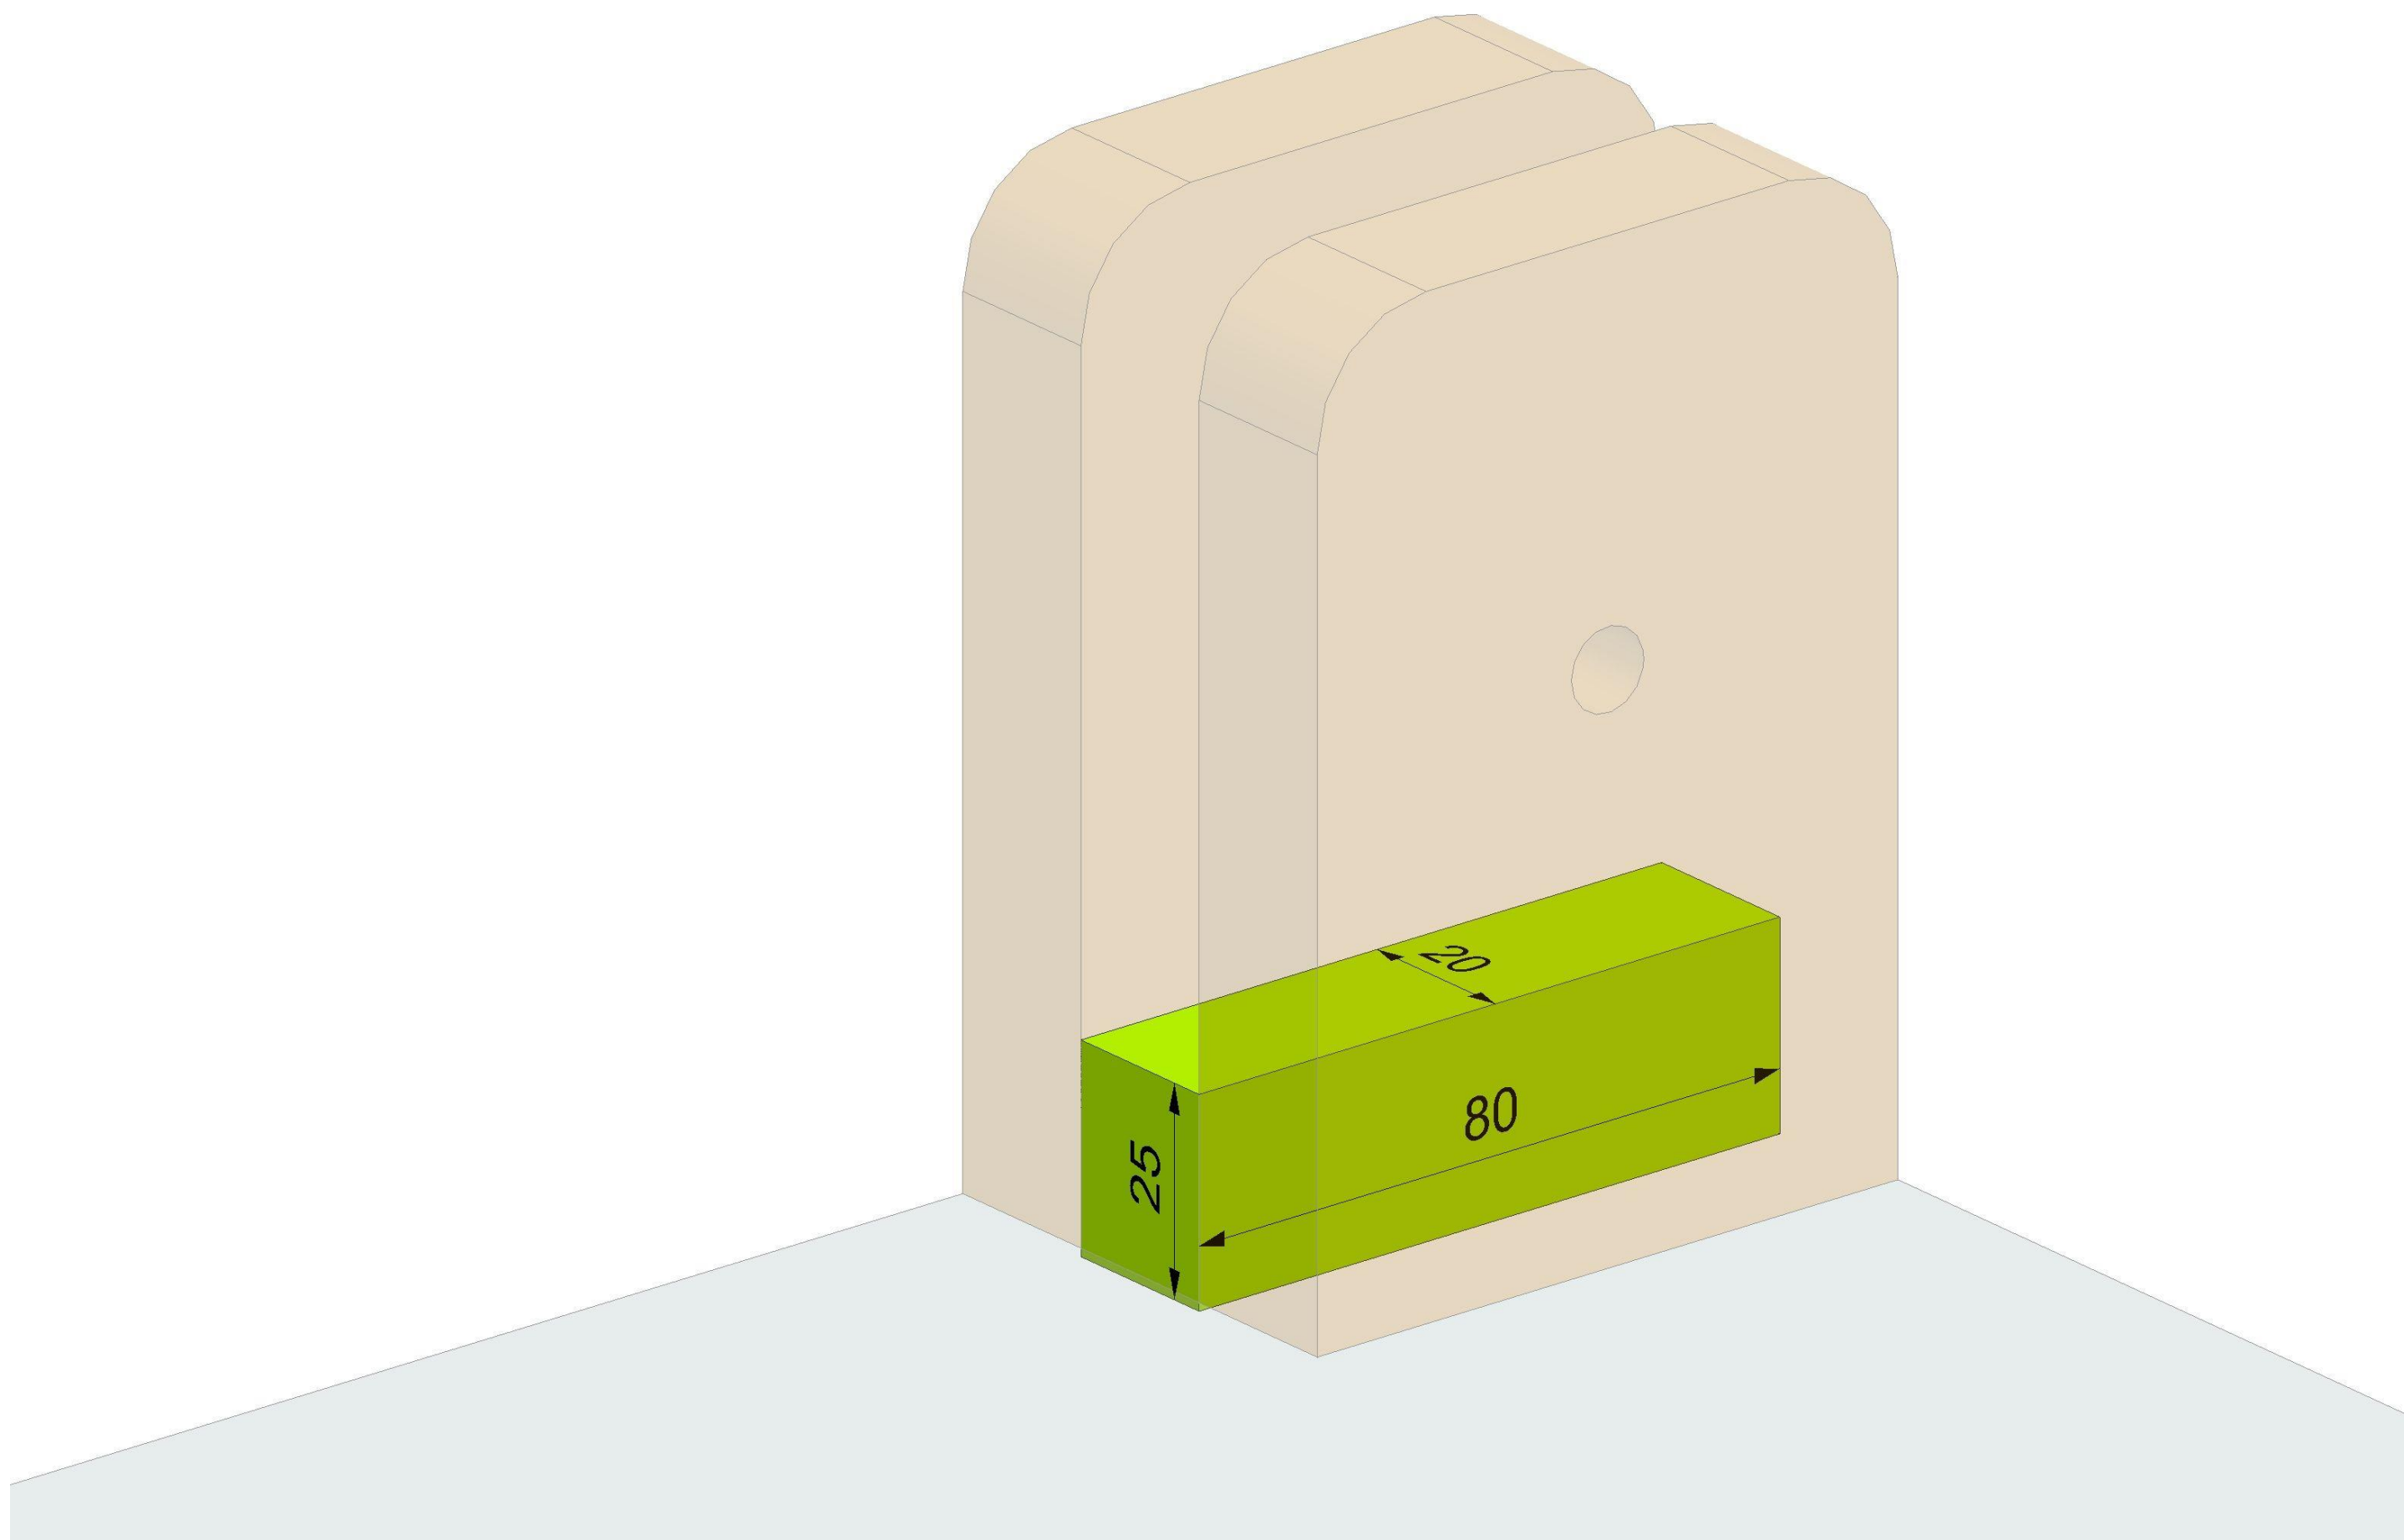

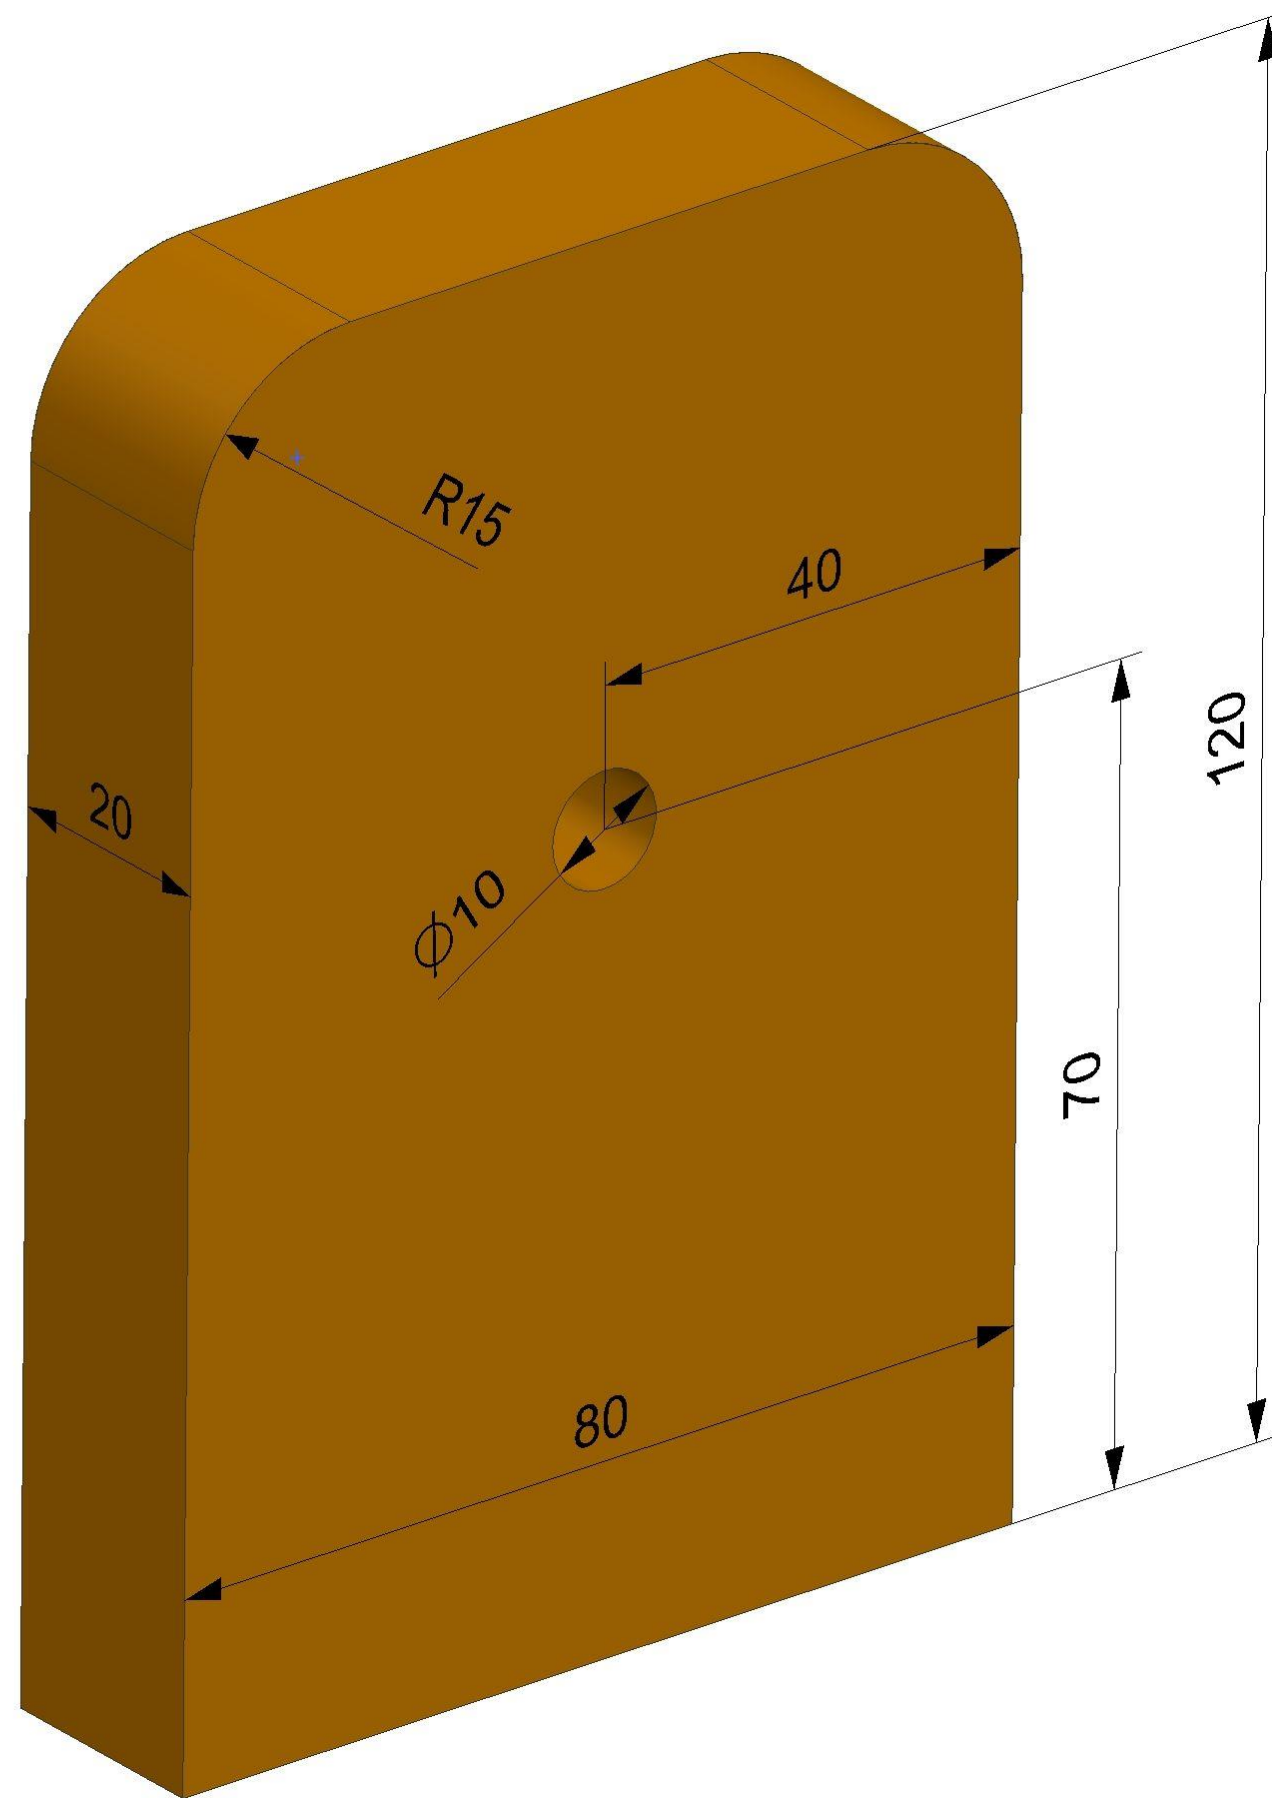

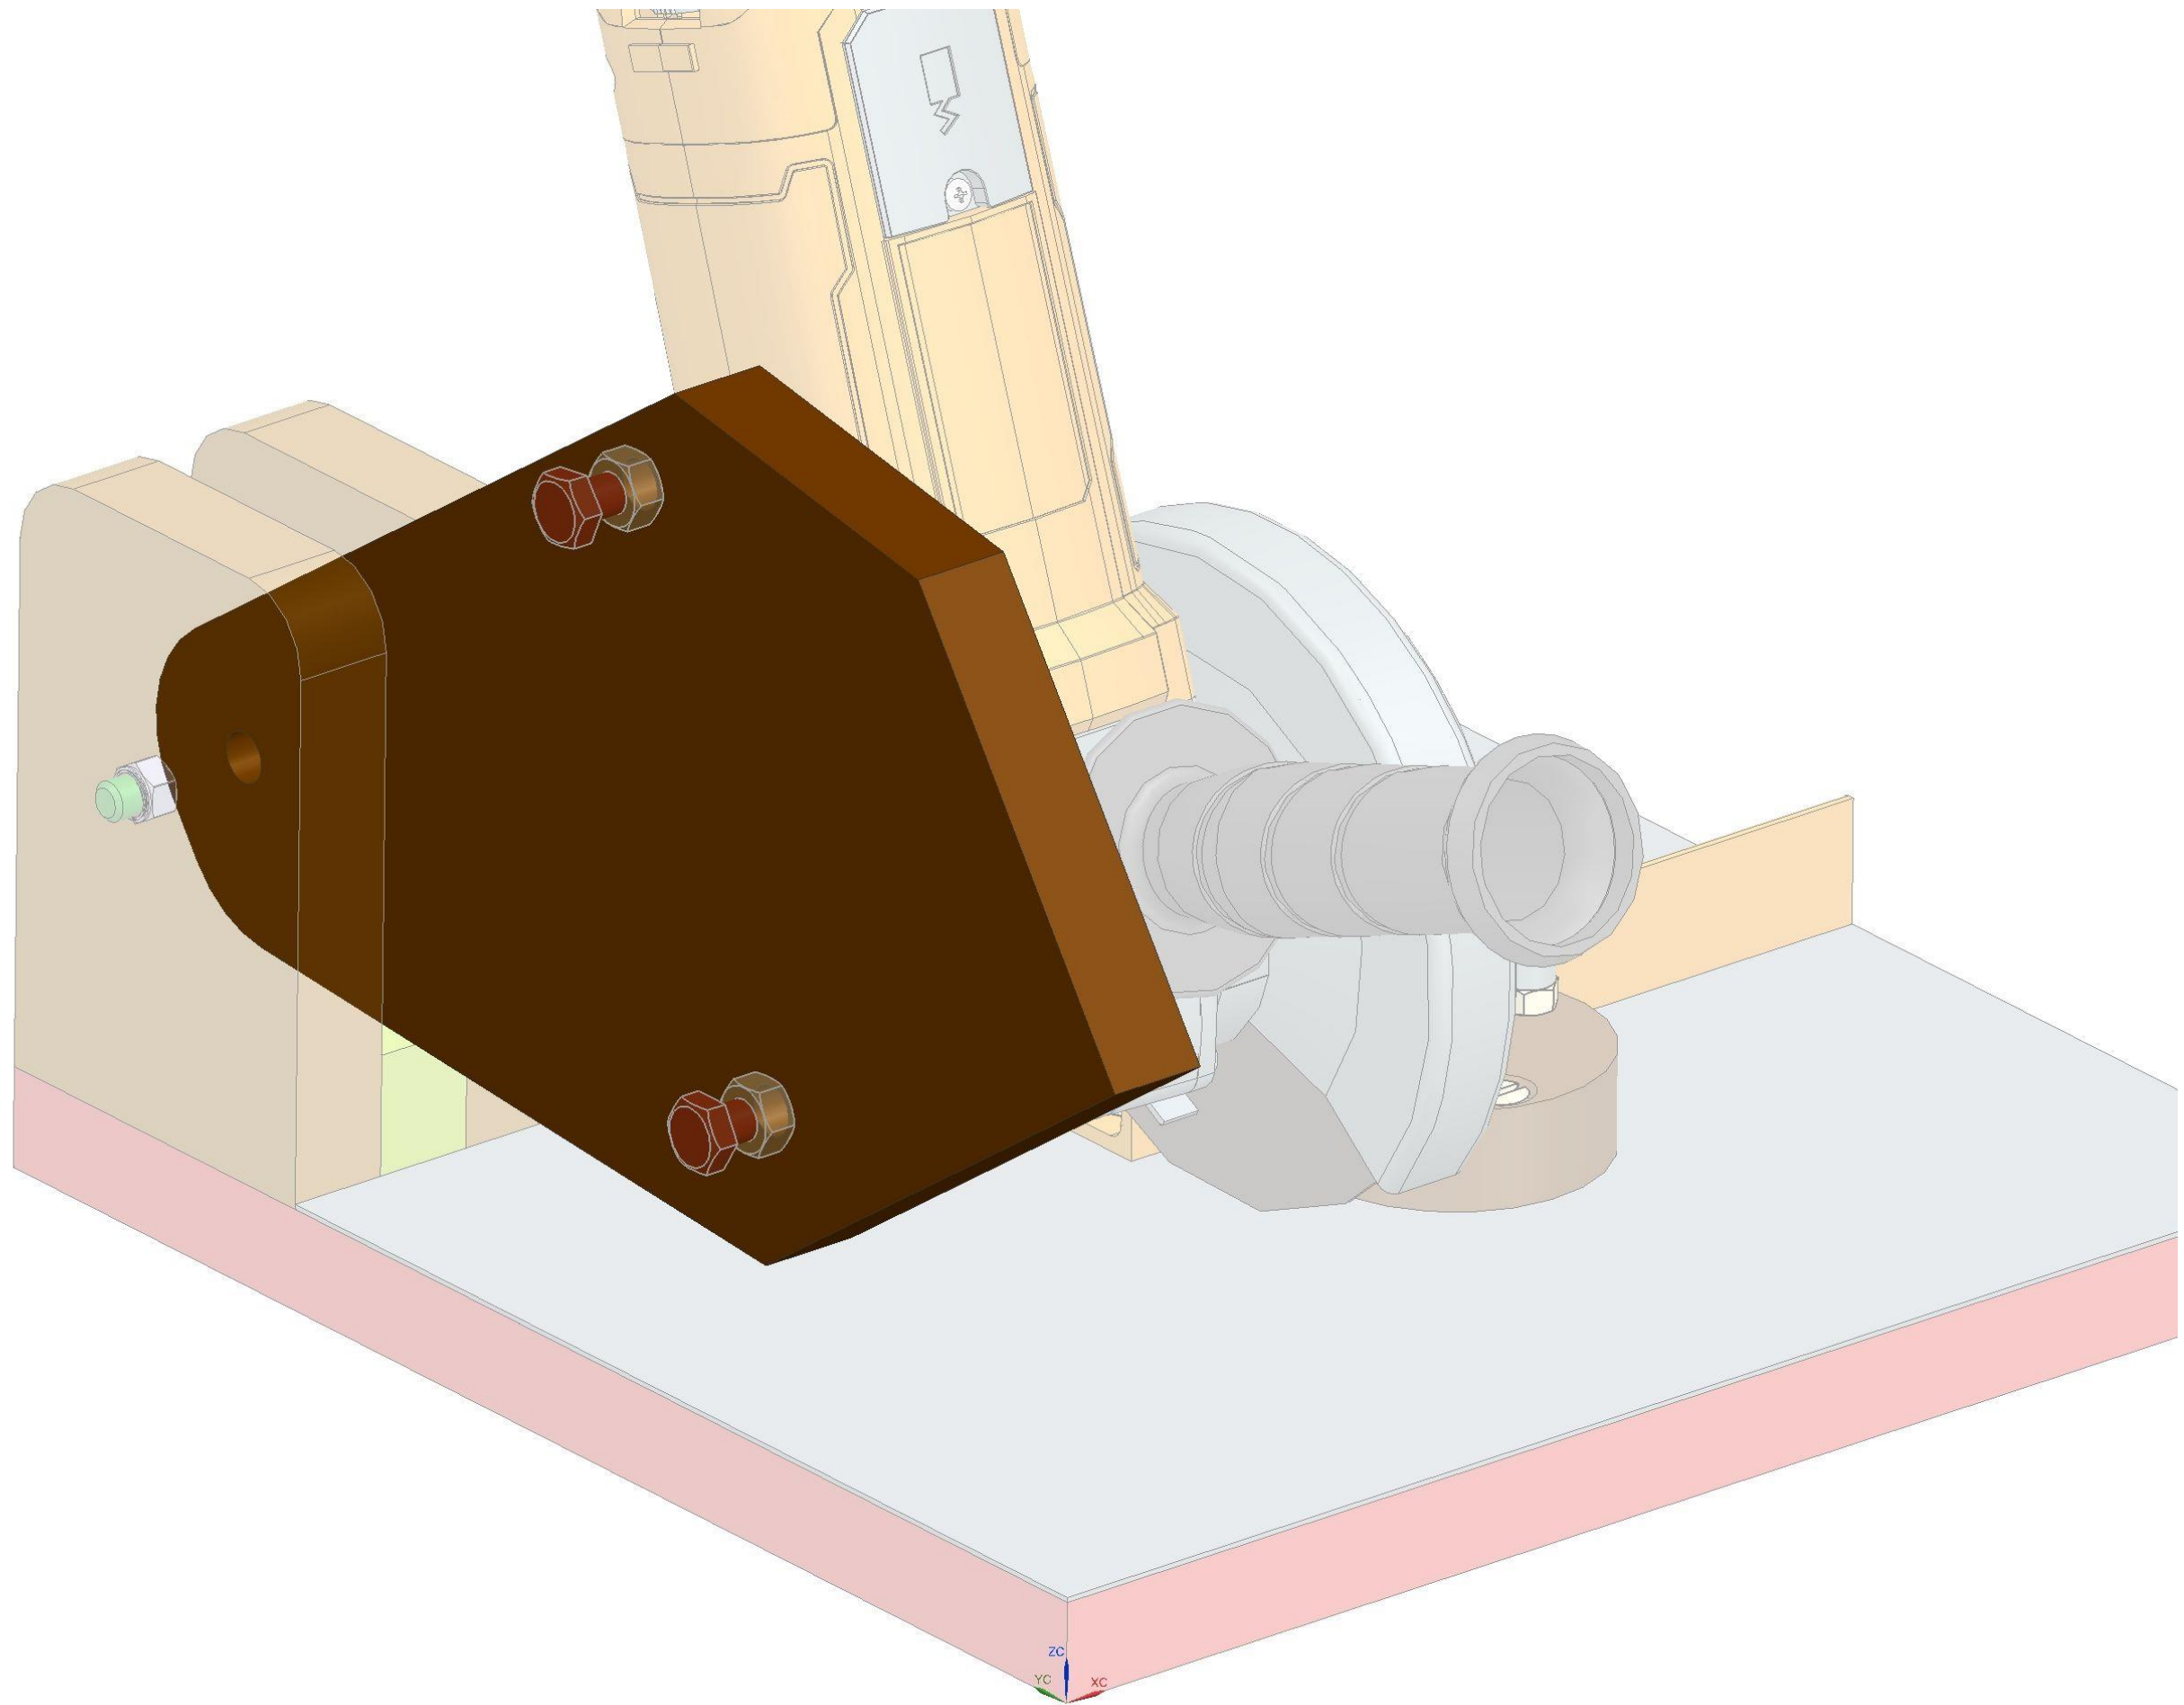


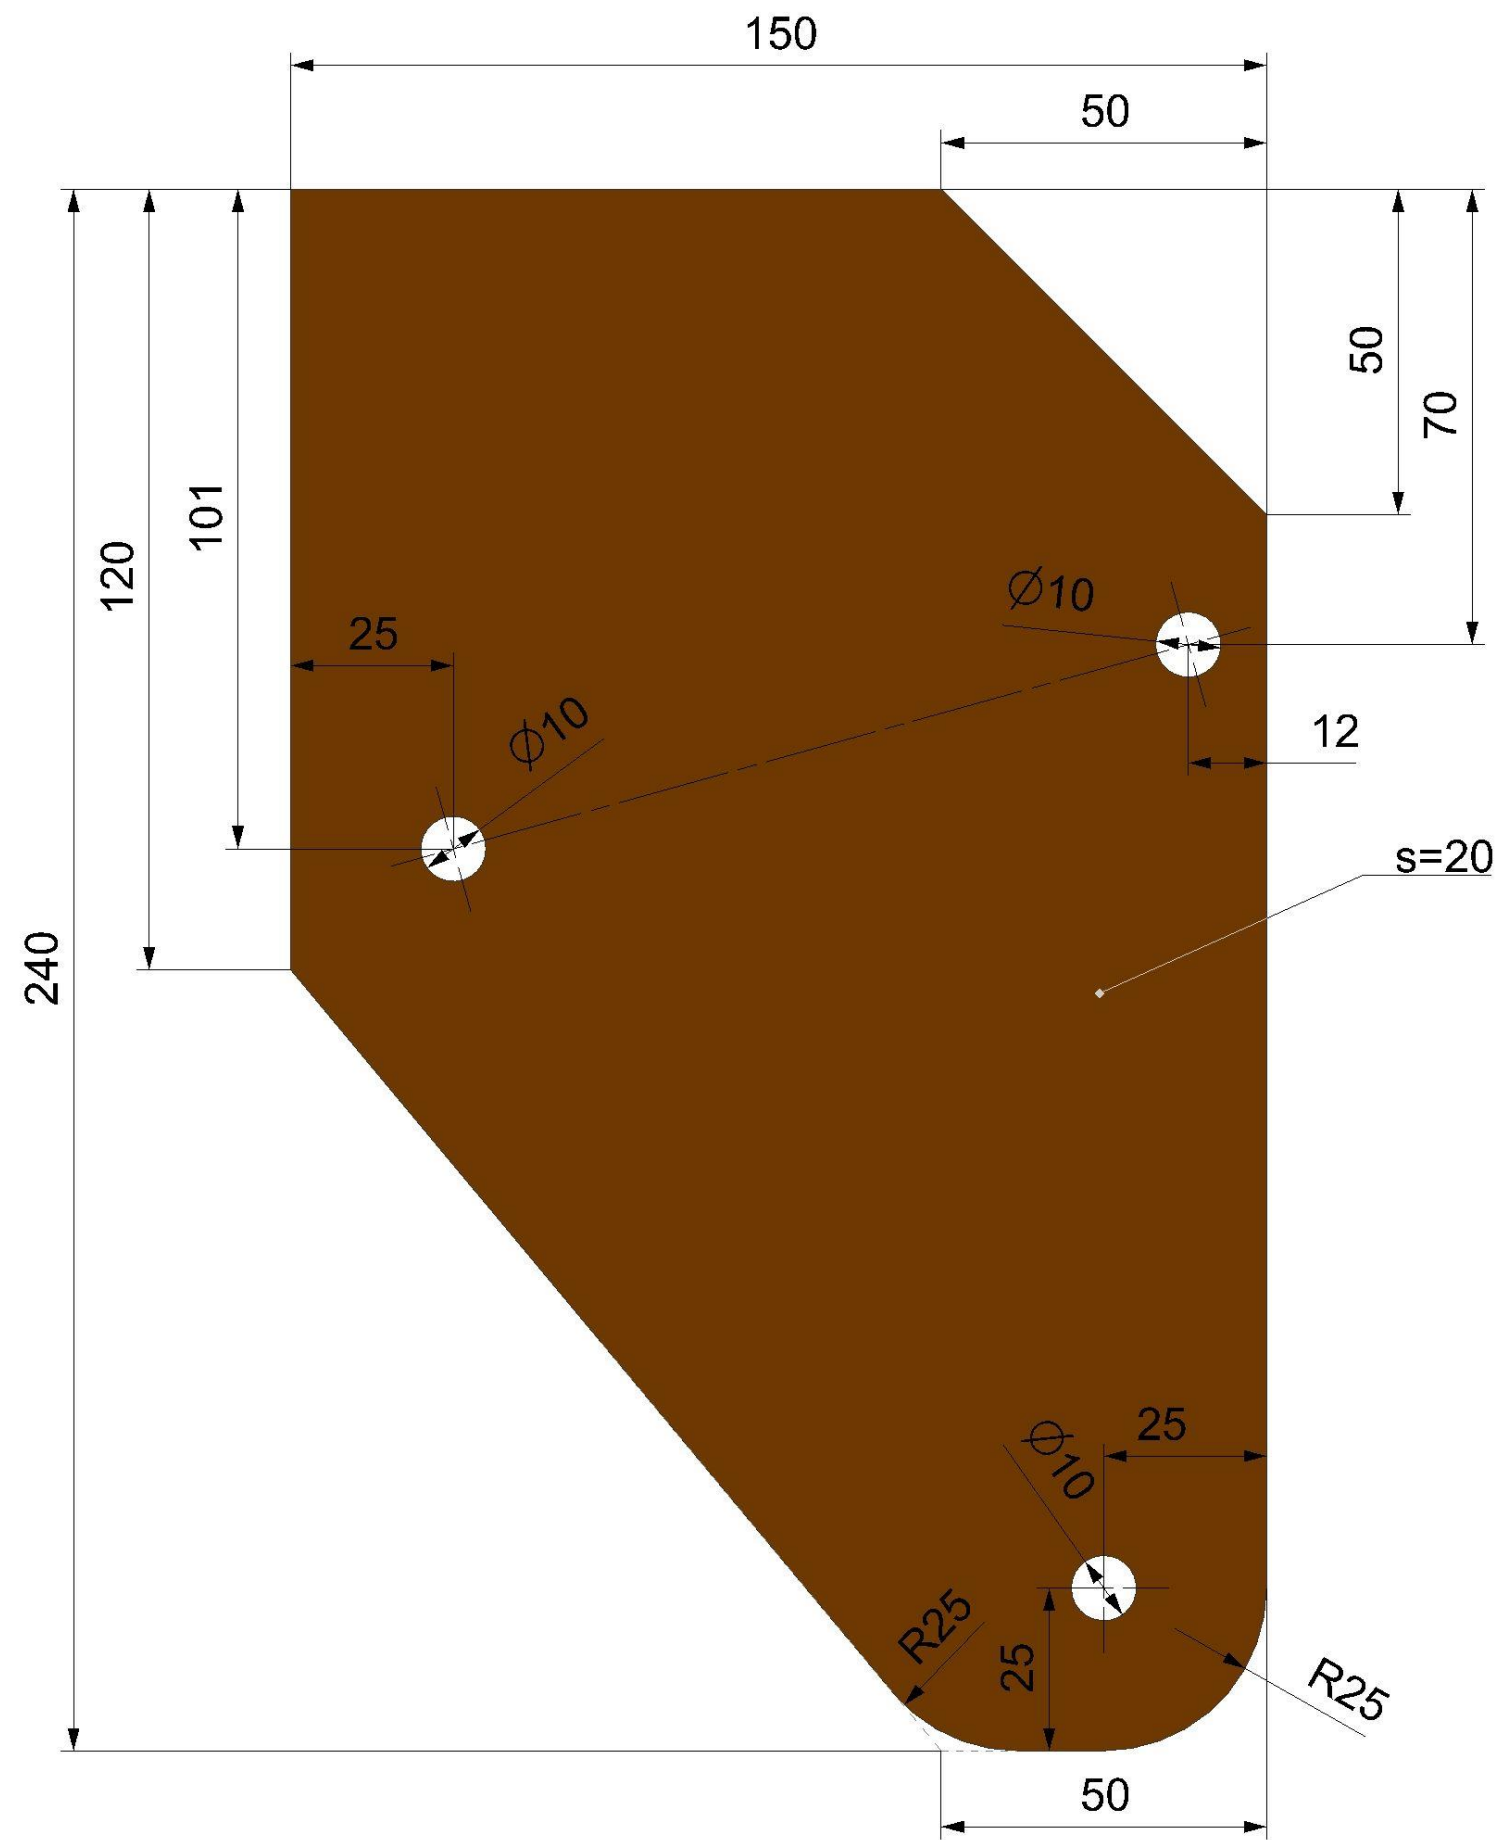


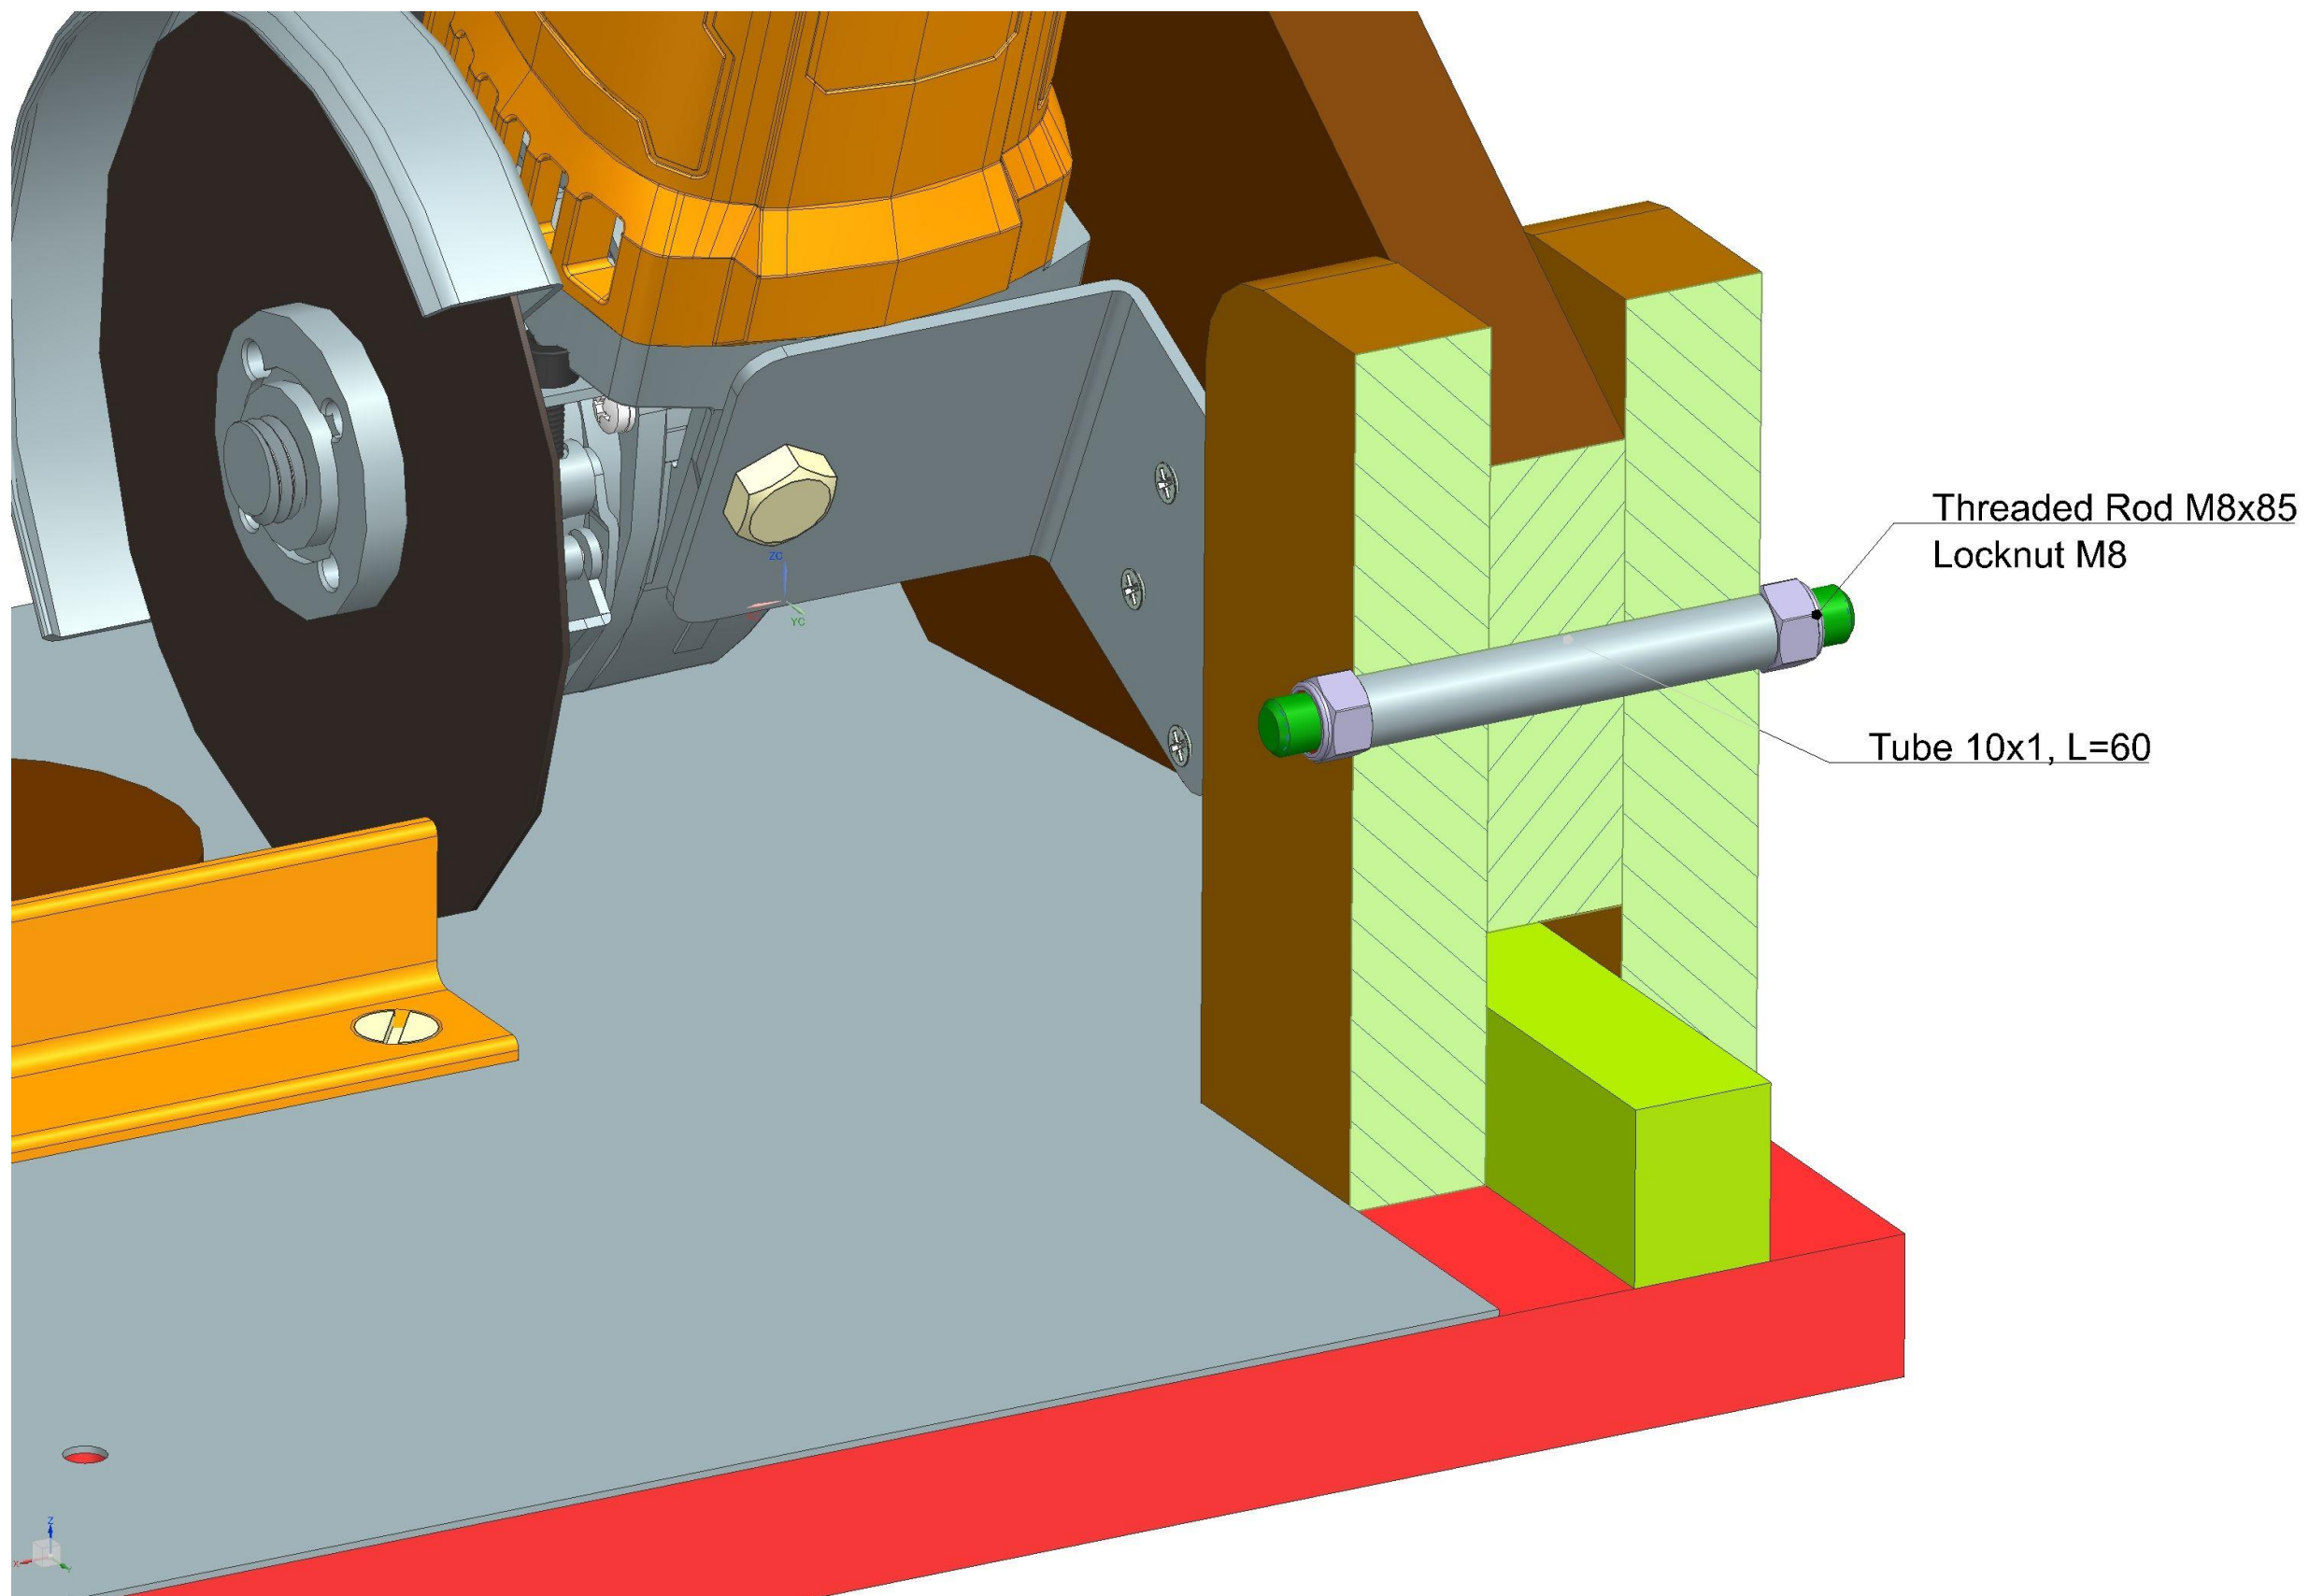



Fasteners:


- [Threaded rod M8x85](#)
- [Locknut M8](#)
- [Stainless steel tube 10x1, L=60mm](#)

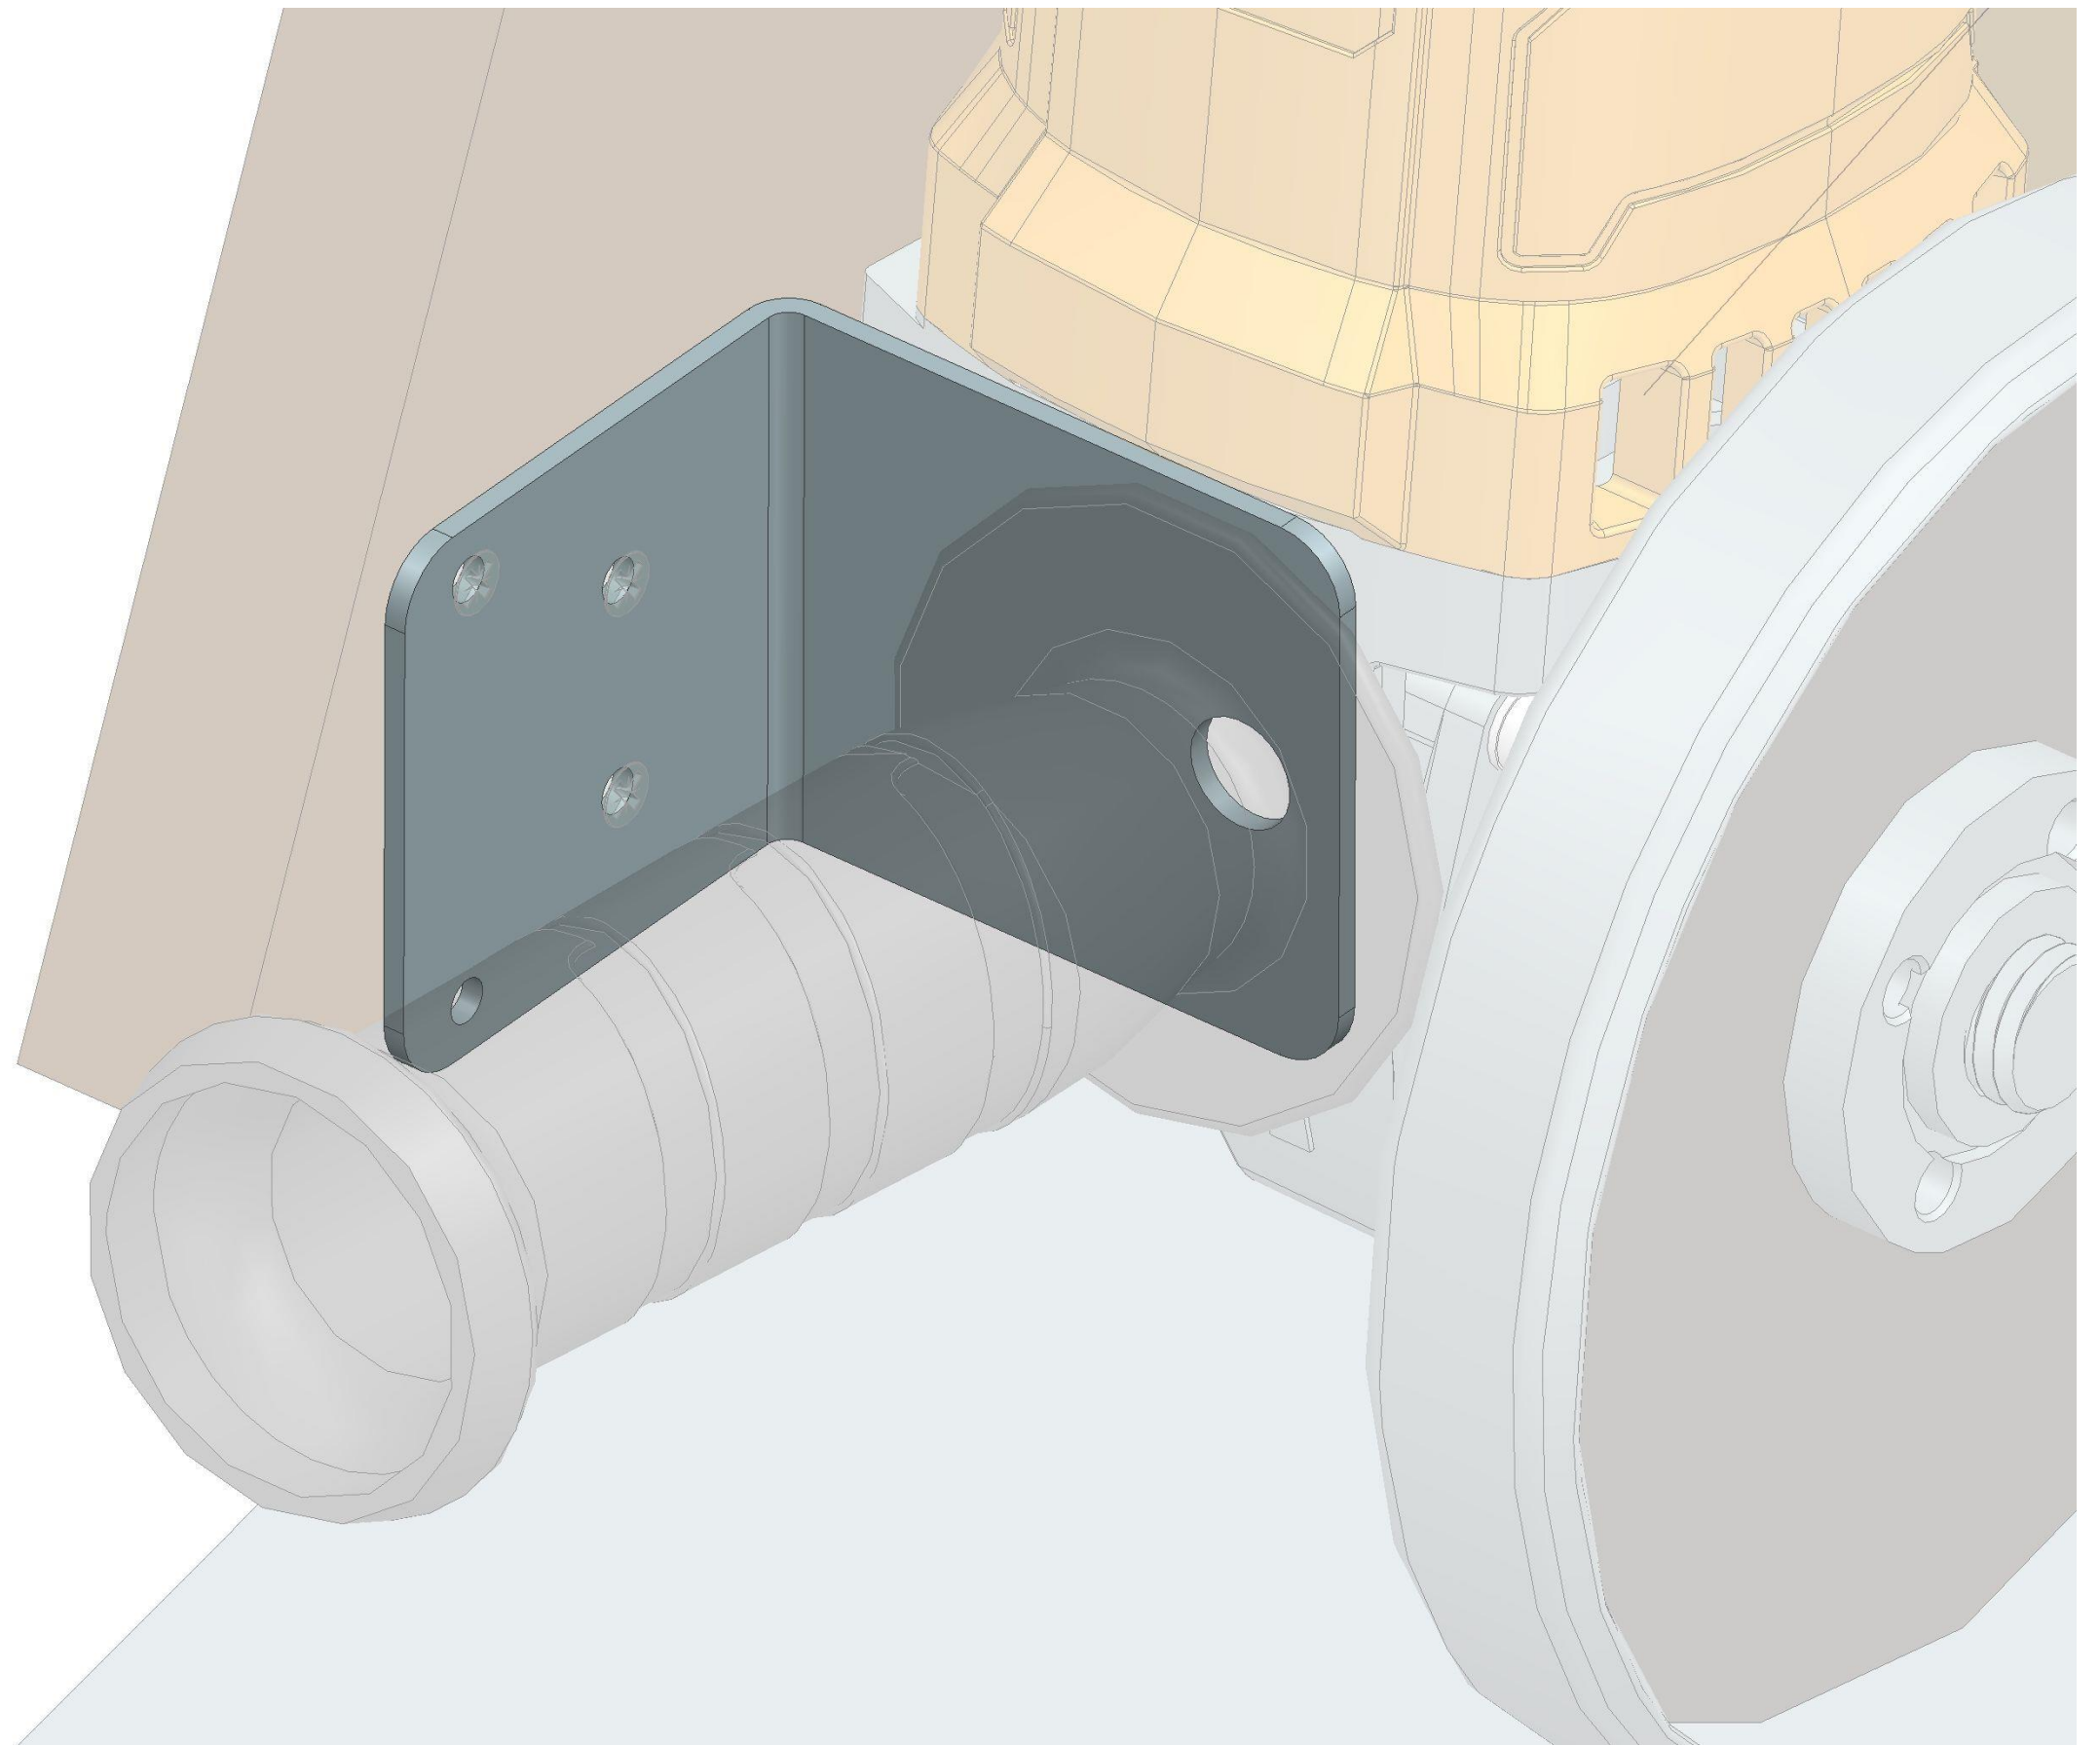


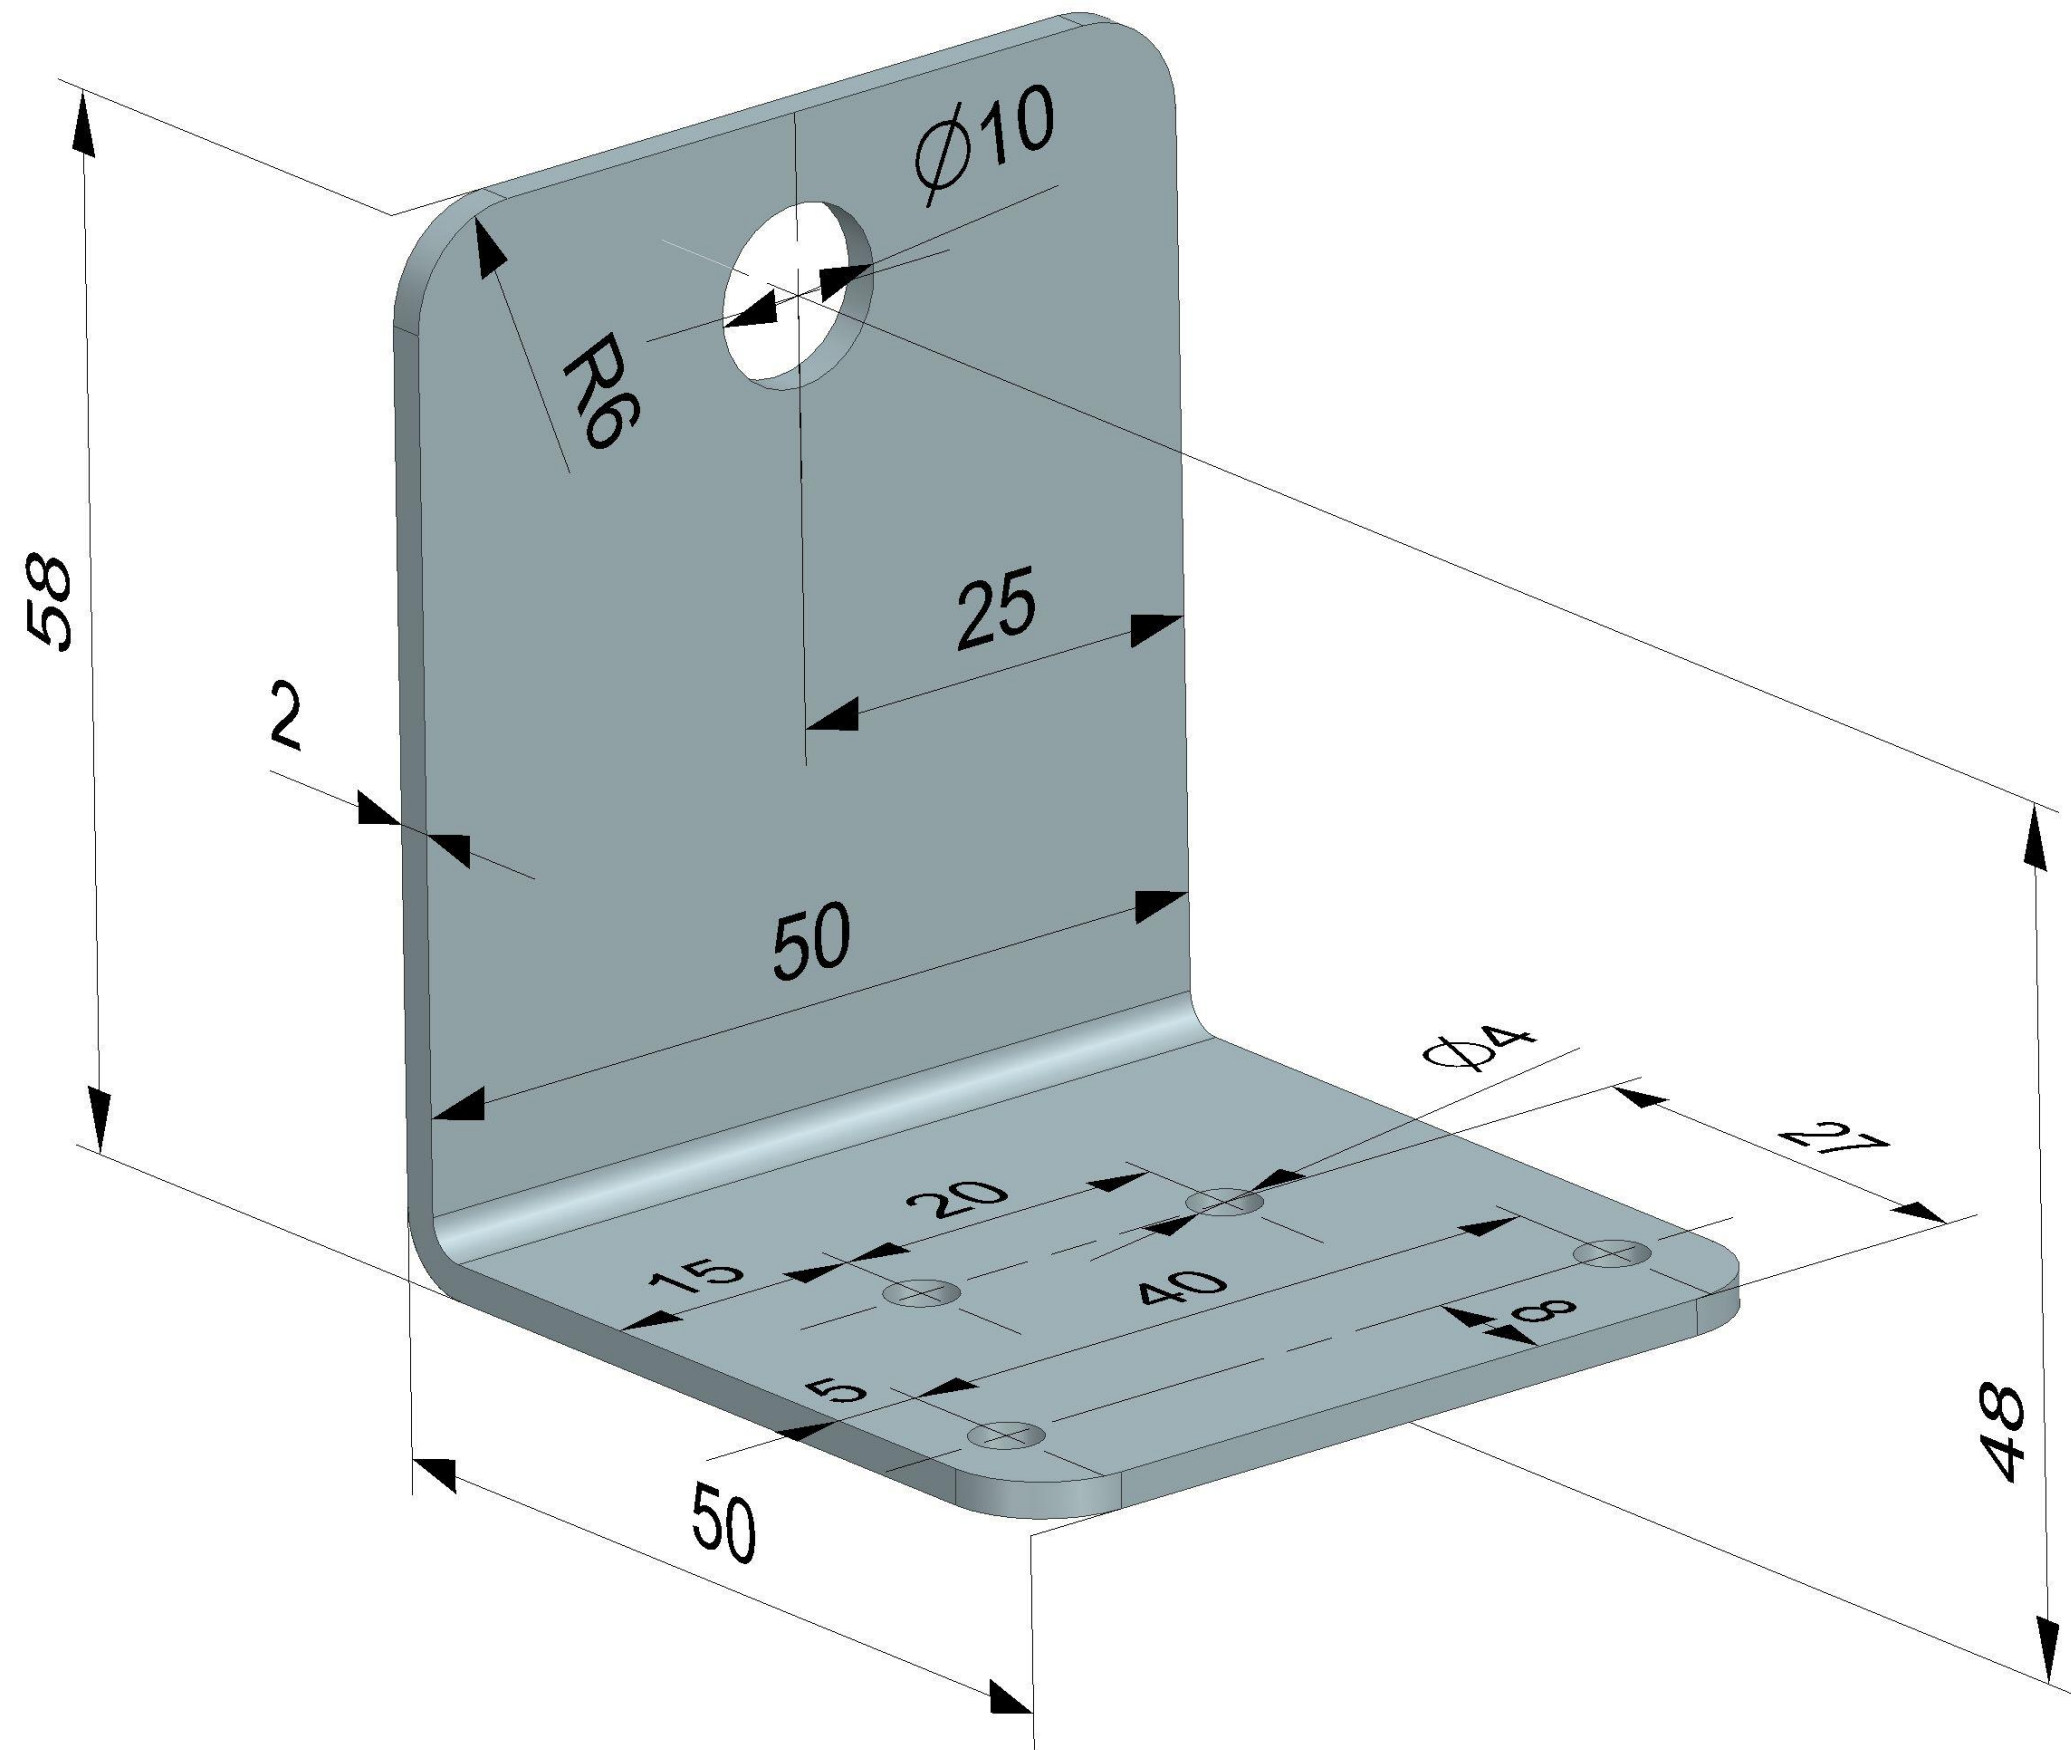

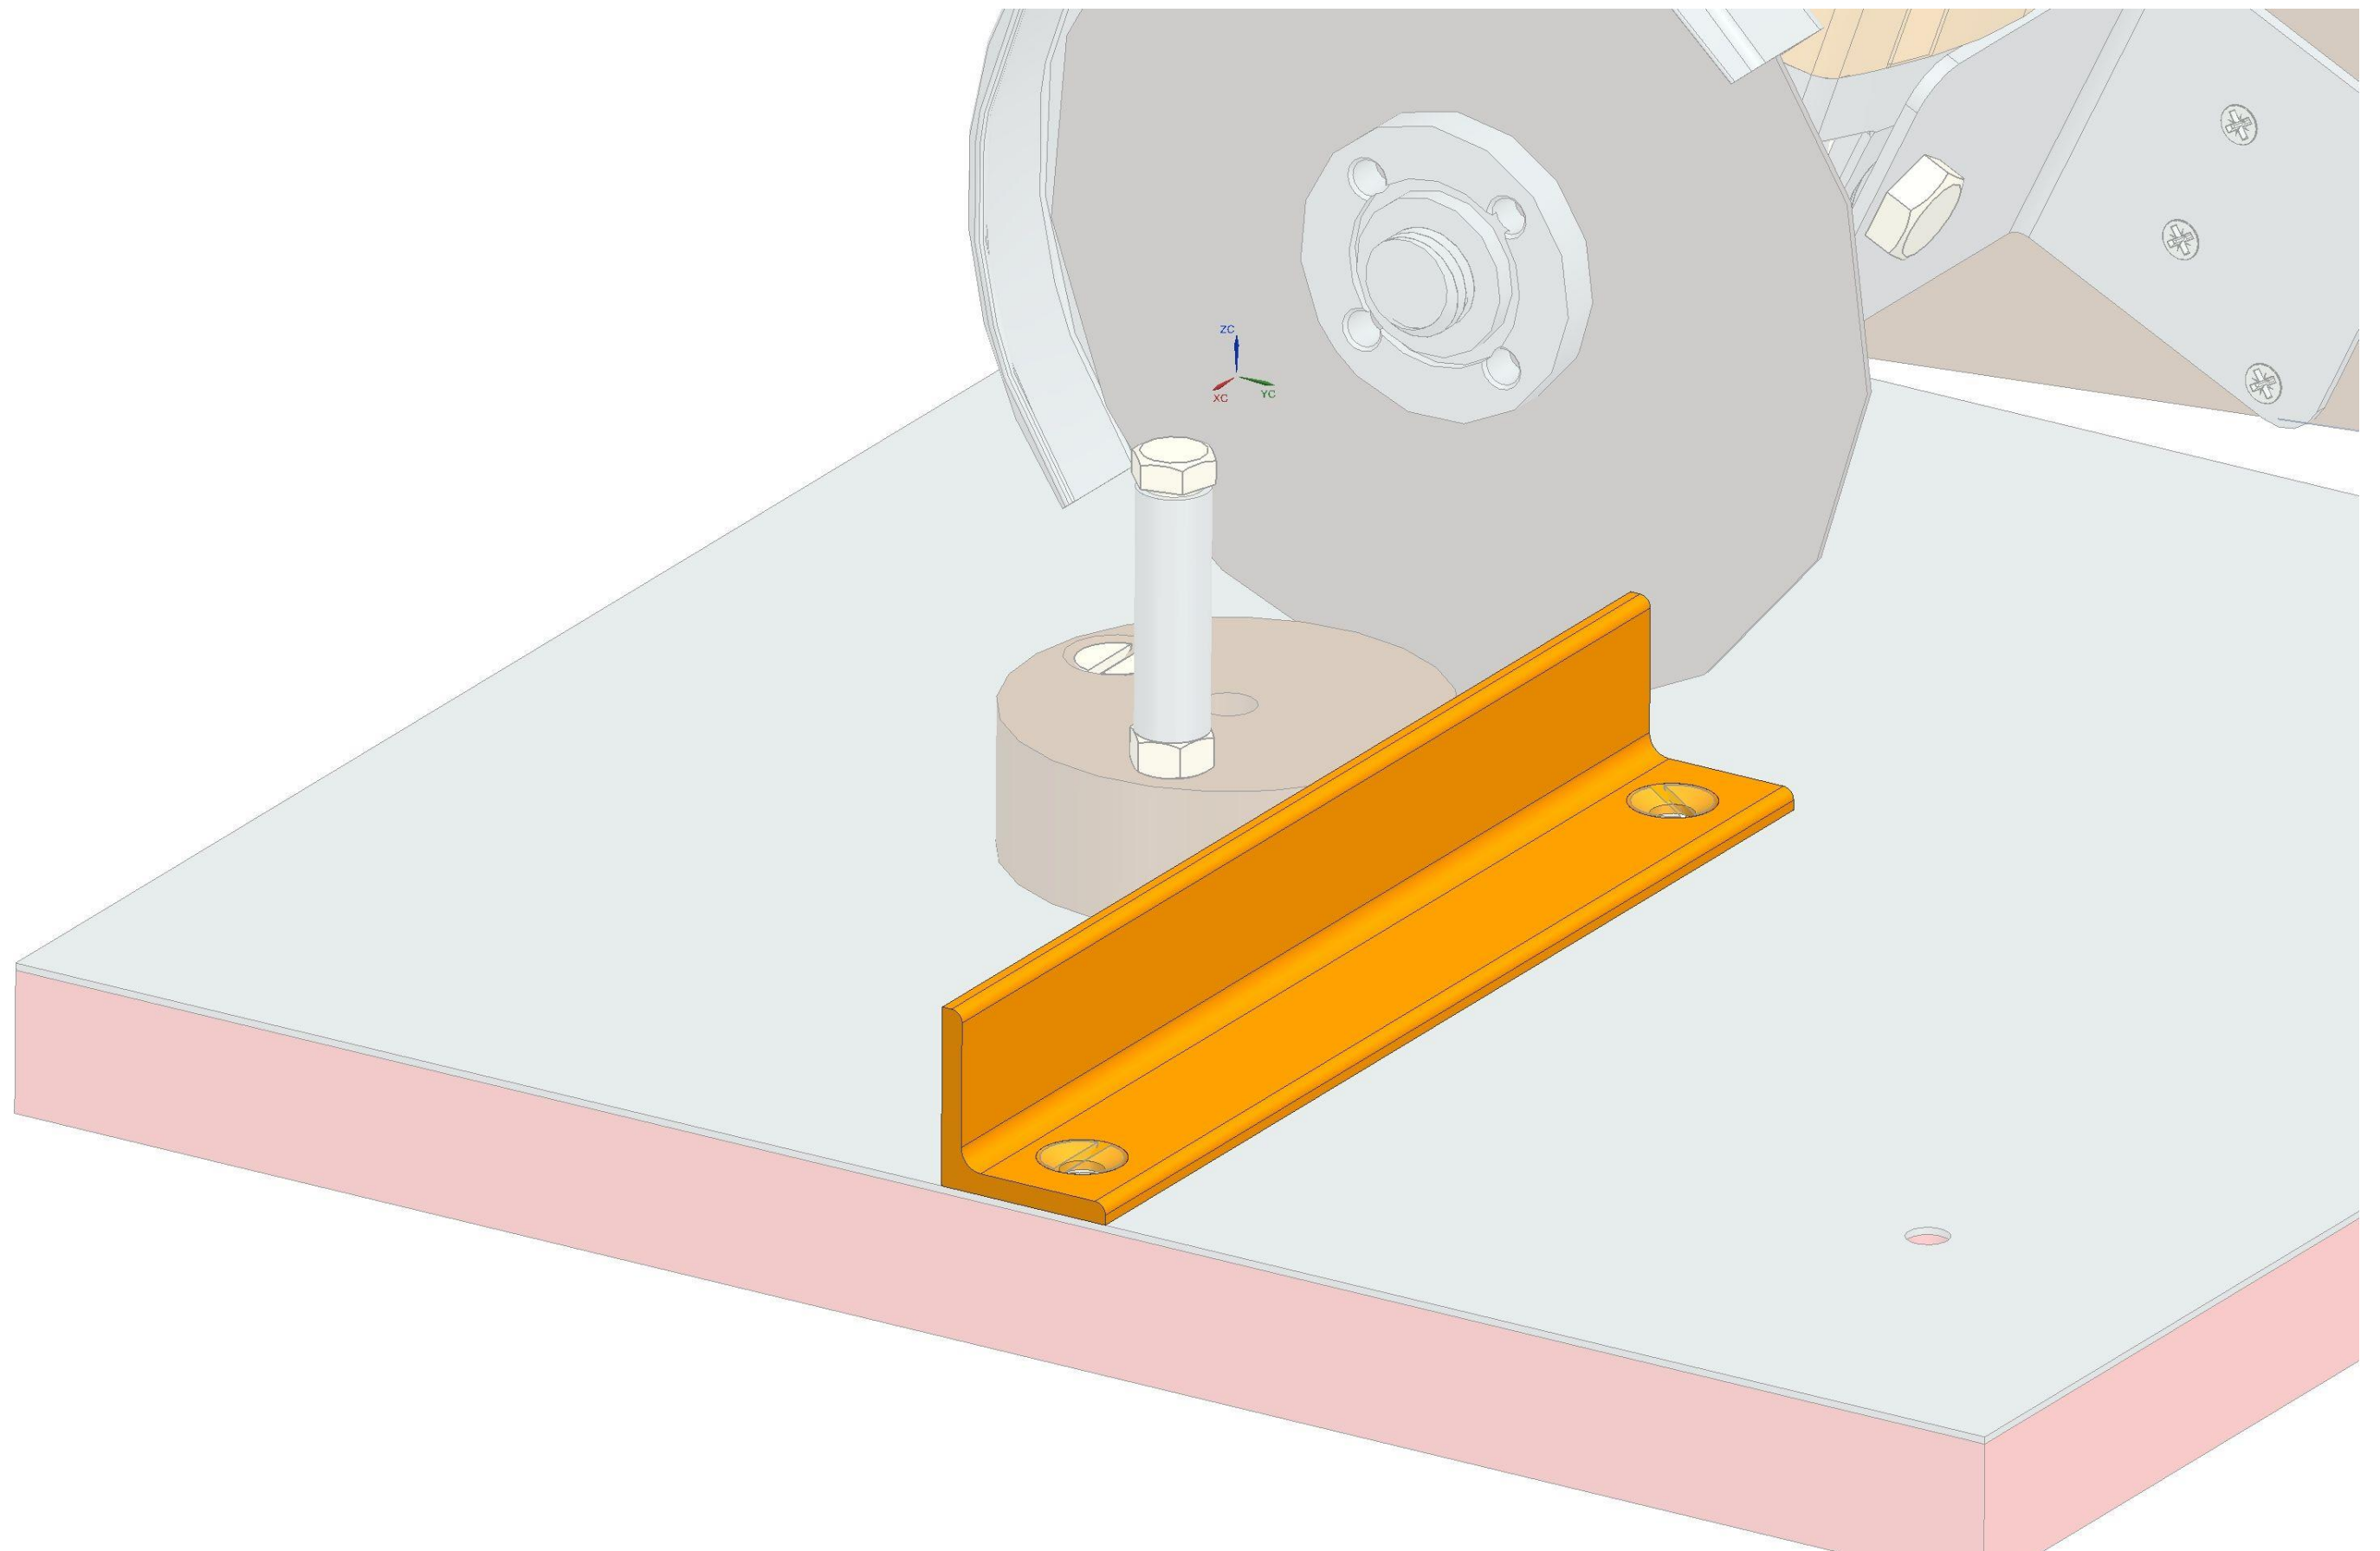

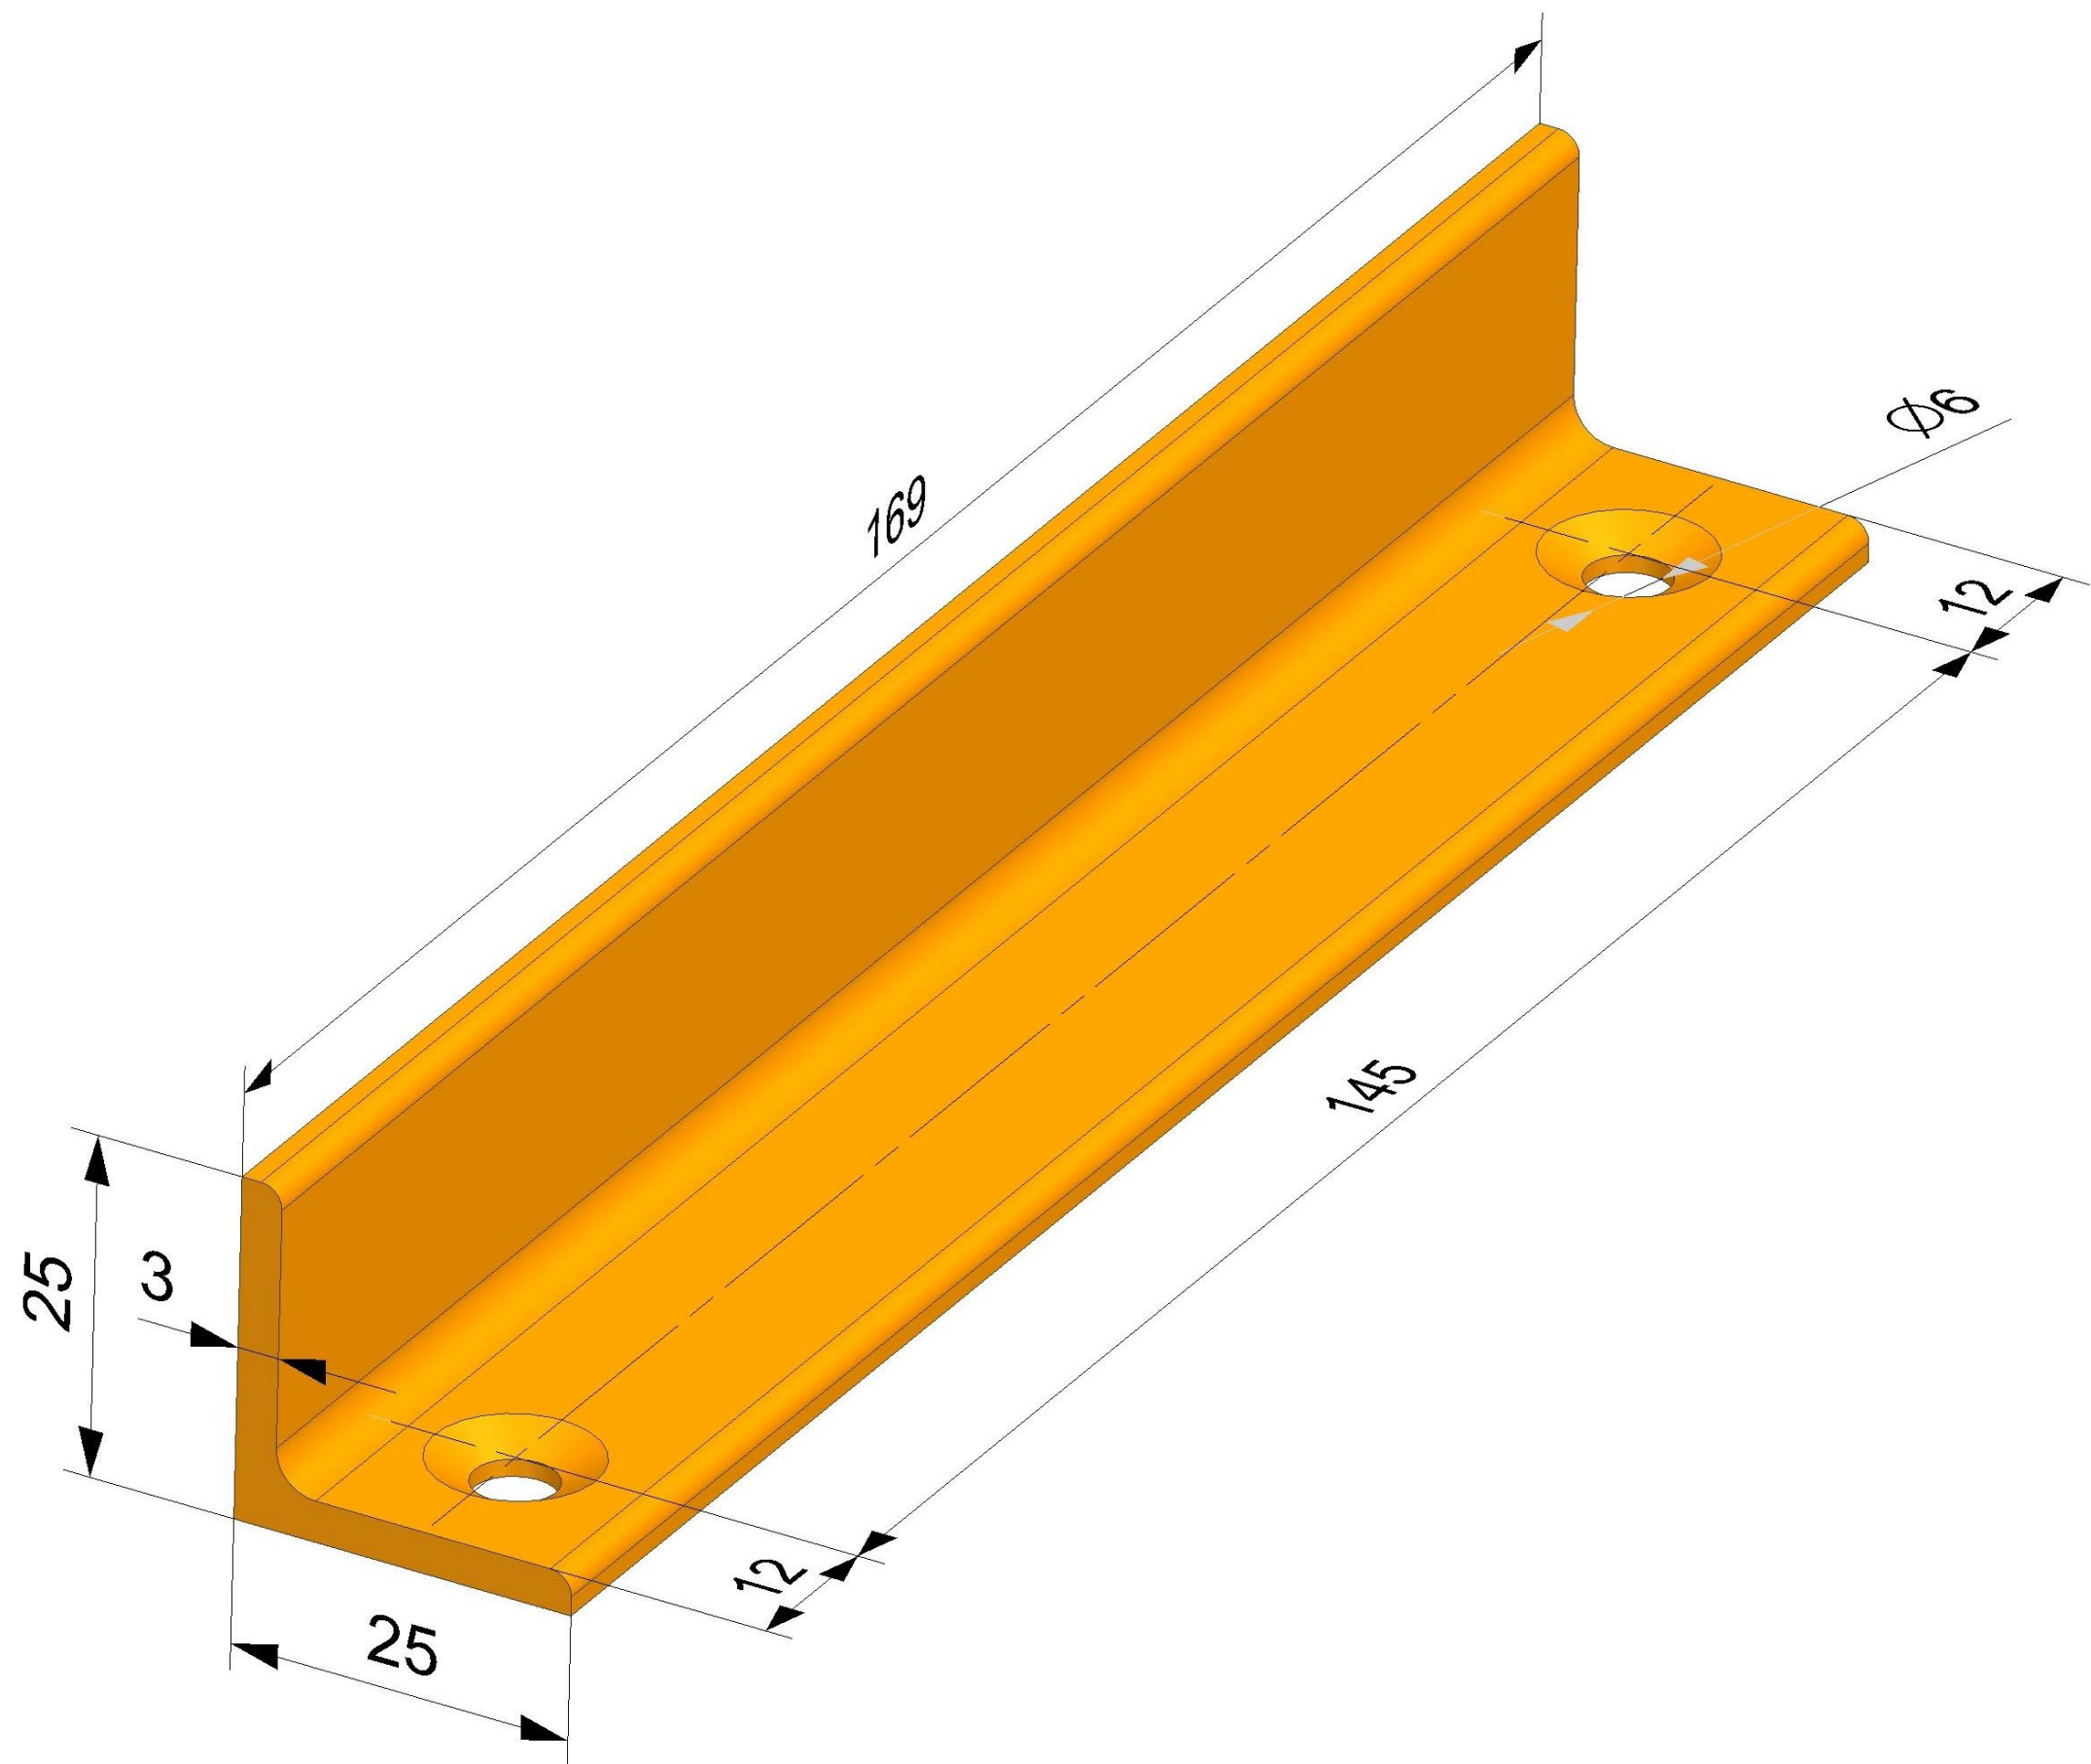


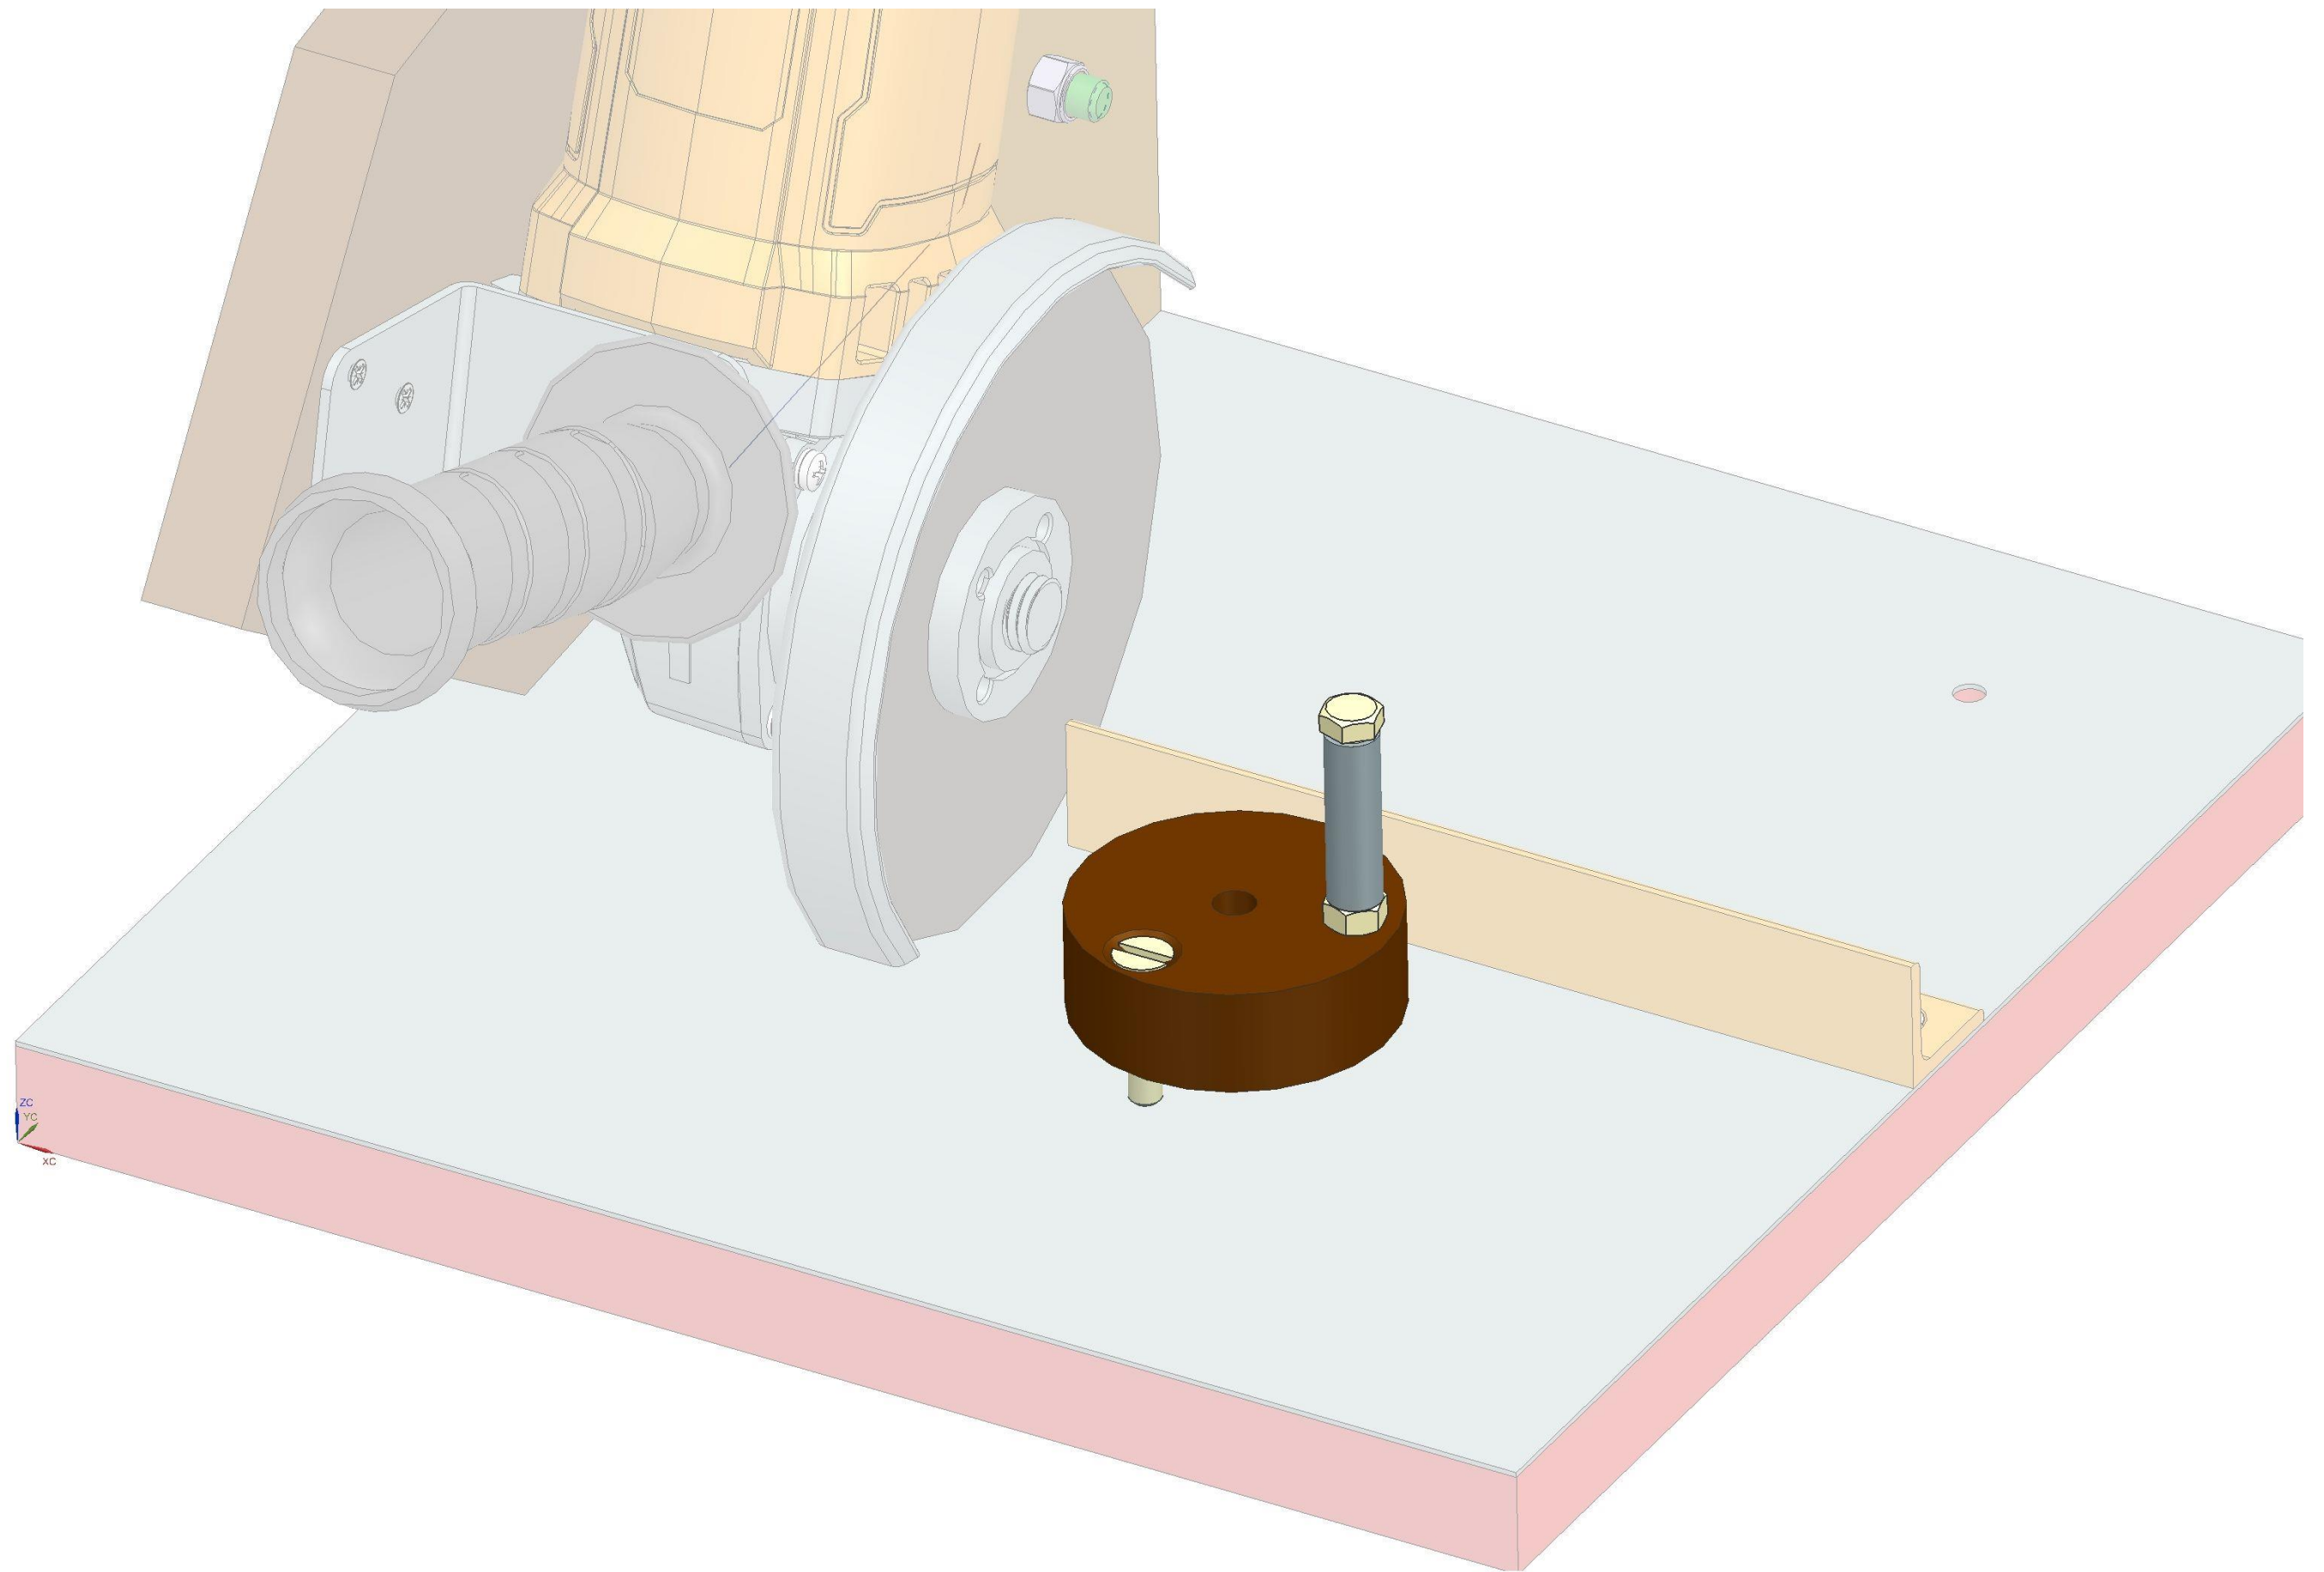

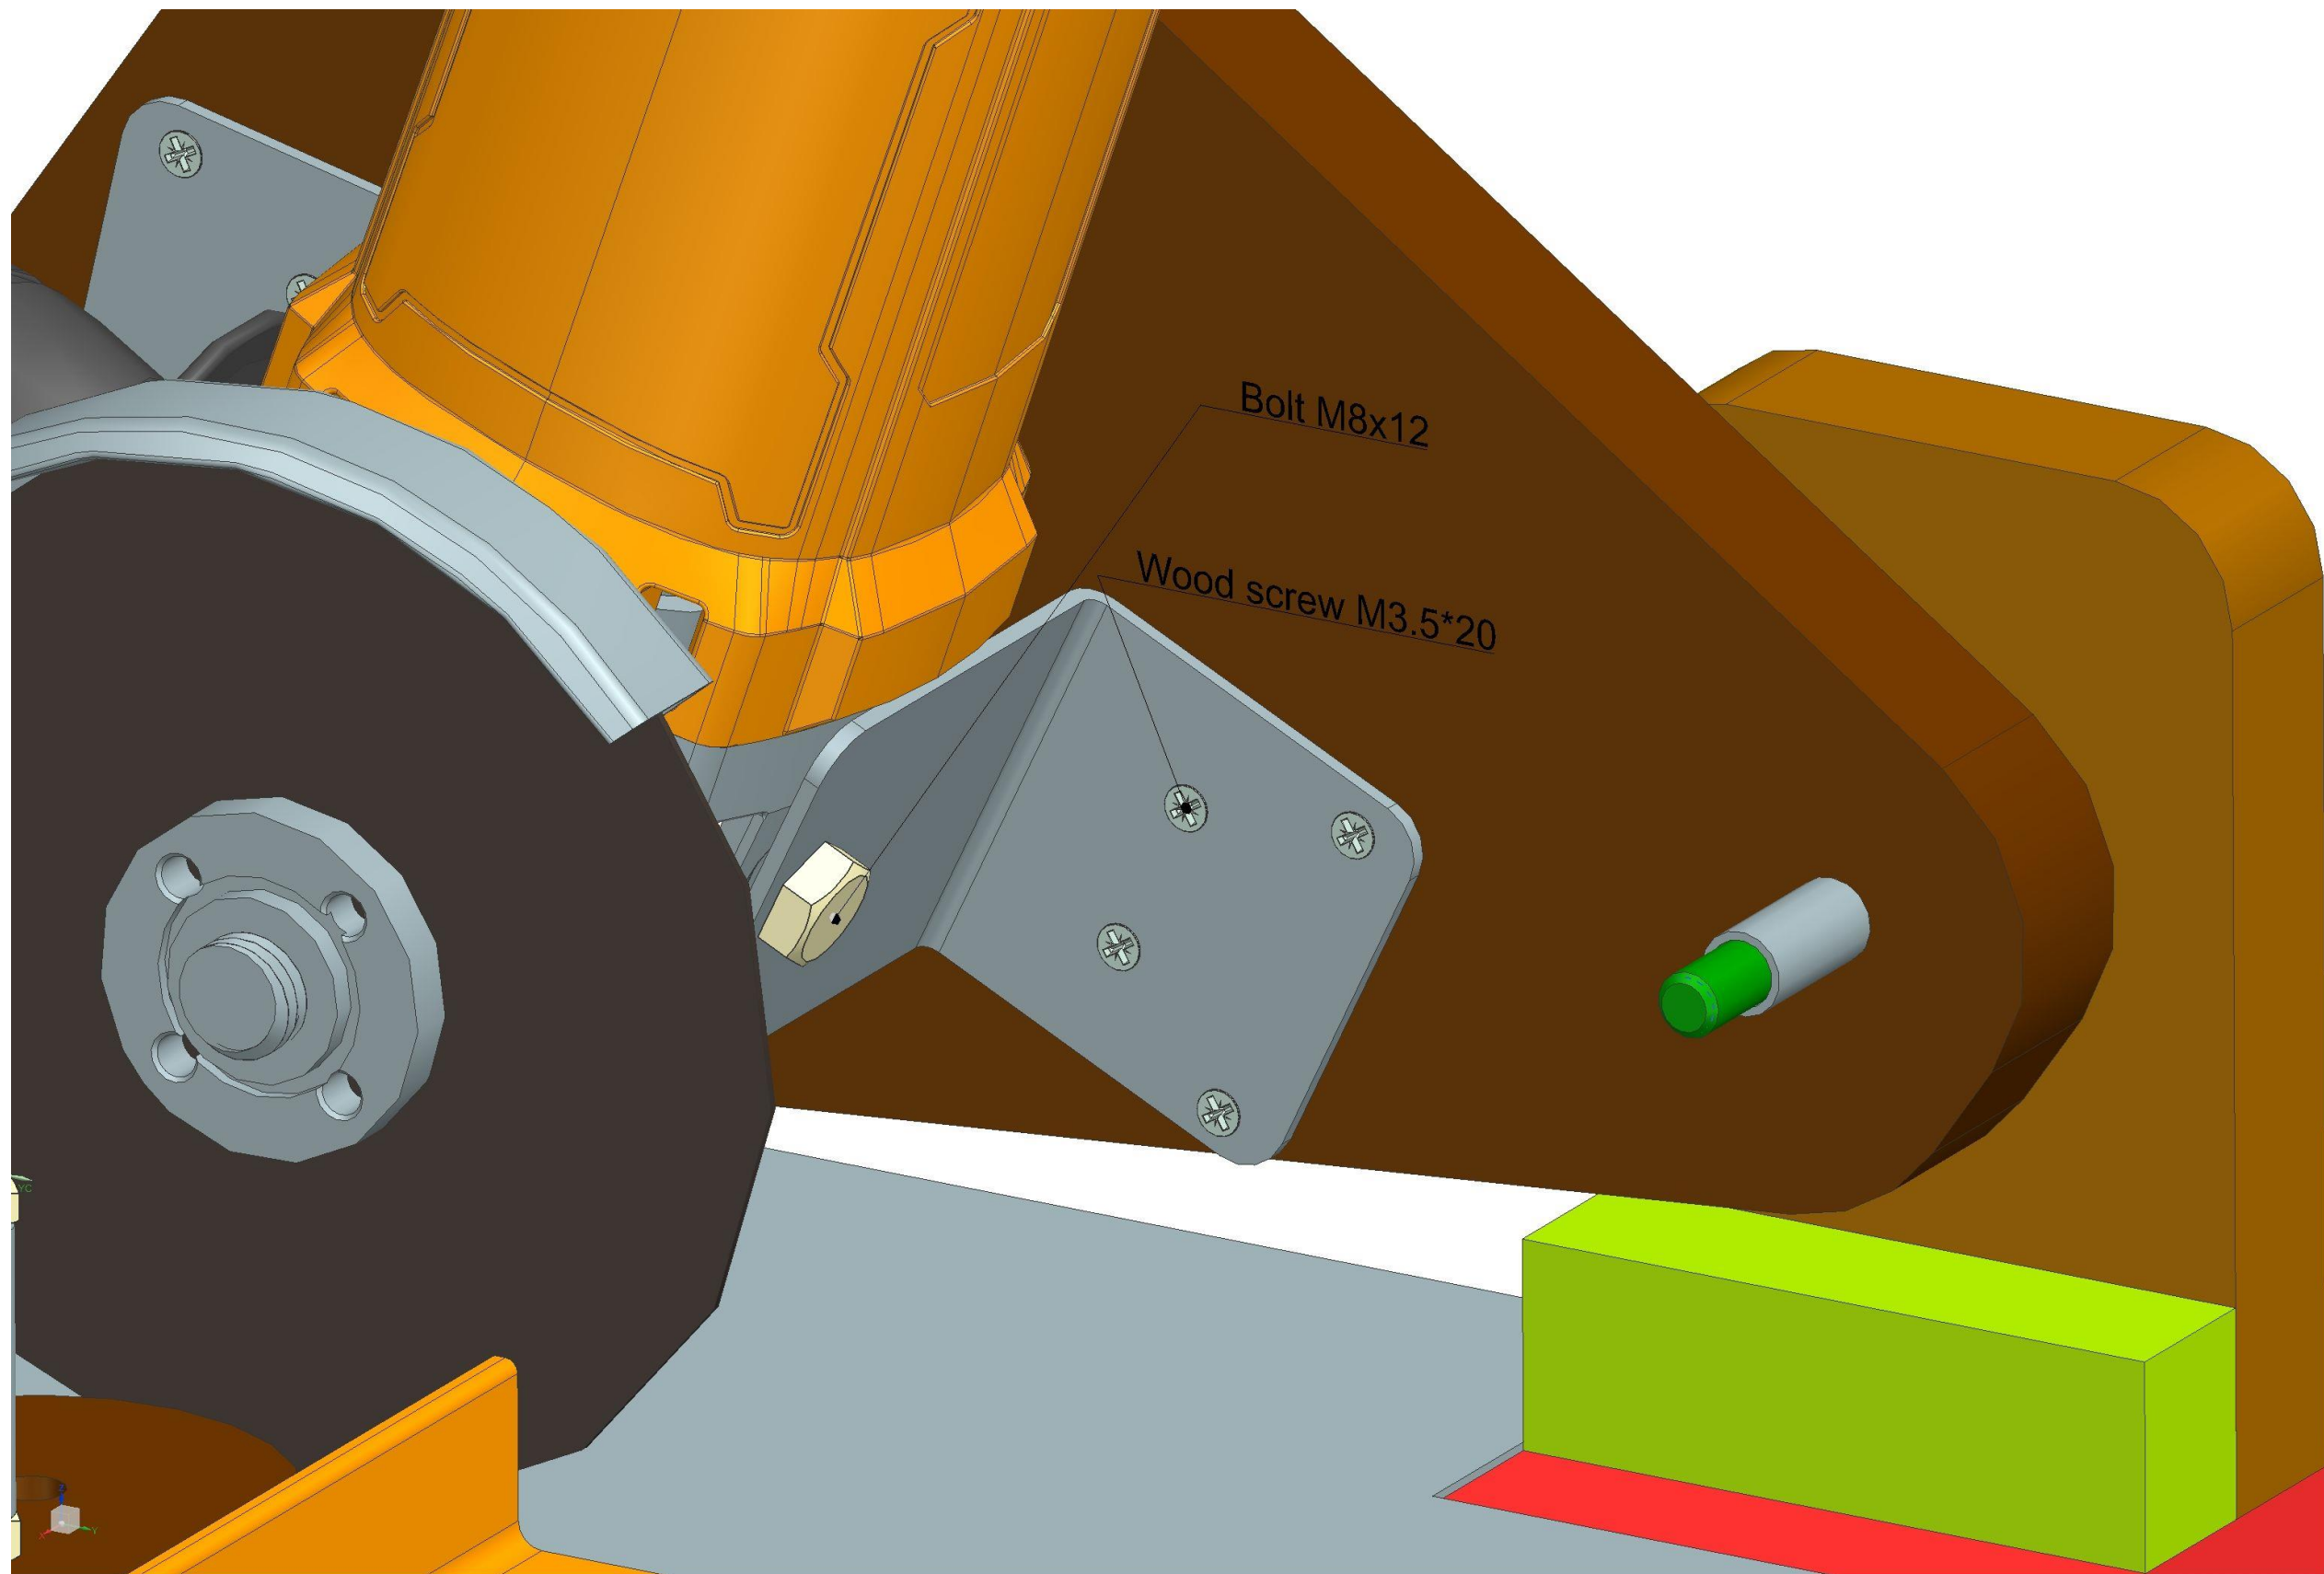


Fasteners:

- [Bolt M8x12](#)
- [Wood screw](#)

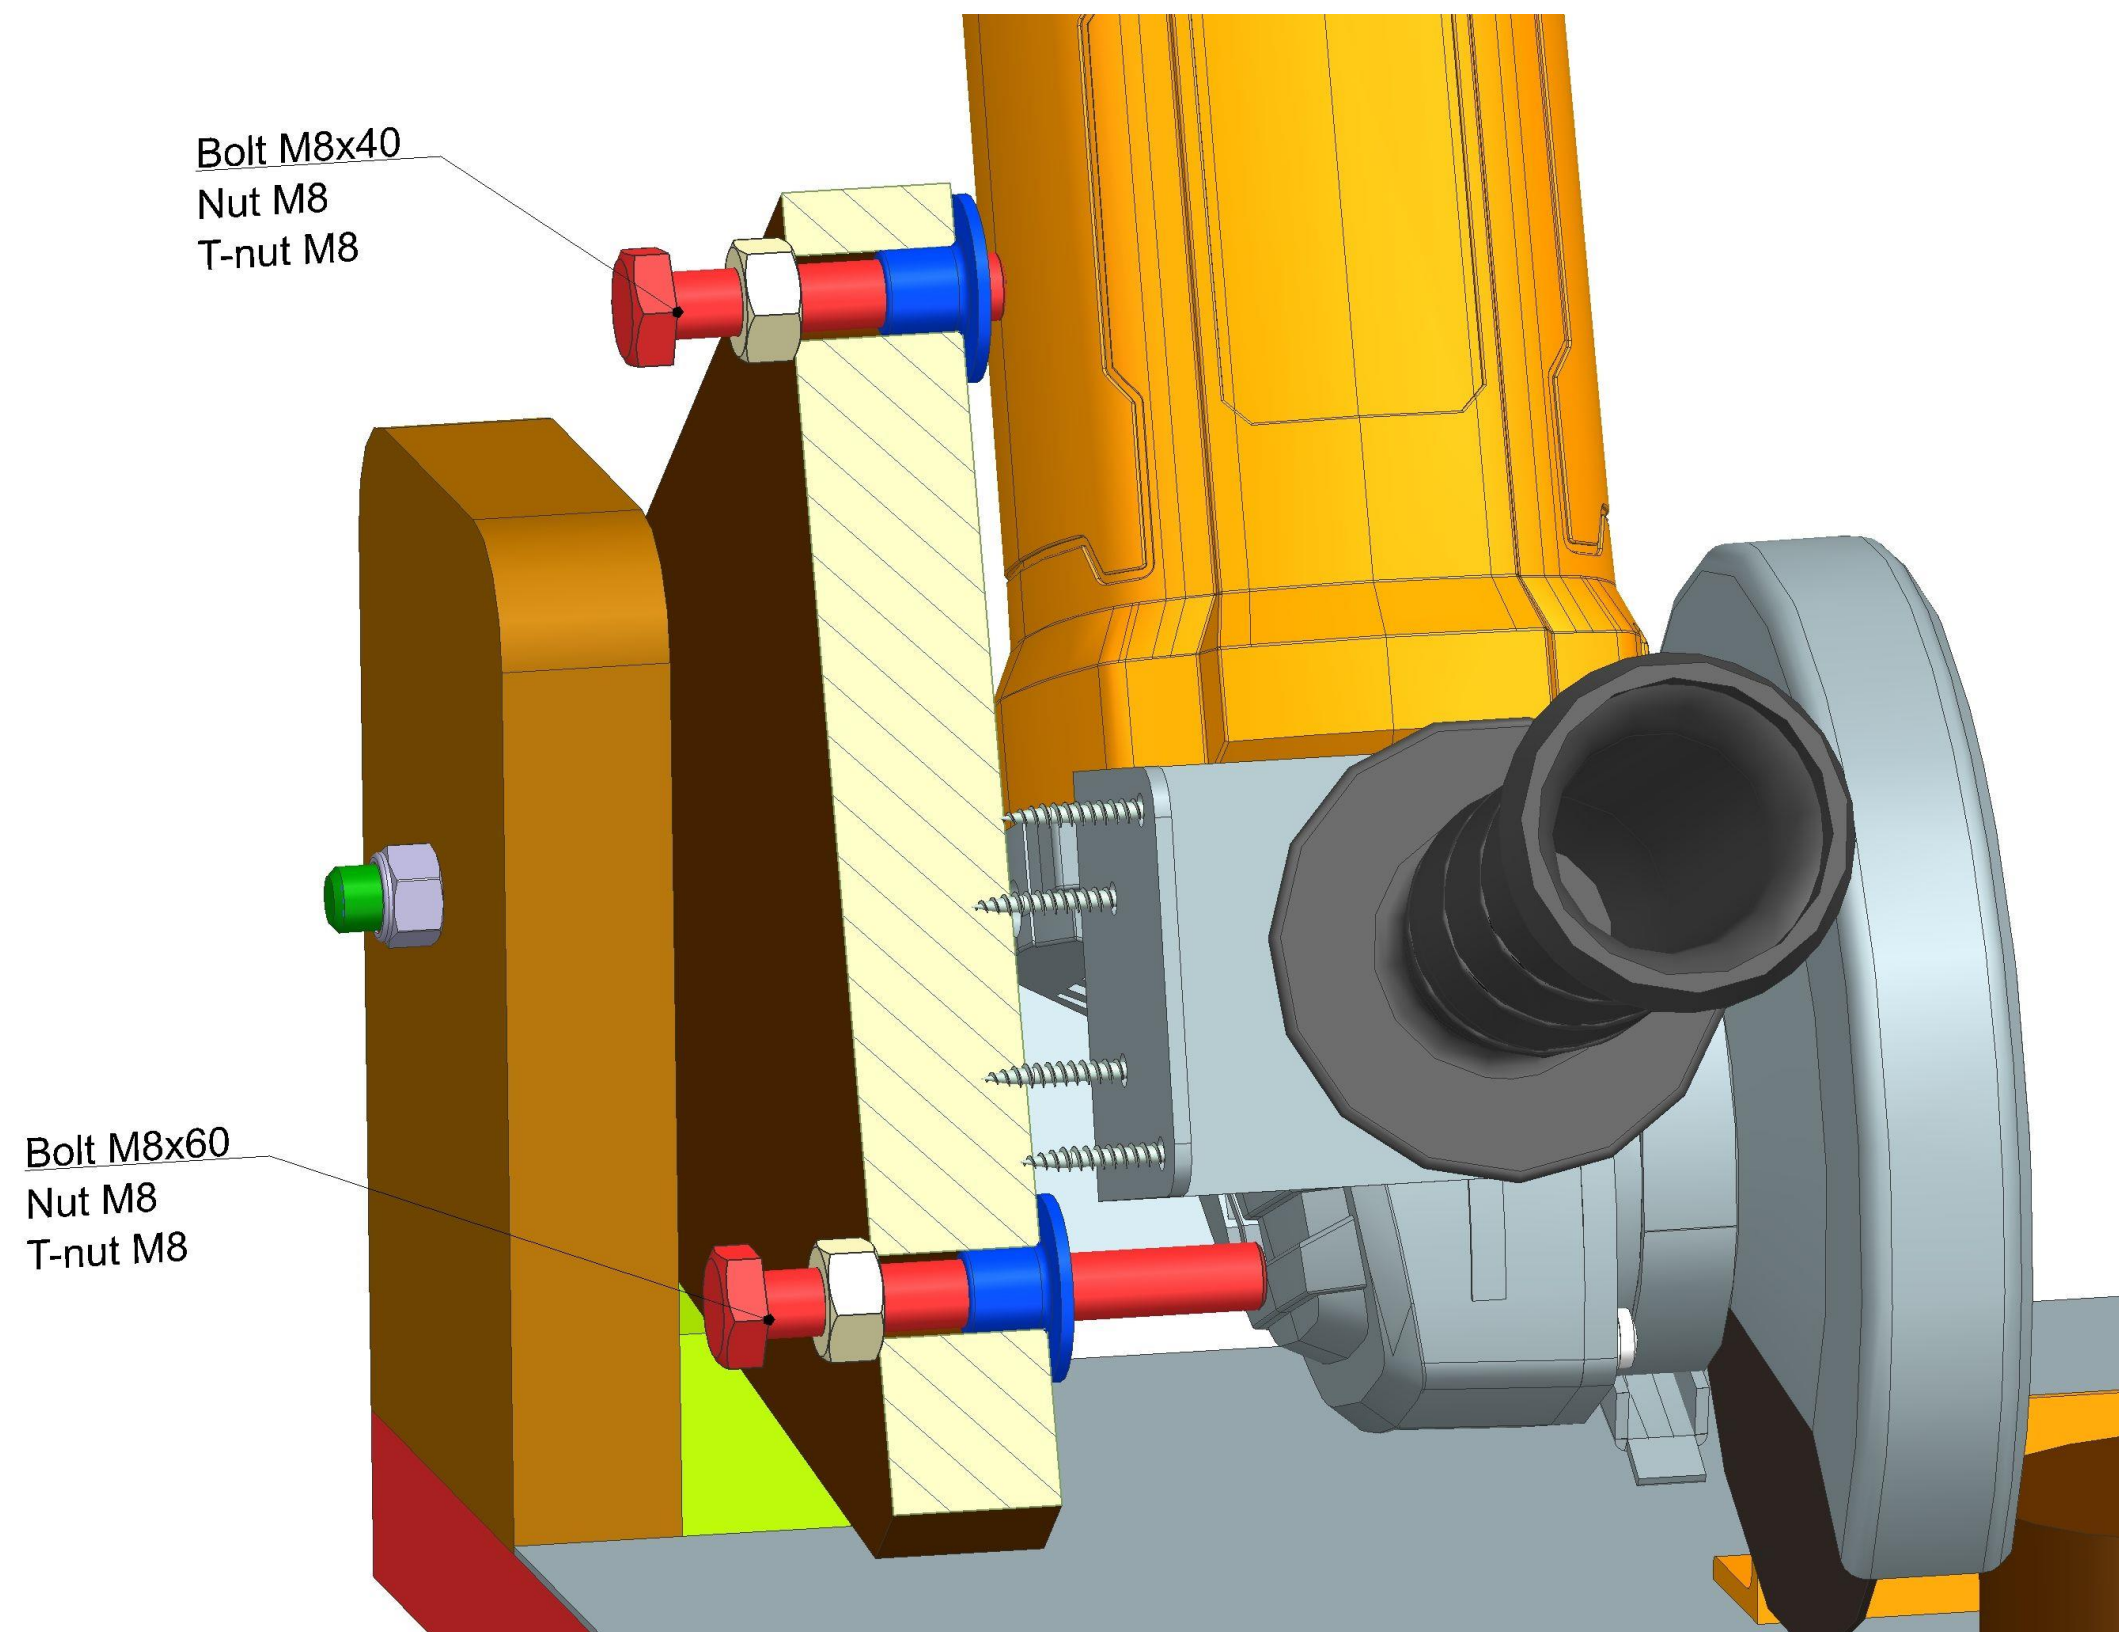


Fasteners:

- [Bolt M8x40](#)
- [Bolt M8x60](#)
- [Nut M8](#)
- [T-nut M8](#)

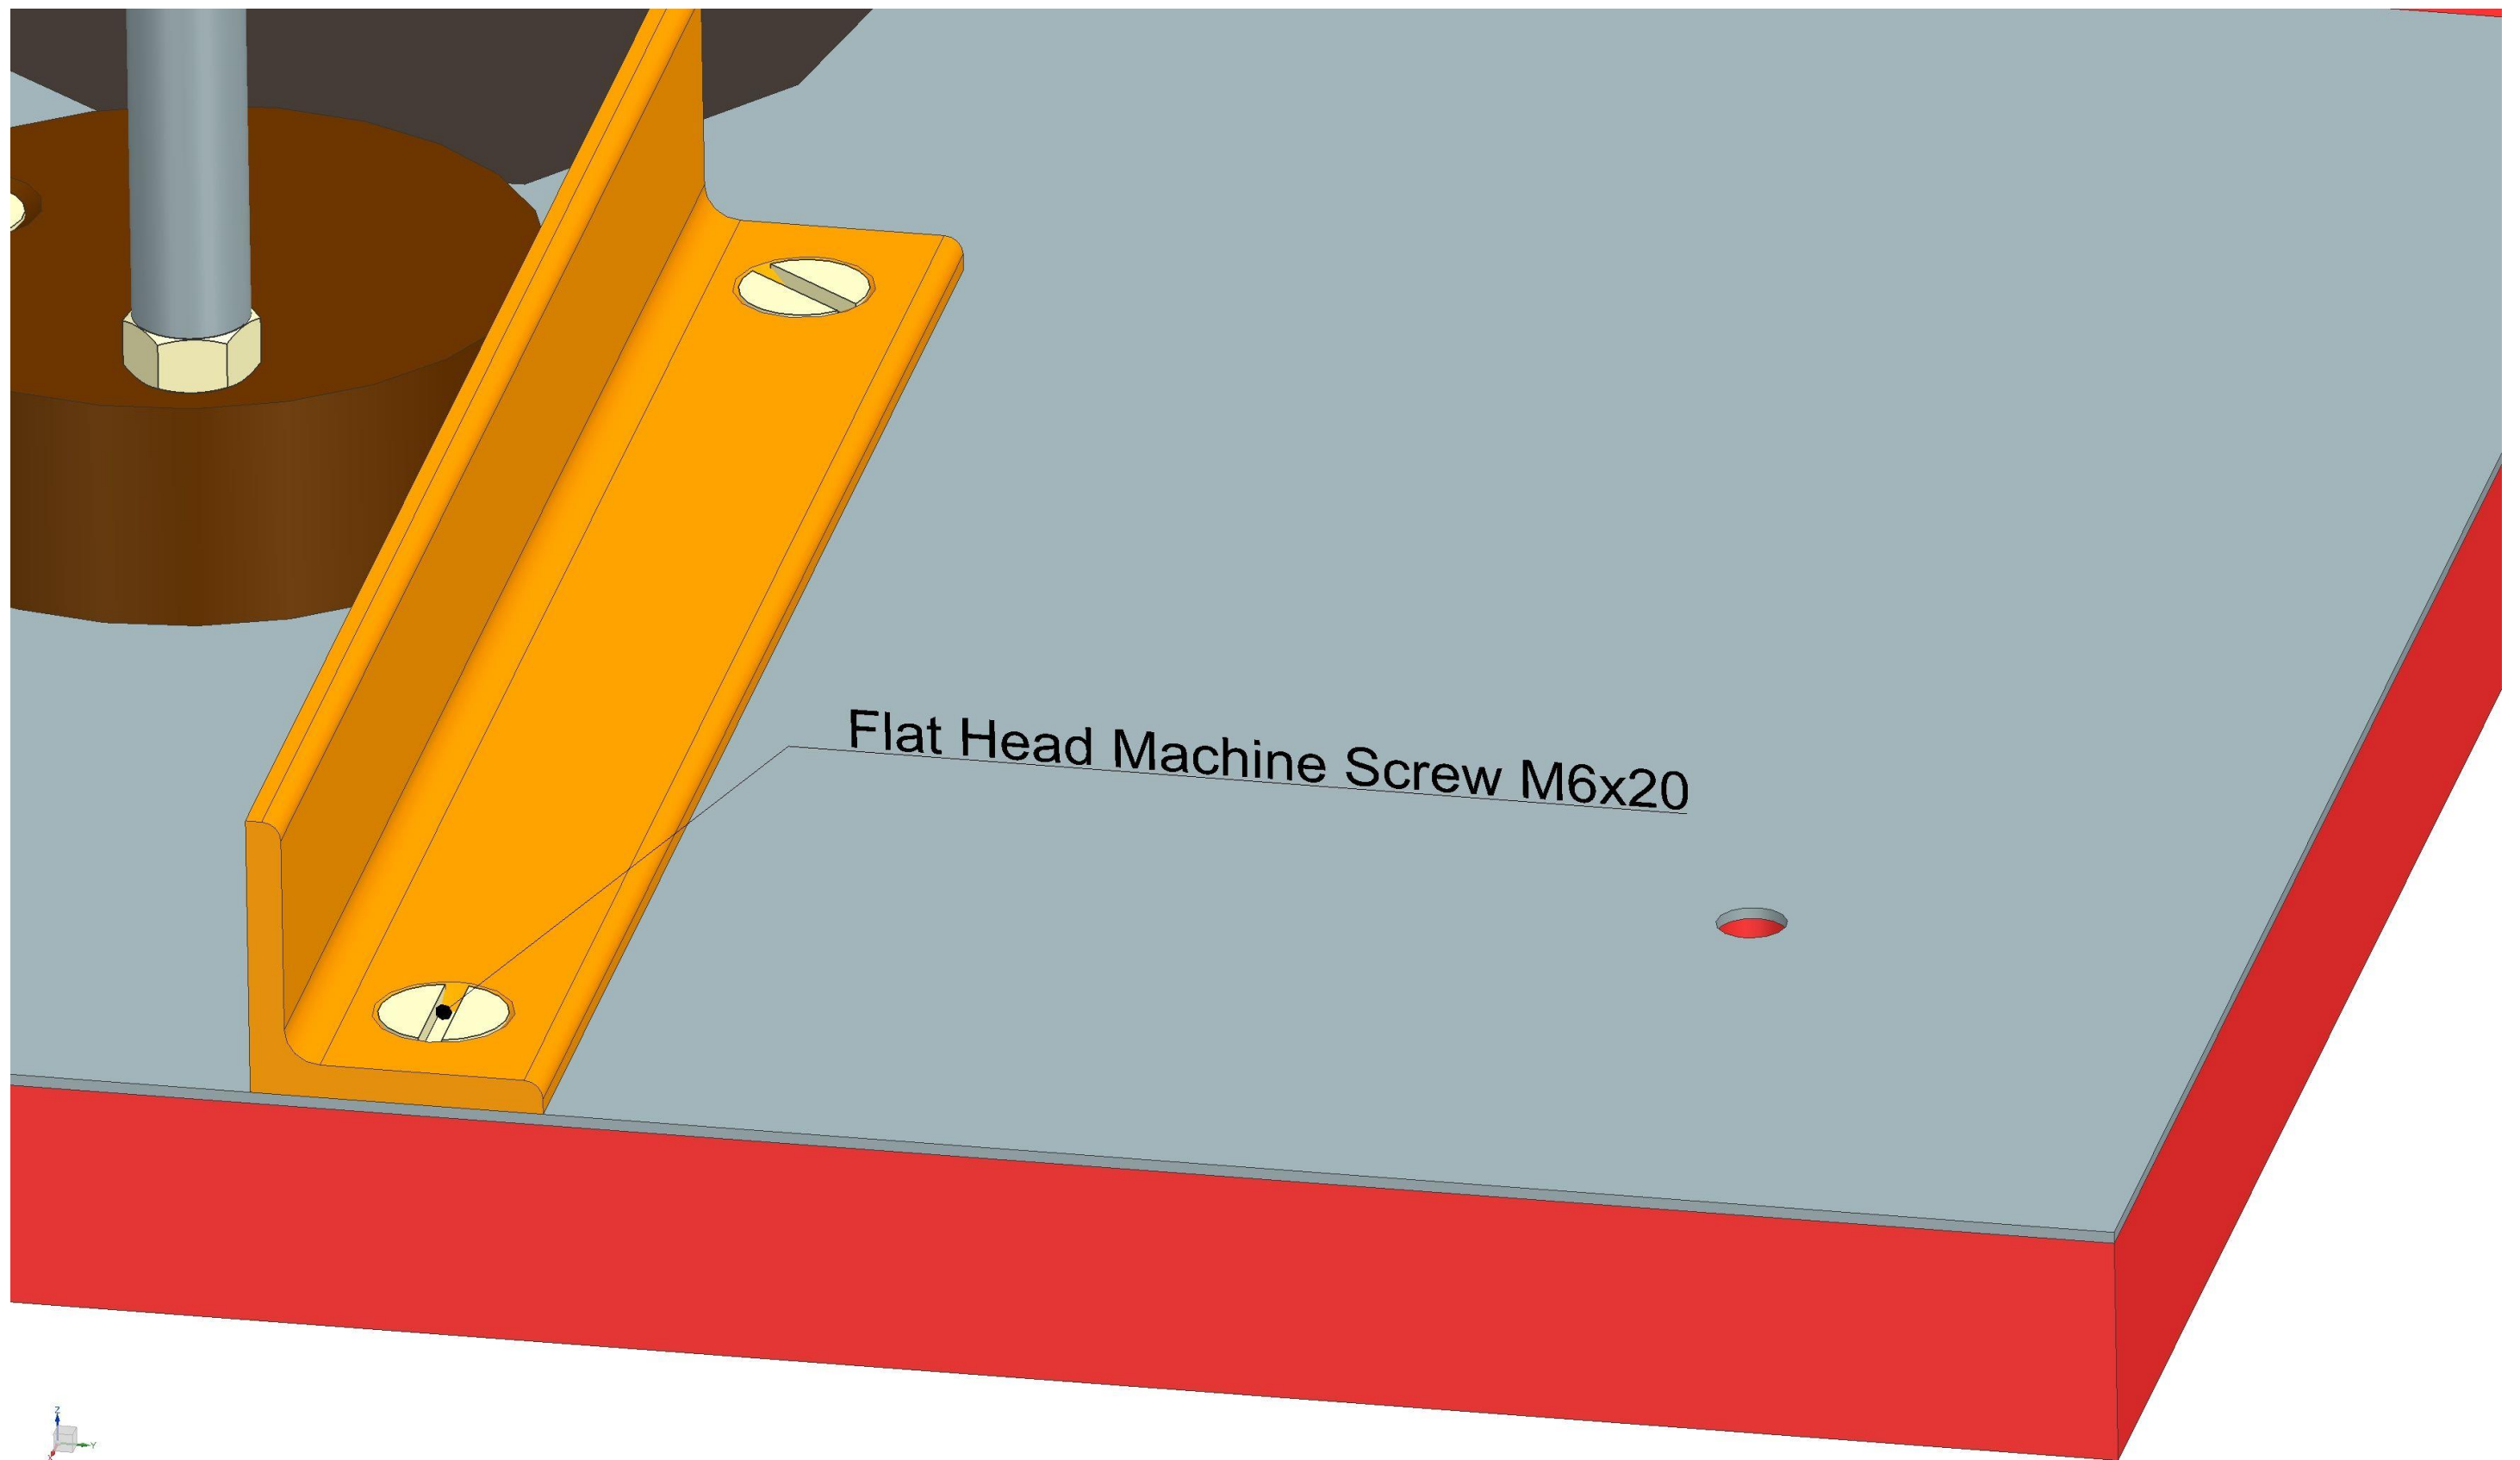


Fasteners:


- [Flat Head Machine Screw M6x20](#)

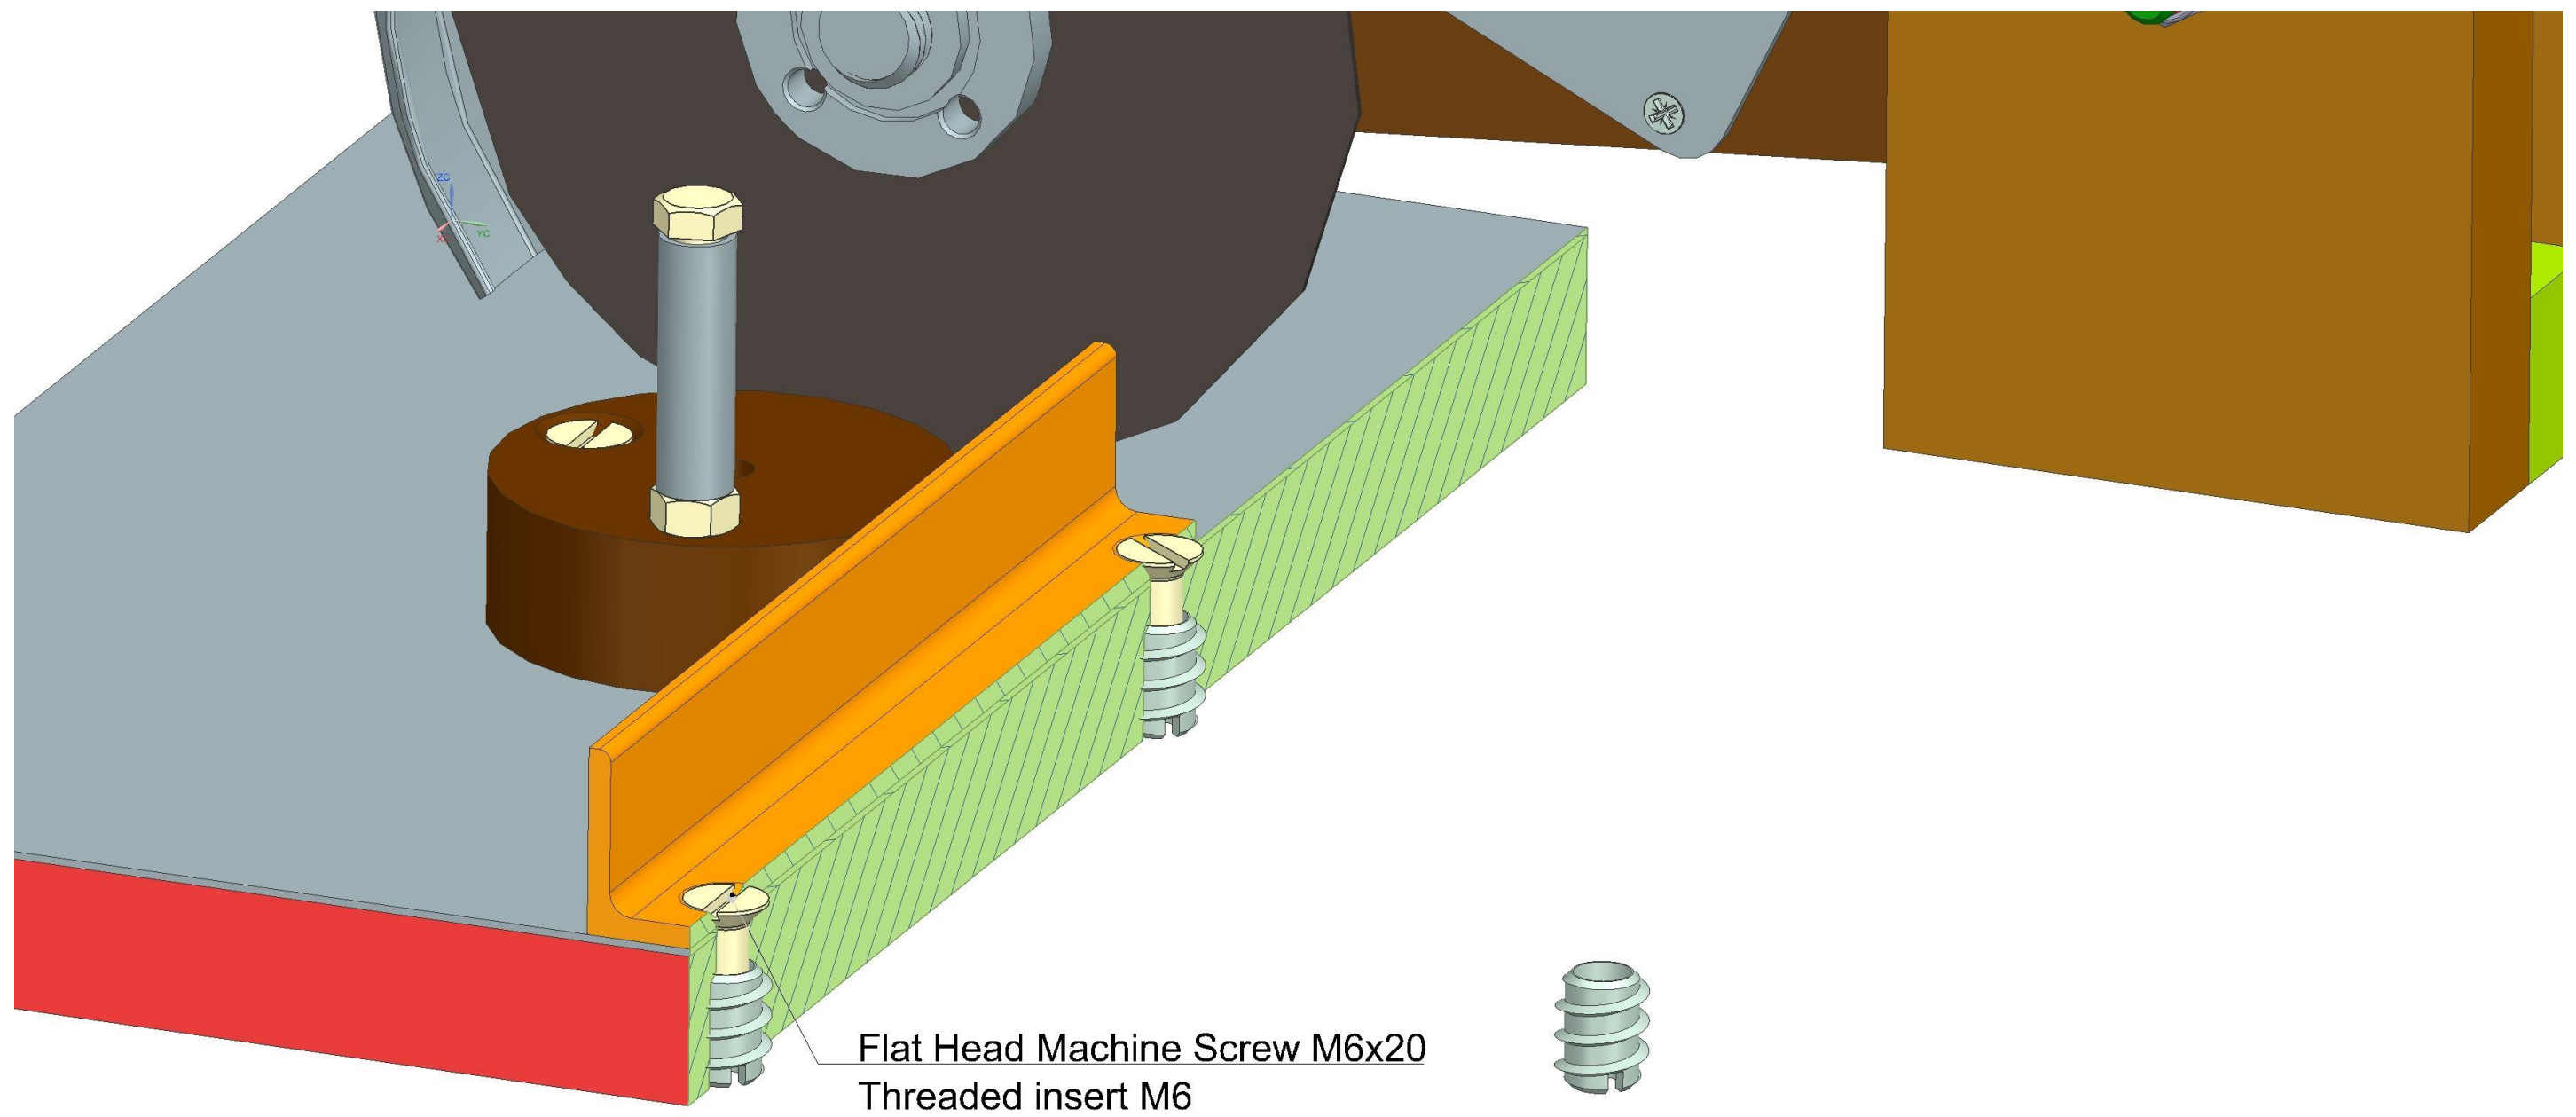

Fasteners:


- [Flat Head Machine Screw M6x20](#)
- [Threaded insert M6](#)

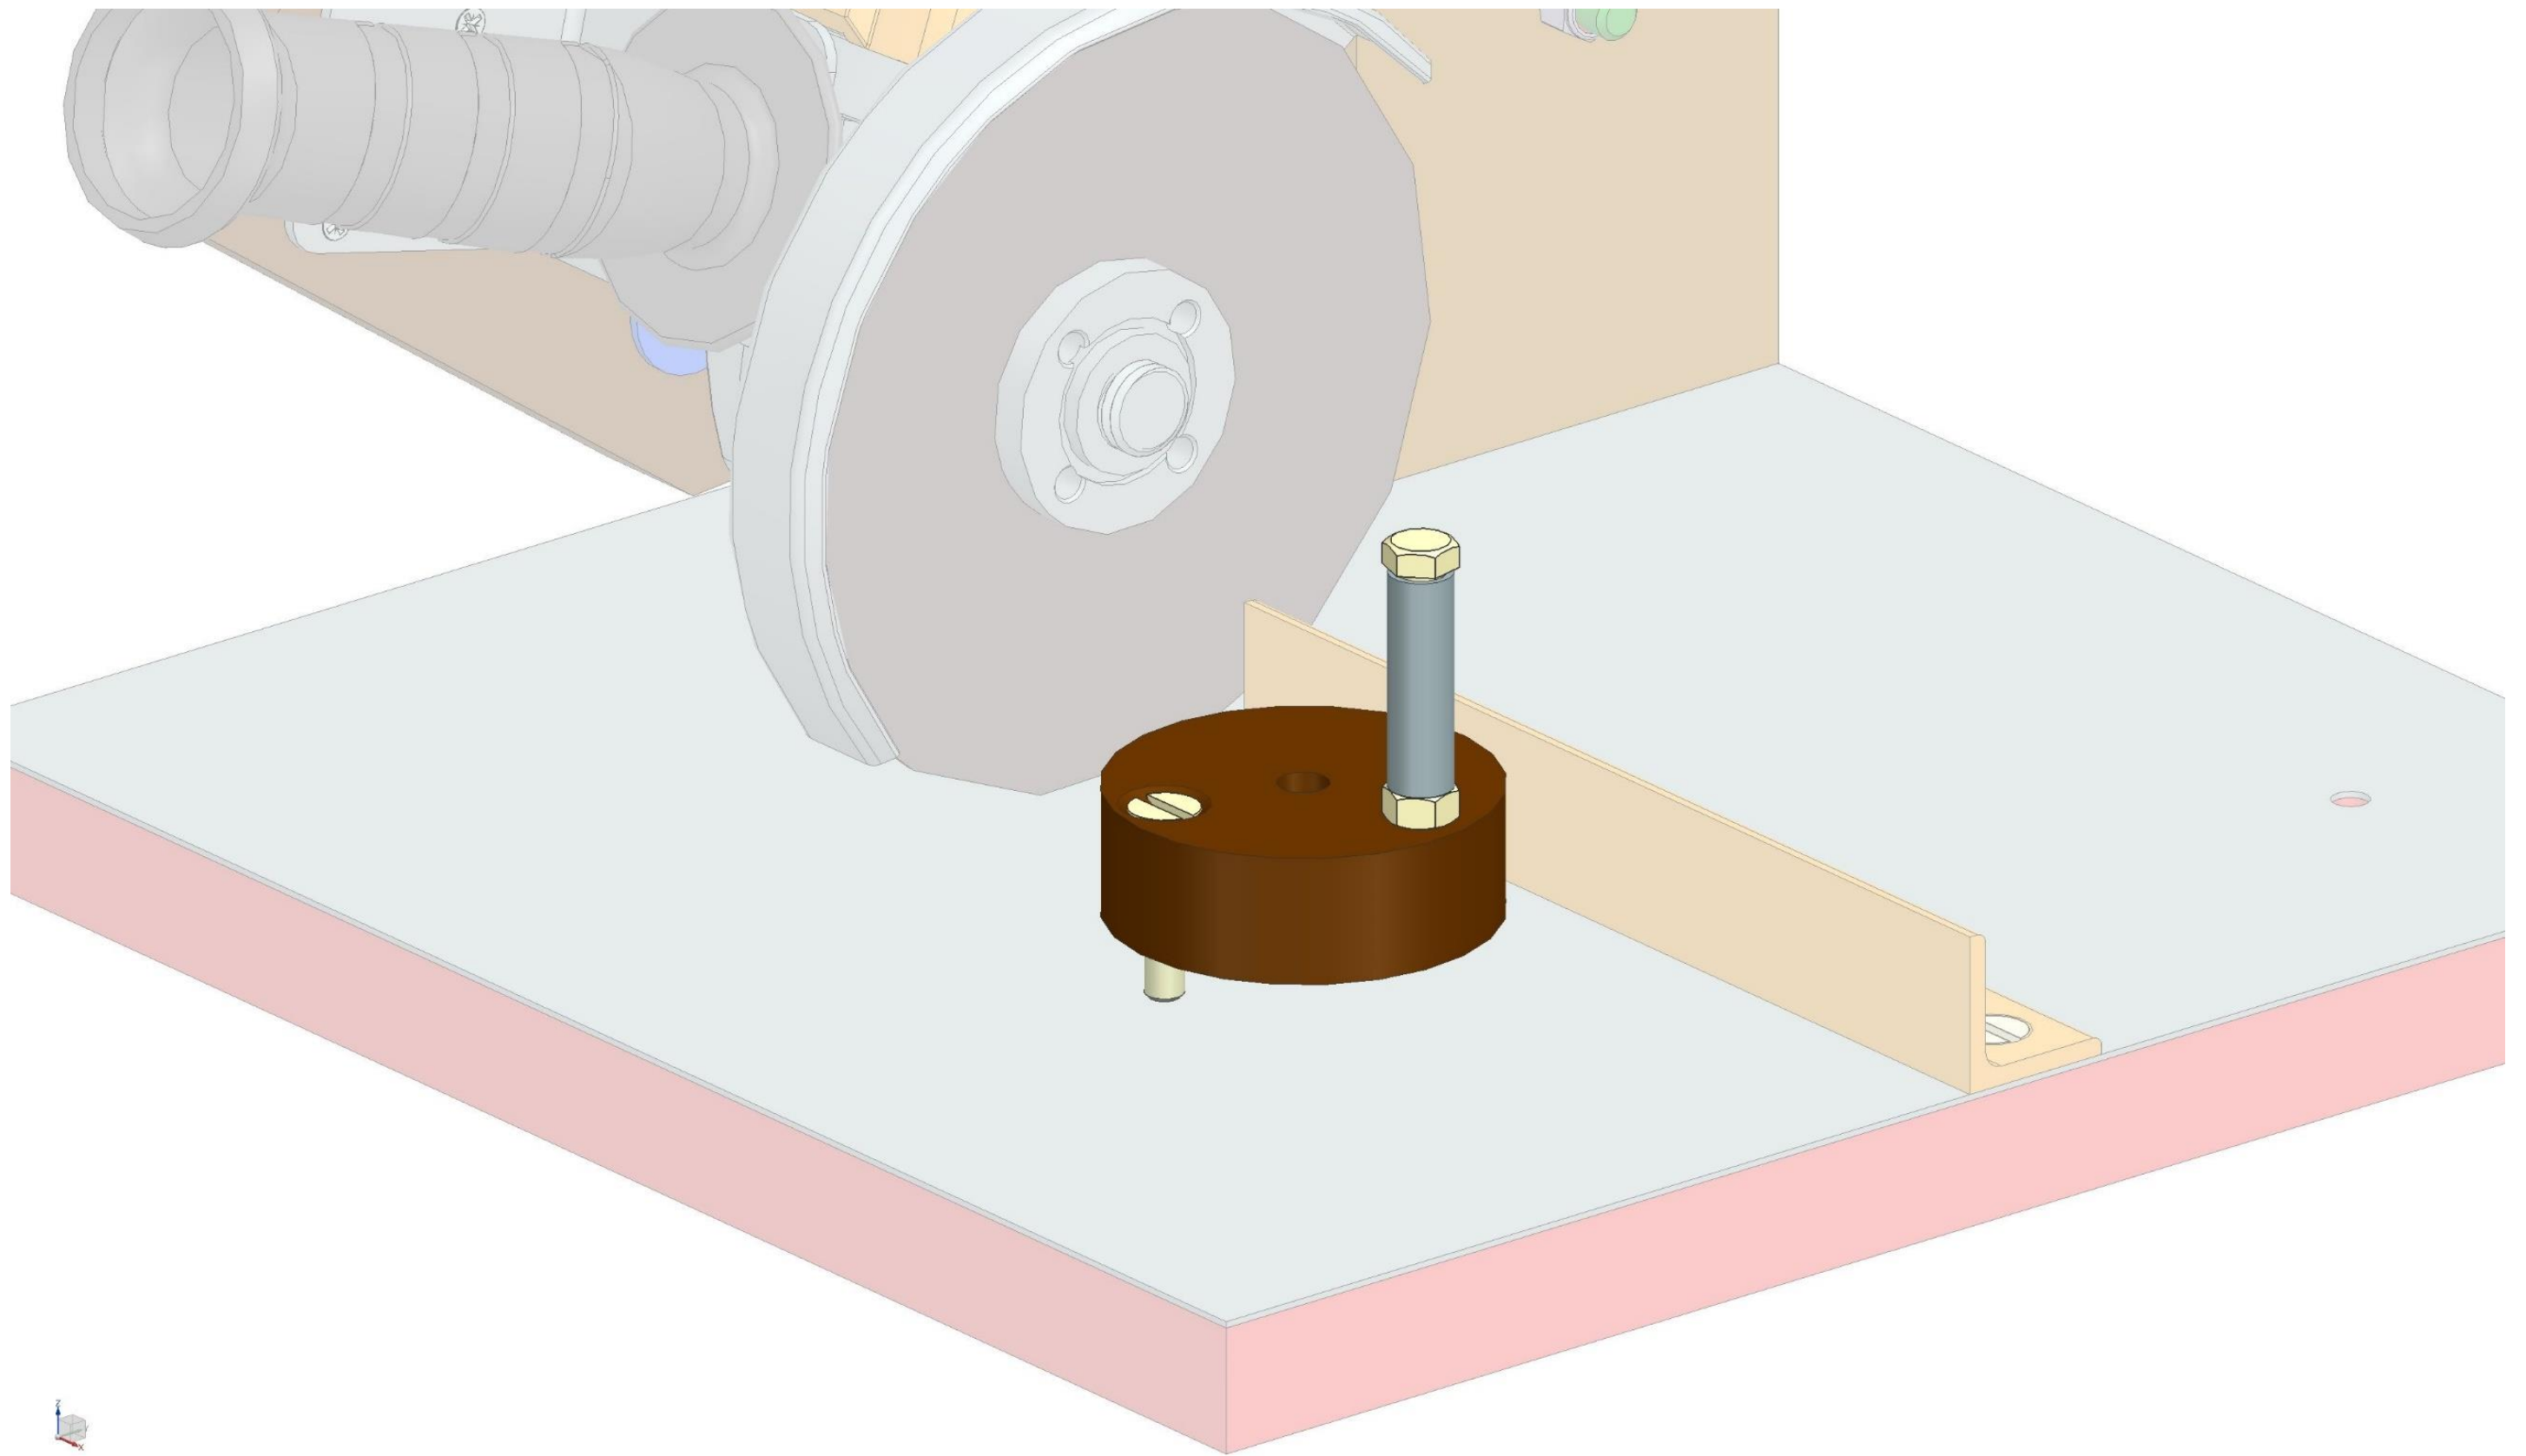


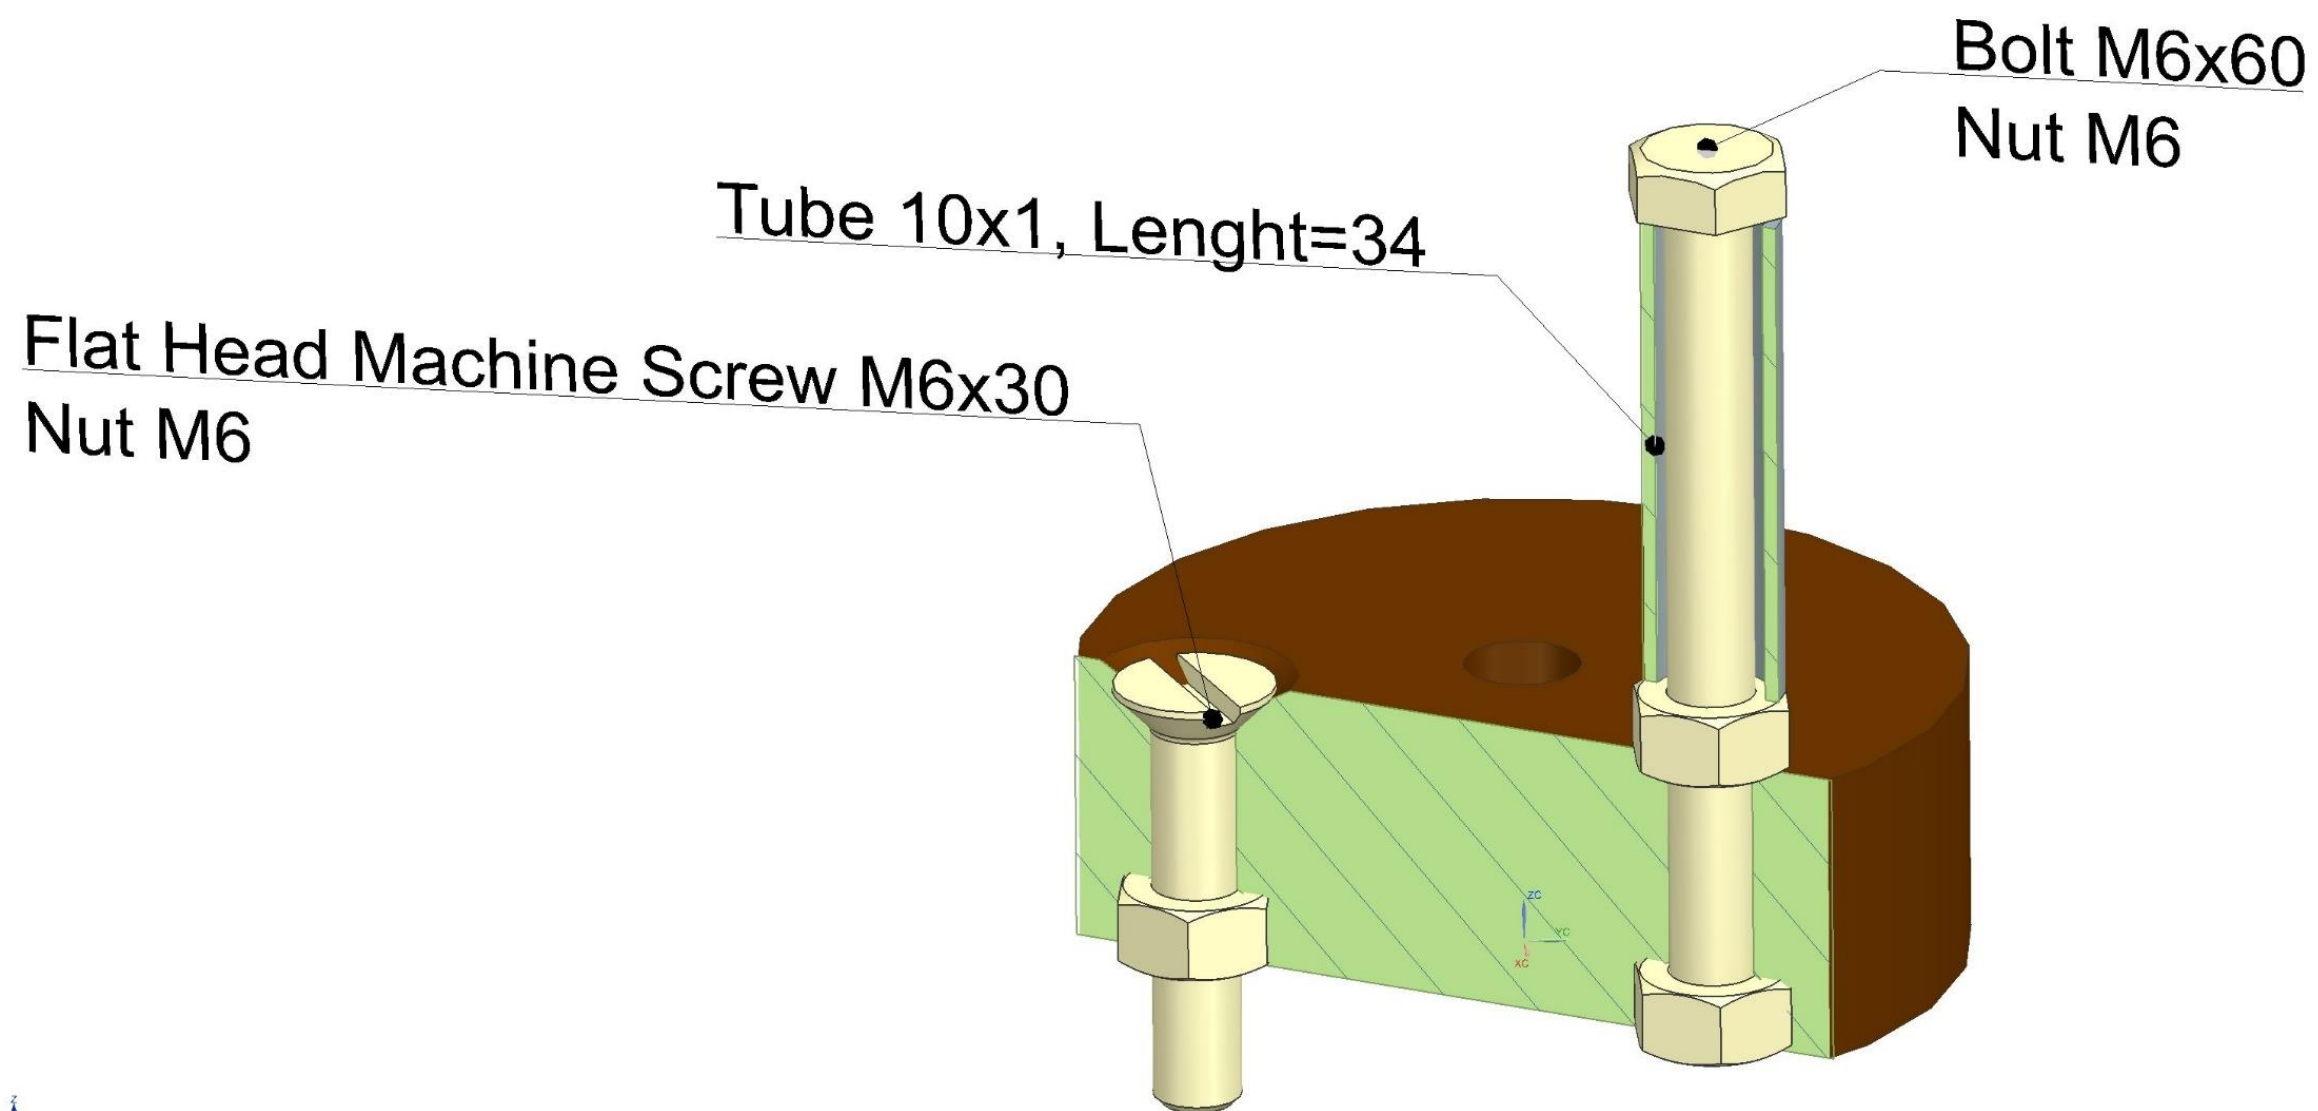


Fasteners:

- [Bolt M6x60](#)
- [Flat Head Machine Screw M6x30](#)
- [Nut M6](#)

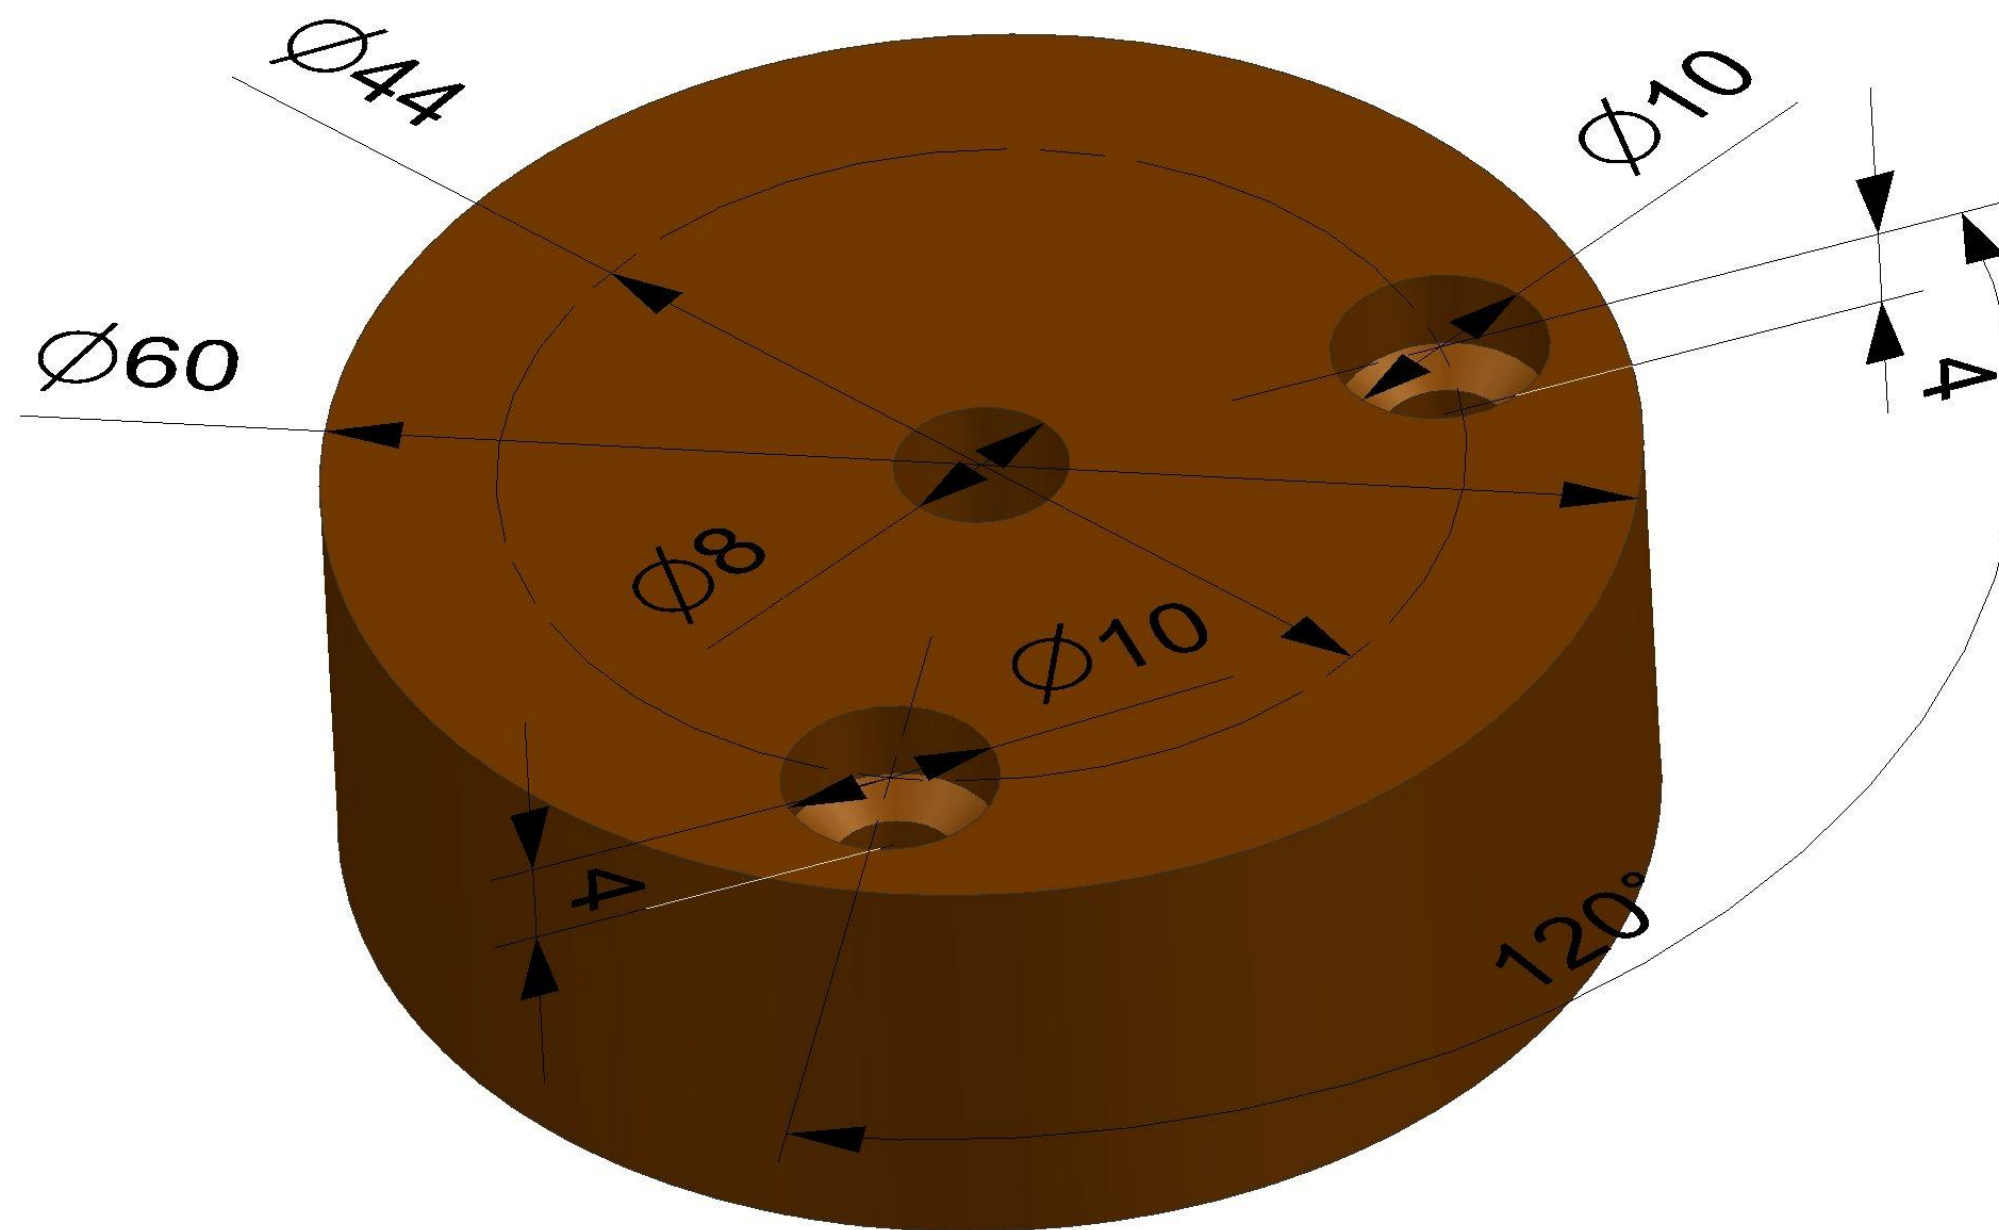

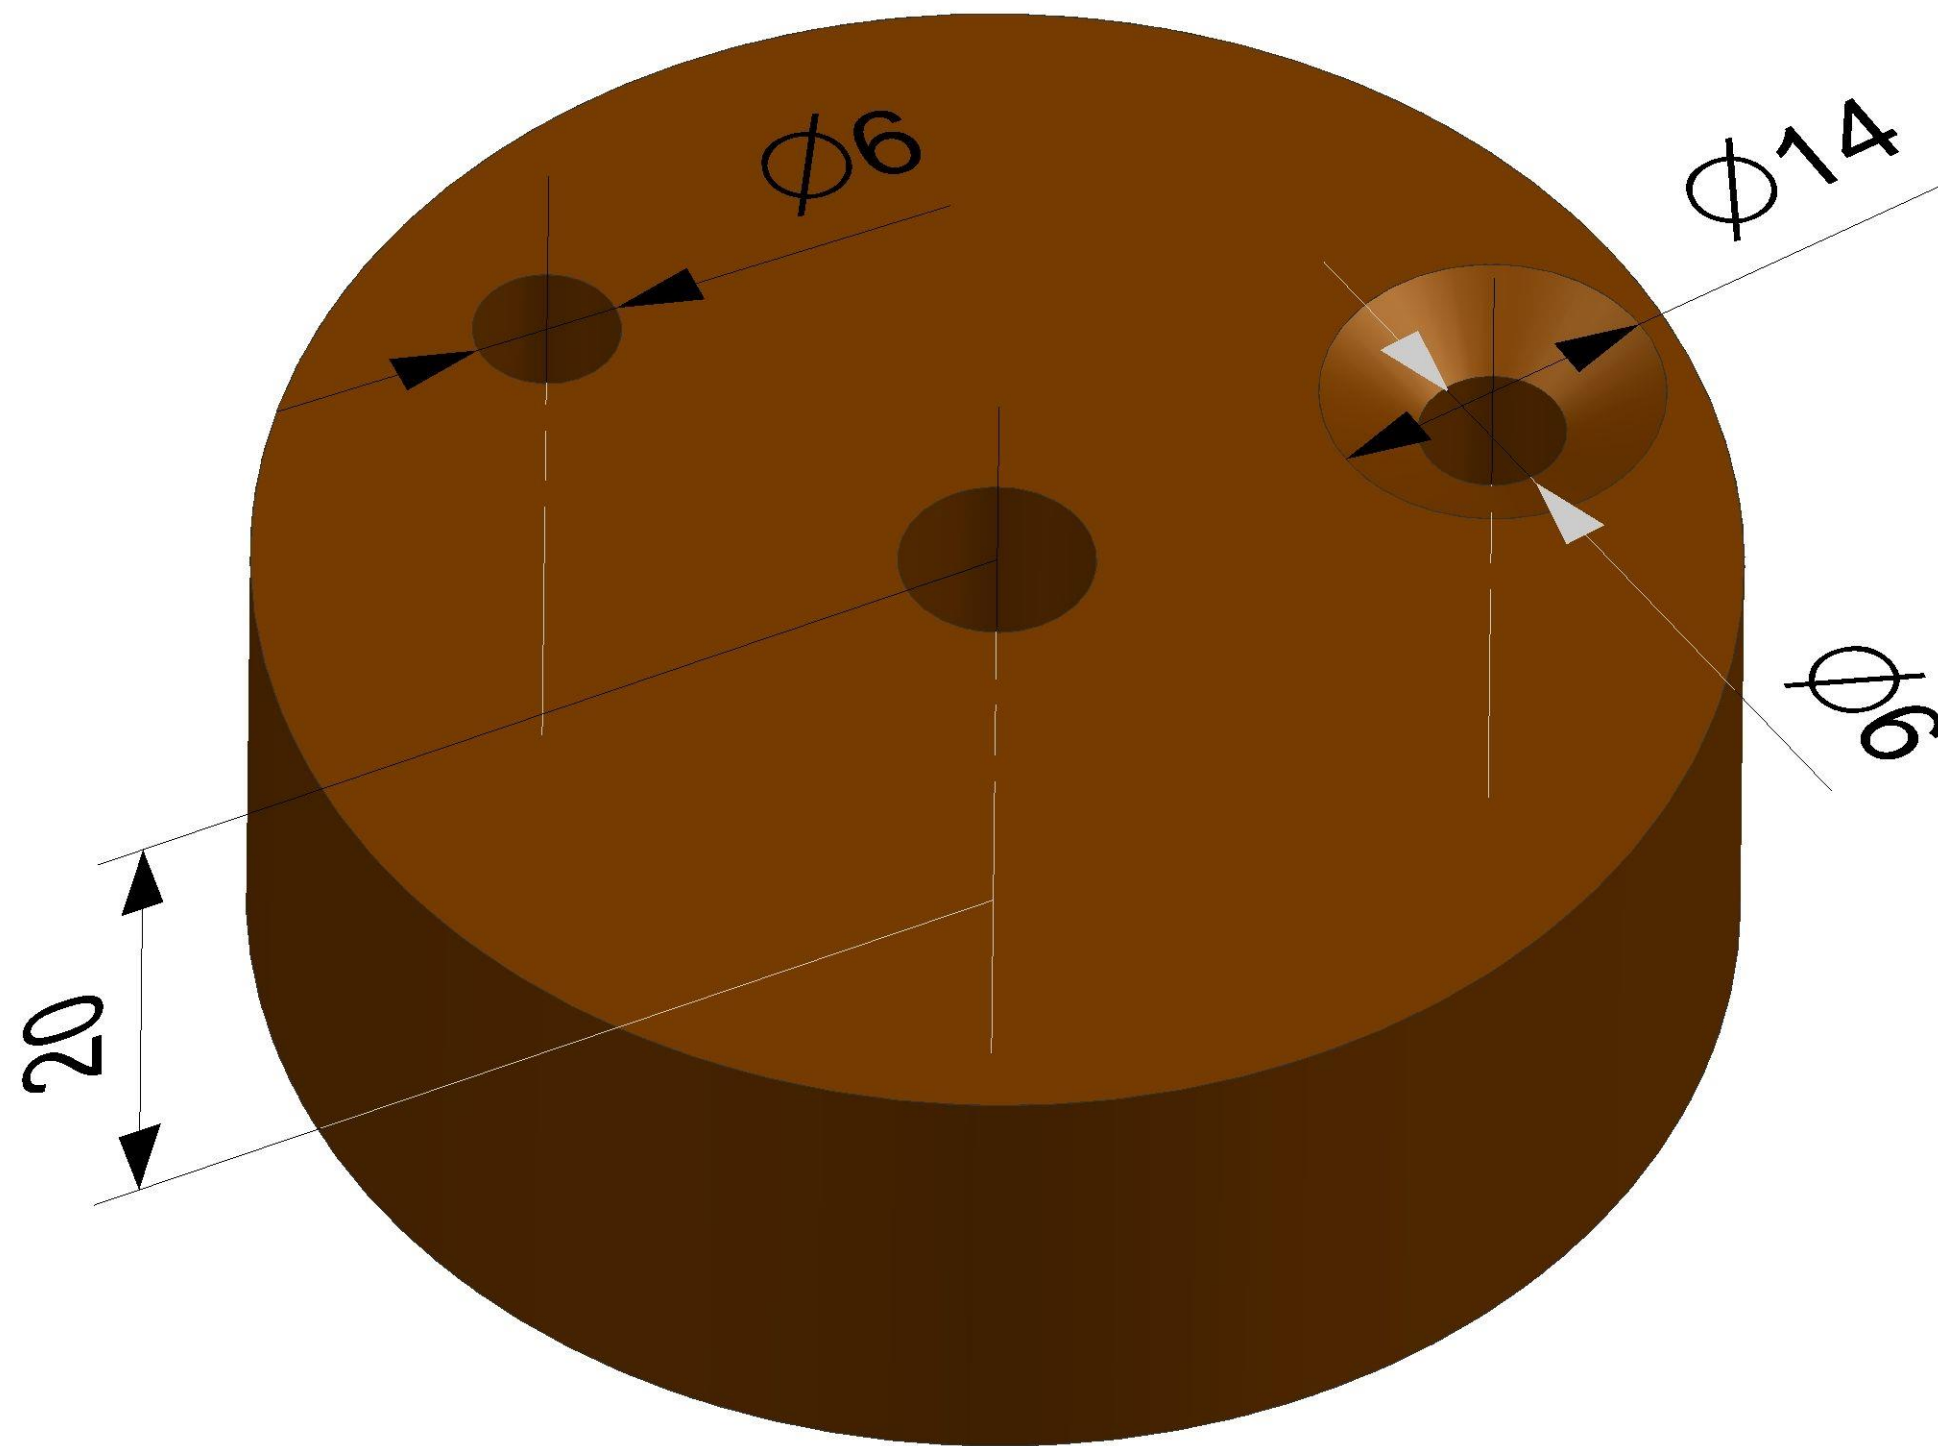

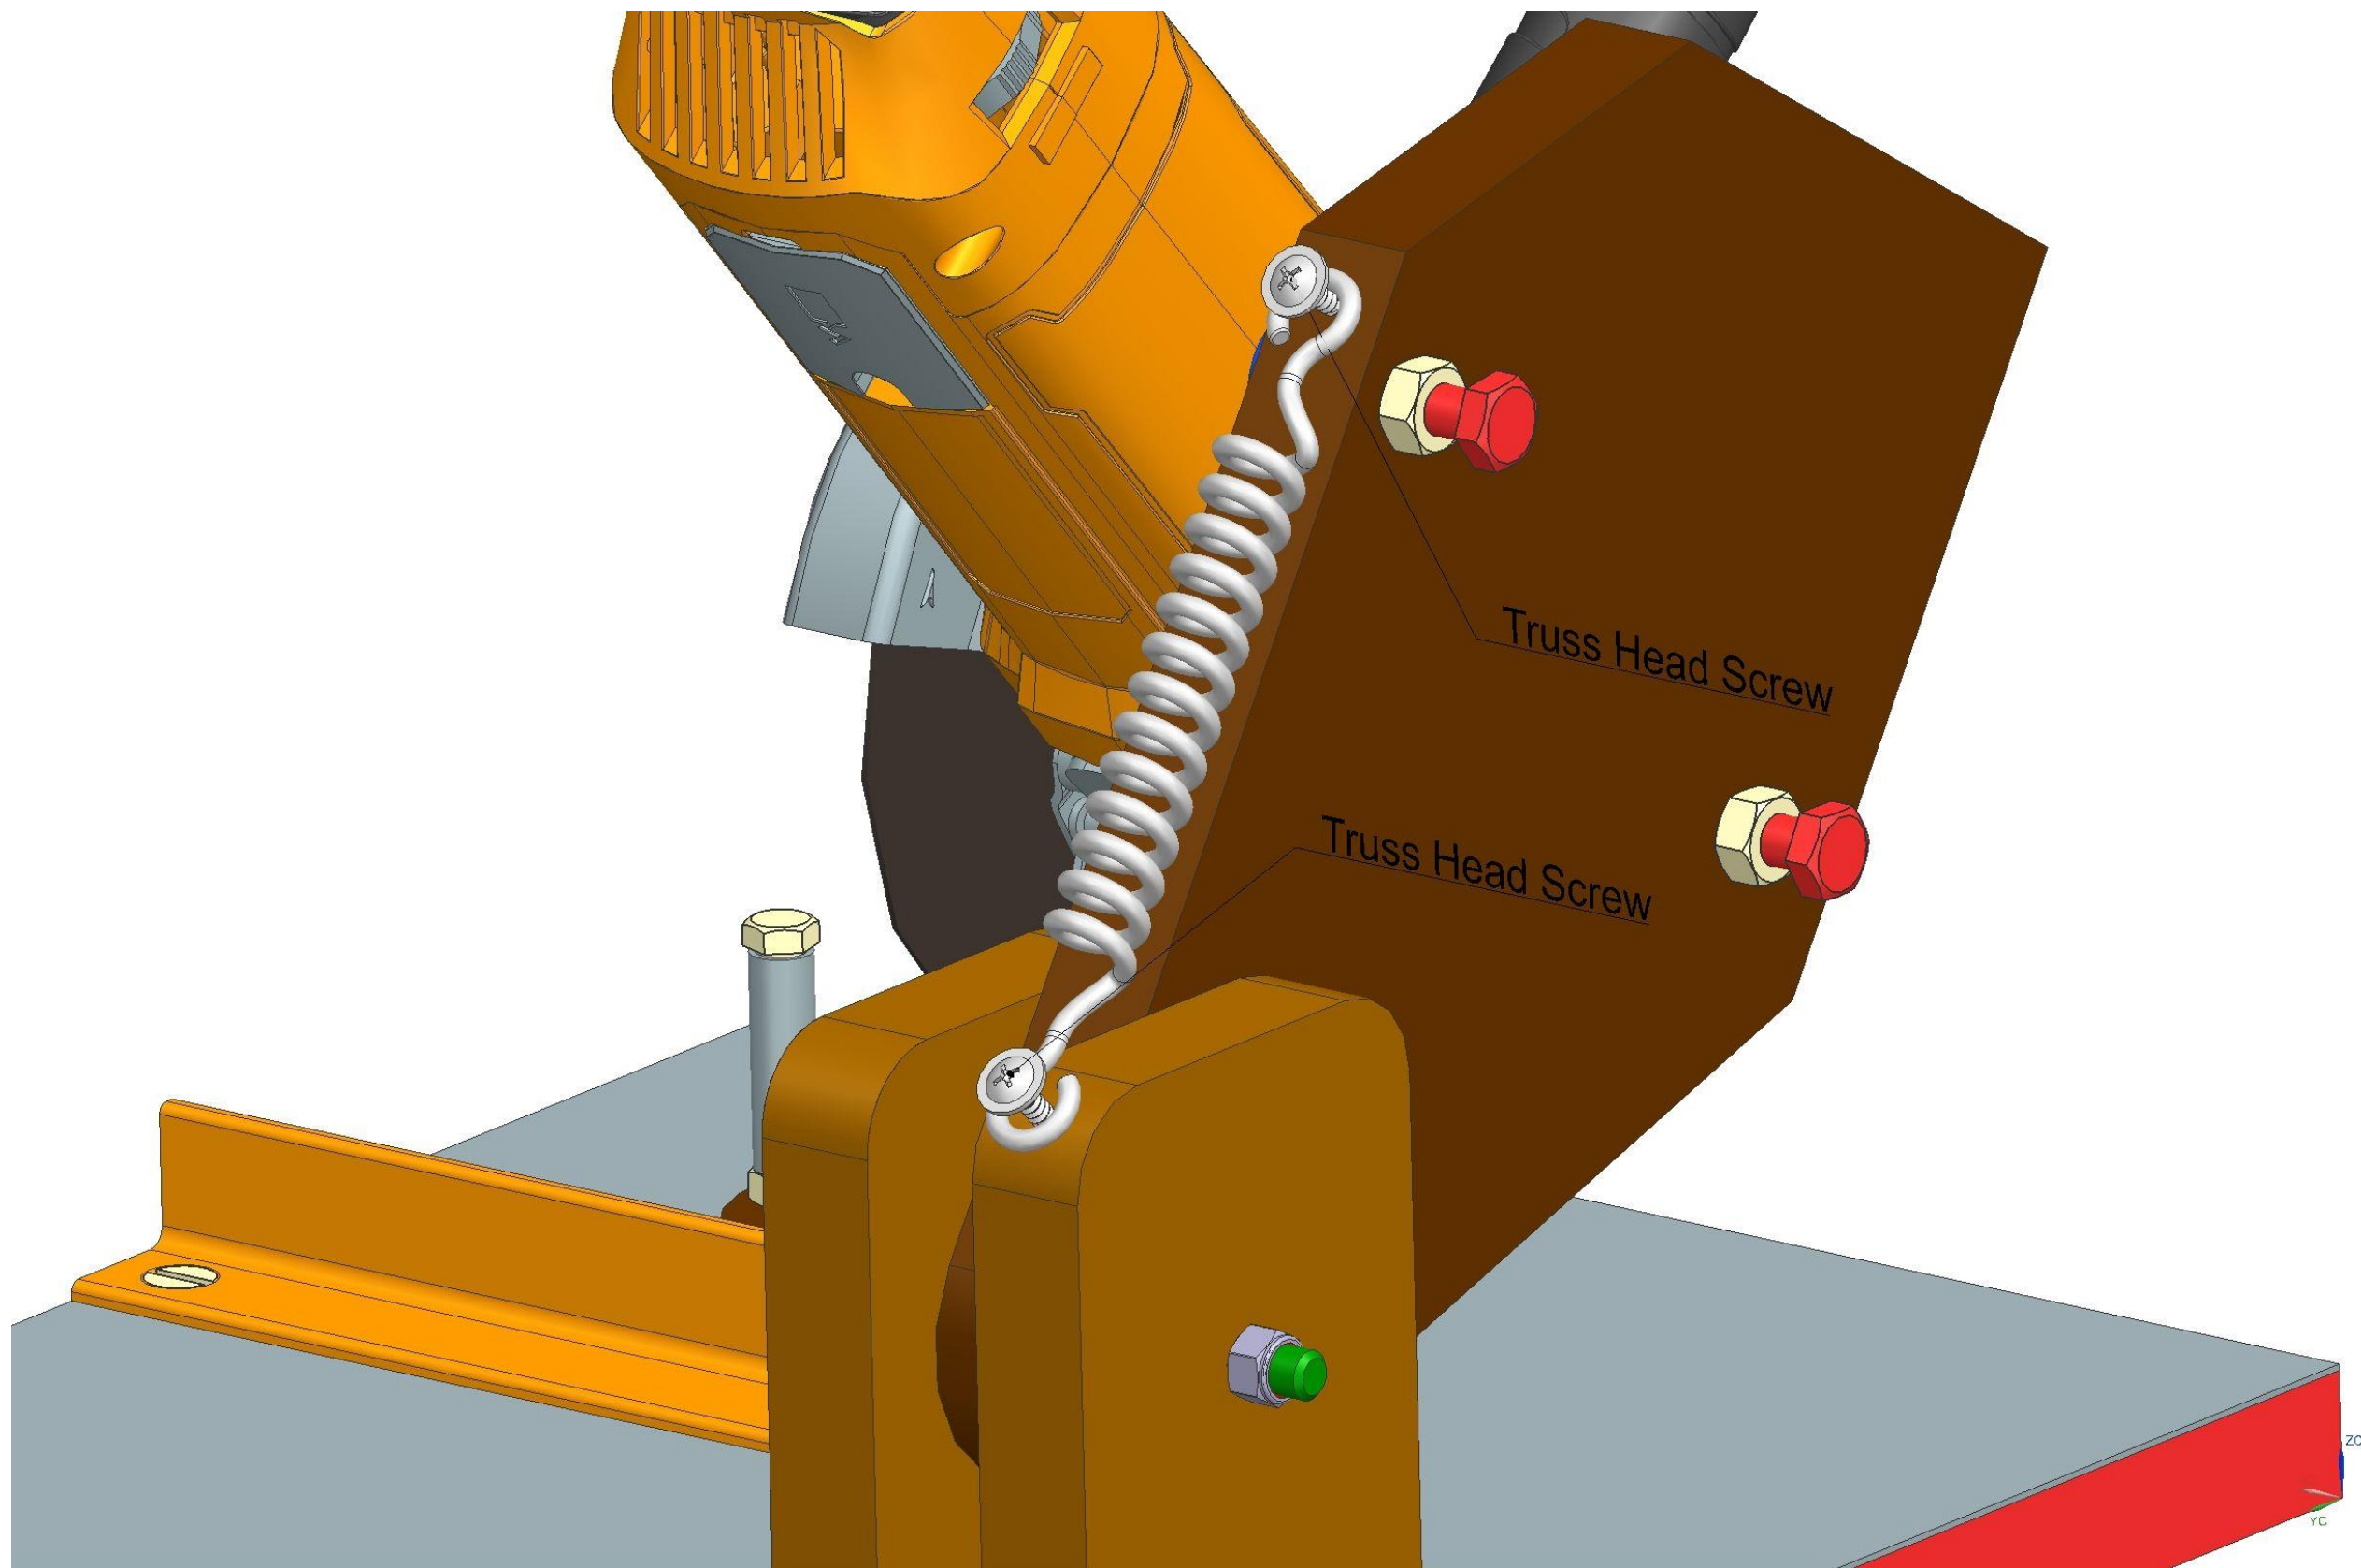

Fasteners:

- [Spring](#)
- [Truss head Wood Screw](#)