



Homemade bench vise plans

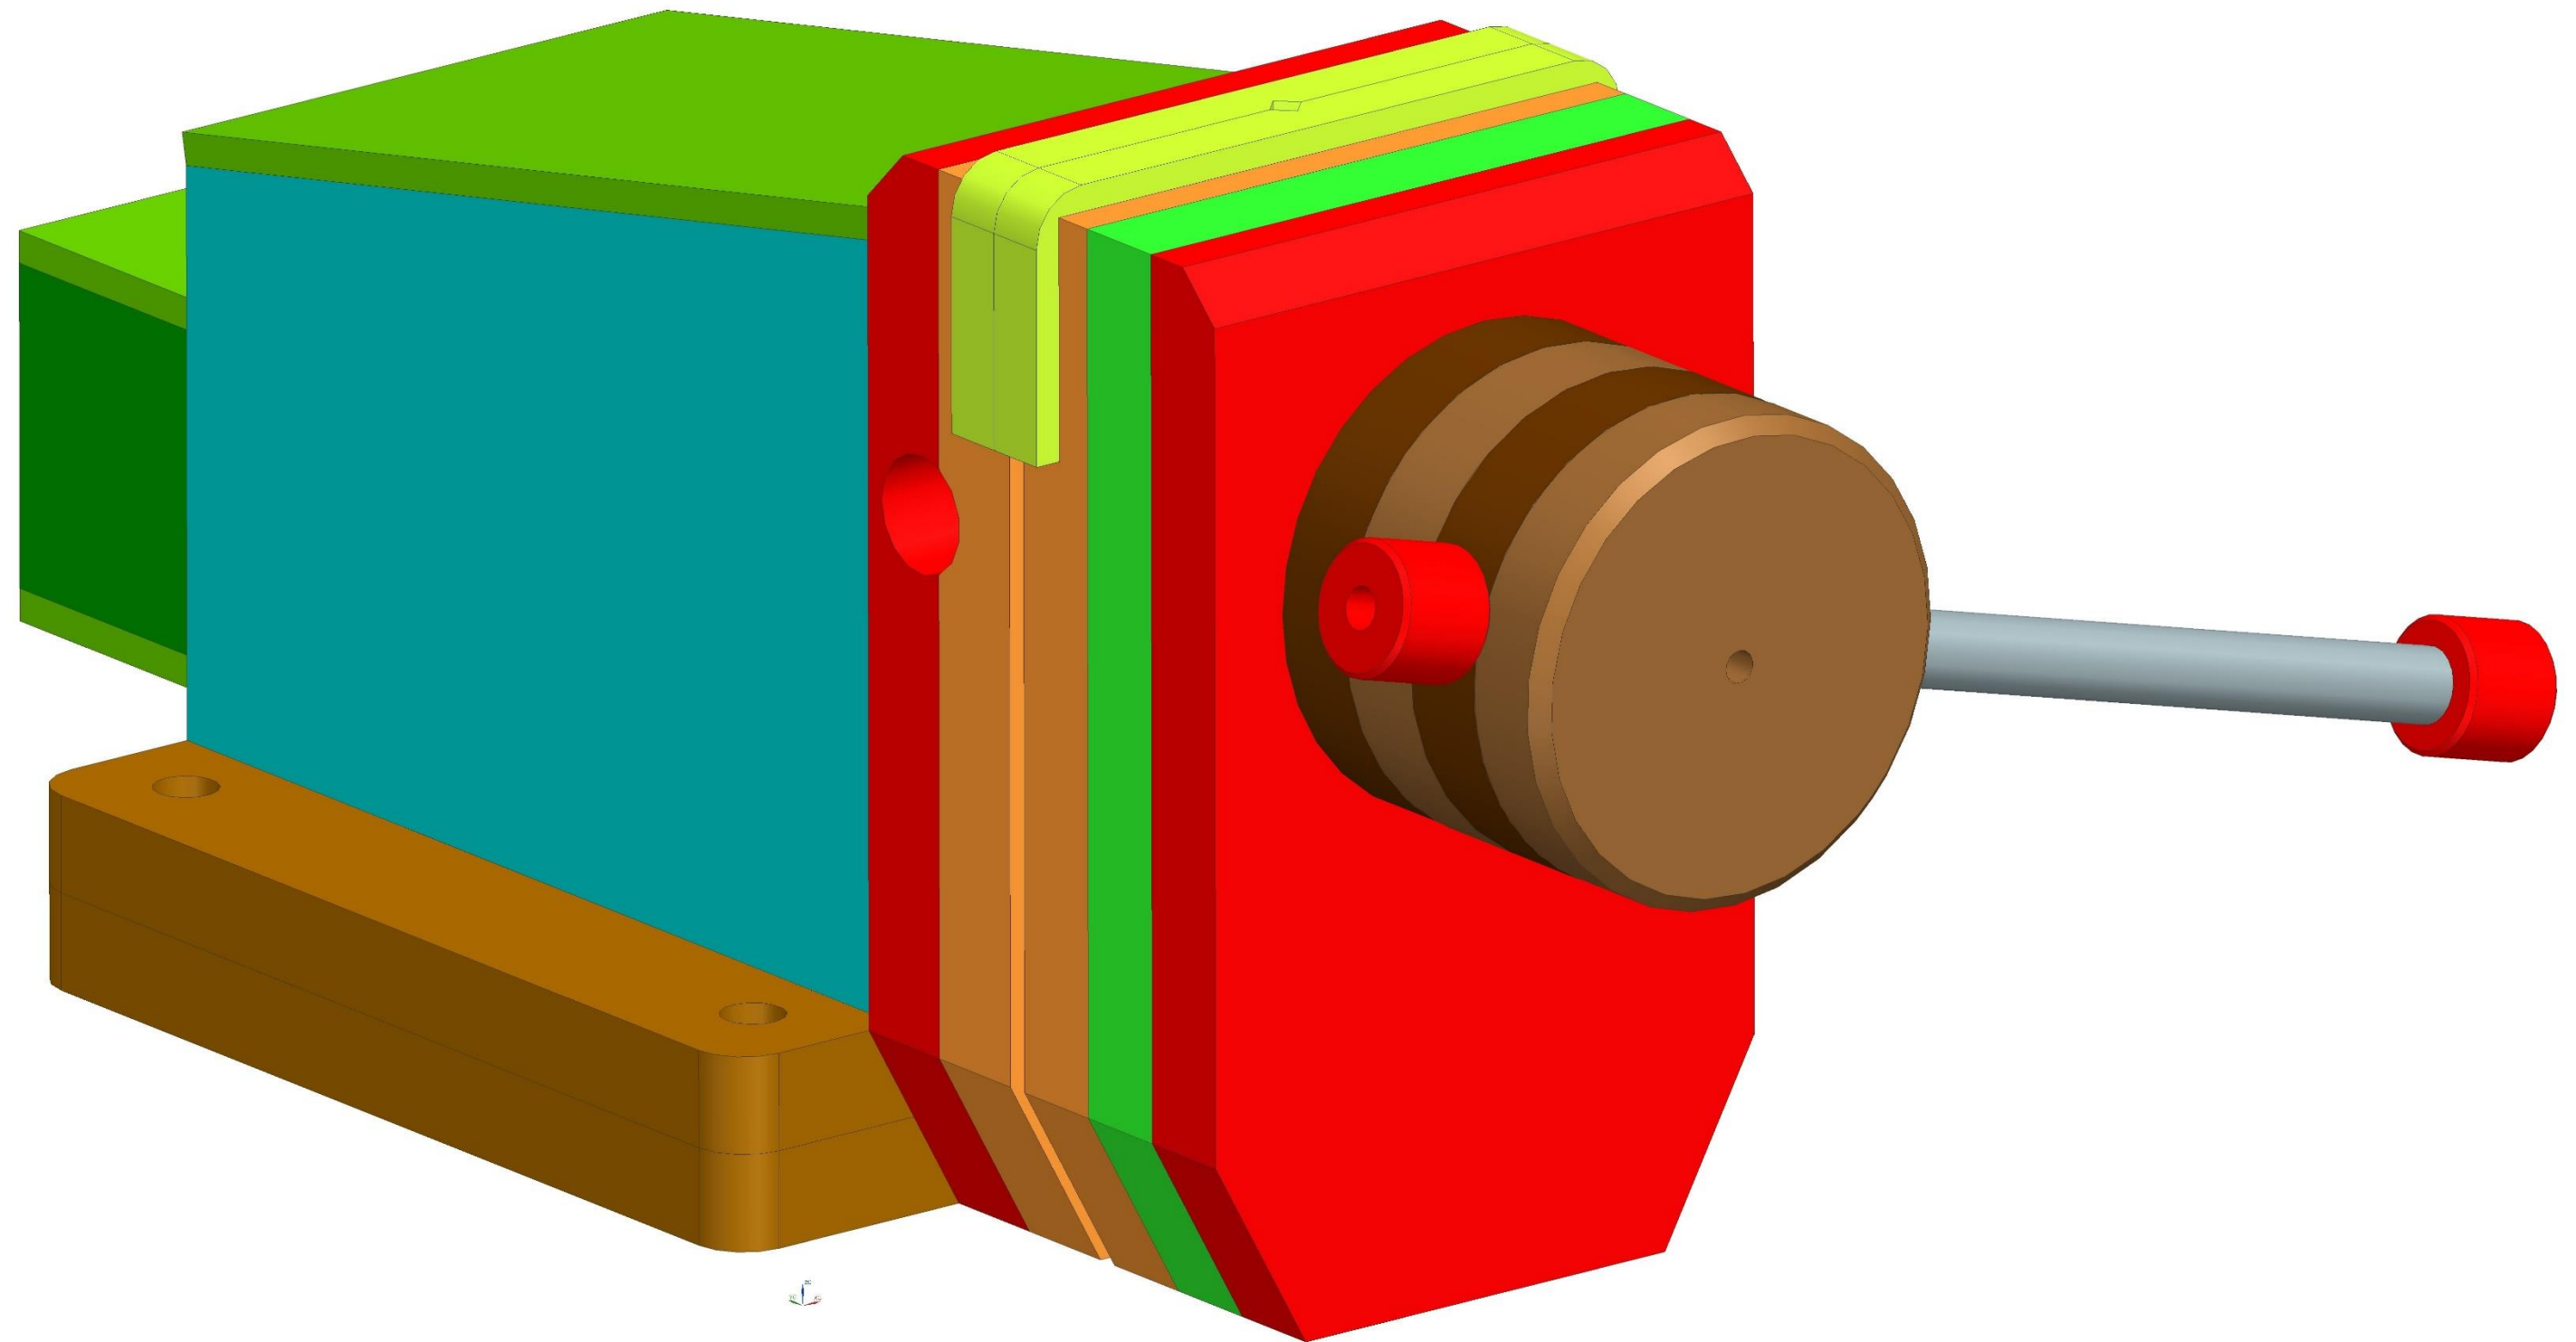

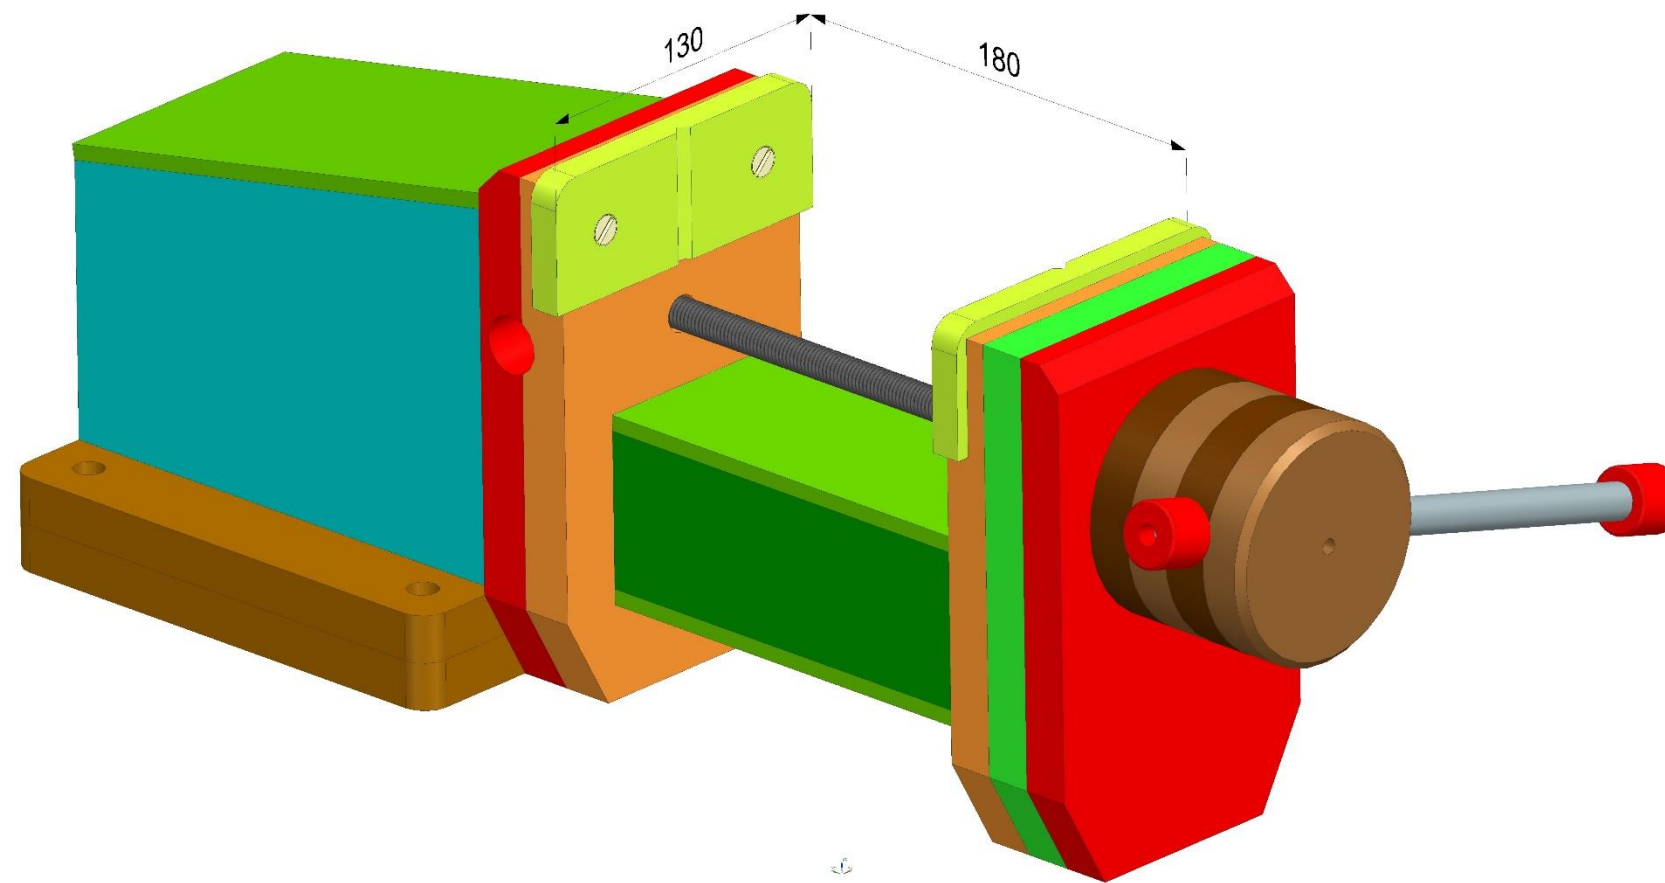



Fasteners:


1. [Flat Head Machine Screw M6x20](#) x 4
2. [Threaded Insert M6](#) x 4
3. Nail
4. Broken Jackscrew :(OR Threaded rod M12+


Materials:


1. Round steel bar, Ø14
2. [Plywood 18 mm](#)
3. Laminated Plywood 6 mm
4. Laminated Plywood 12 mm
5. Laminated Plywood 18 mm

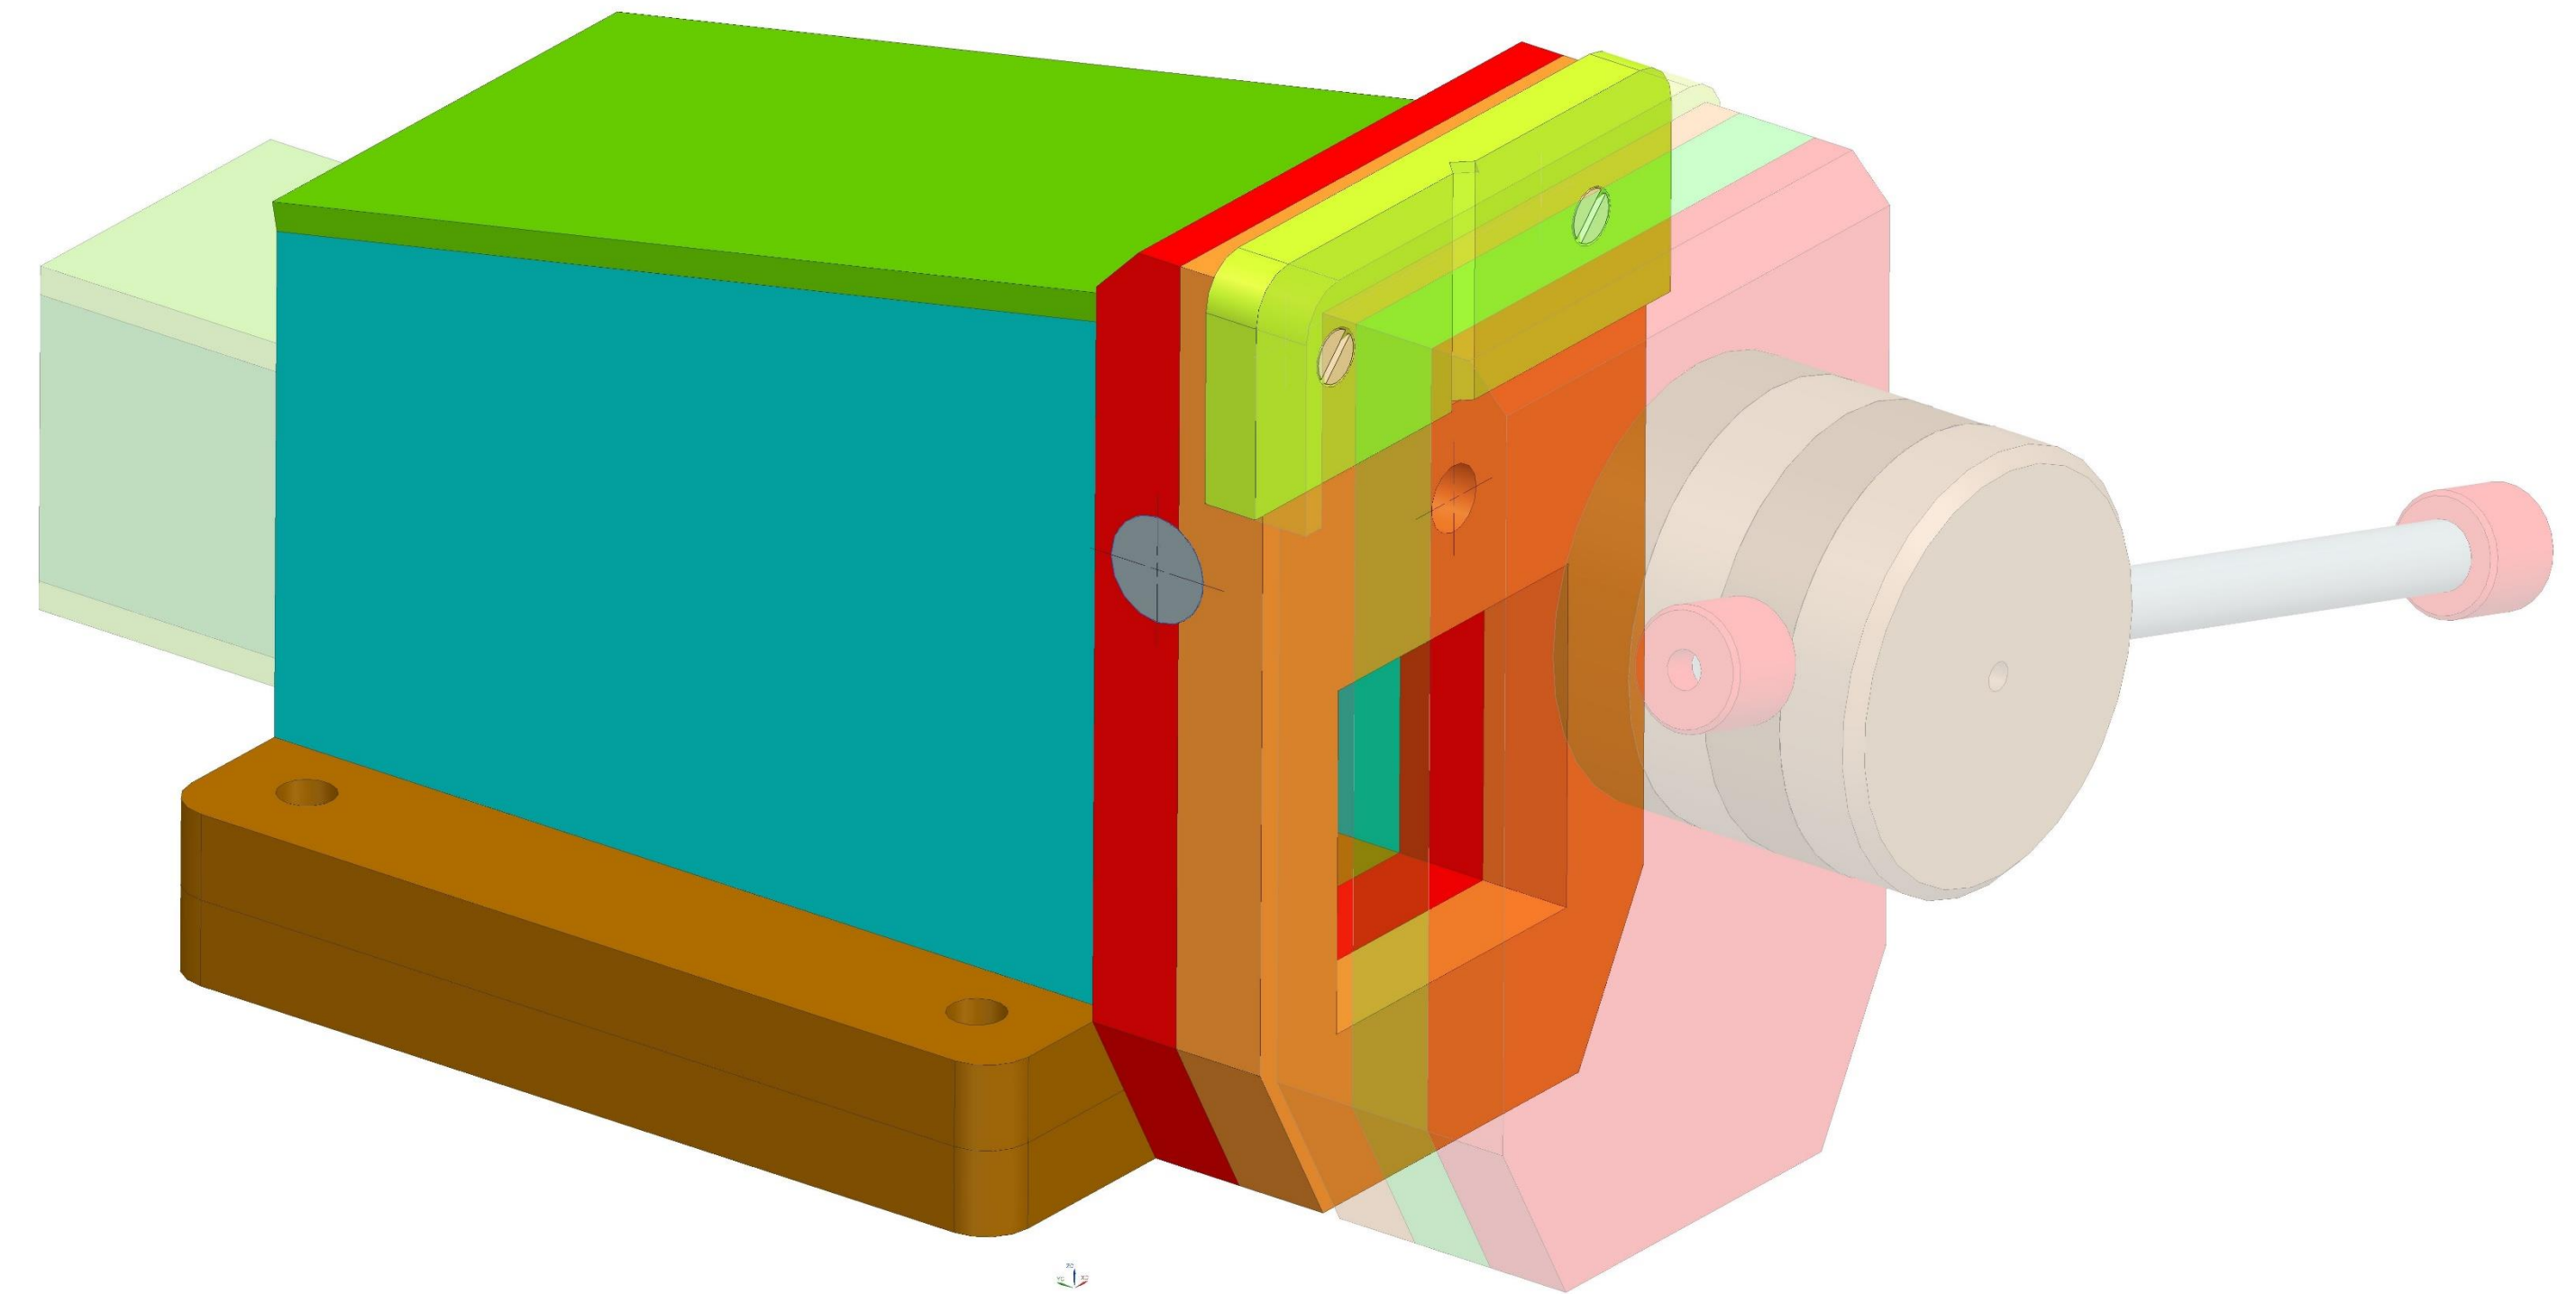


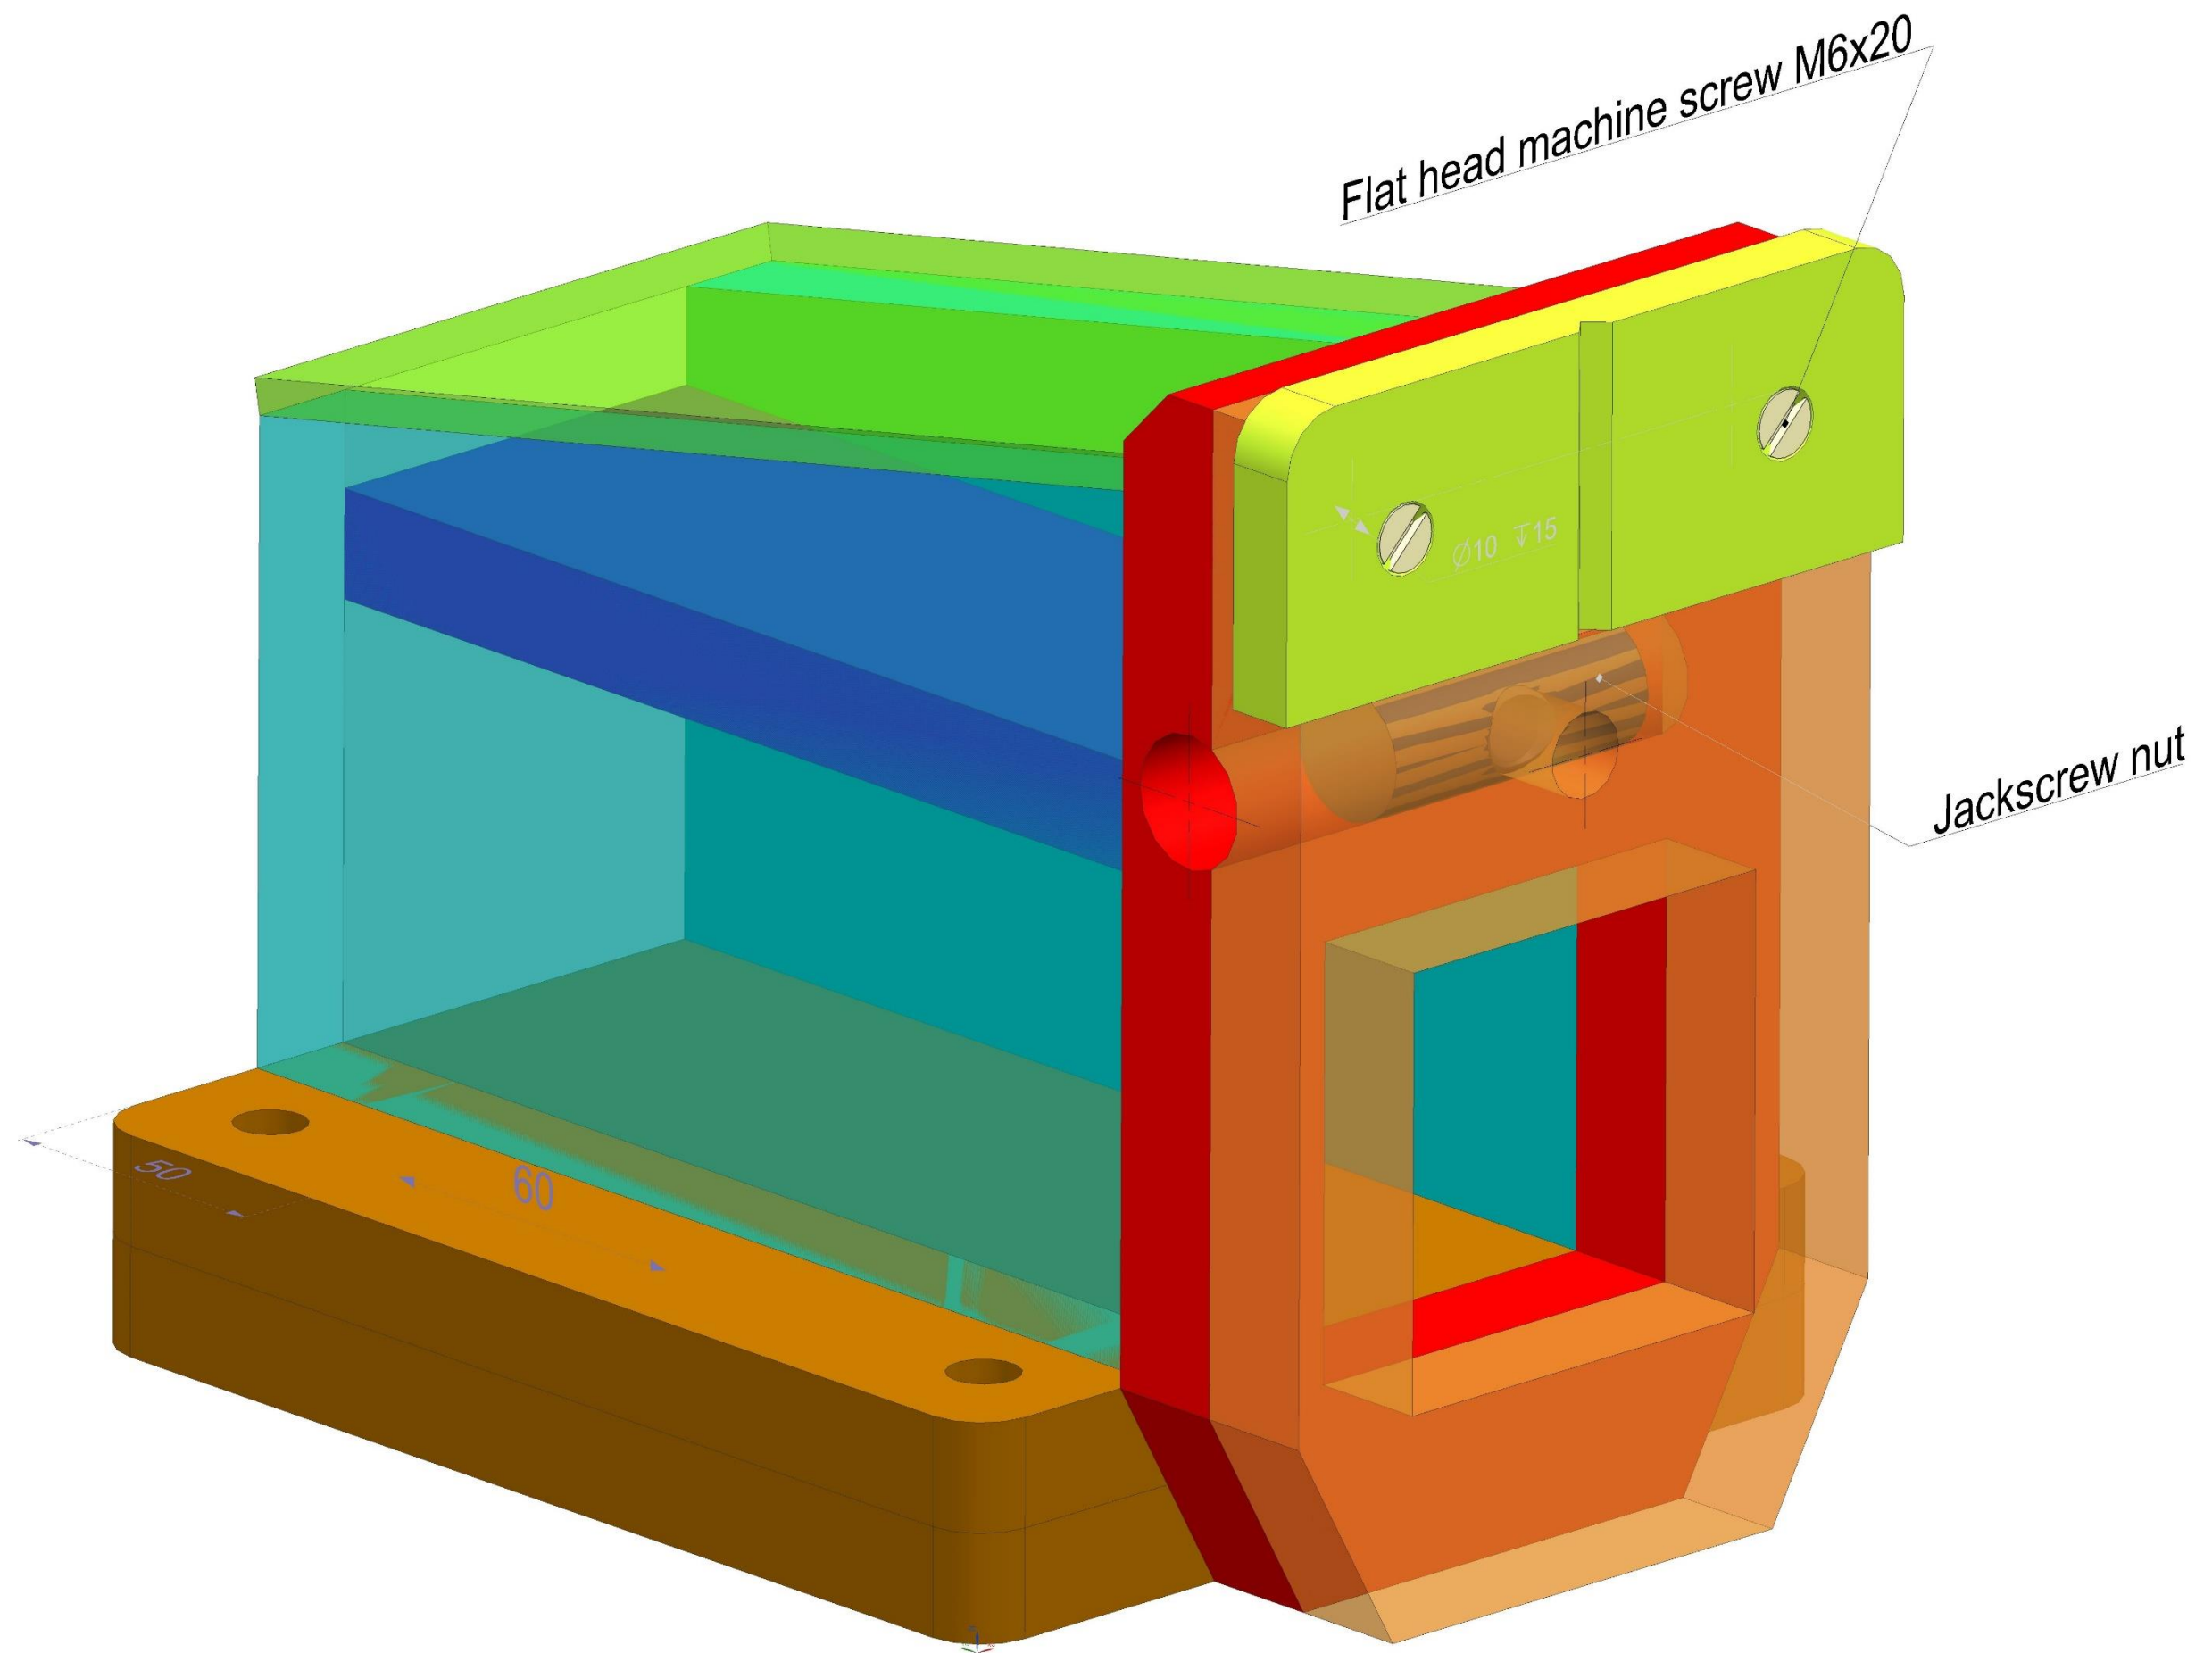


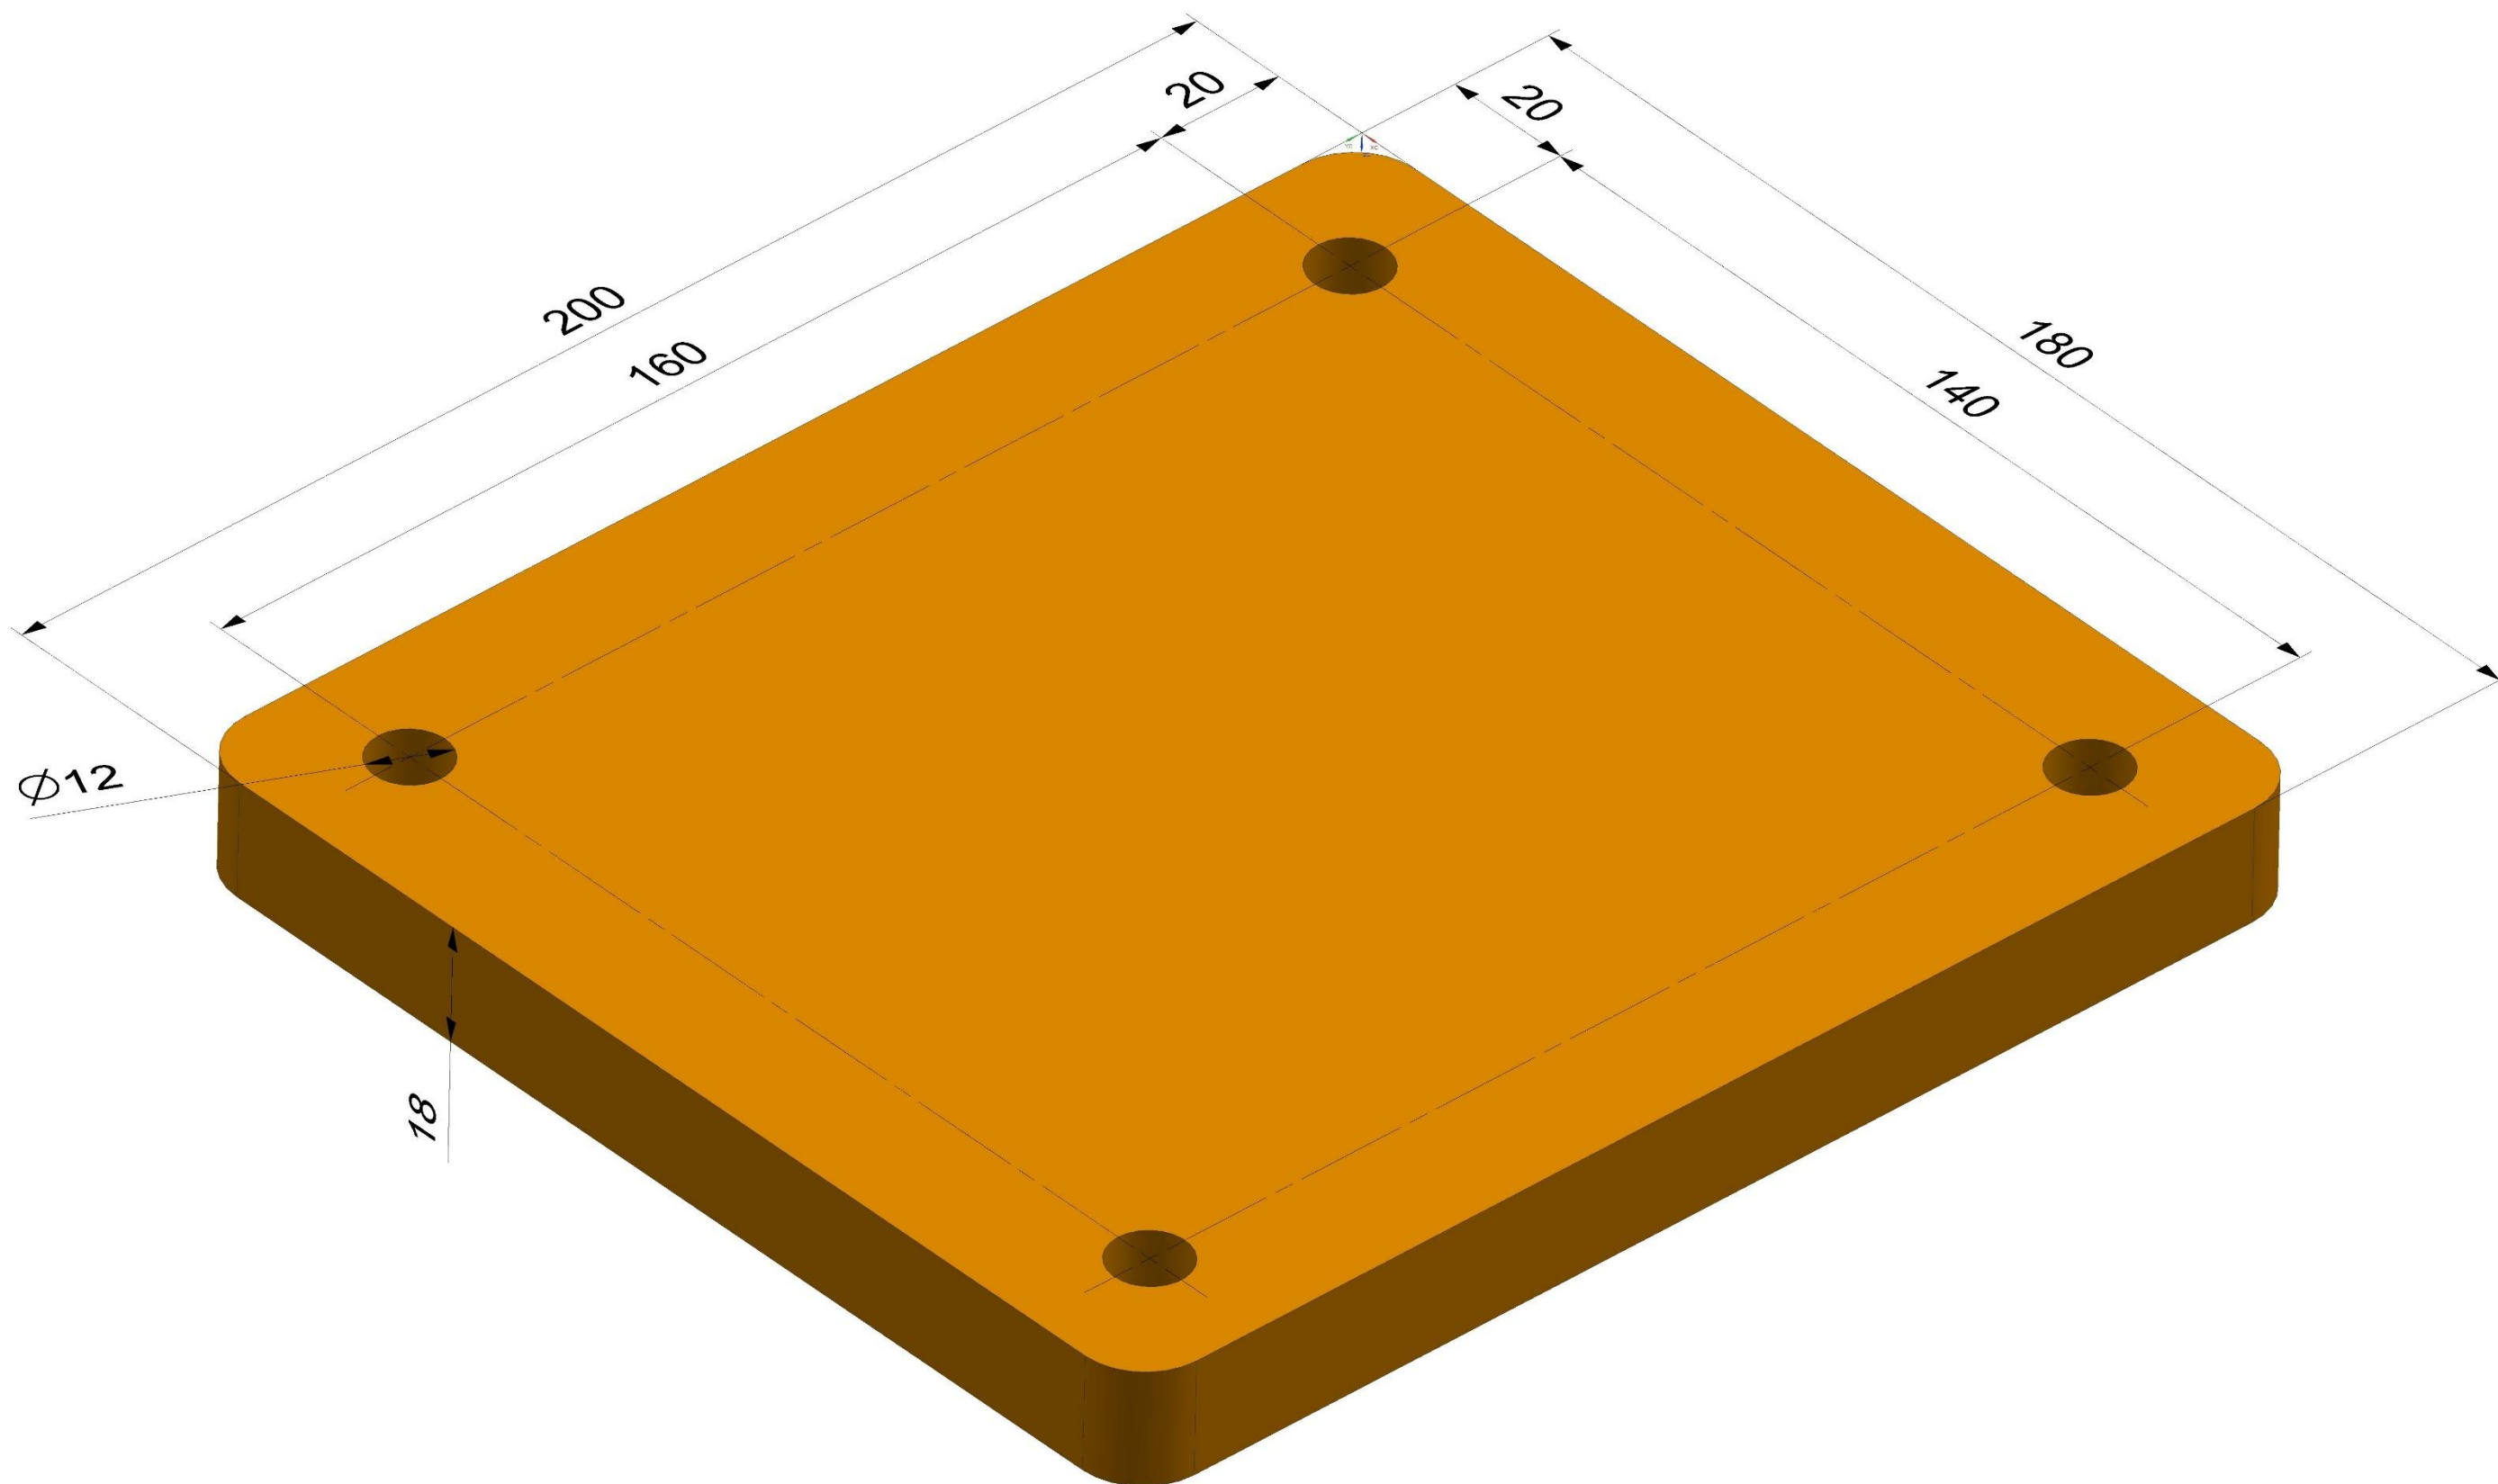


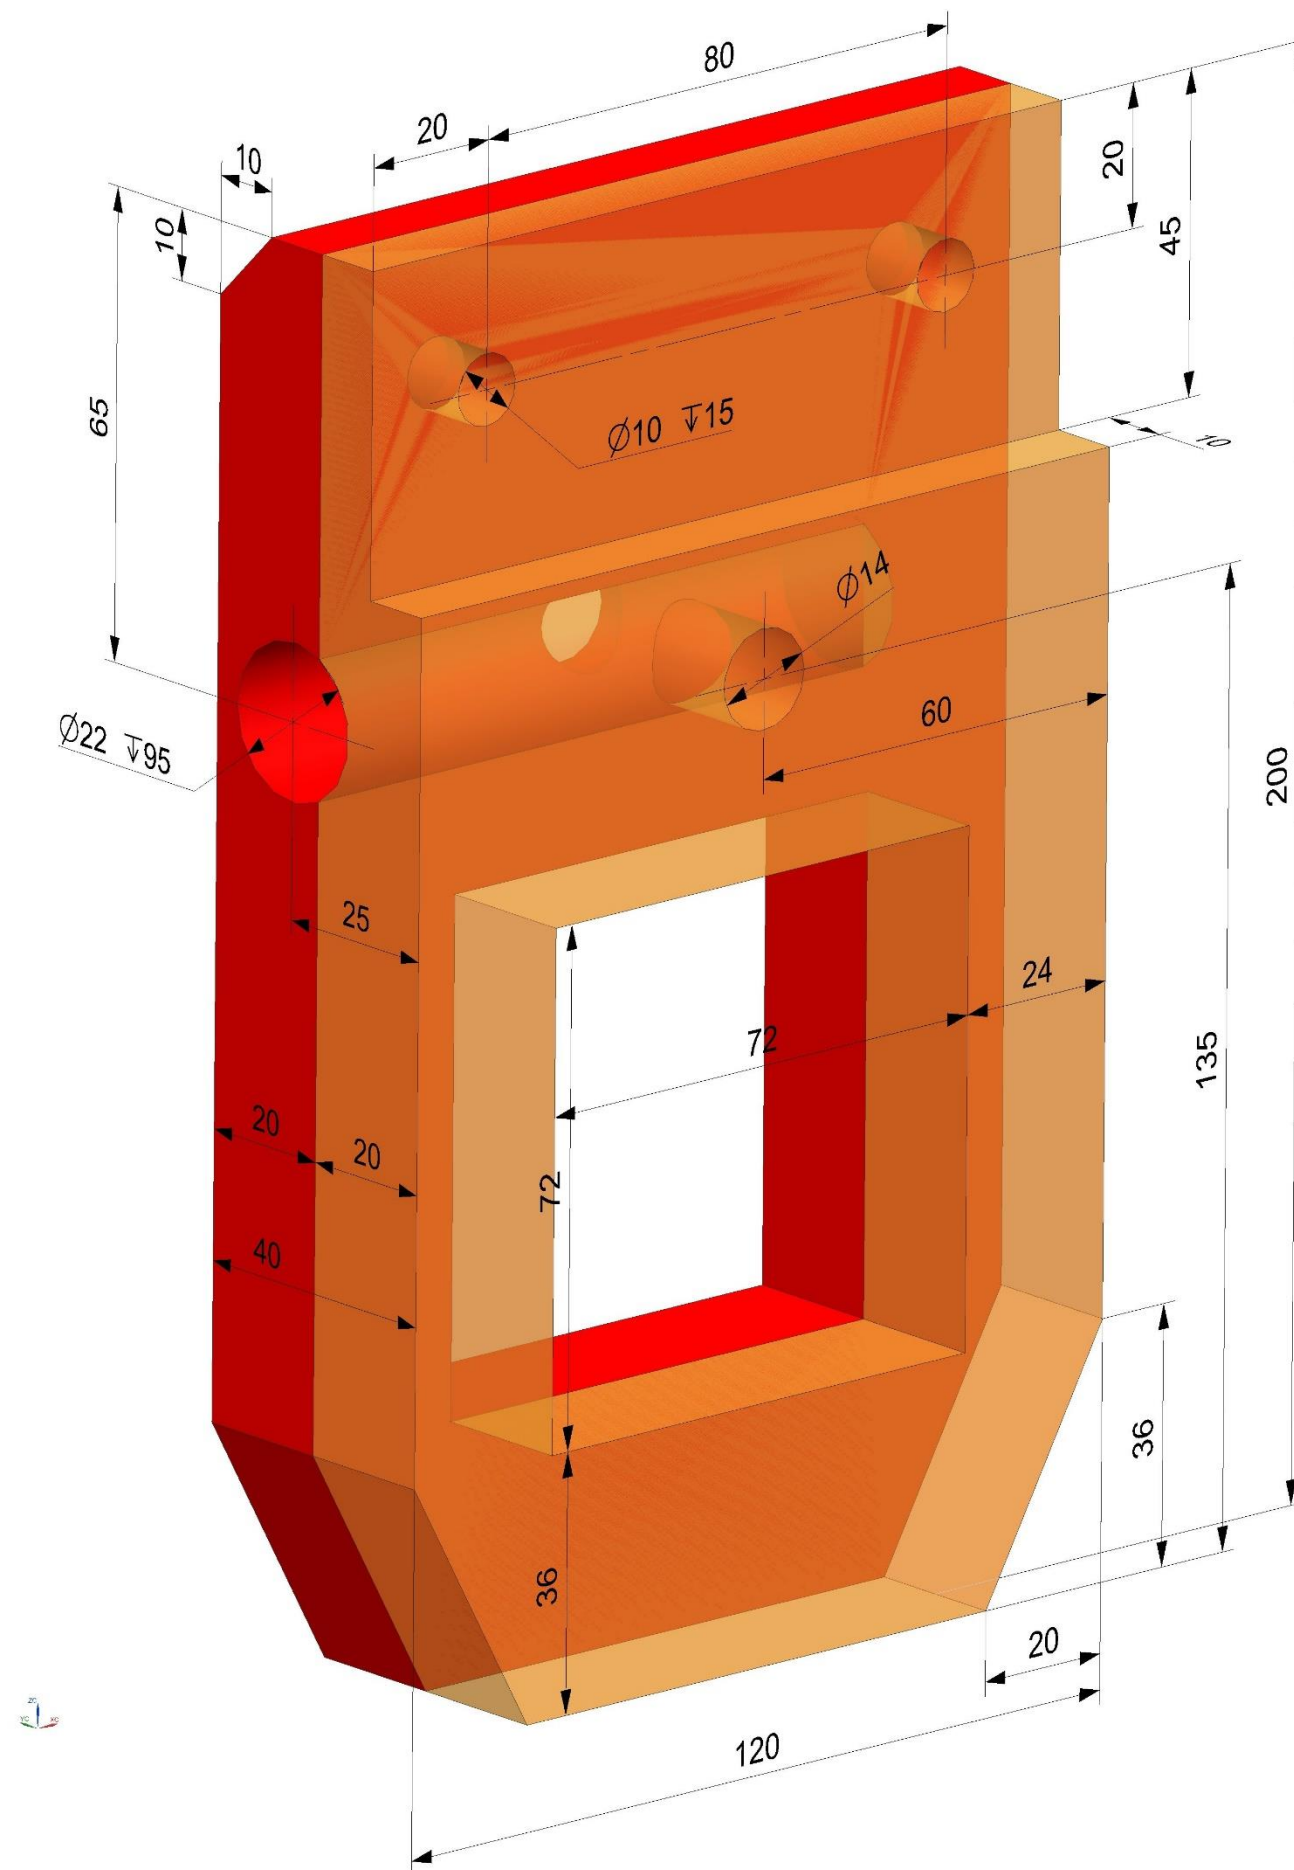


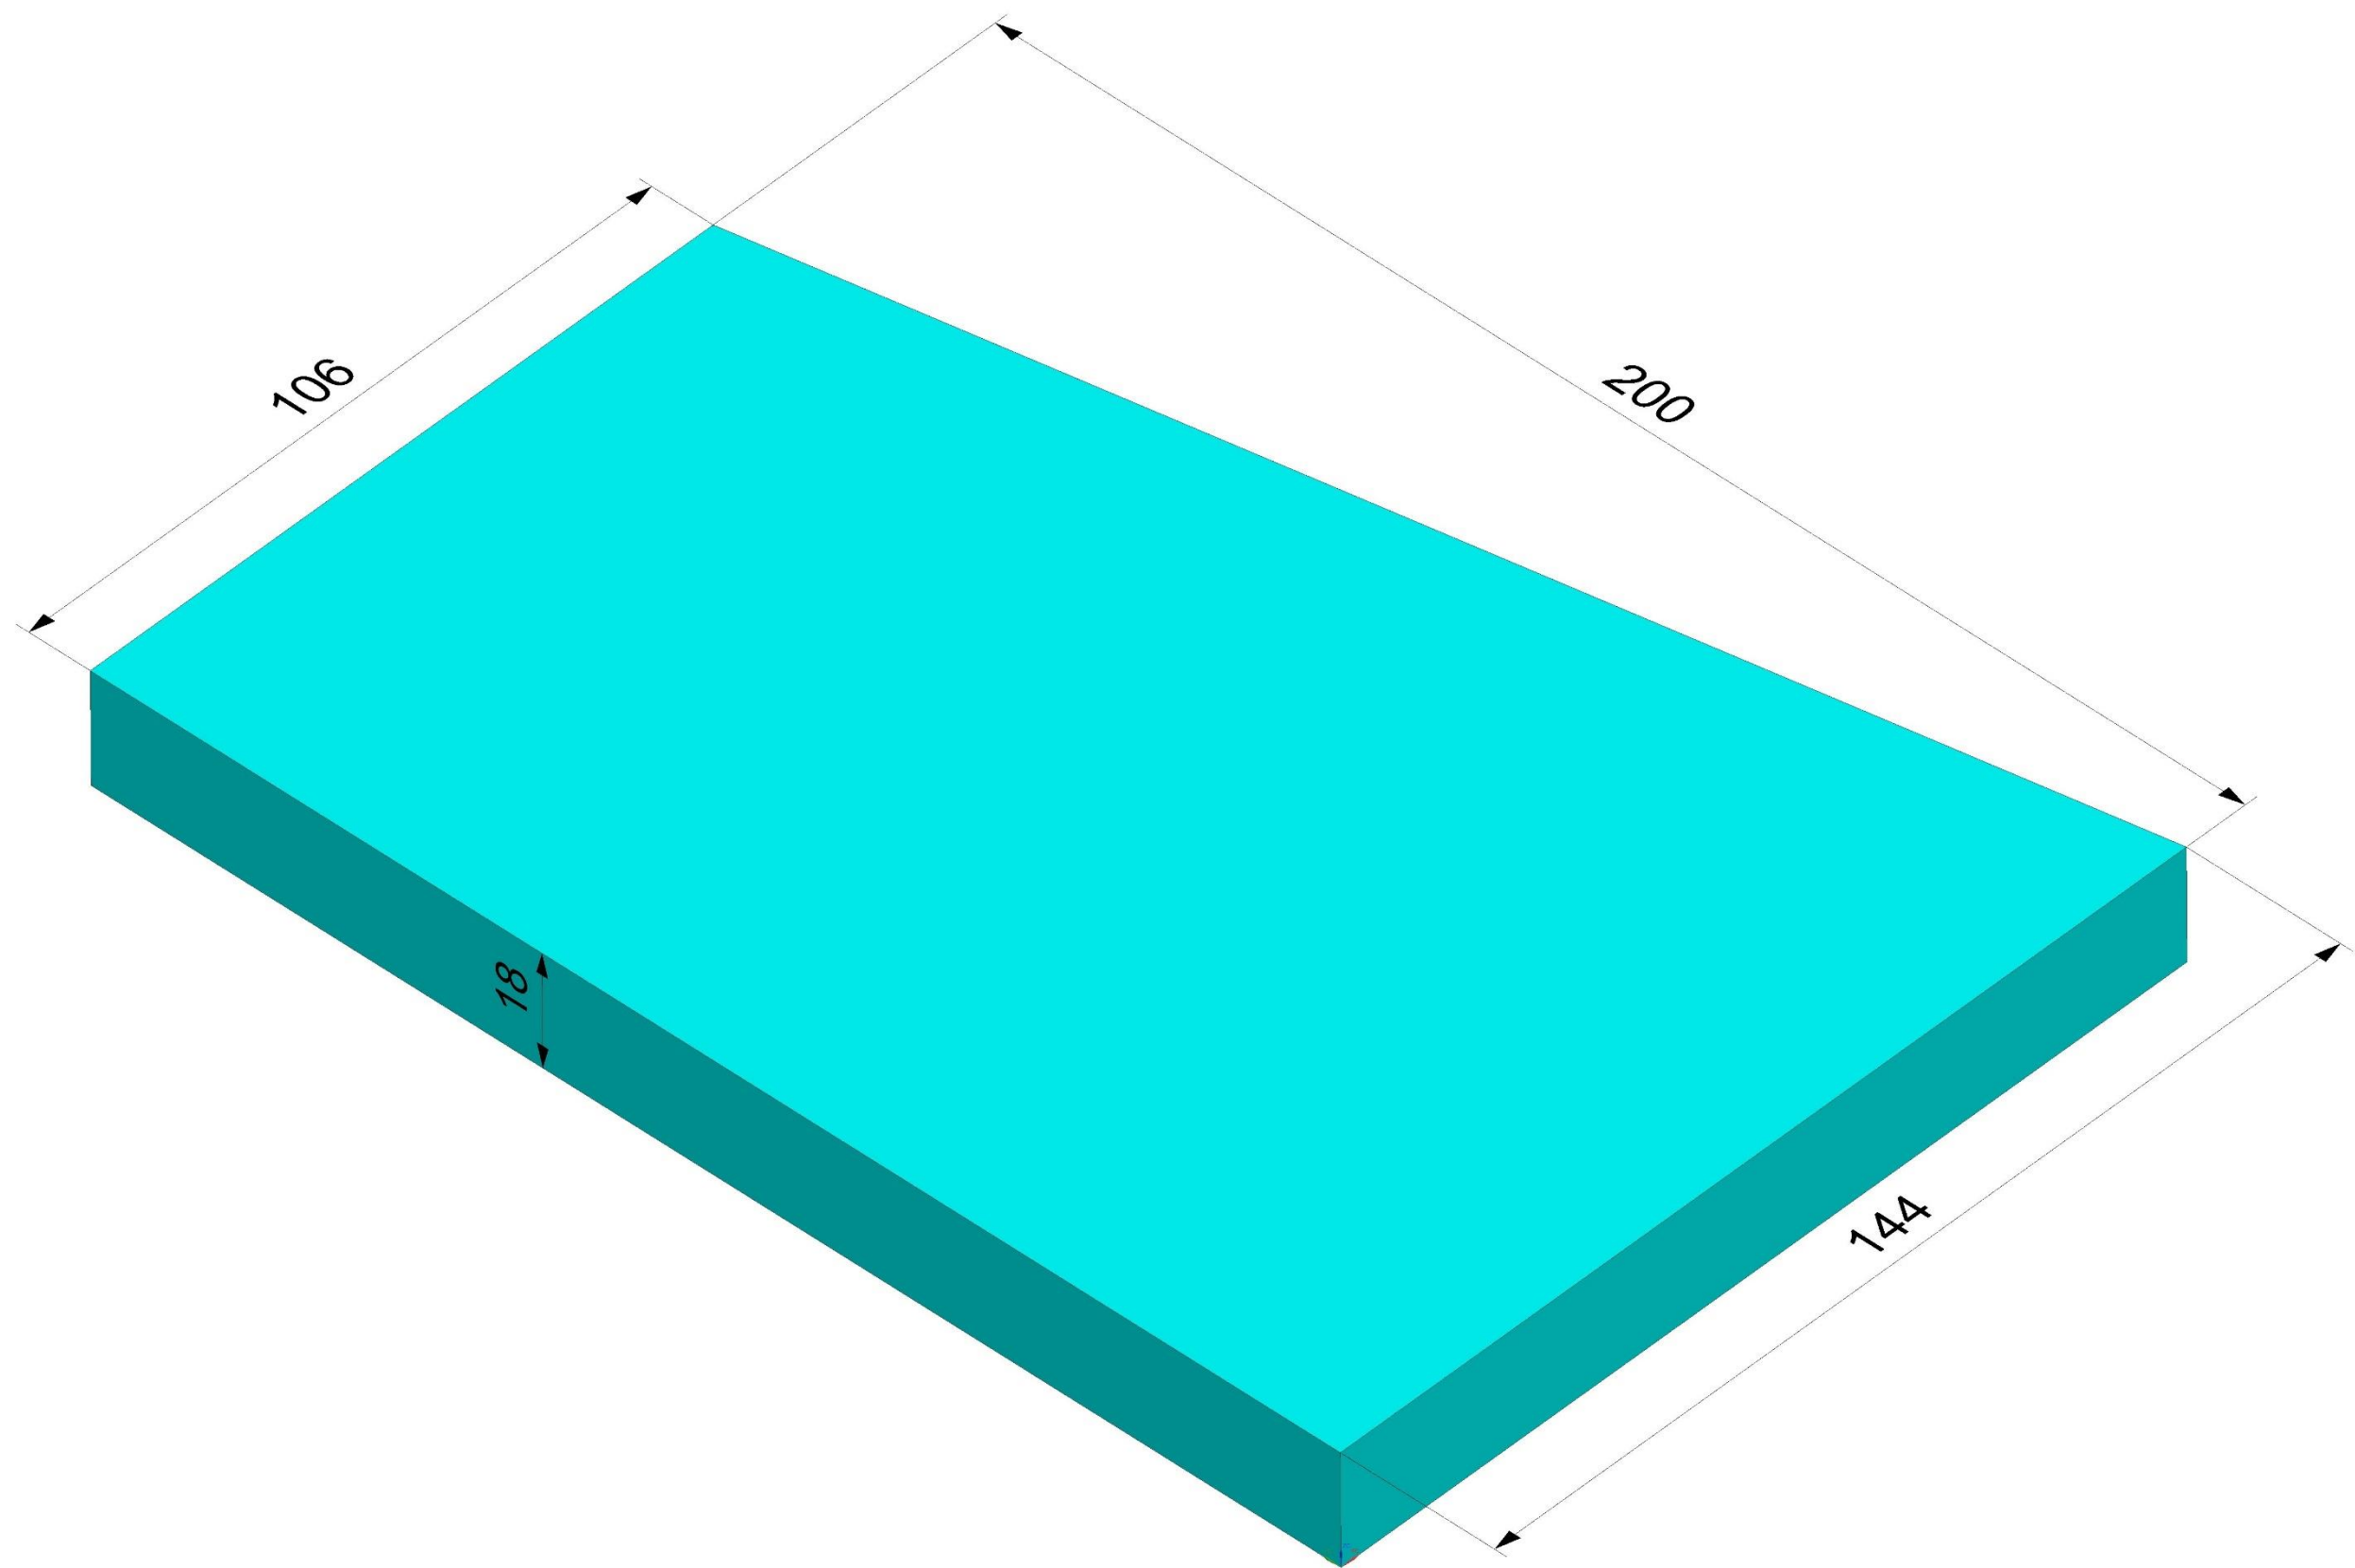


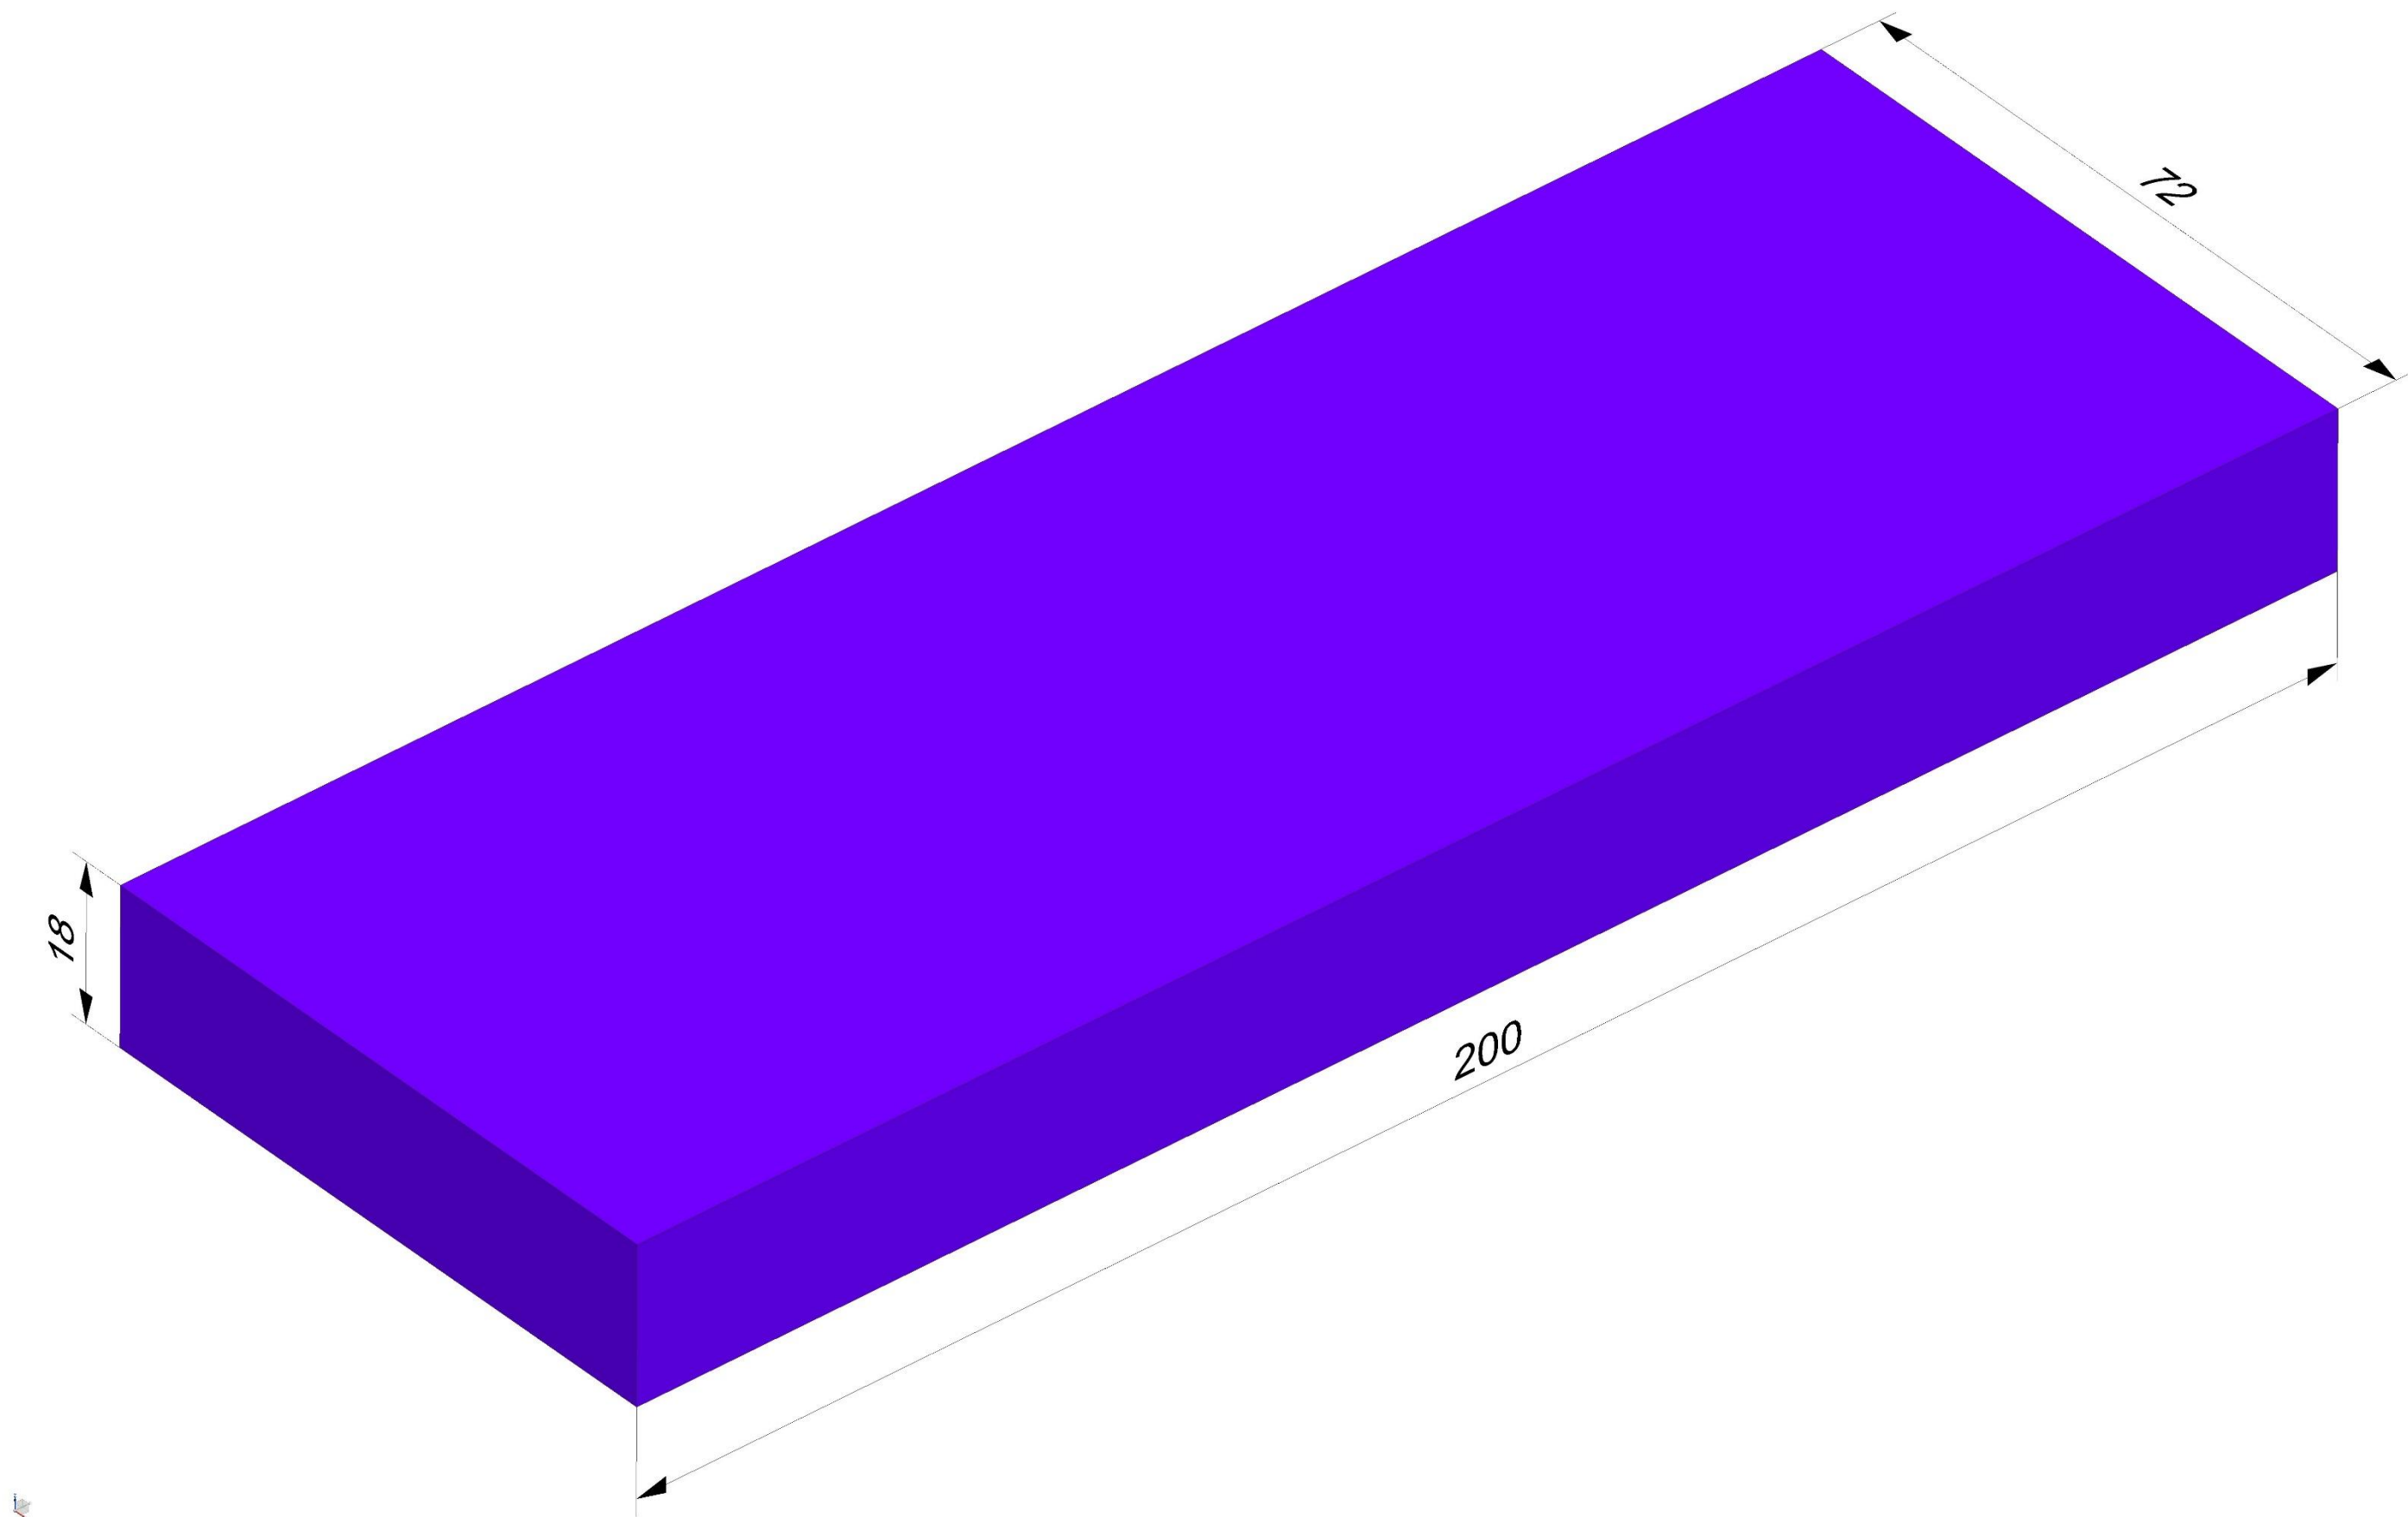


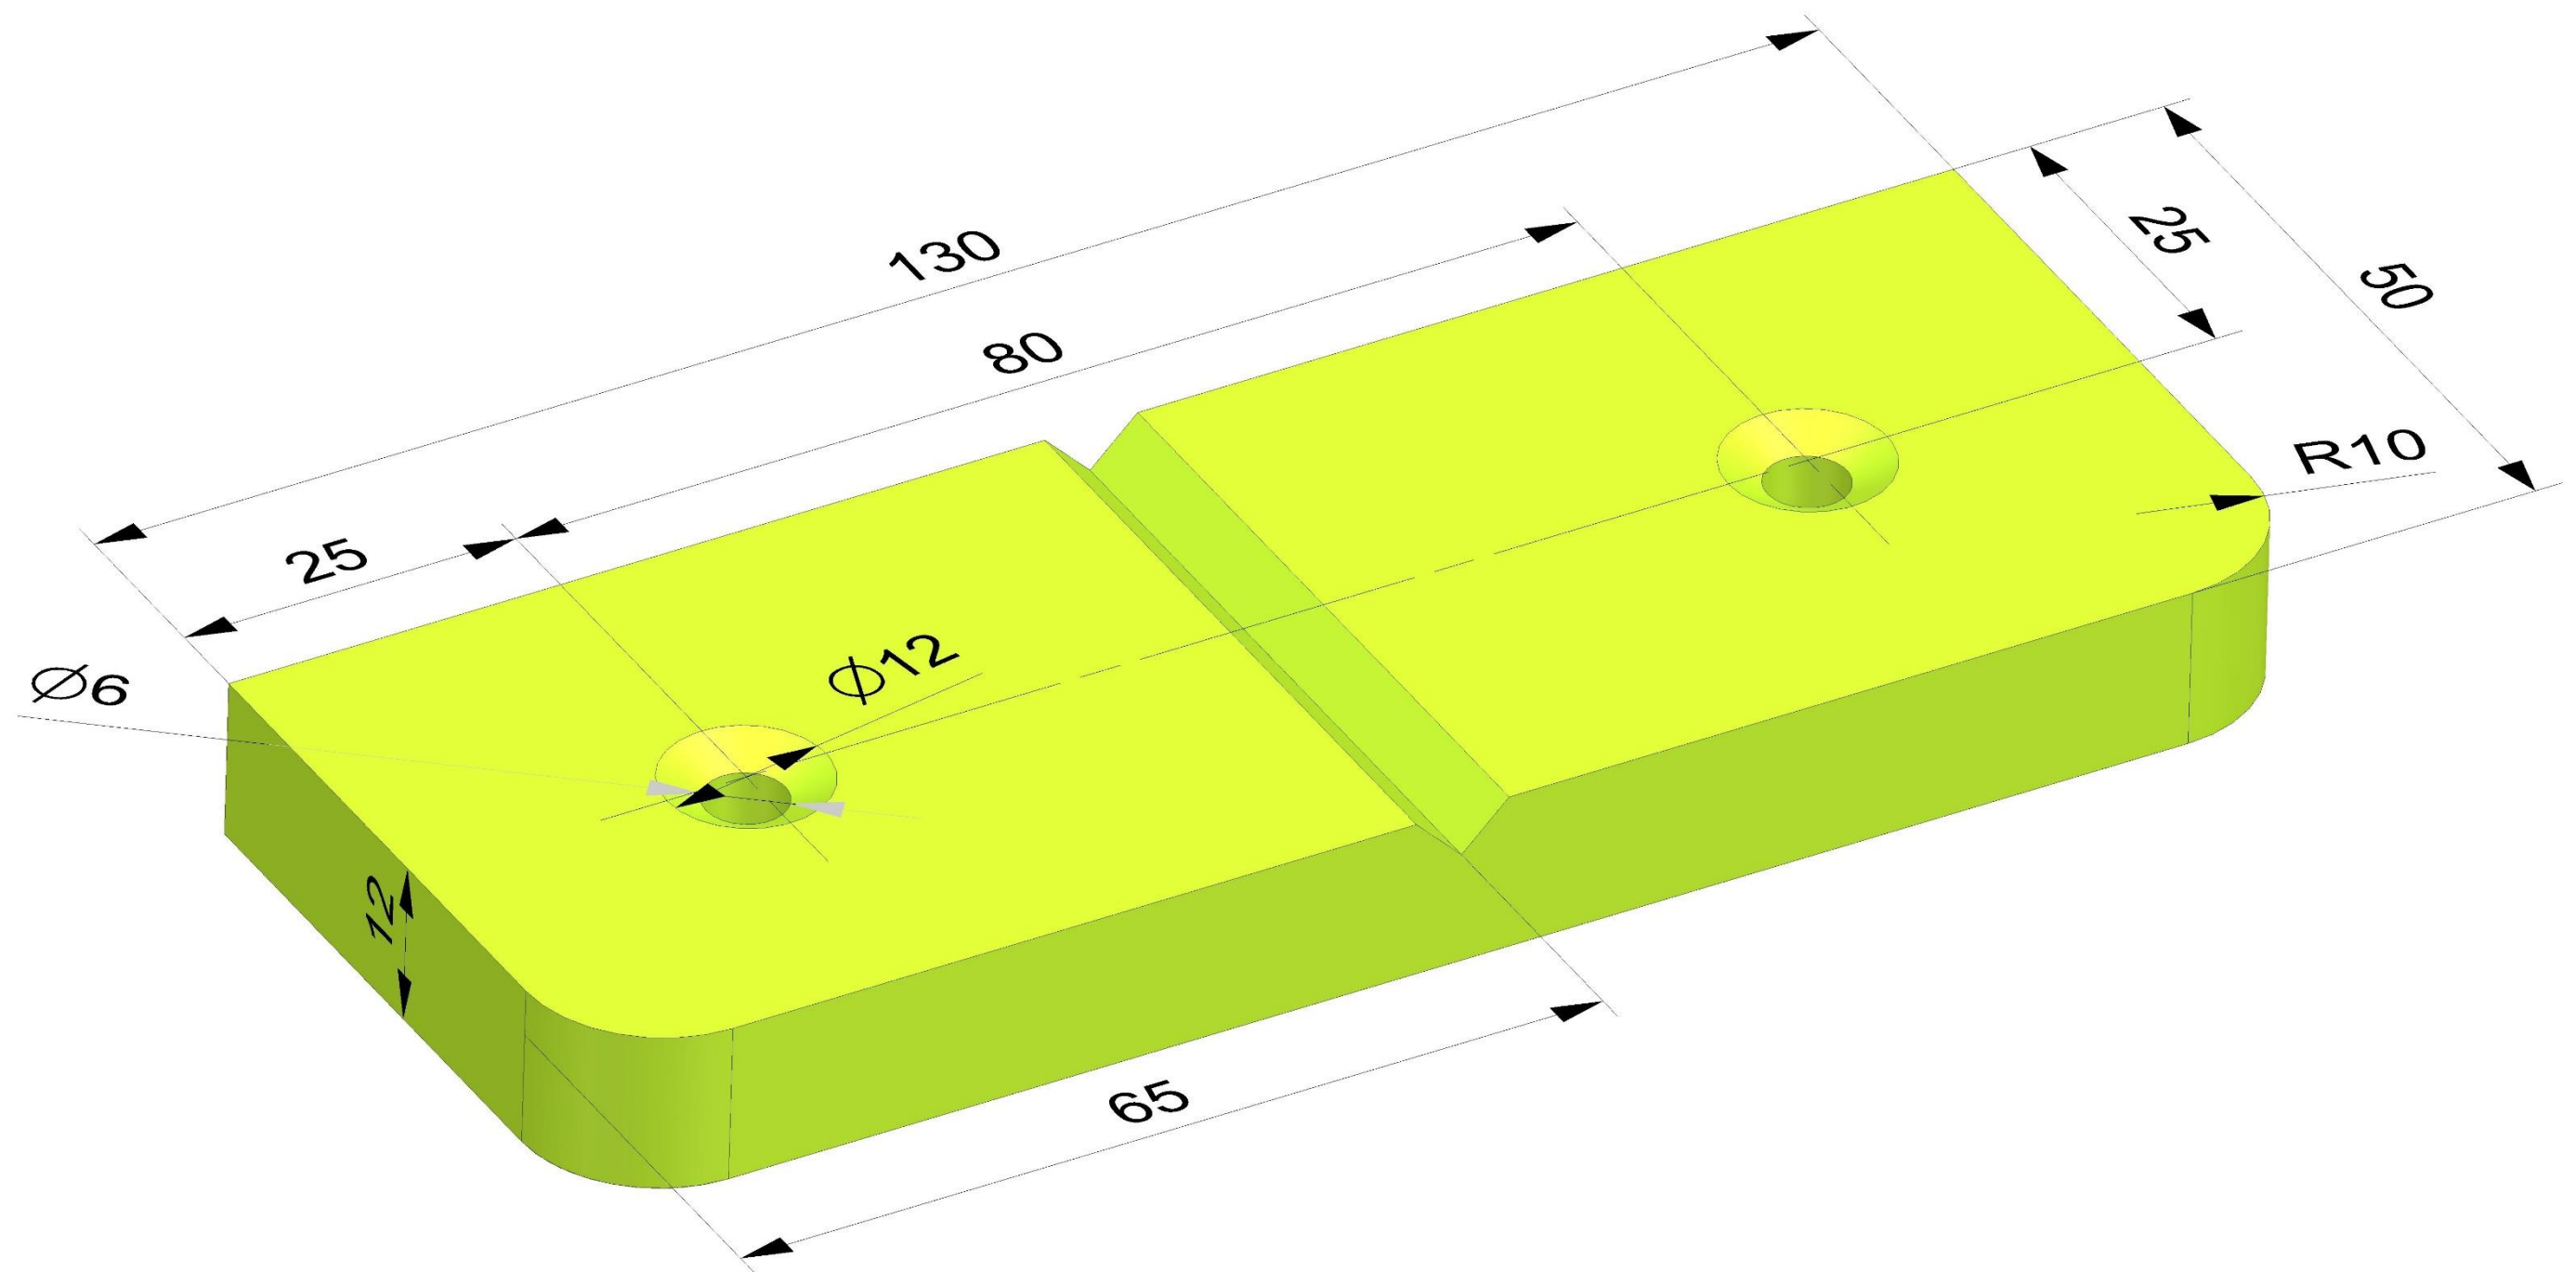



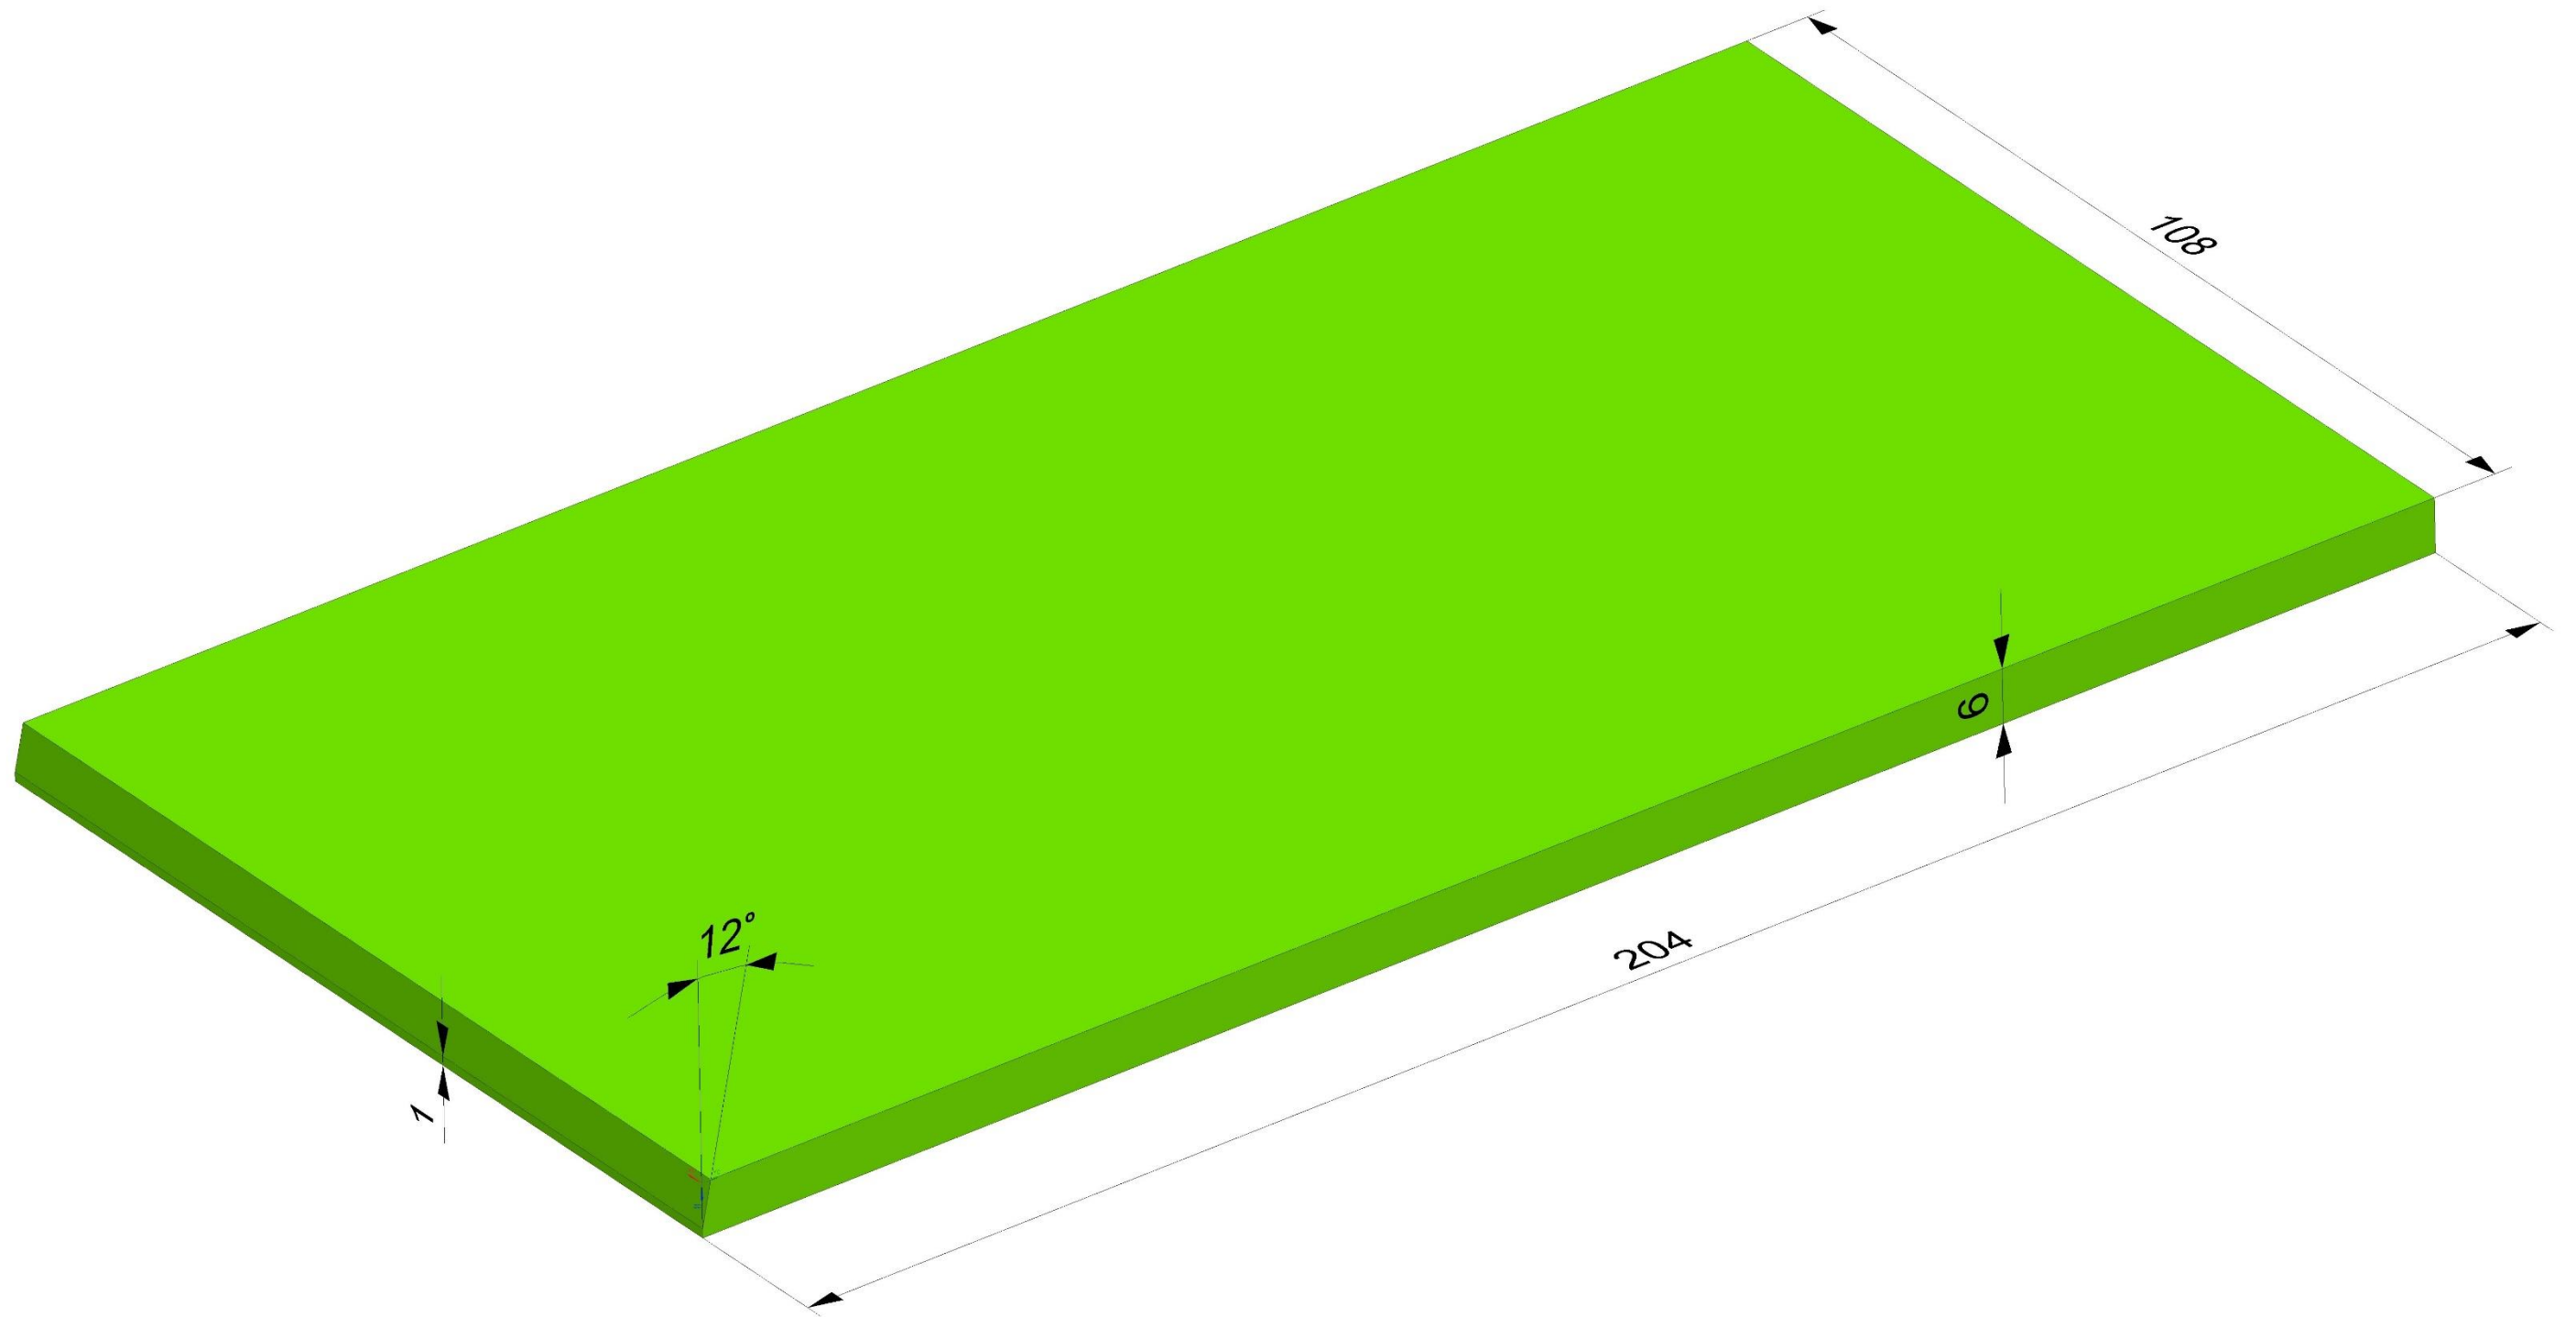


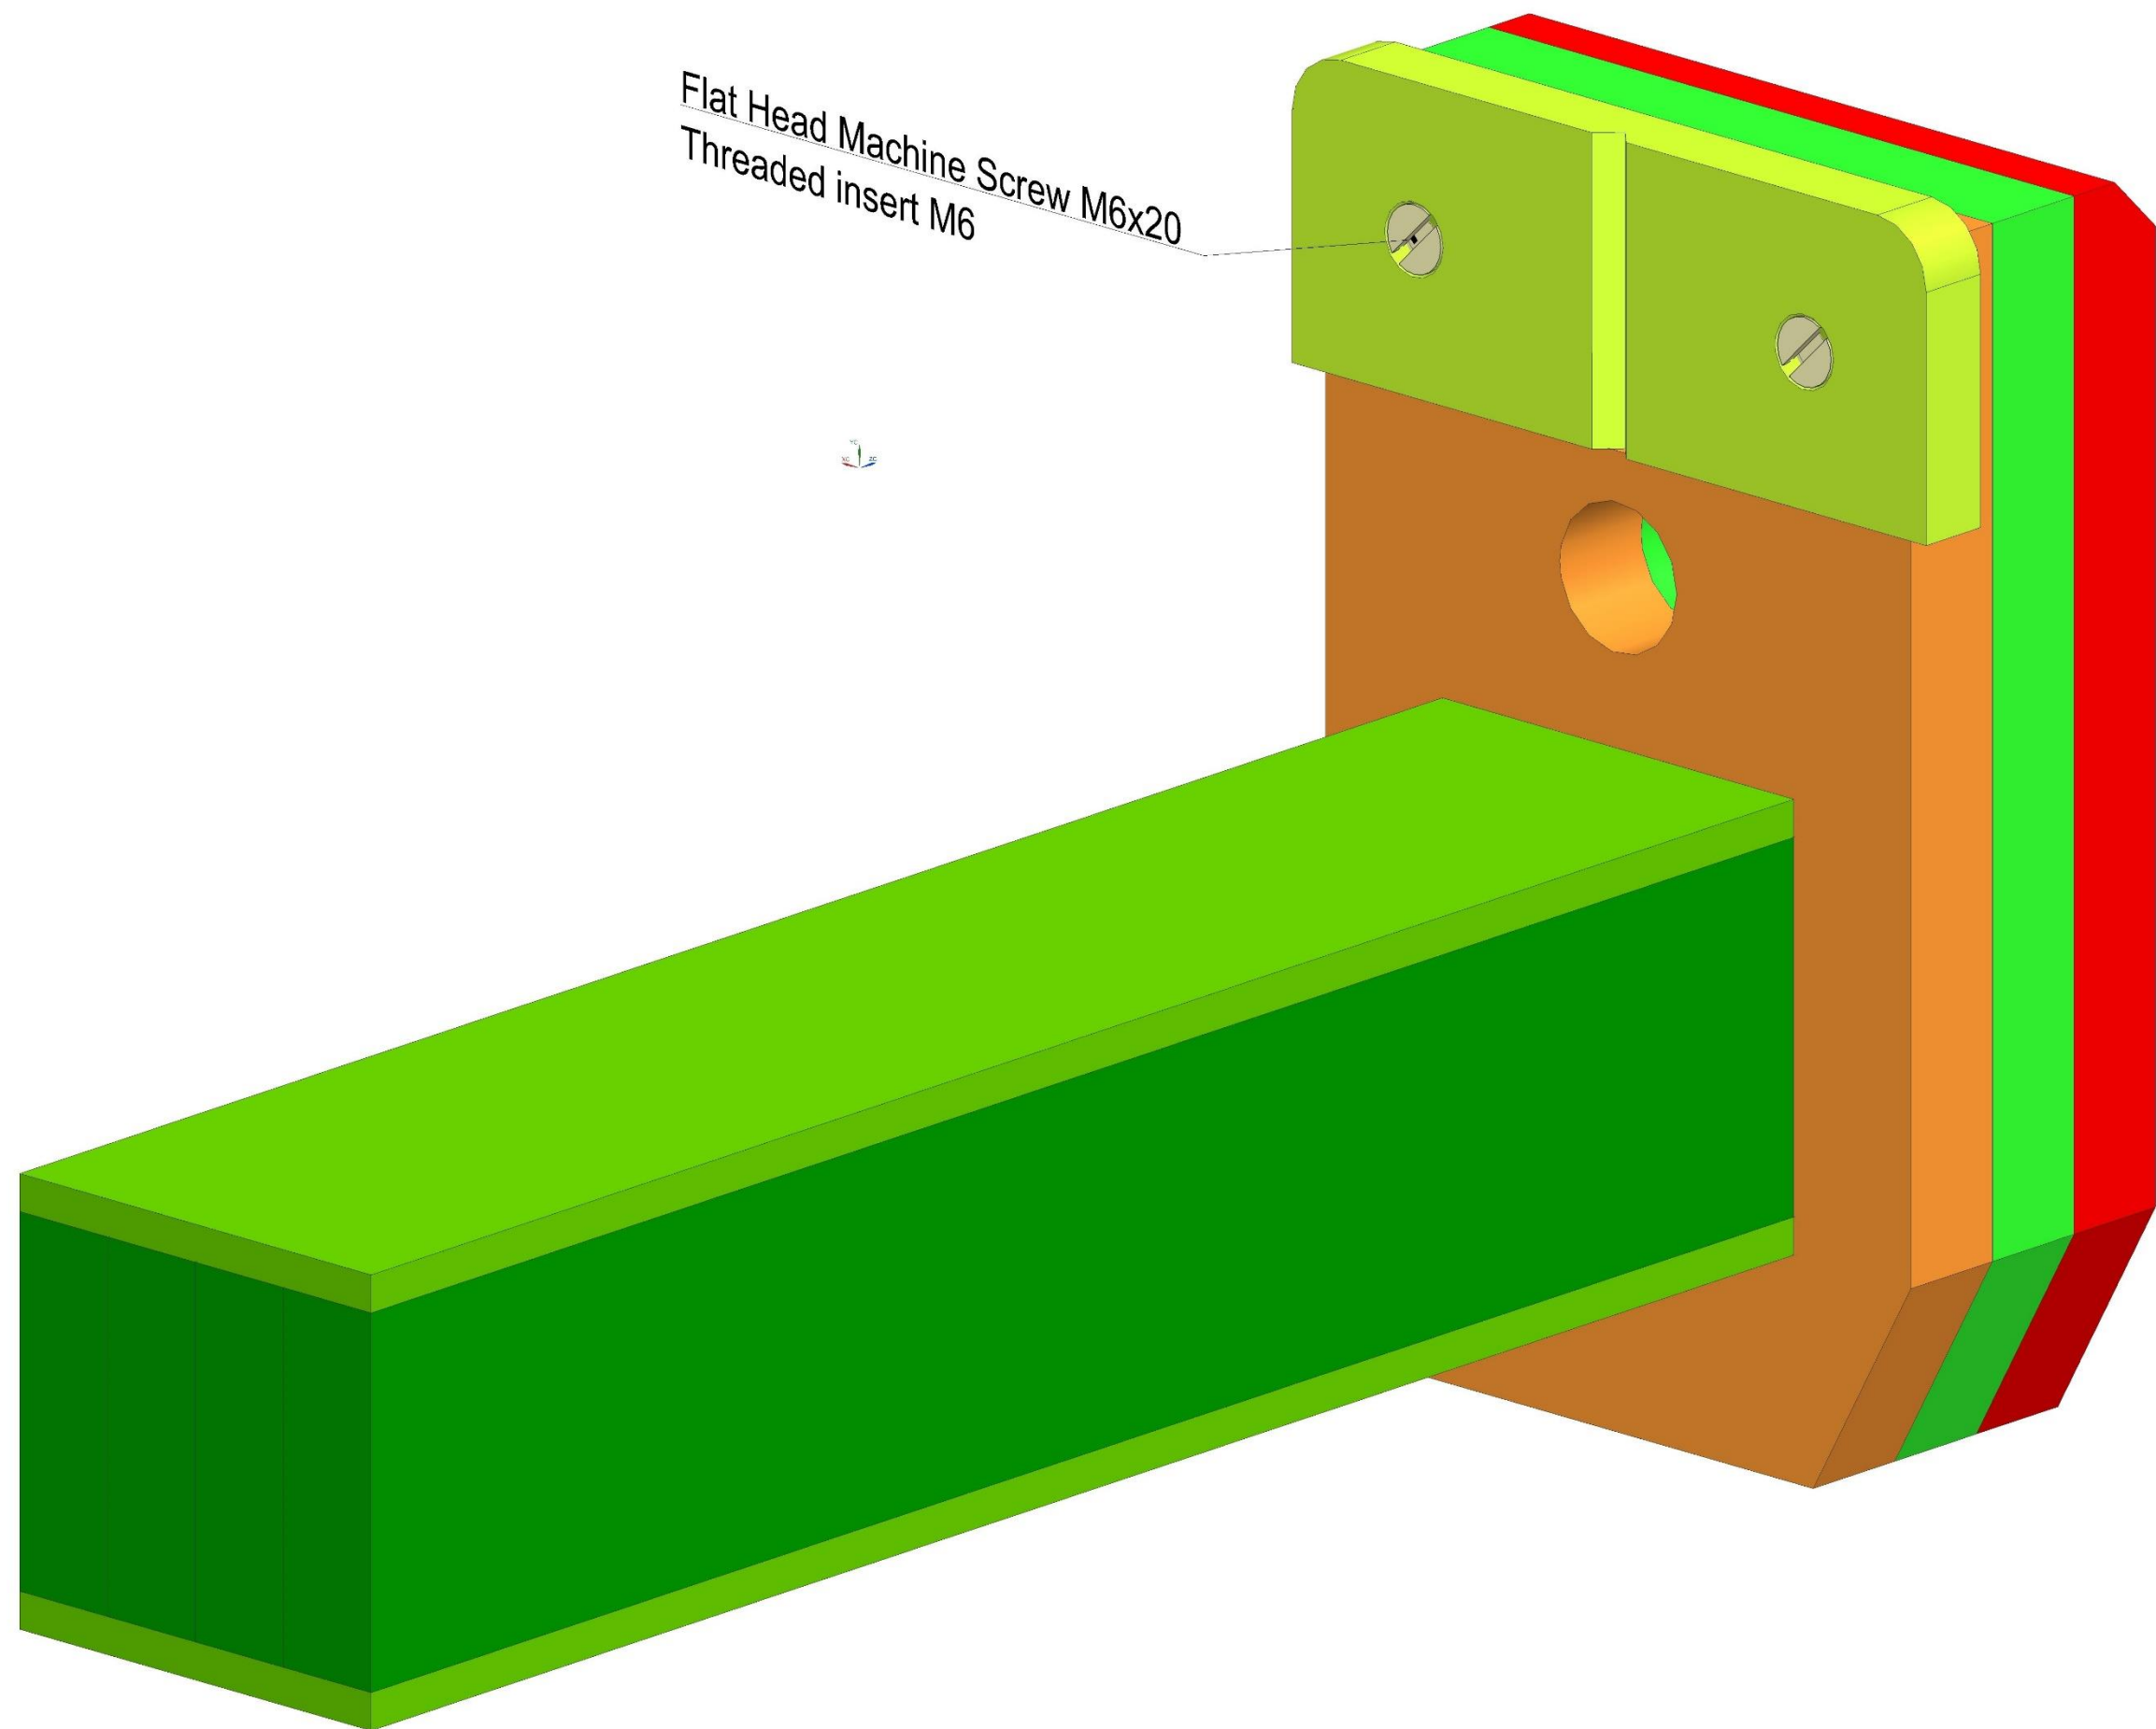


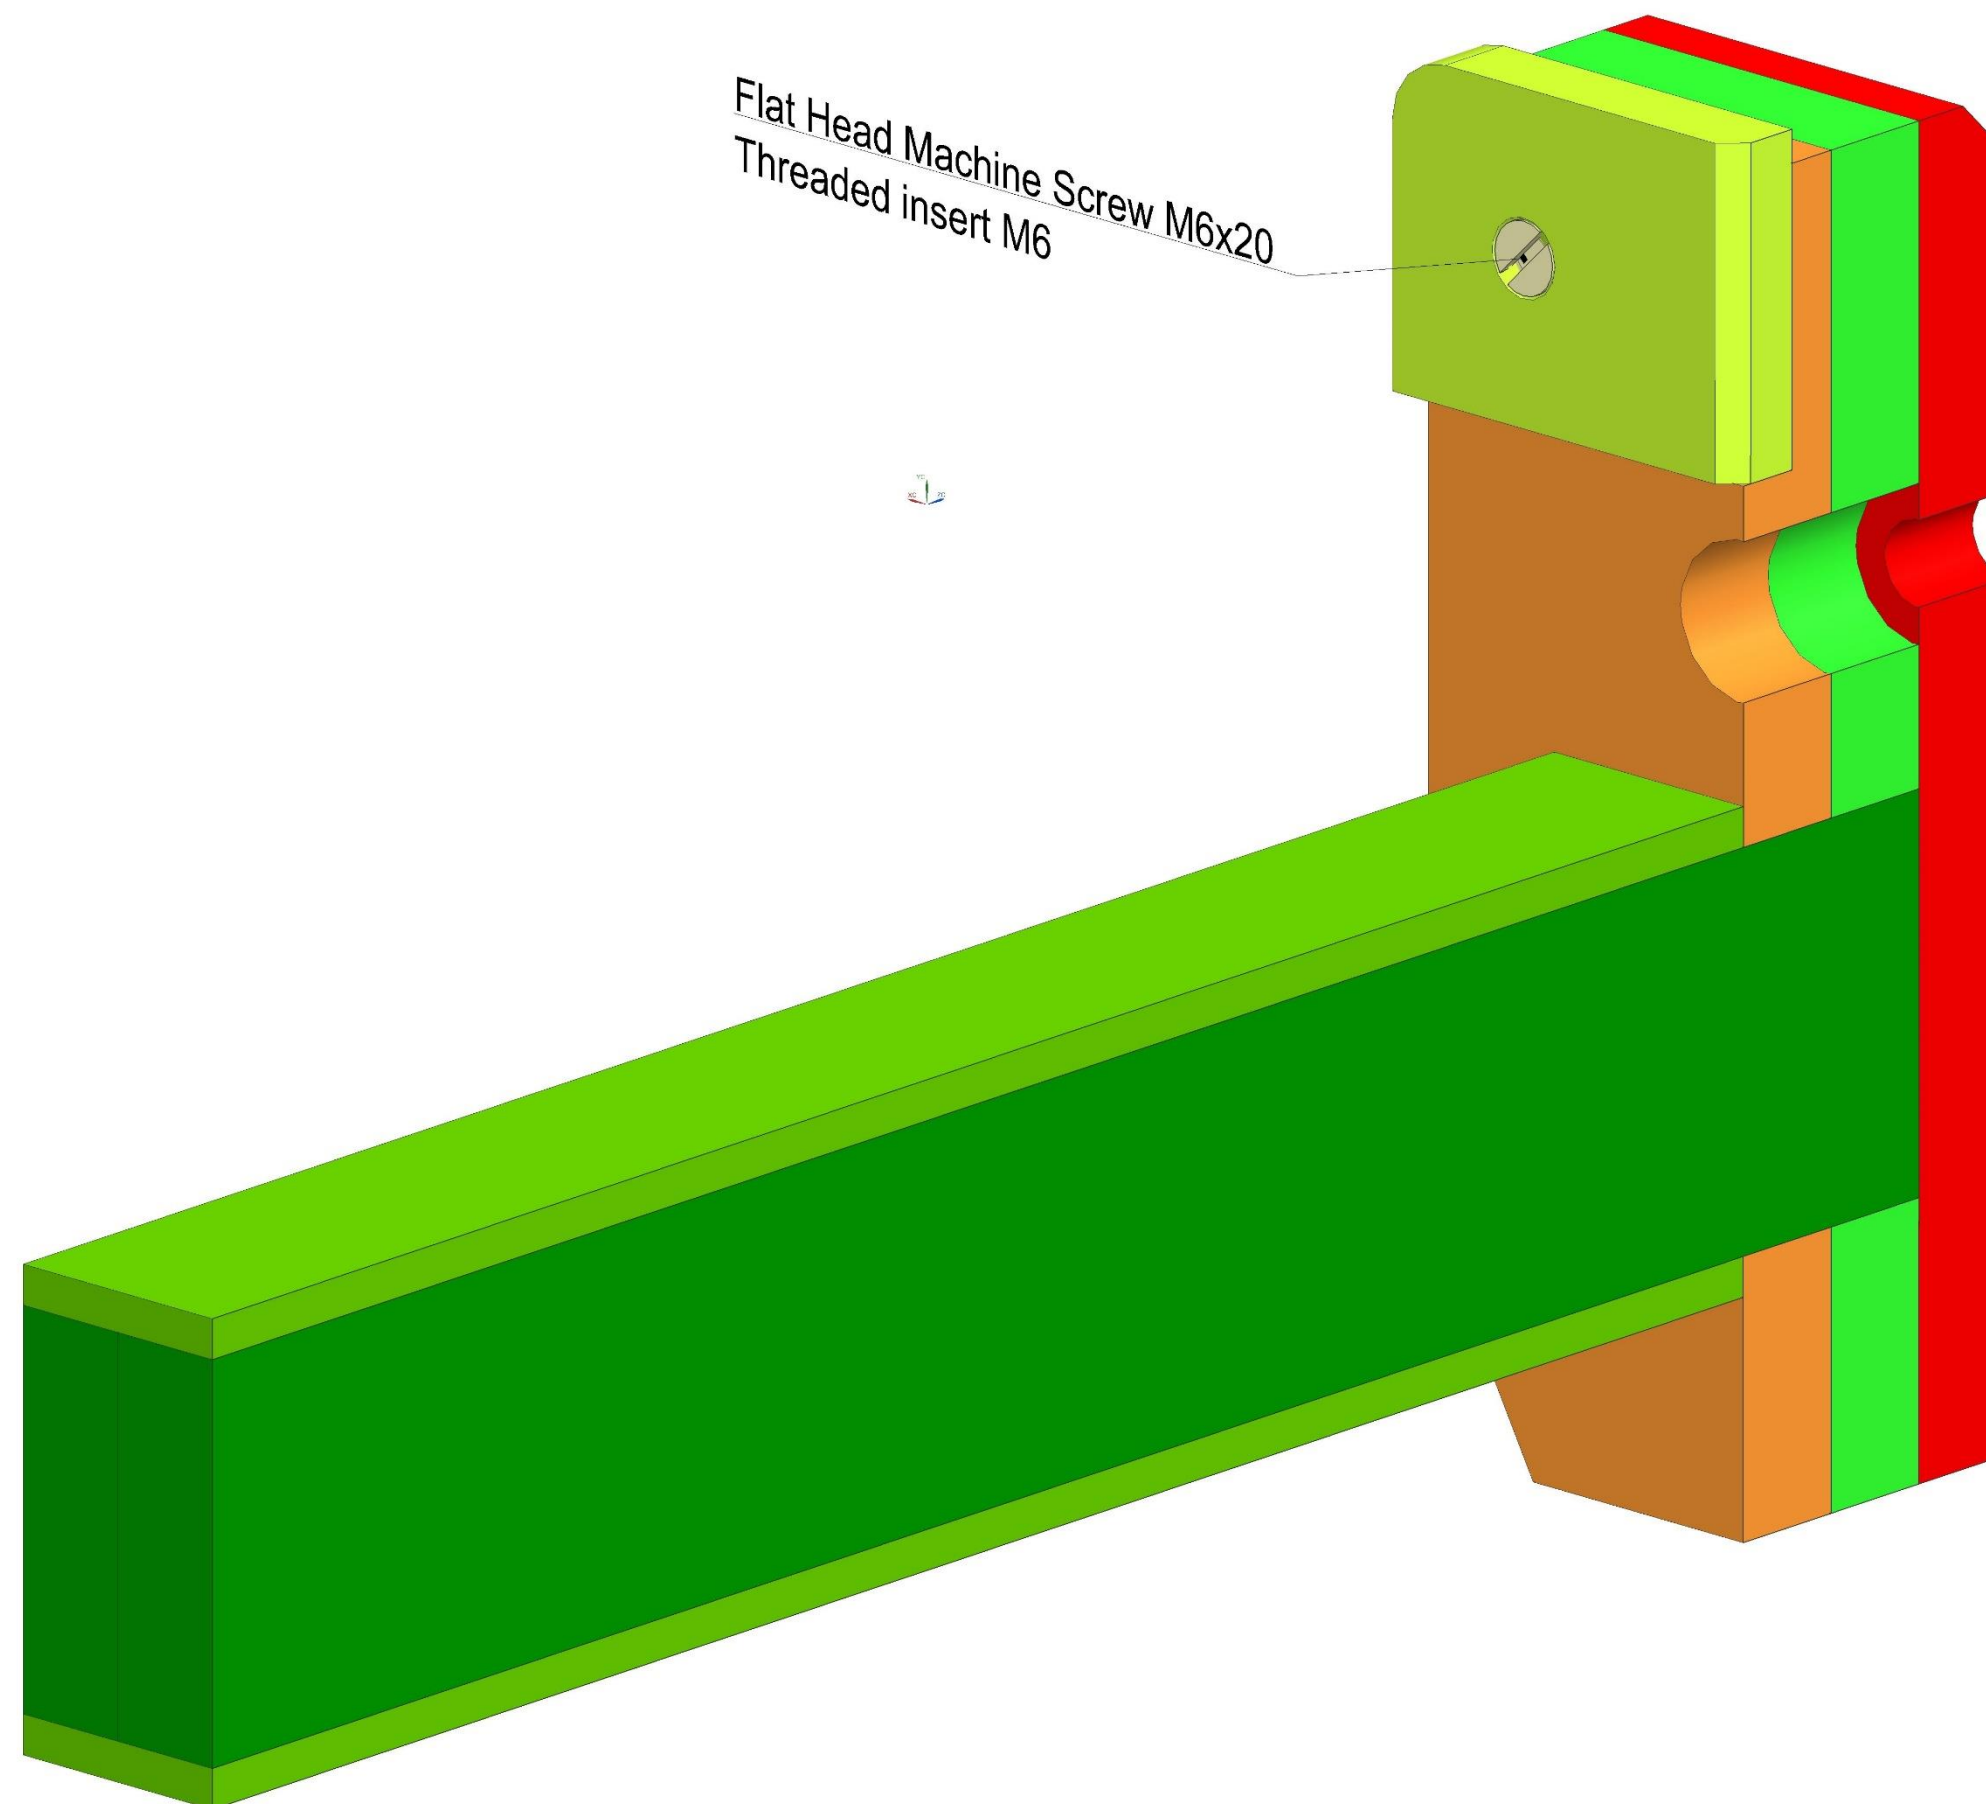


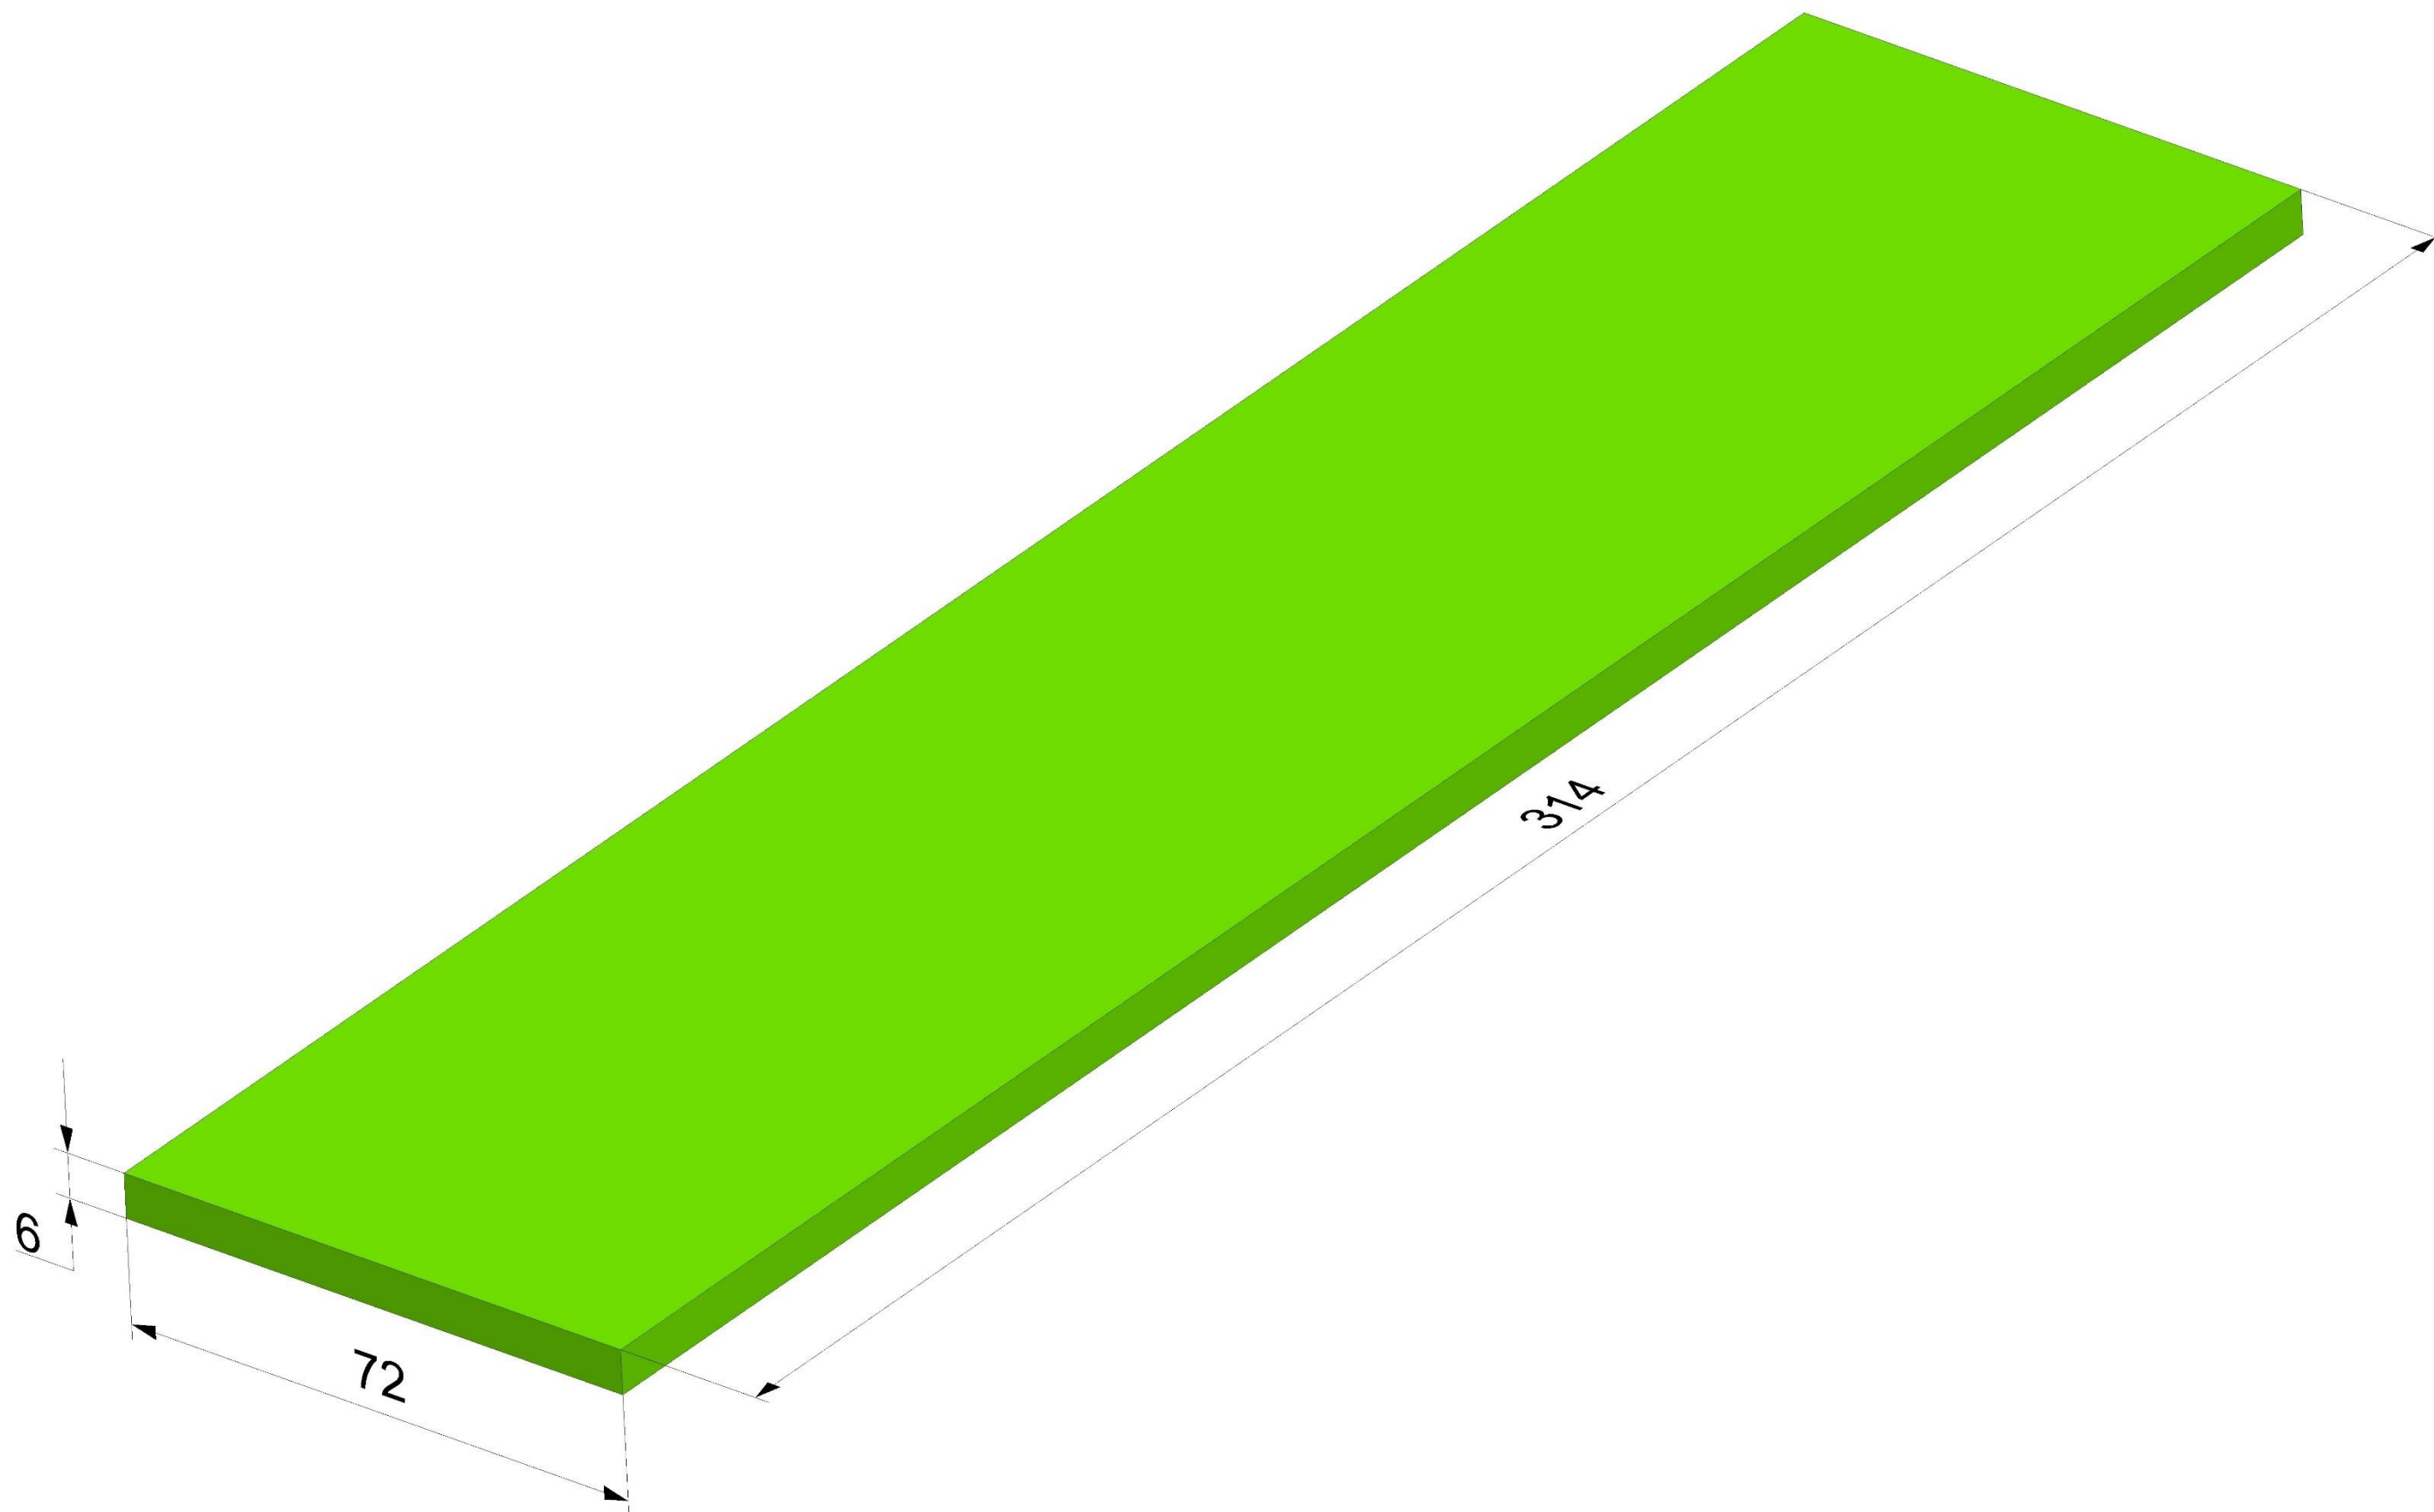


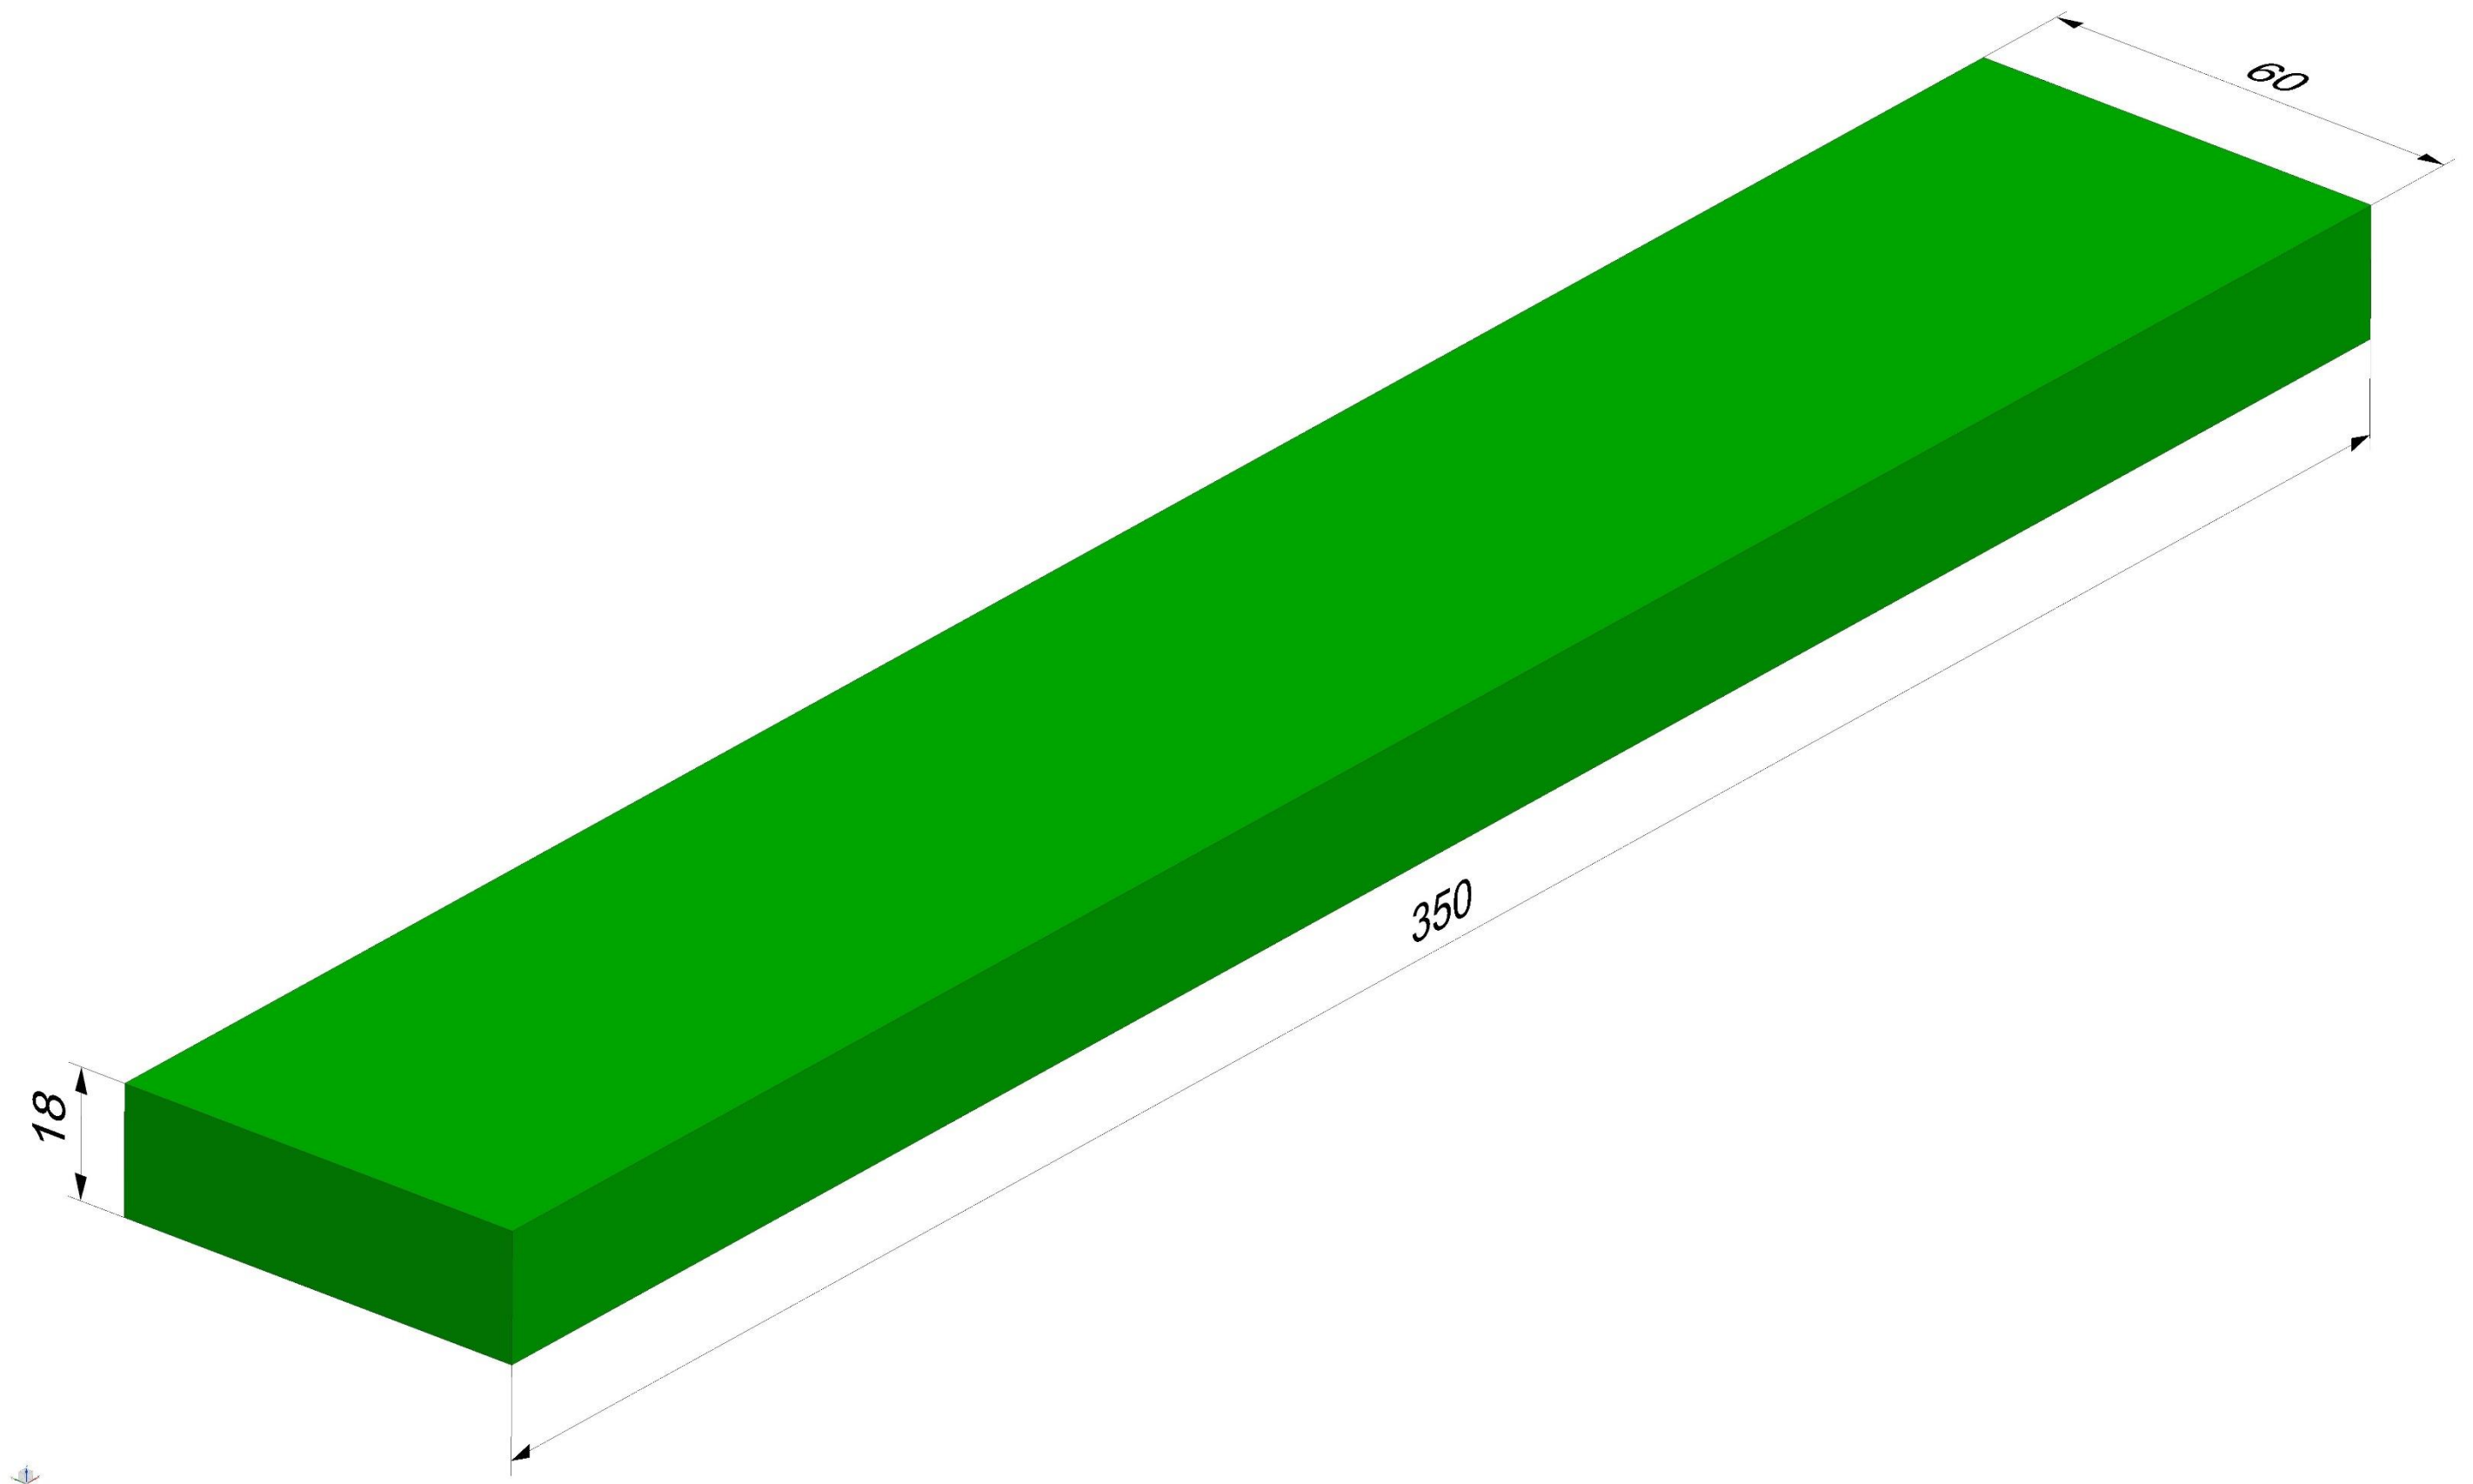


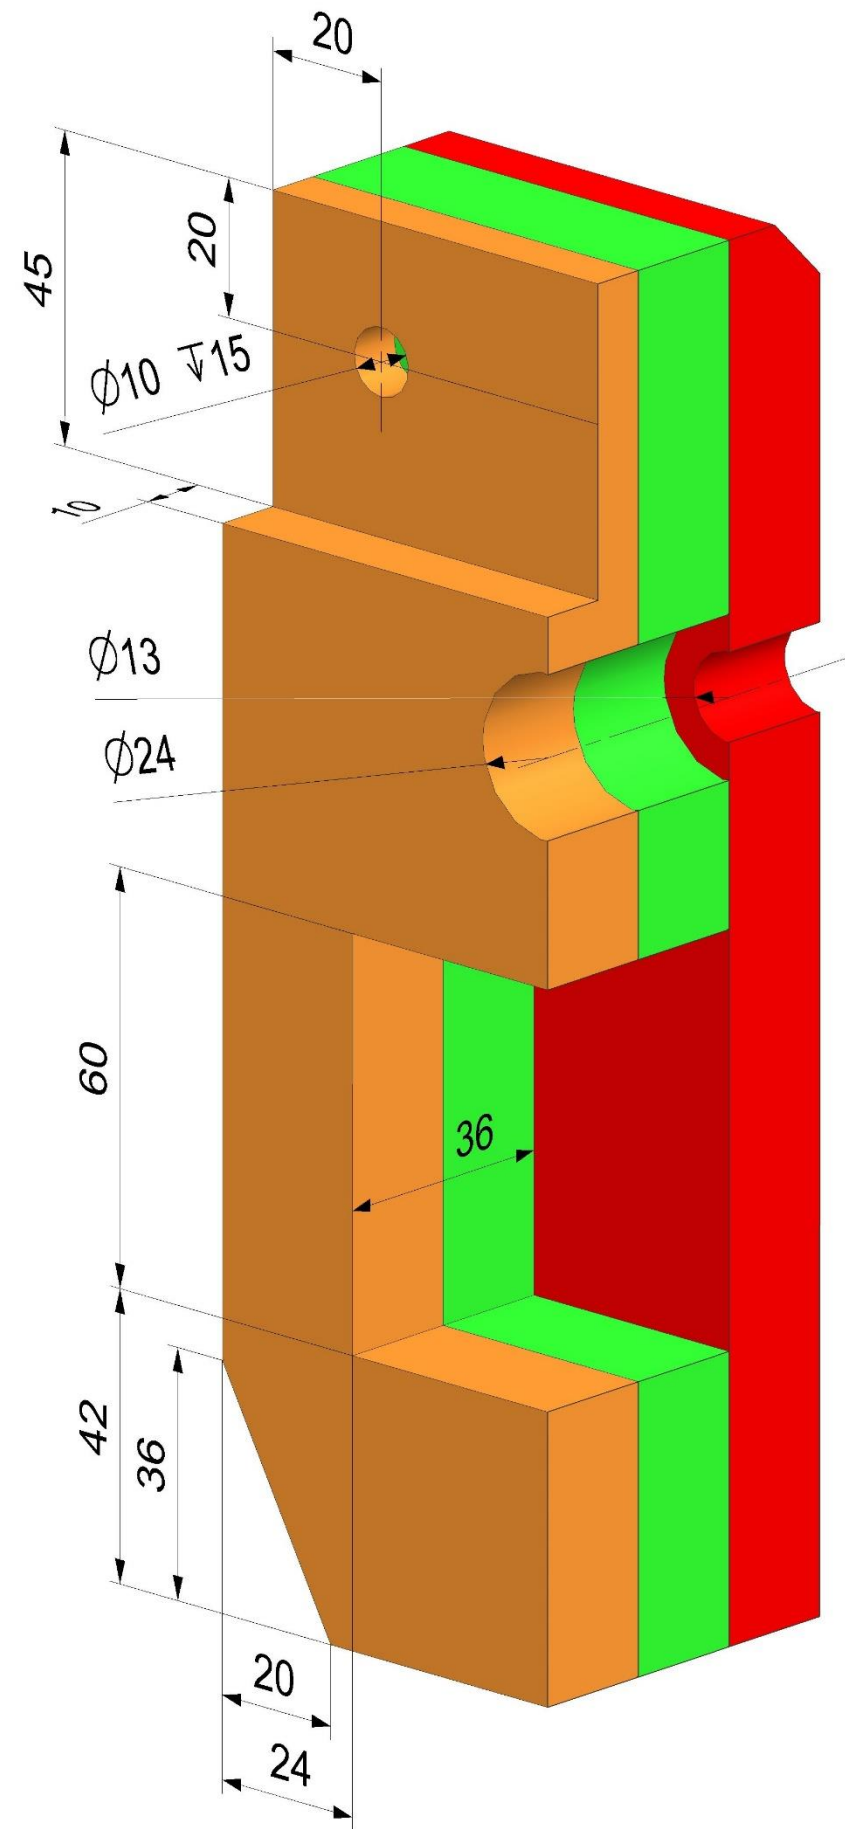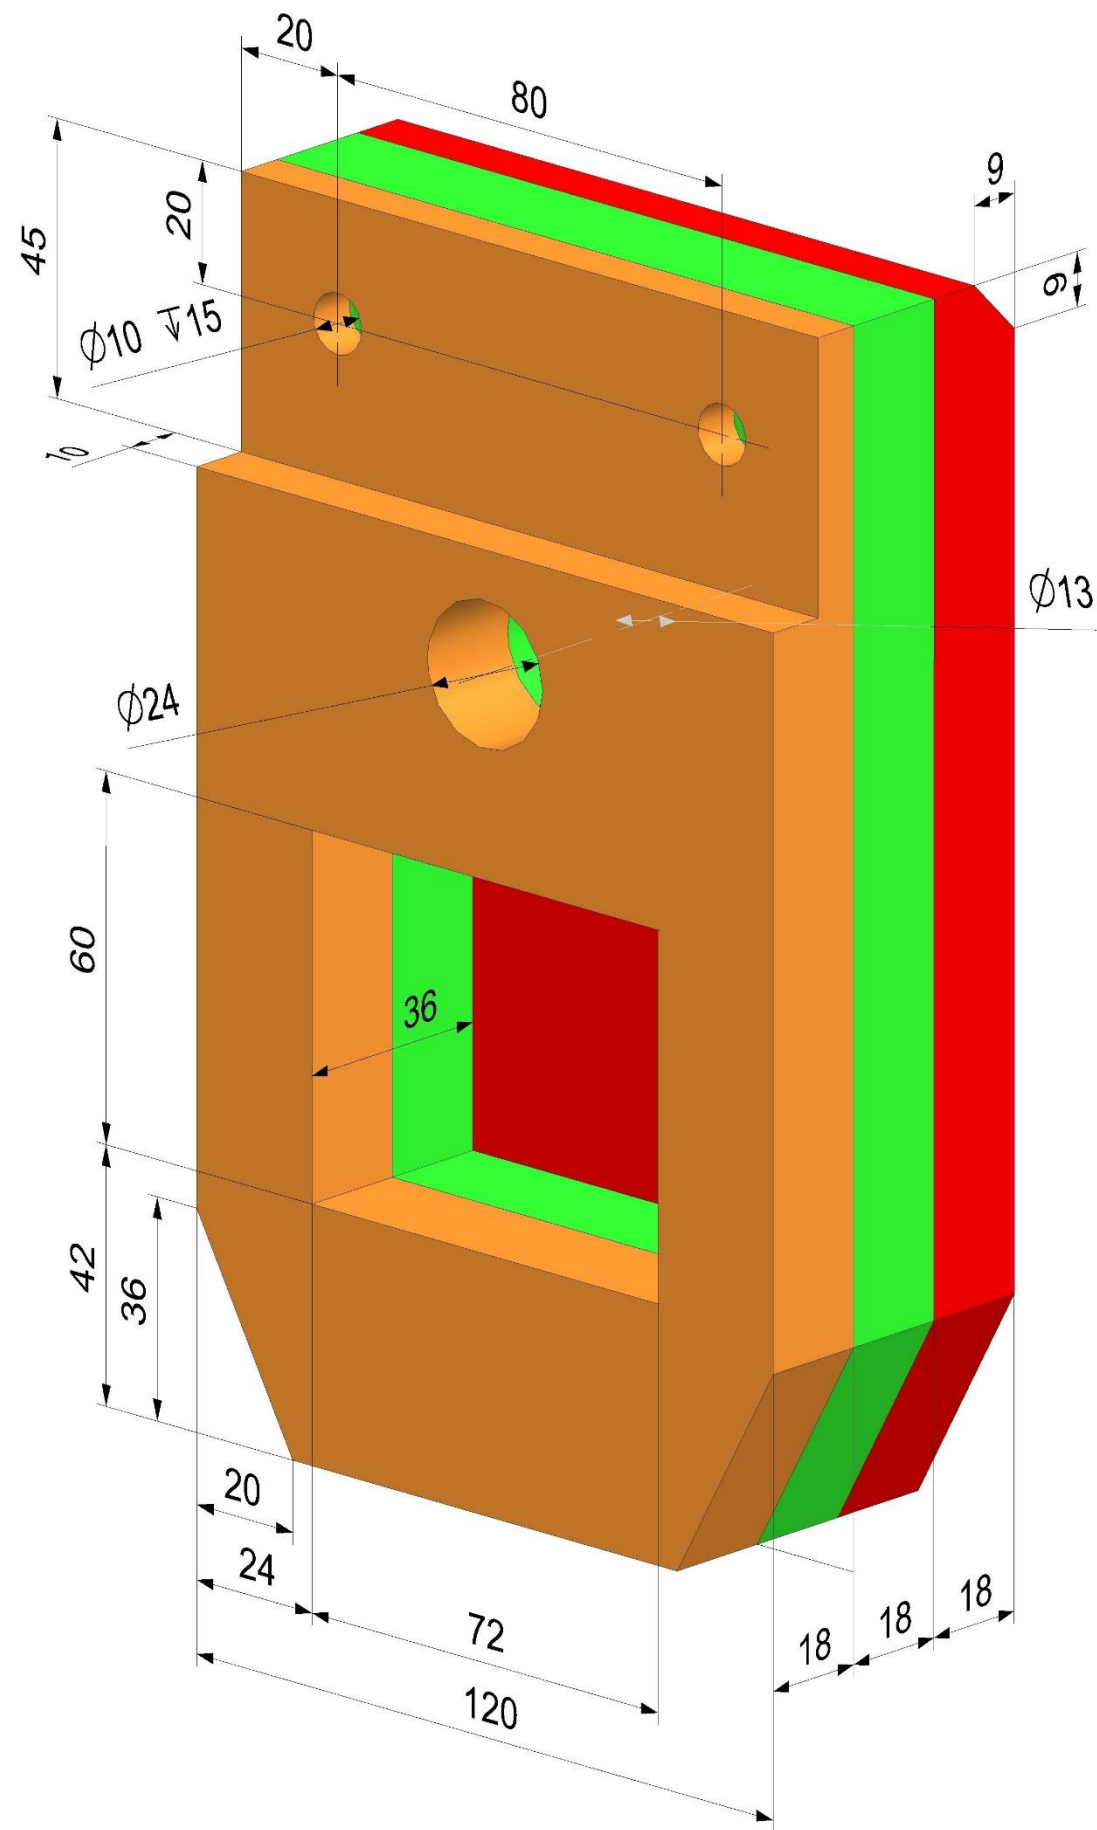


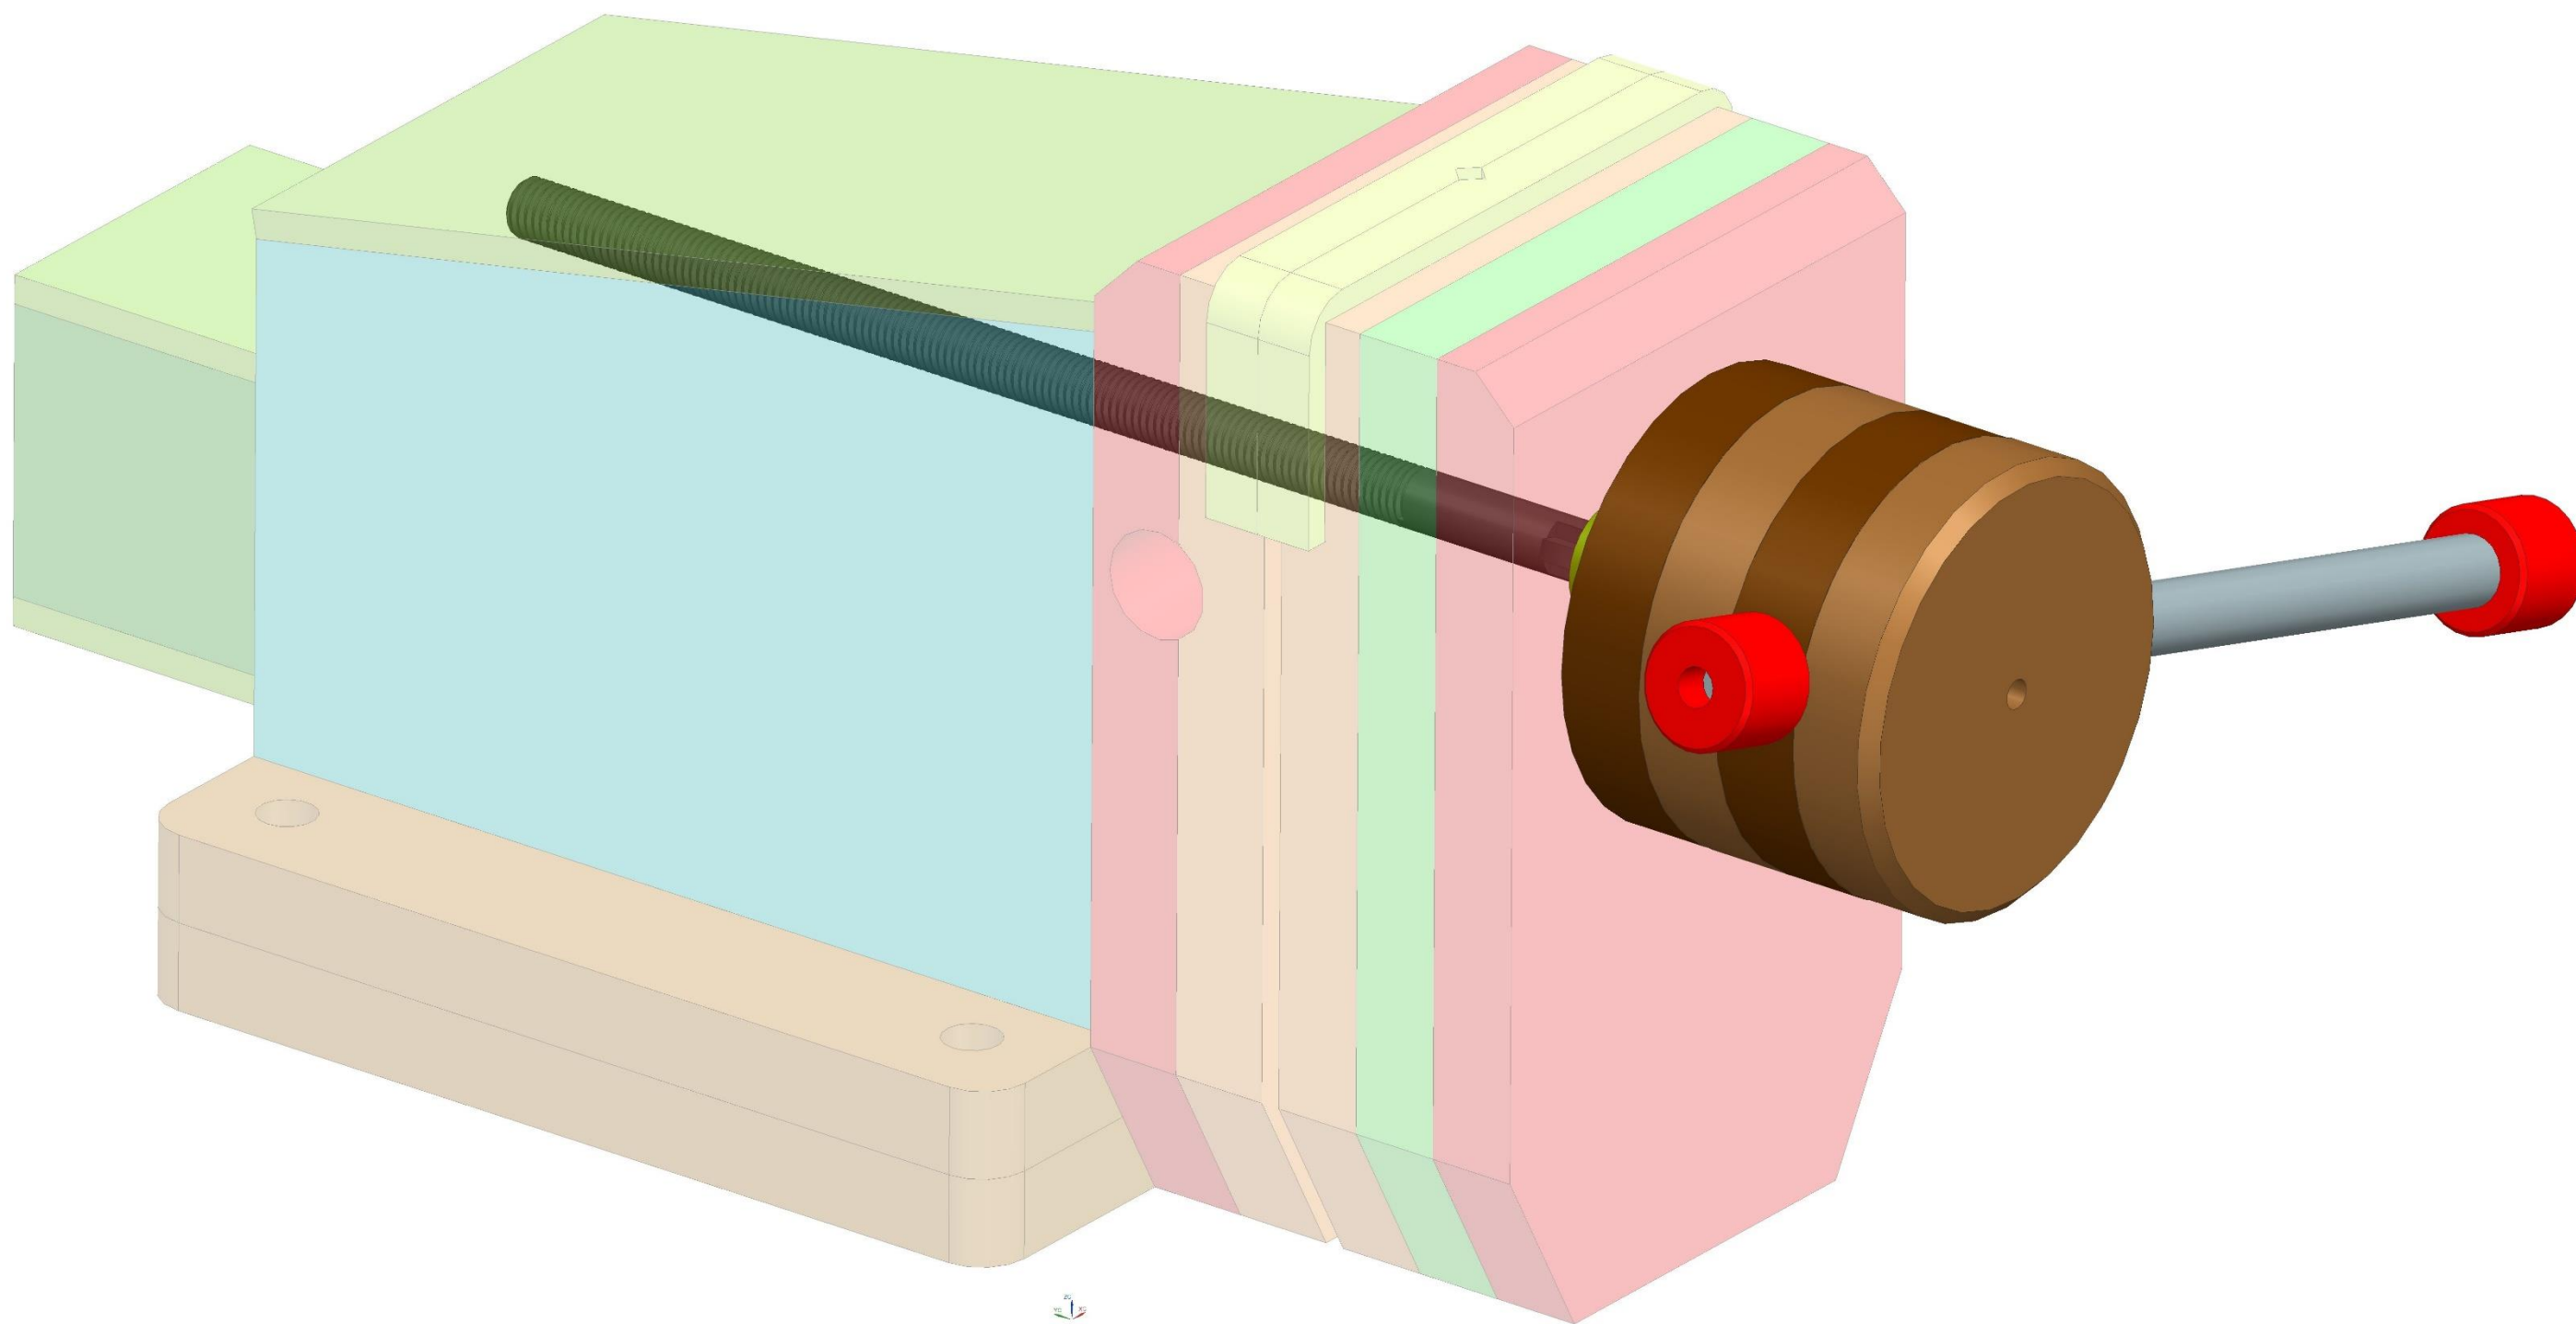

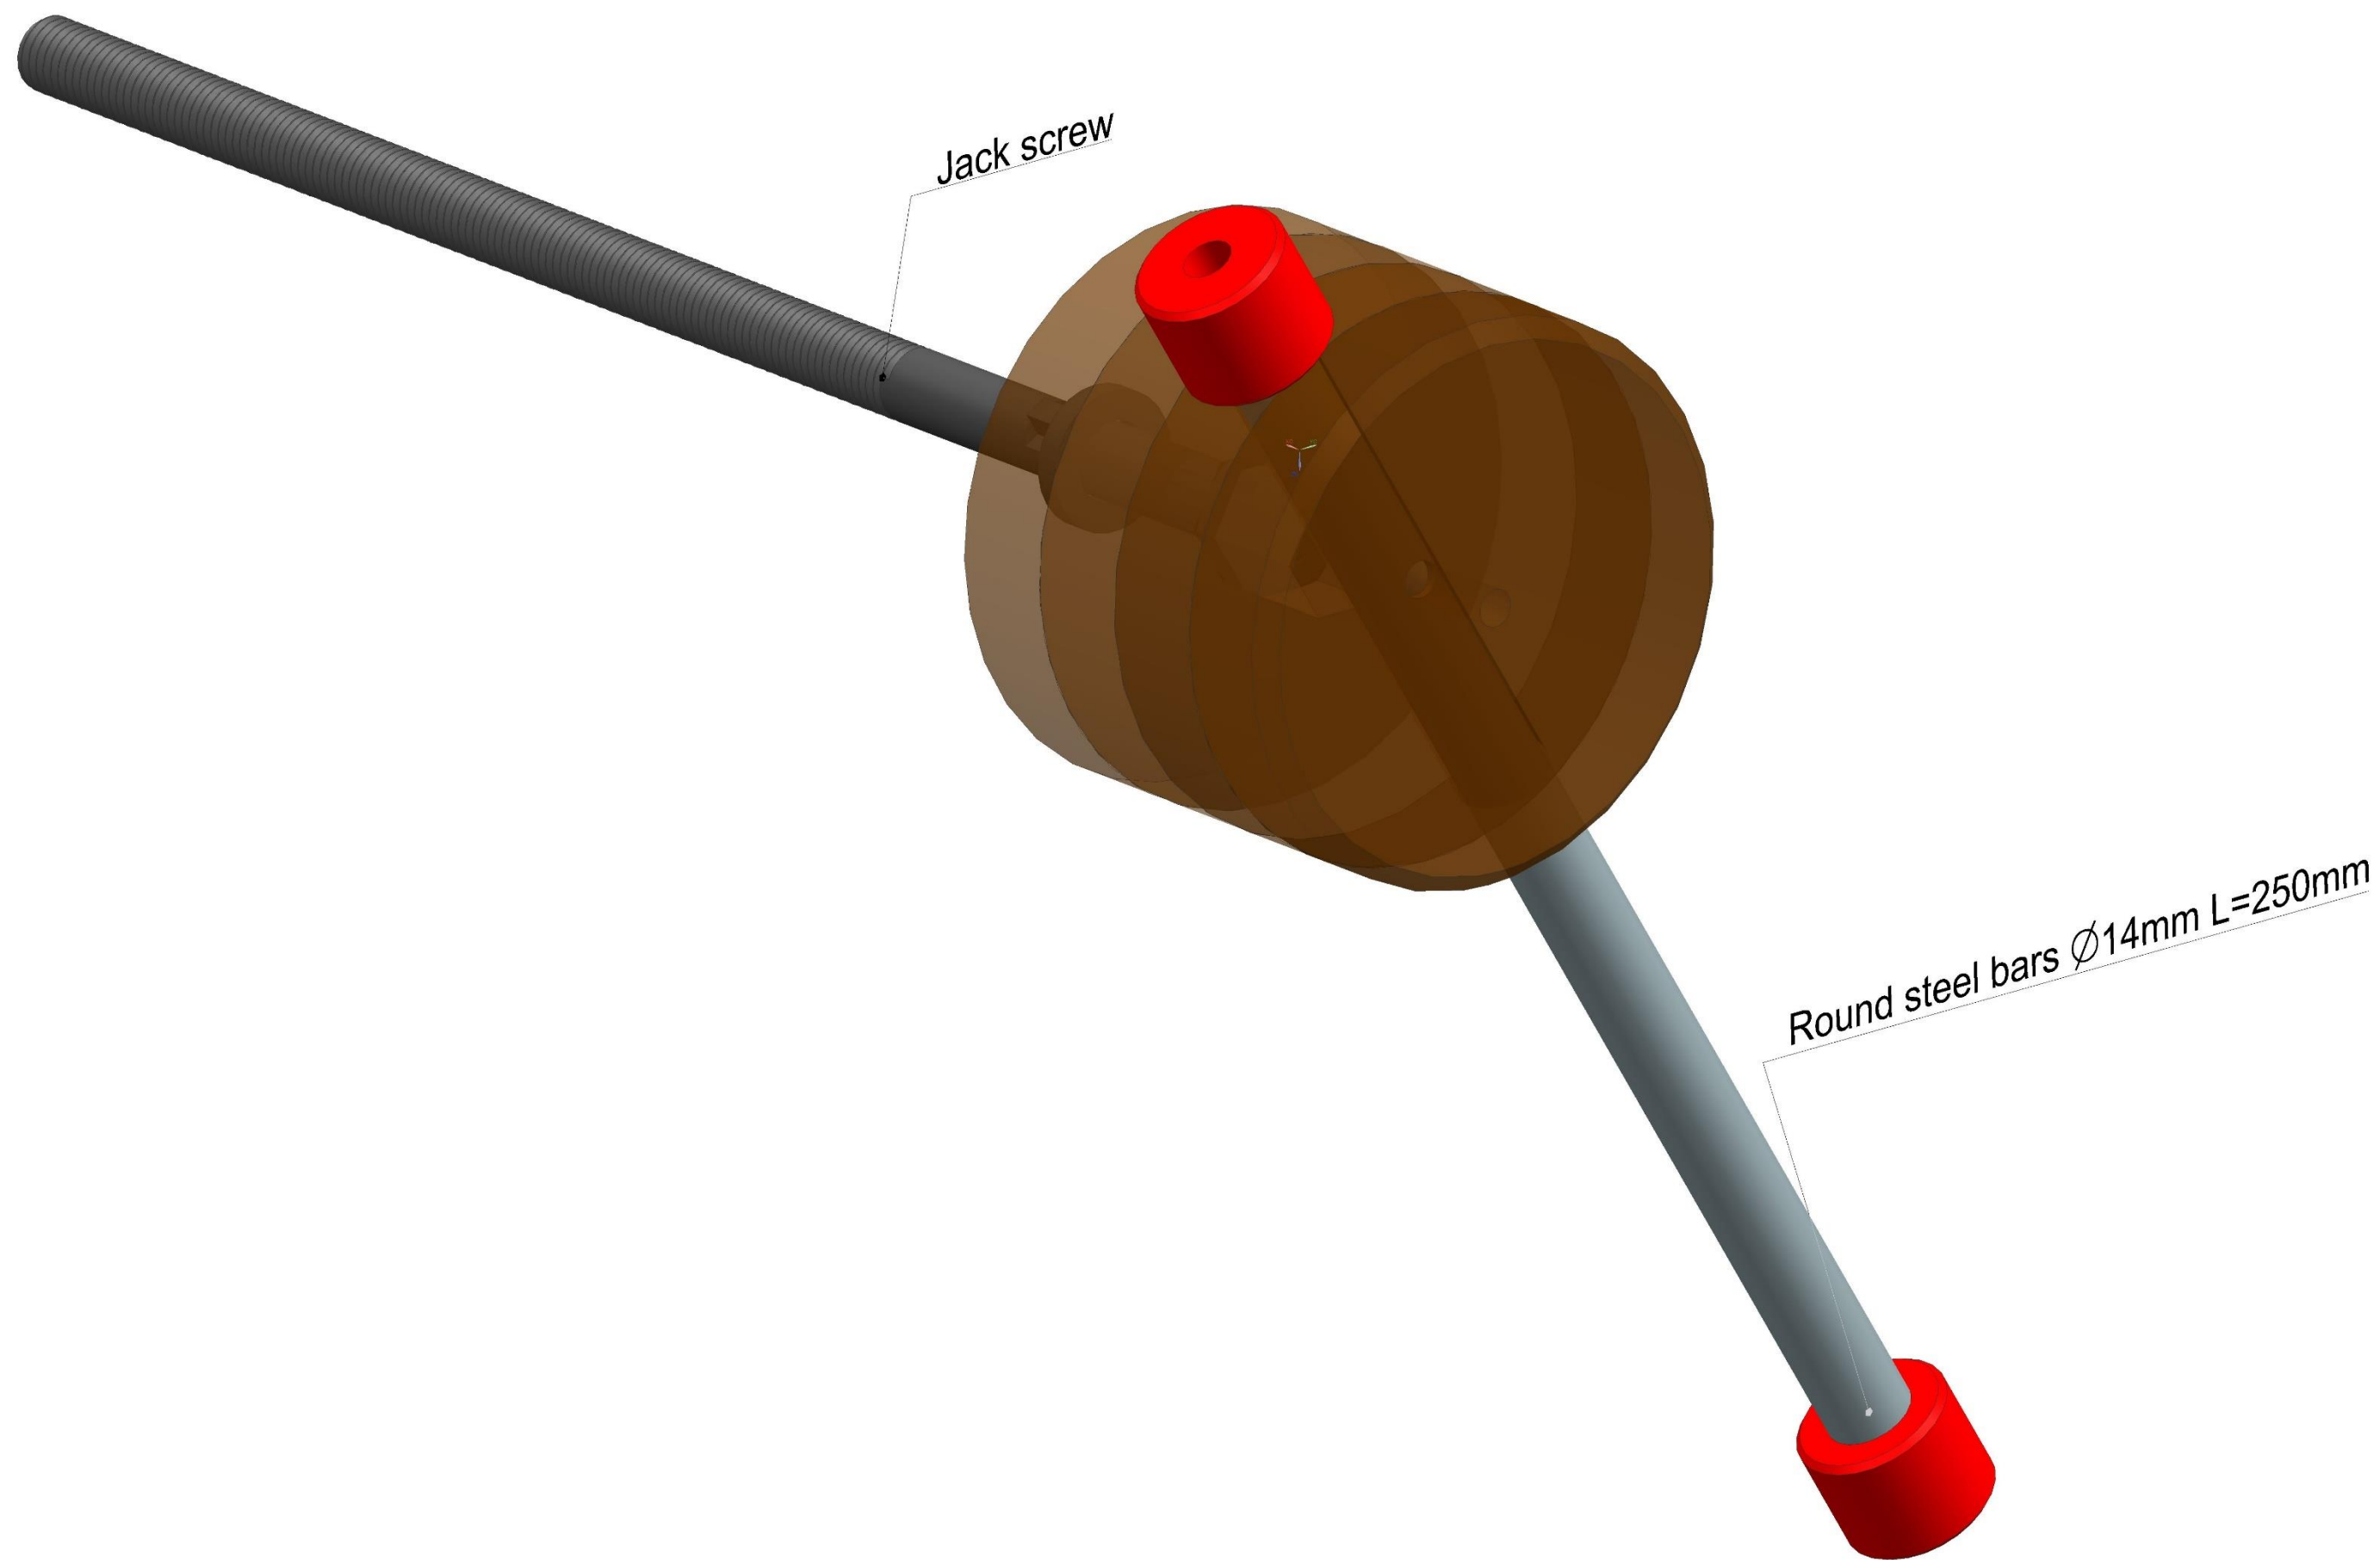

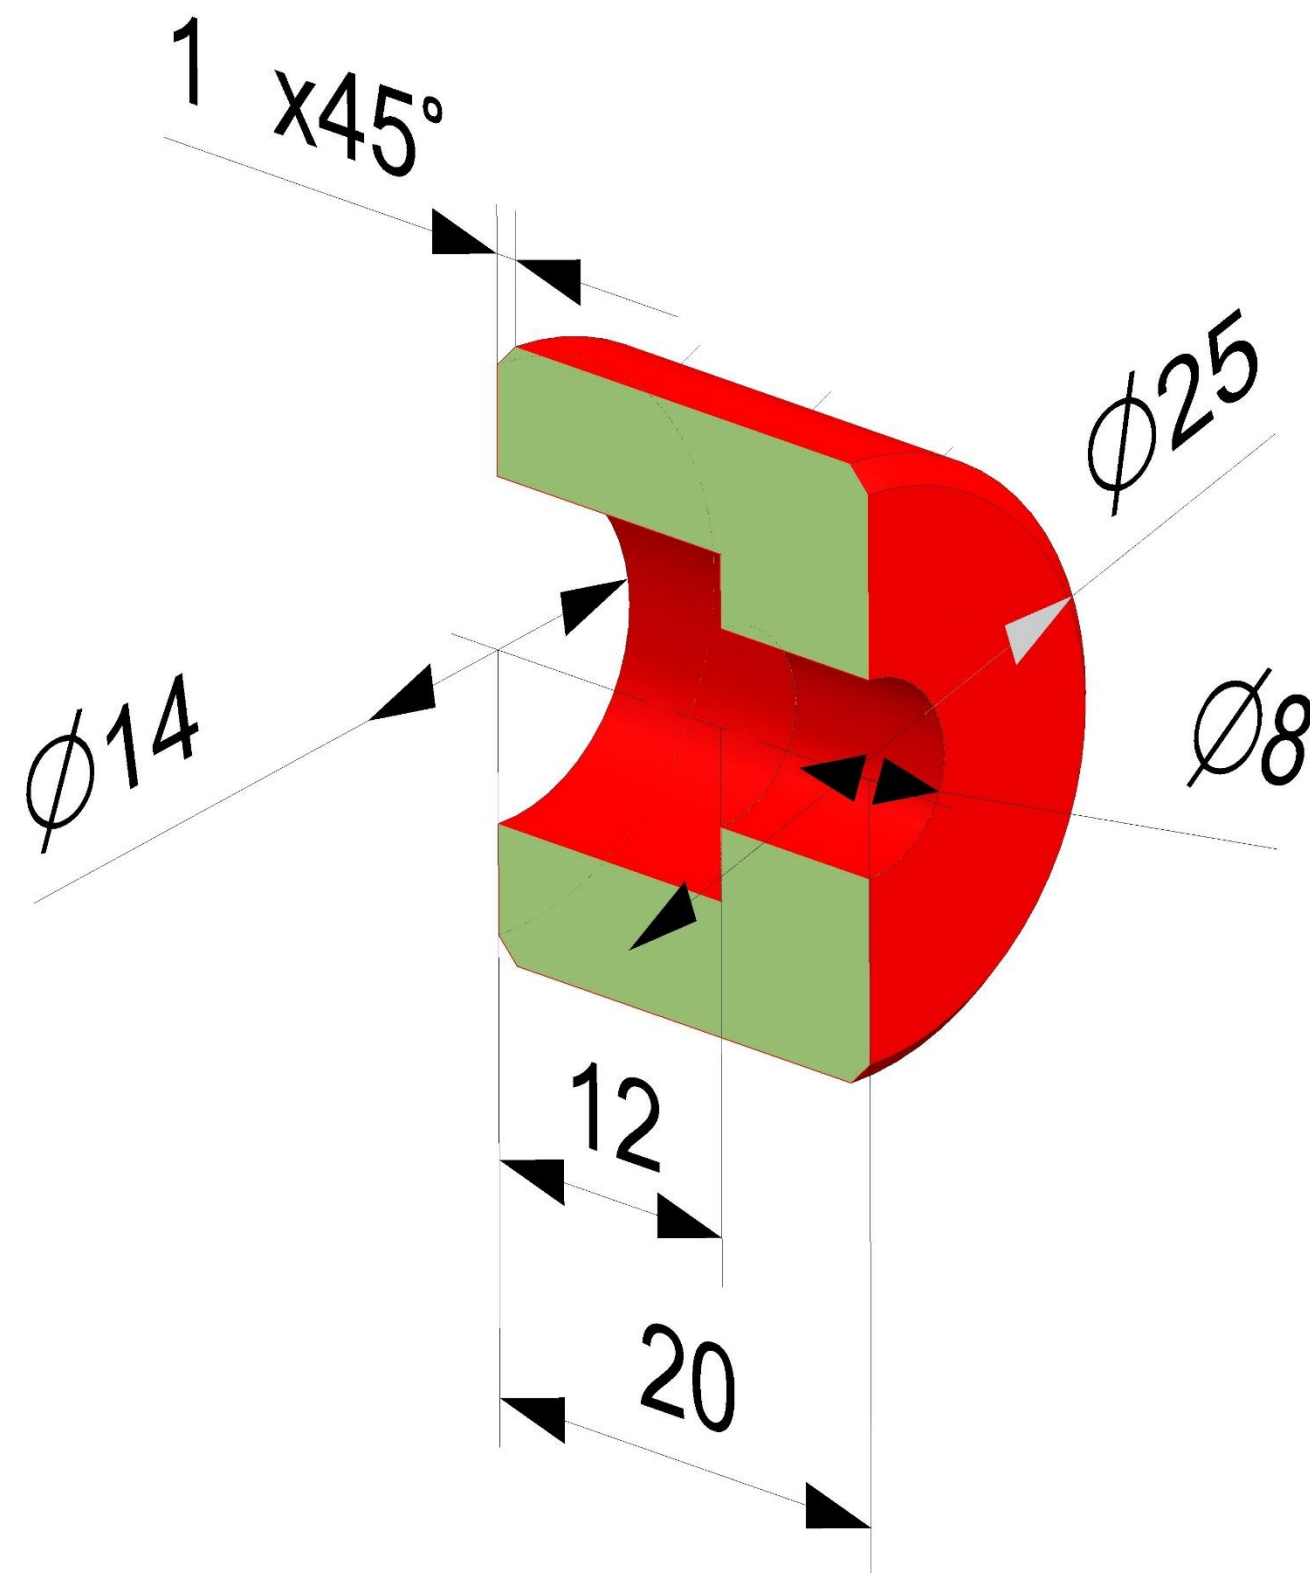

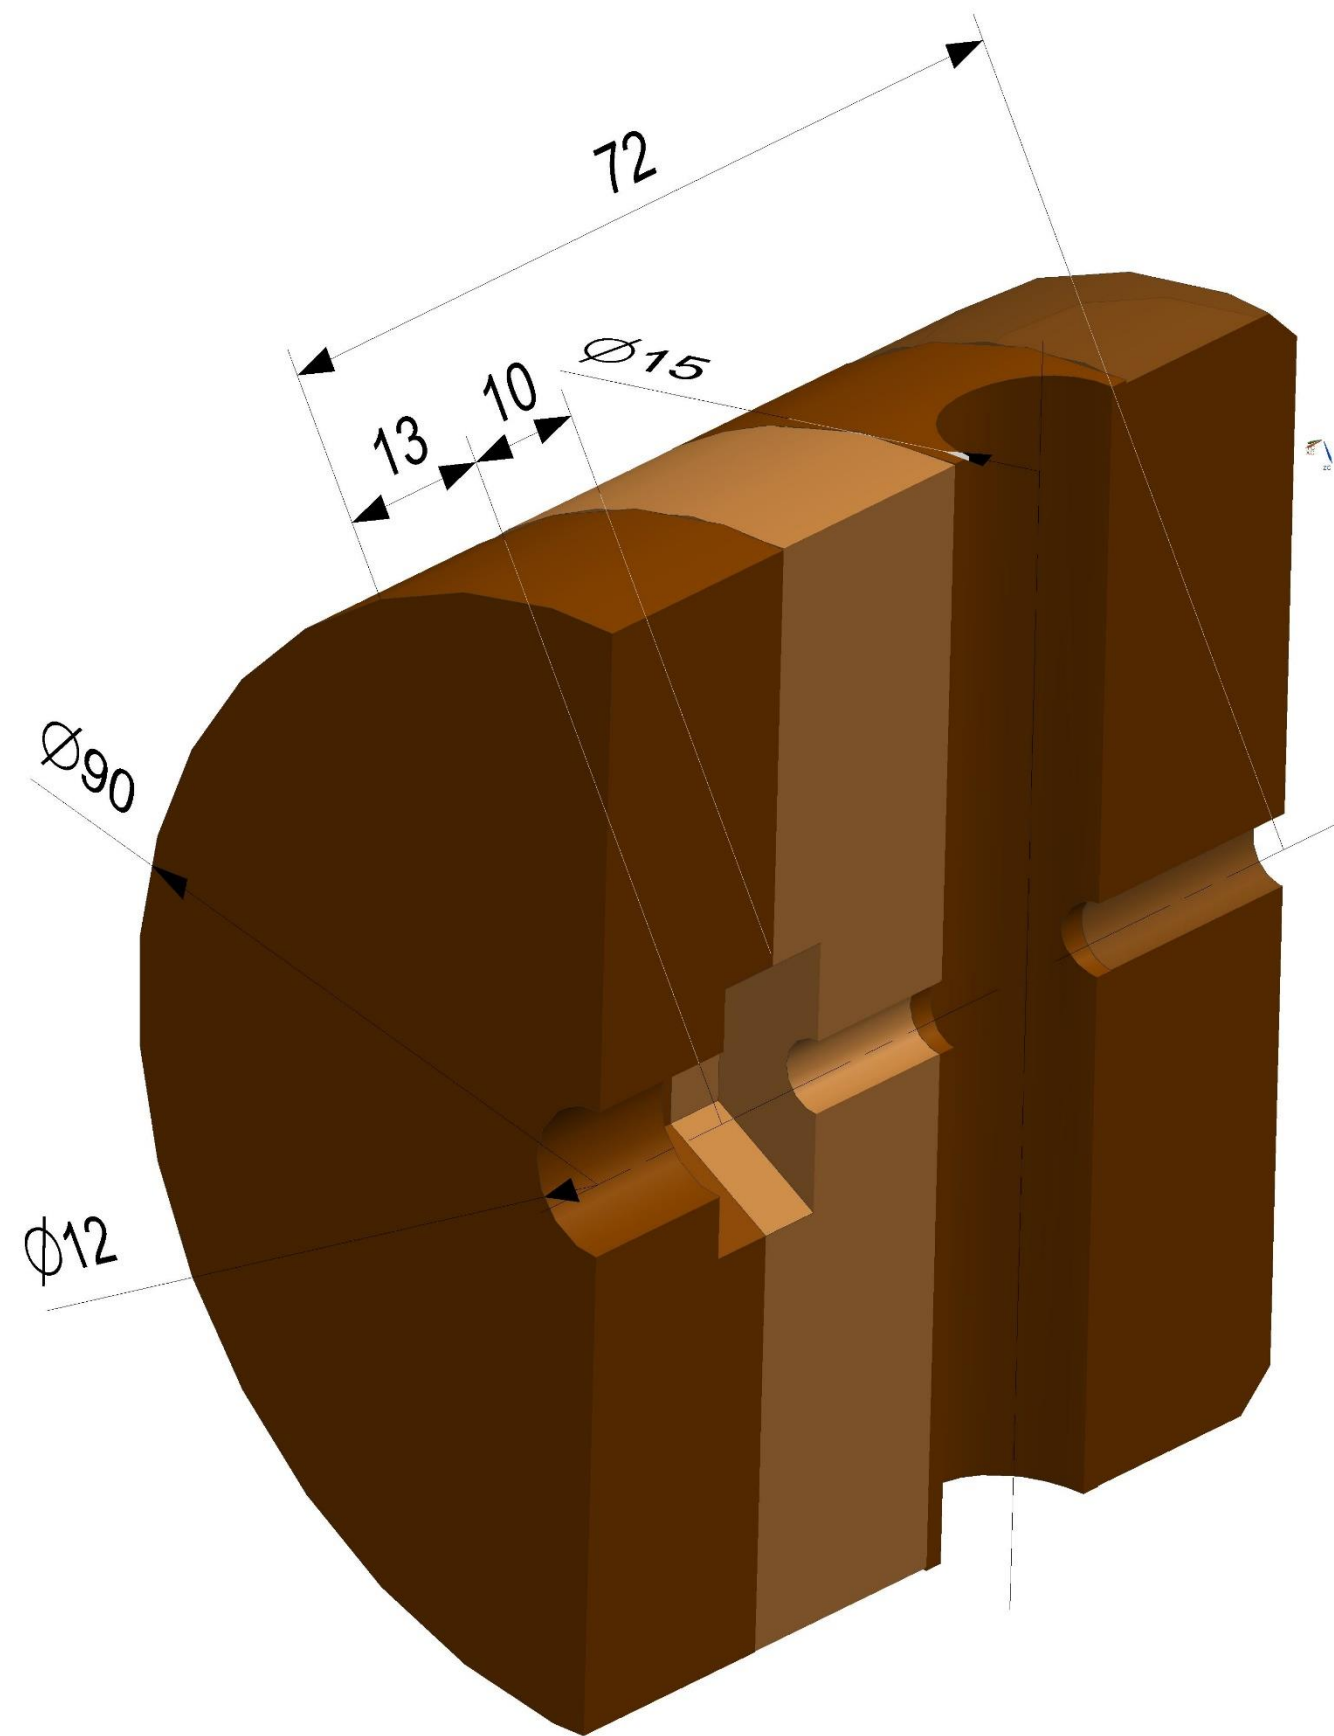

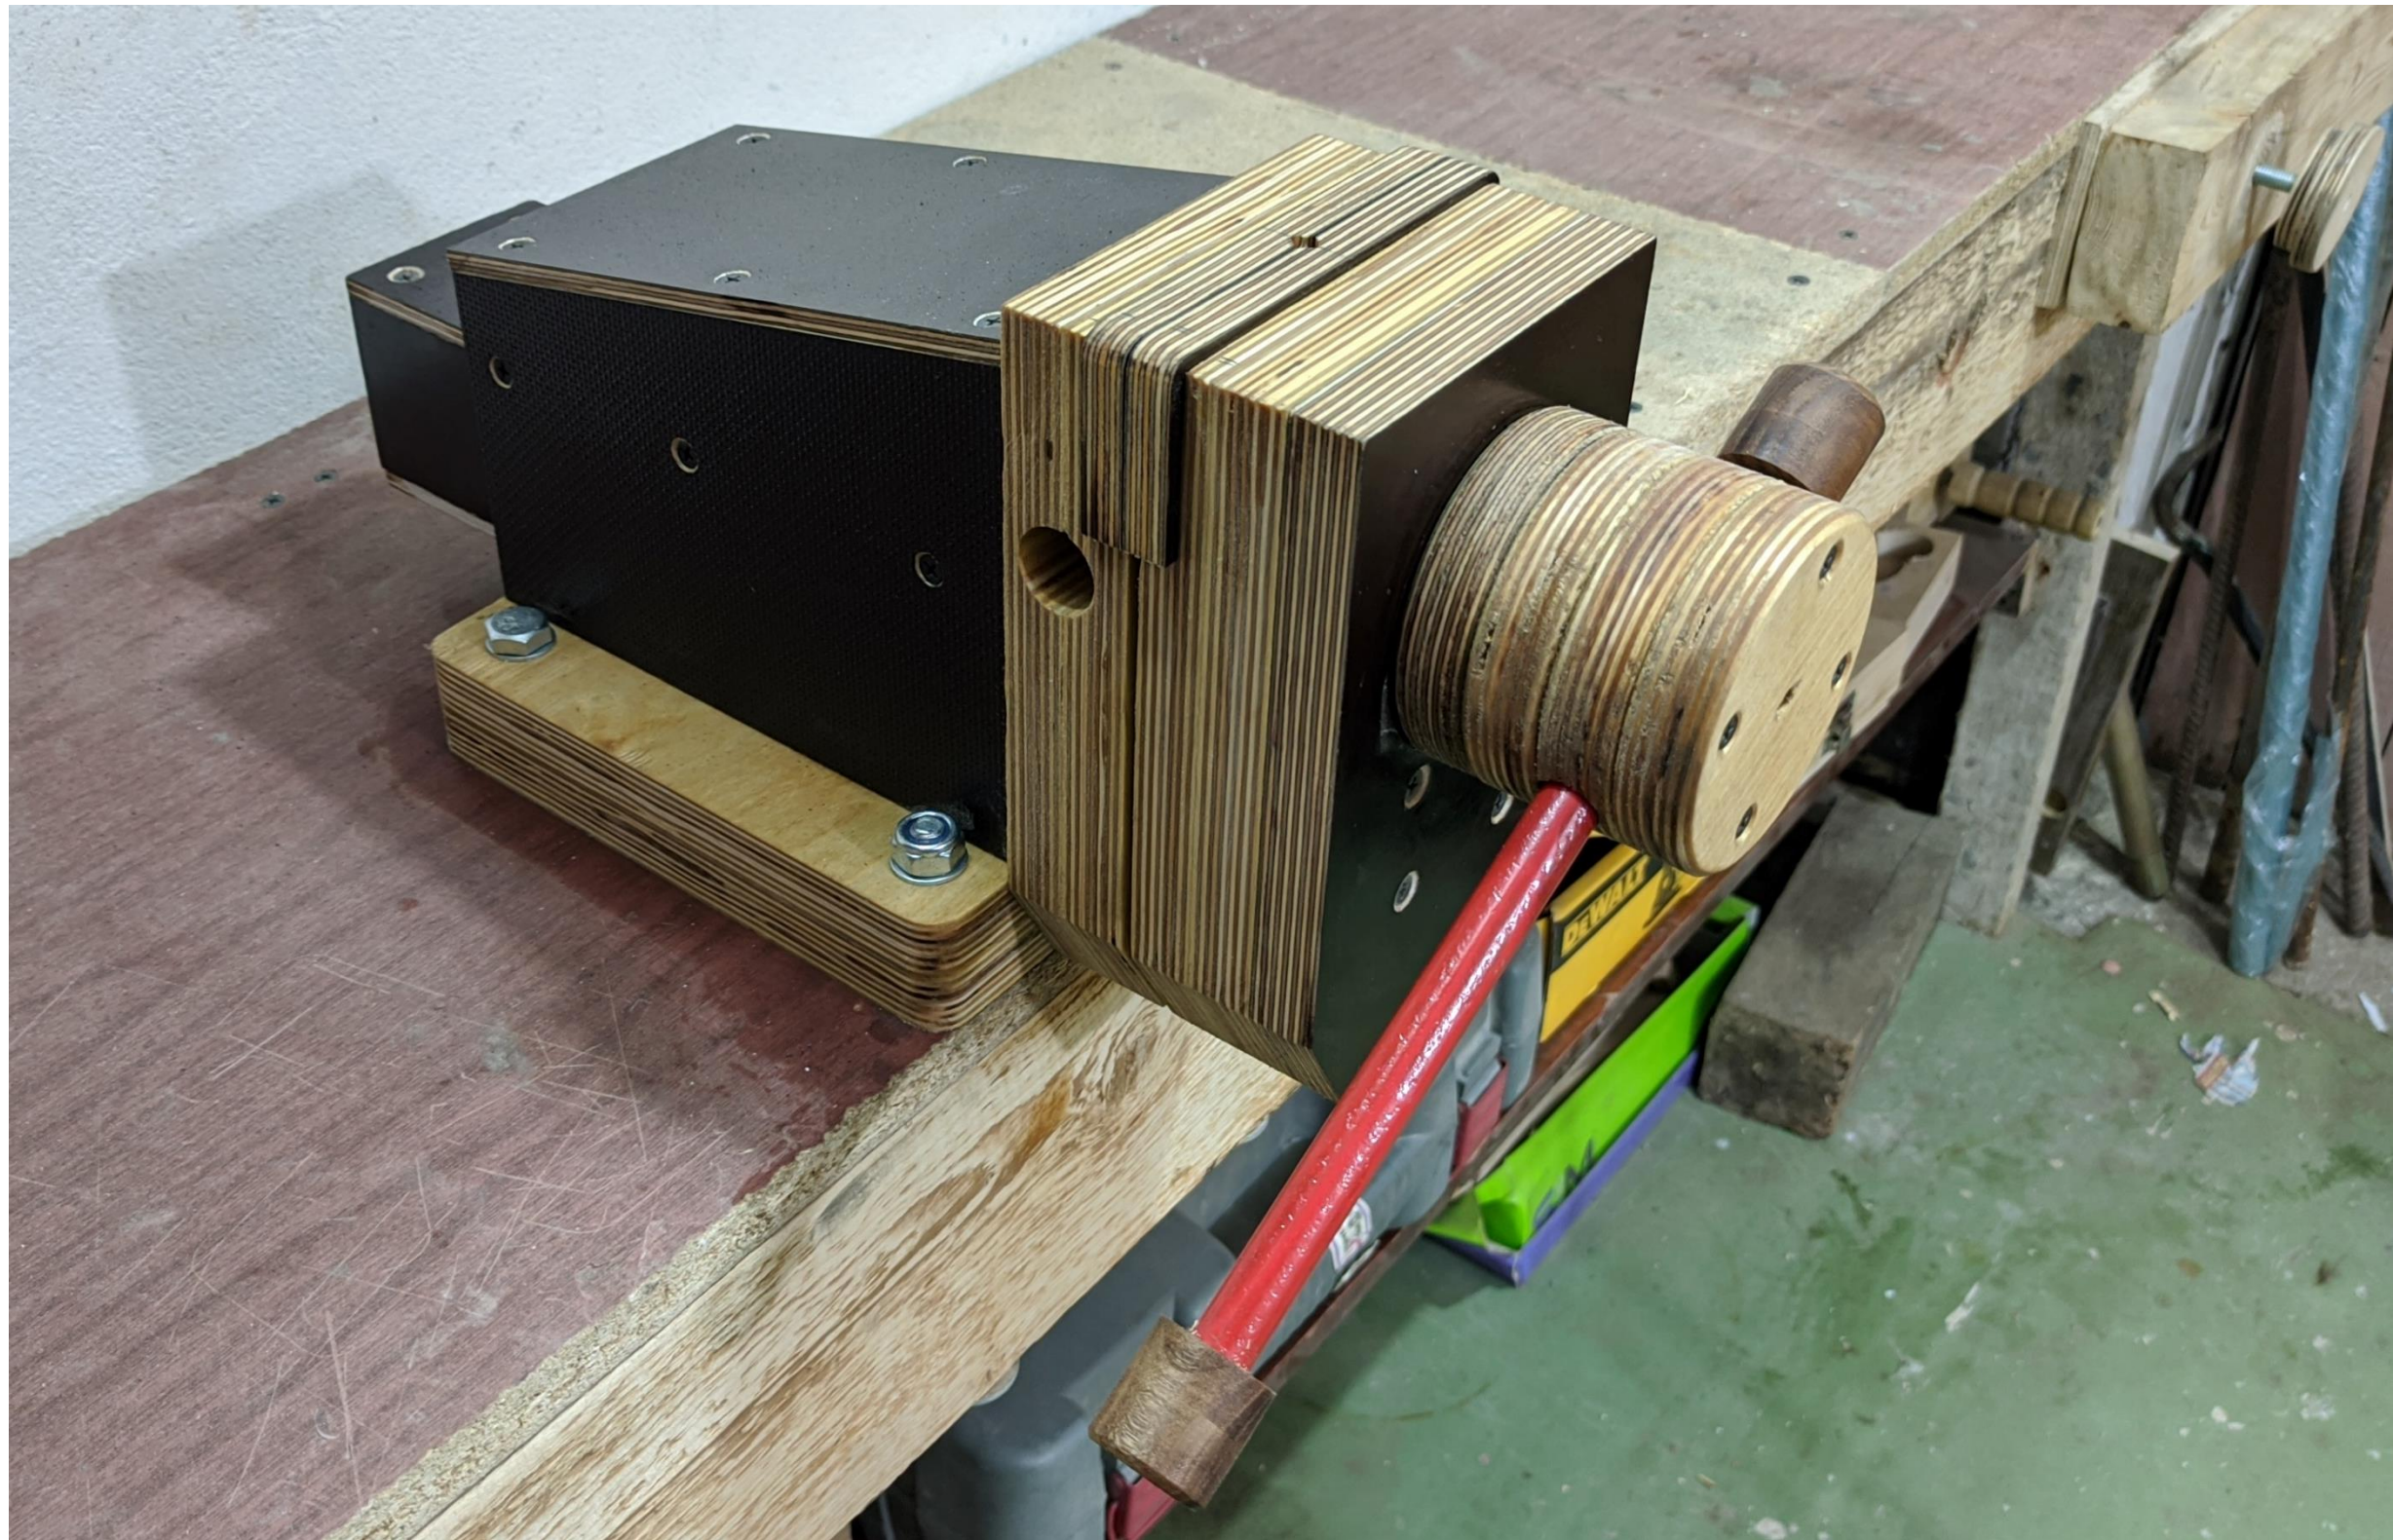

All dimensions are in millimeters (mm)

Other homemade tools and jigs:

[DIY Drill Press Stand + Plans](#)
[DIY Hold down clamps + Printable templates](#)

