




Homemade Crosscut Sled for Table Saw Plans

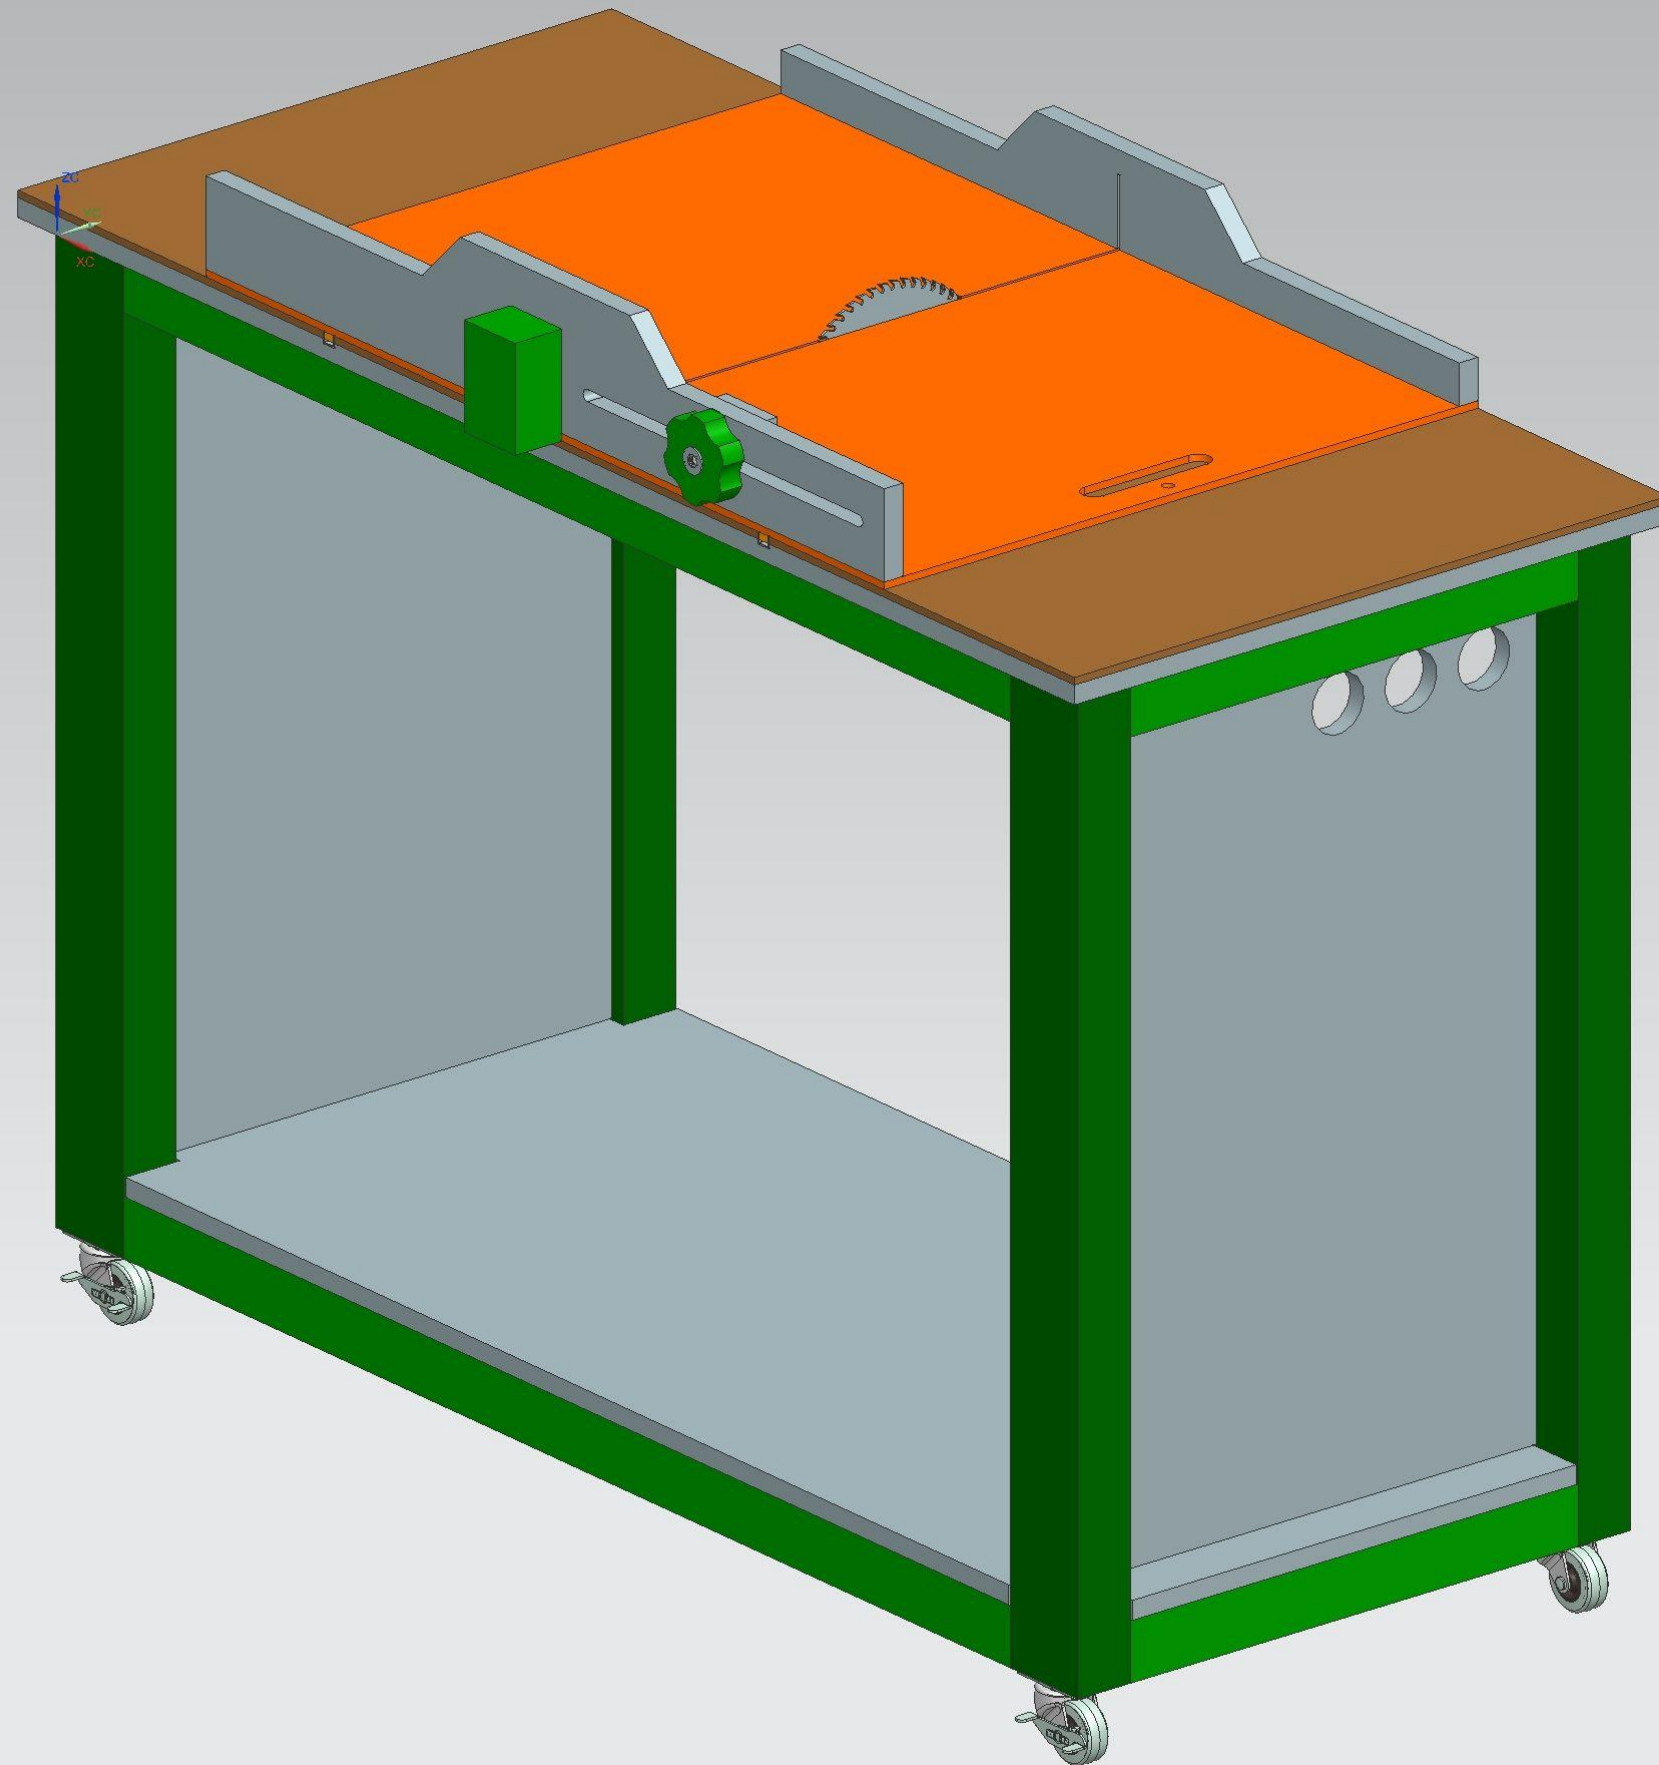


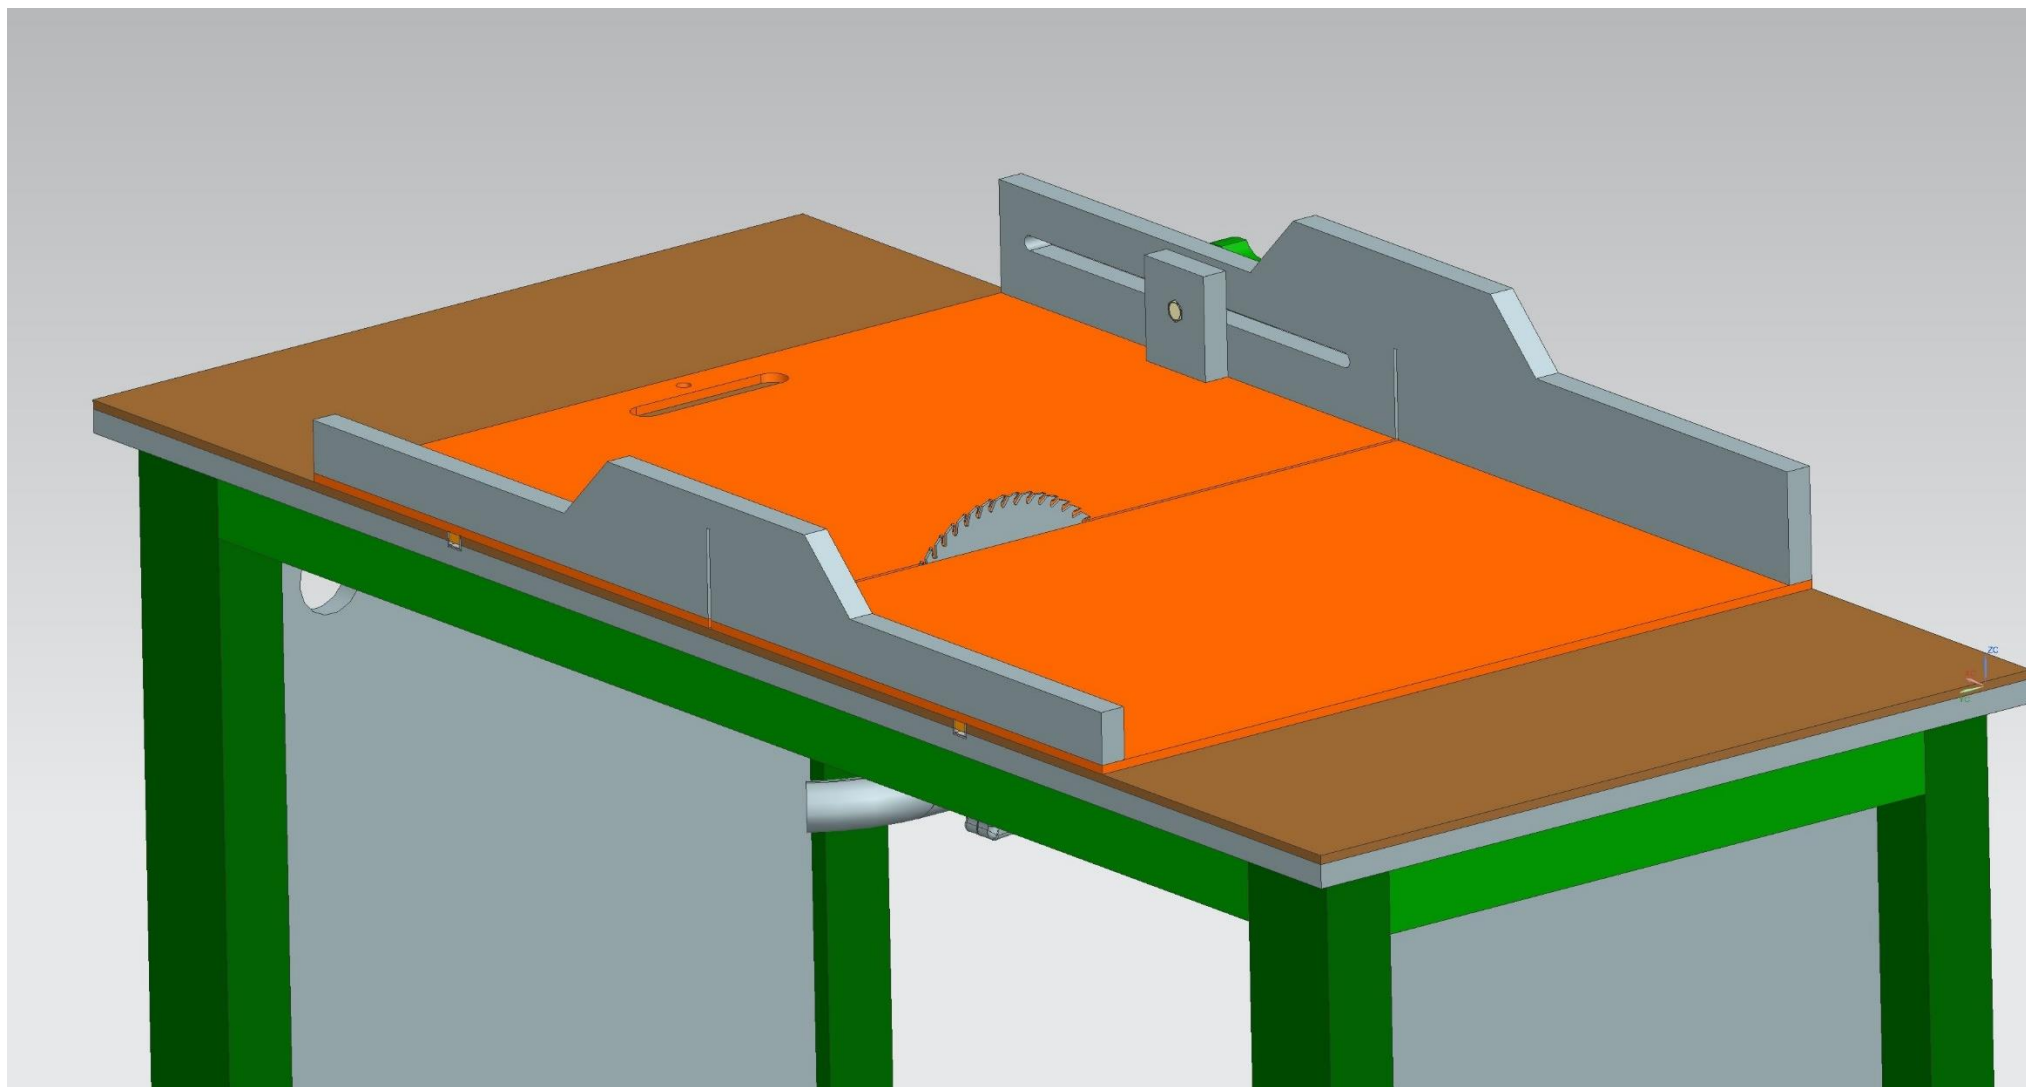



Materials:


1. [Bolt M8 x 60](#) x 1
2. [T-nut M8](#) x 1
3. [Wood Screws 3.5x32](#)
4. Laminated Plywood 6 mm
5. [Plywood 18 mm](#)
6. Lumber 45×90 mm

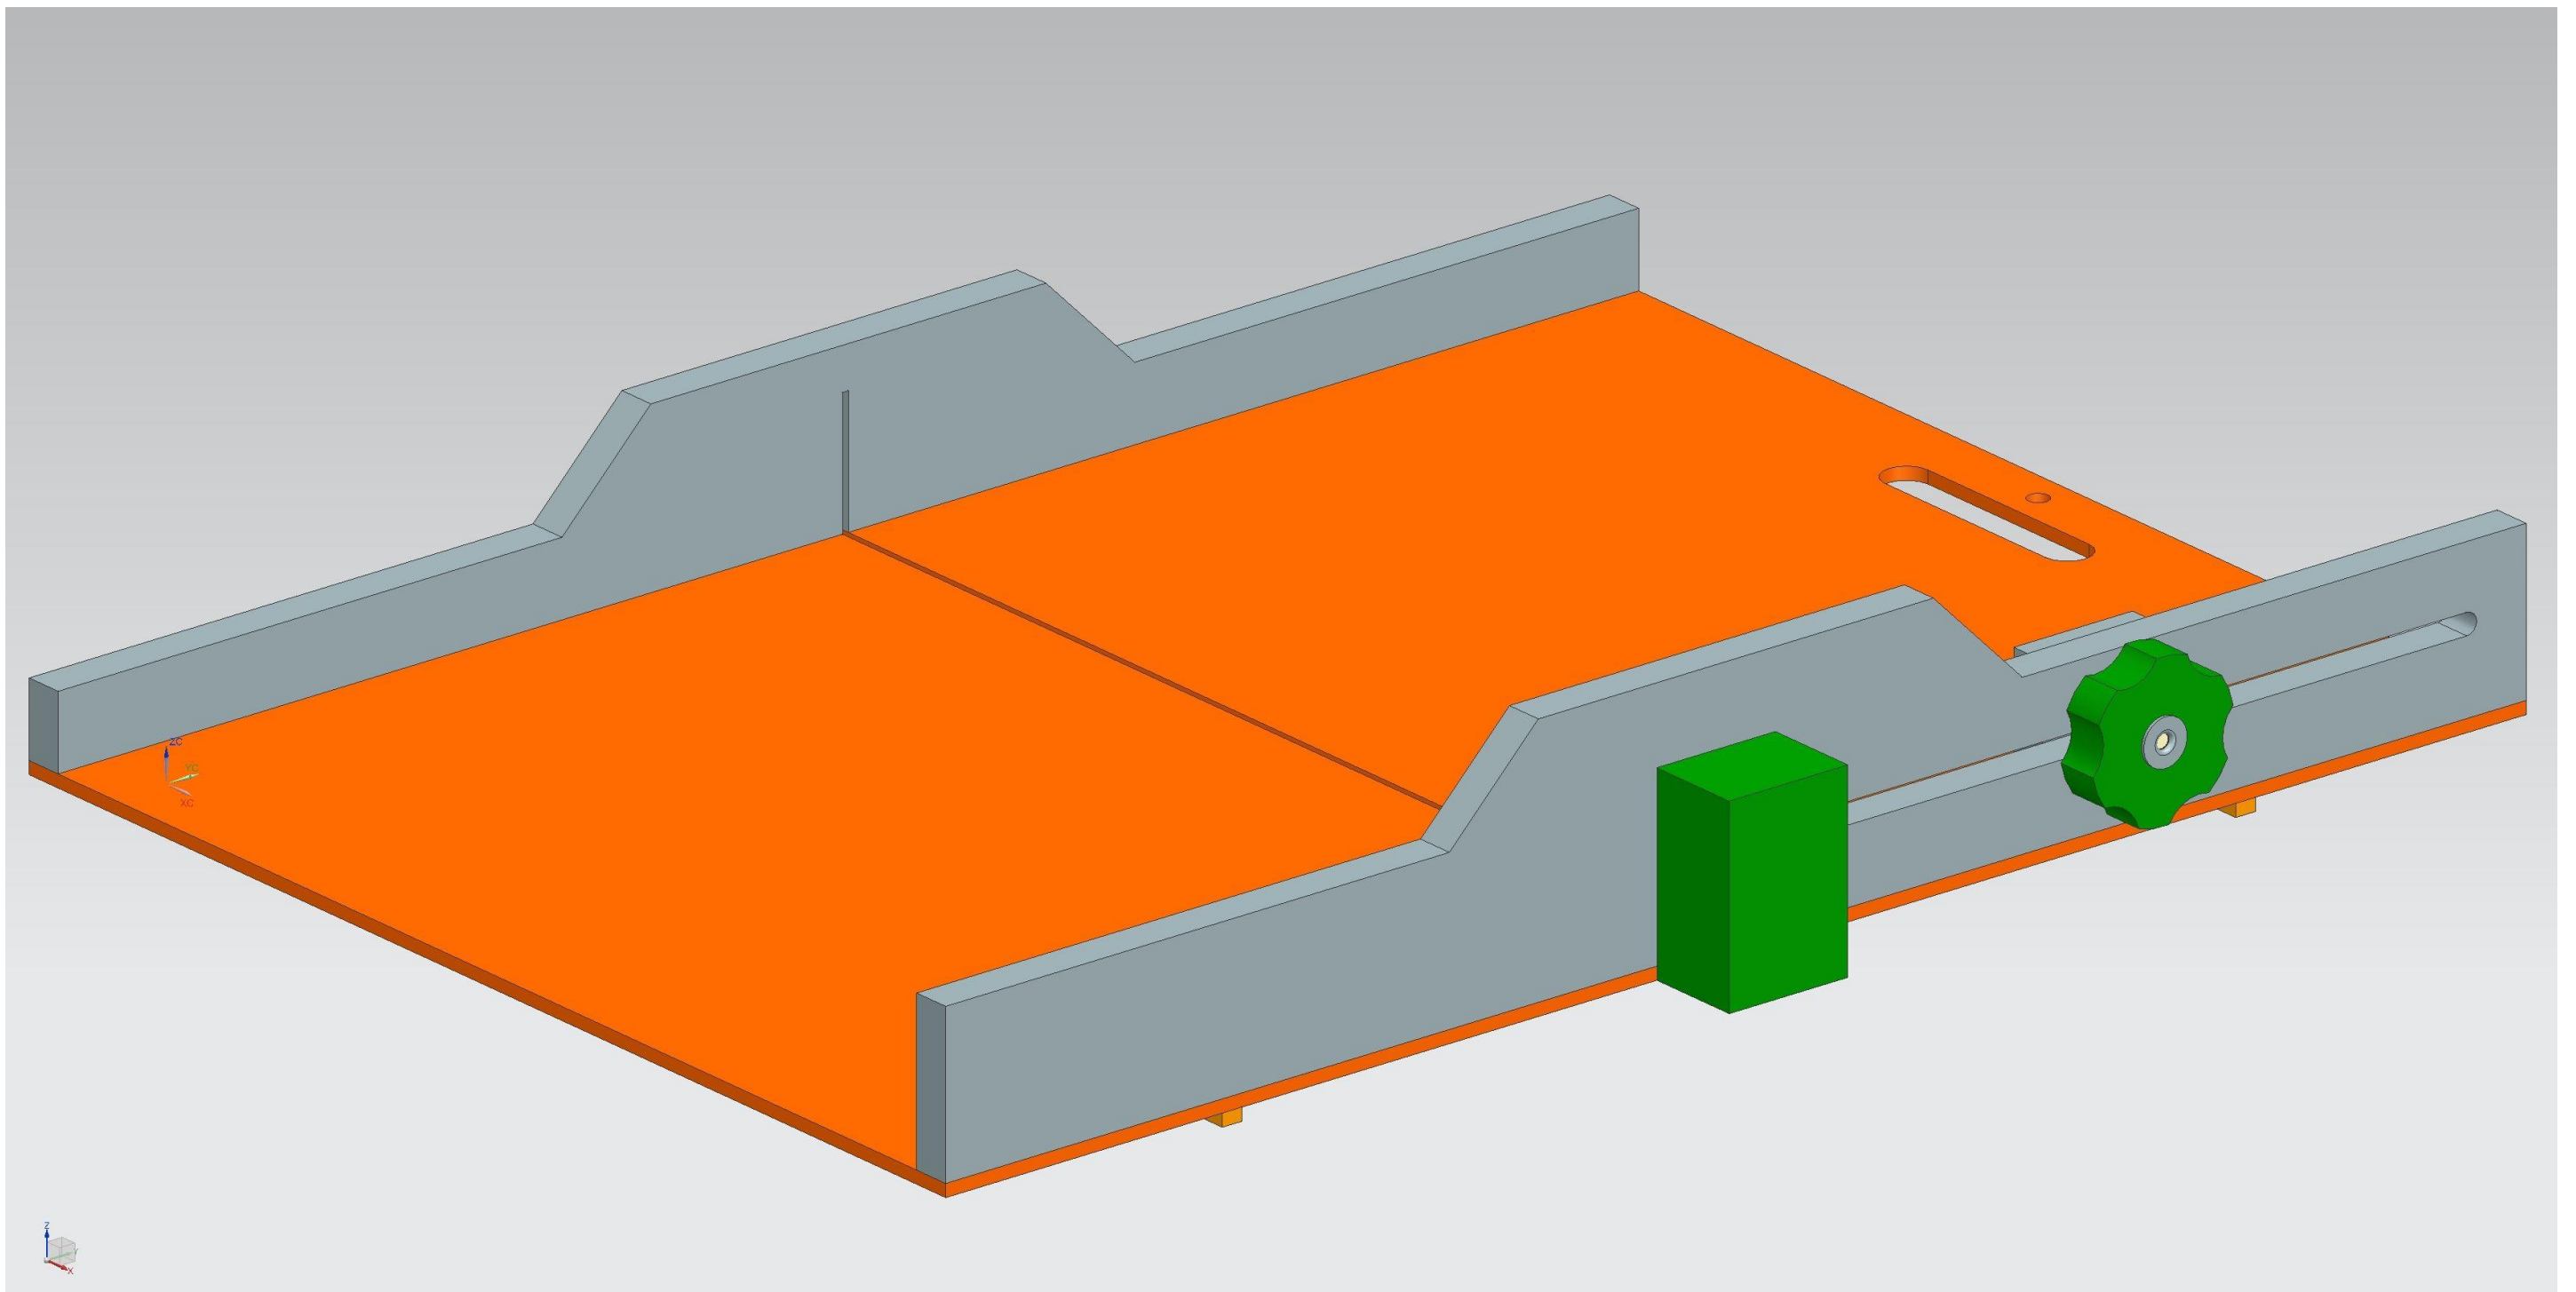


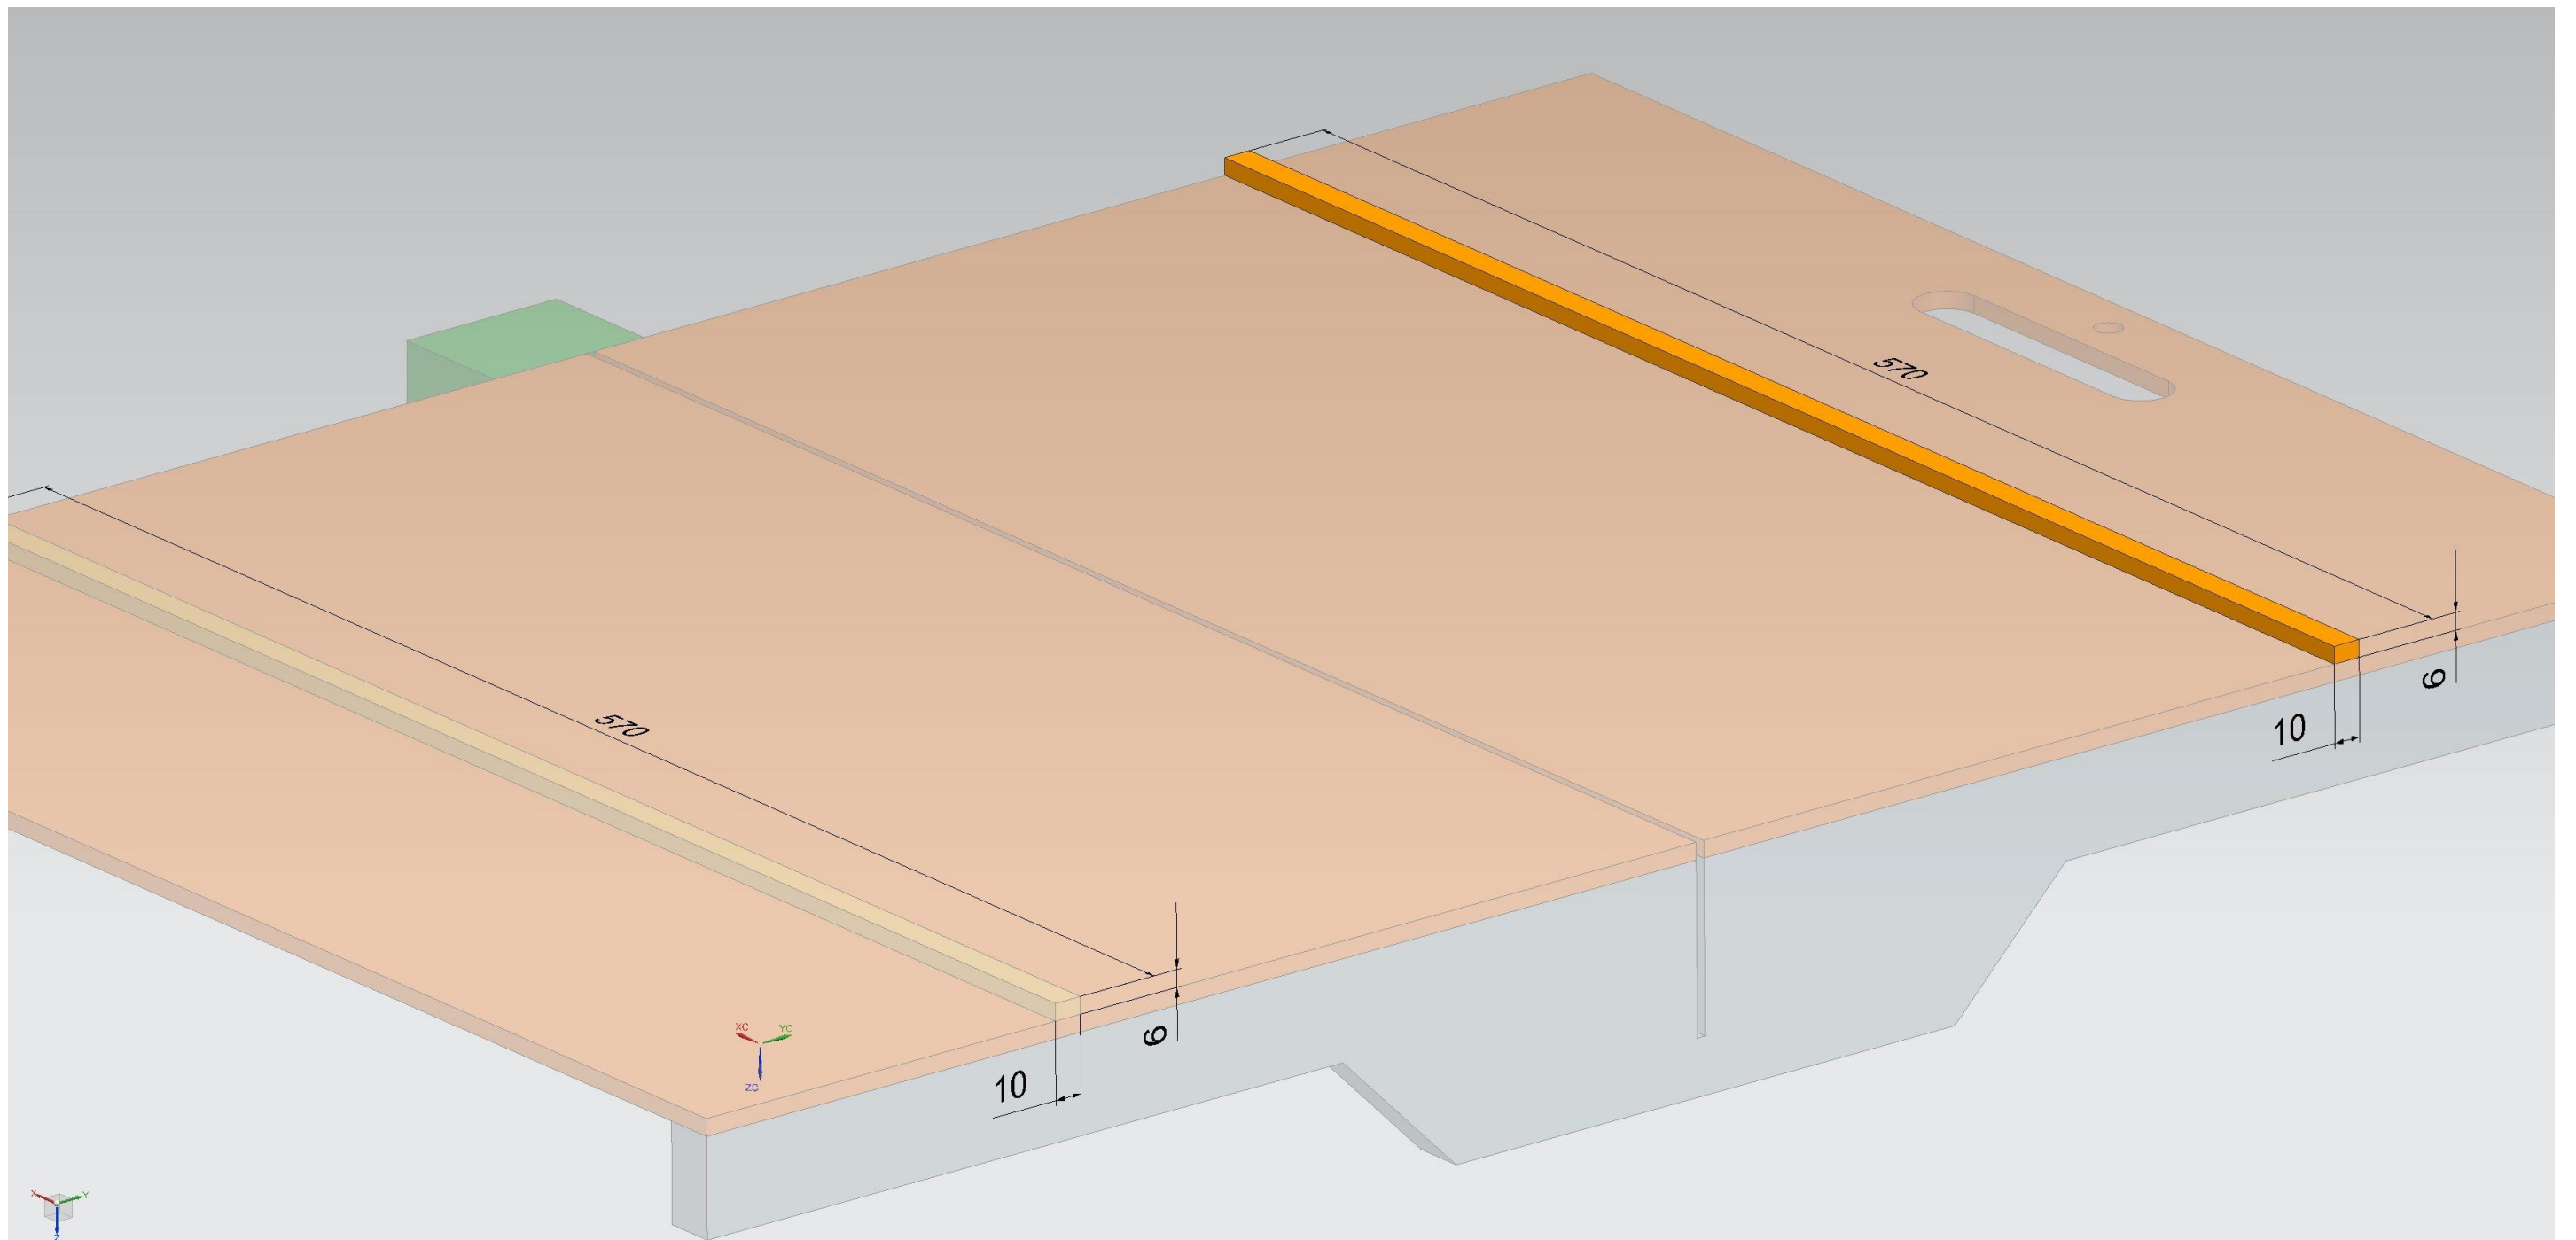


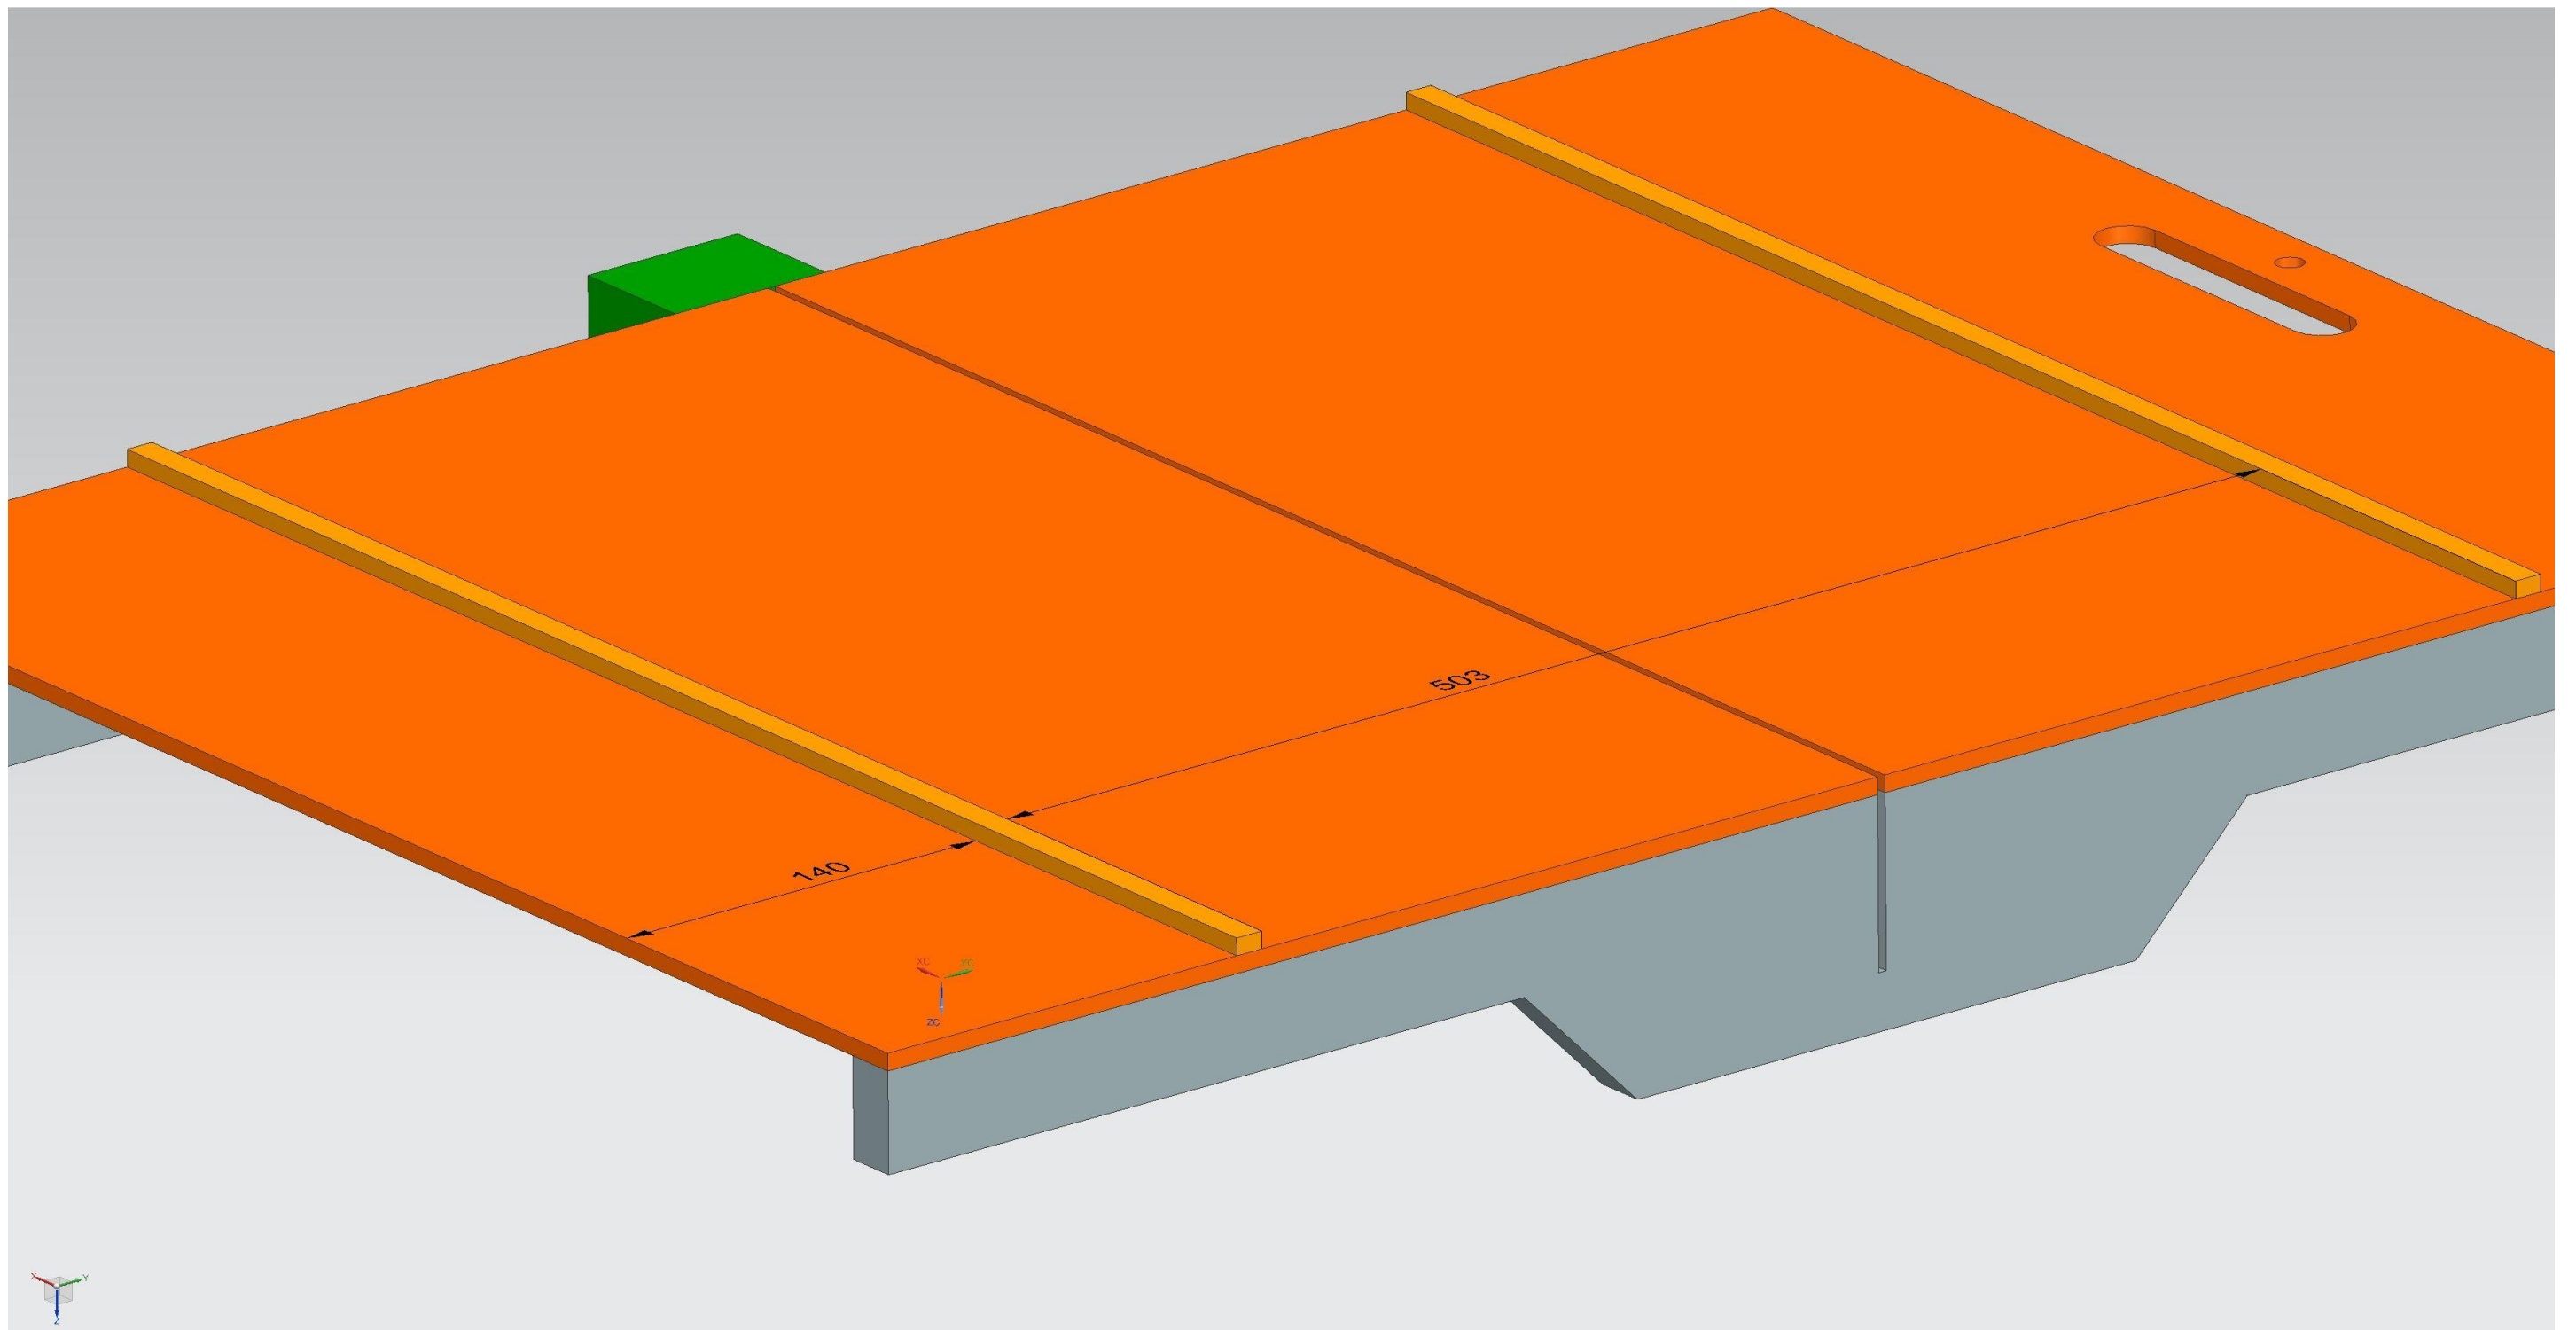


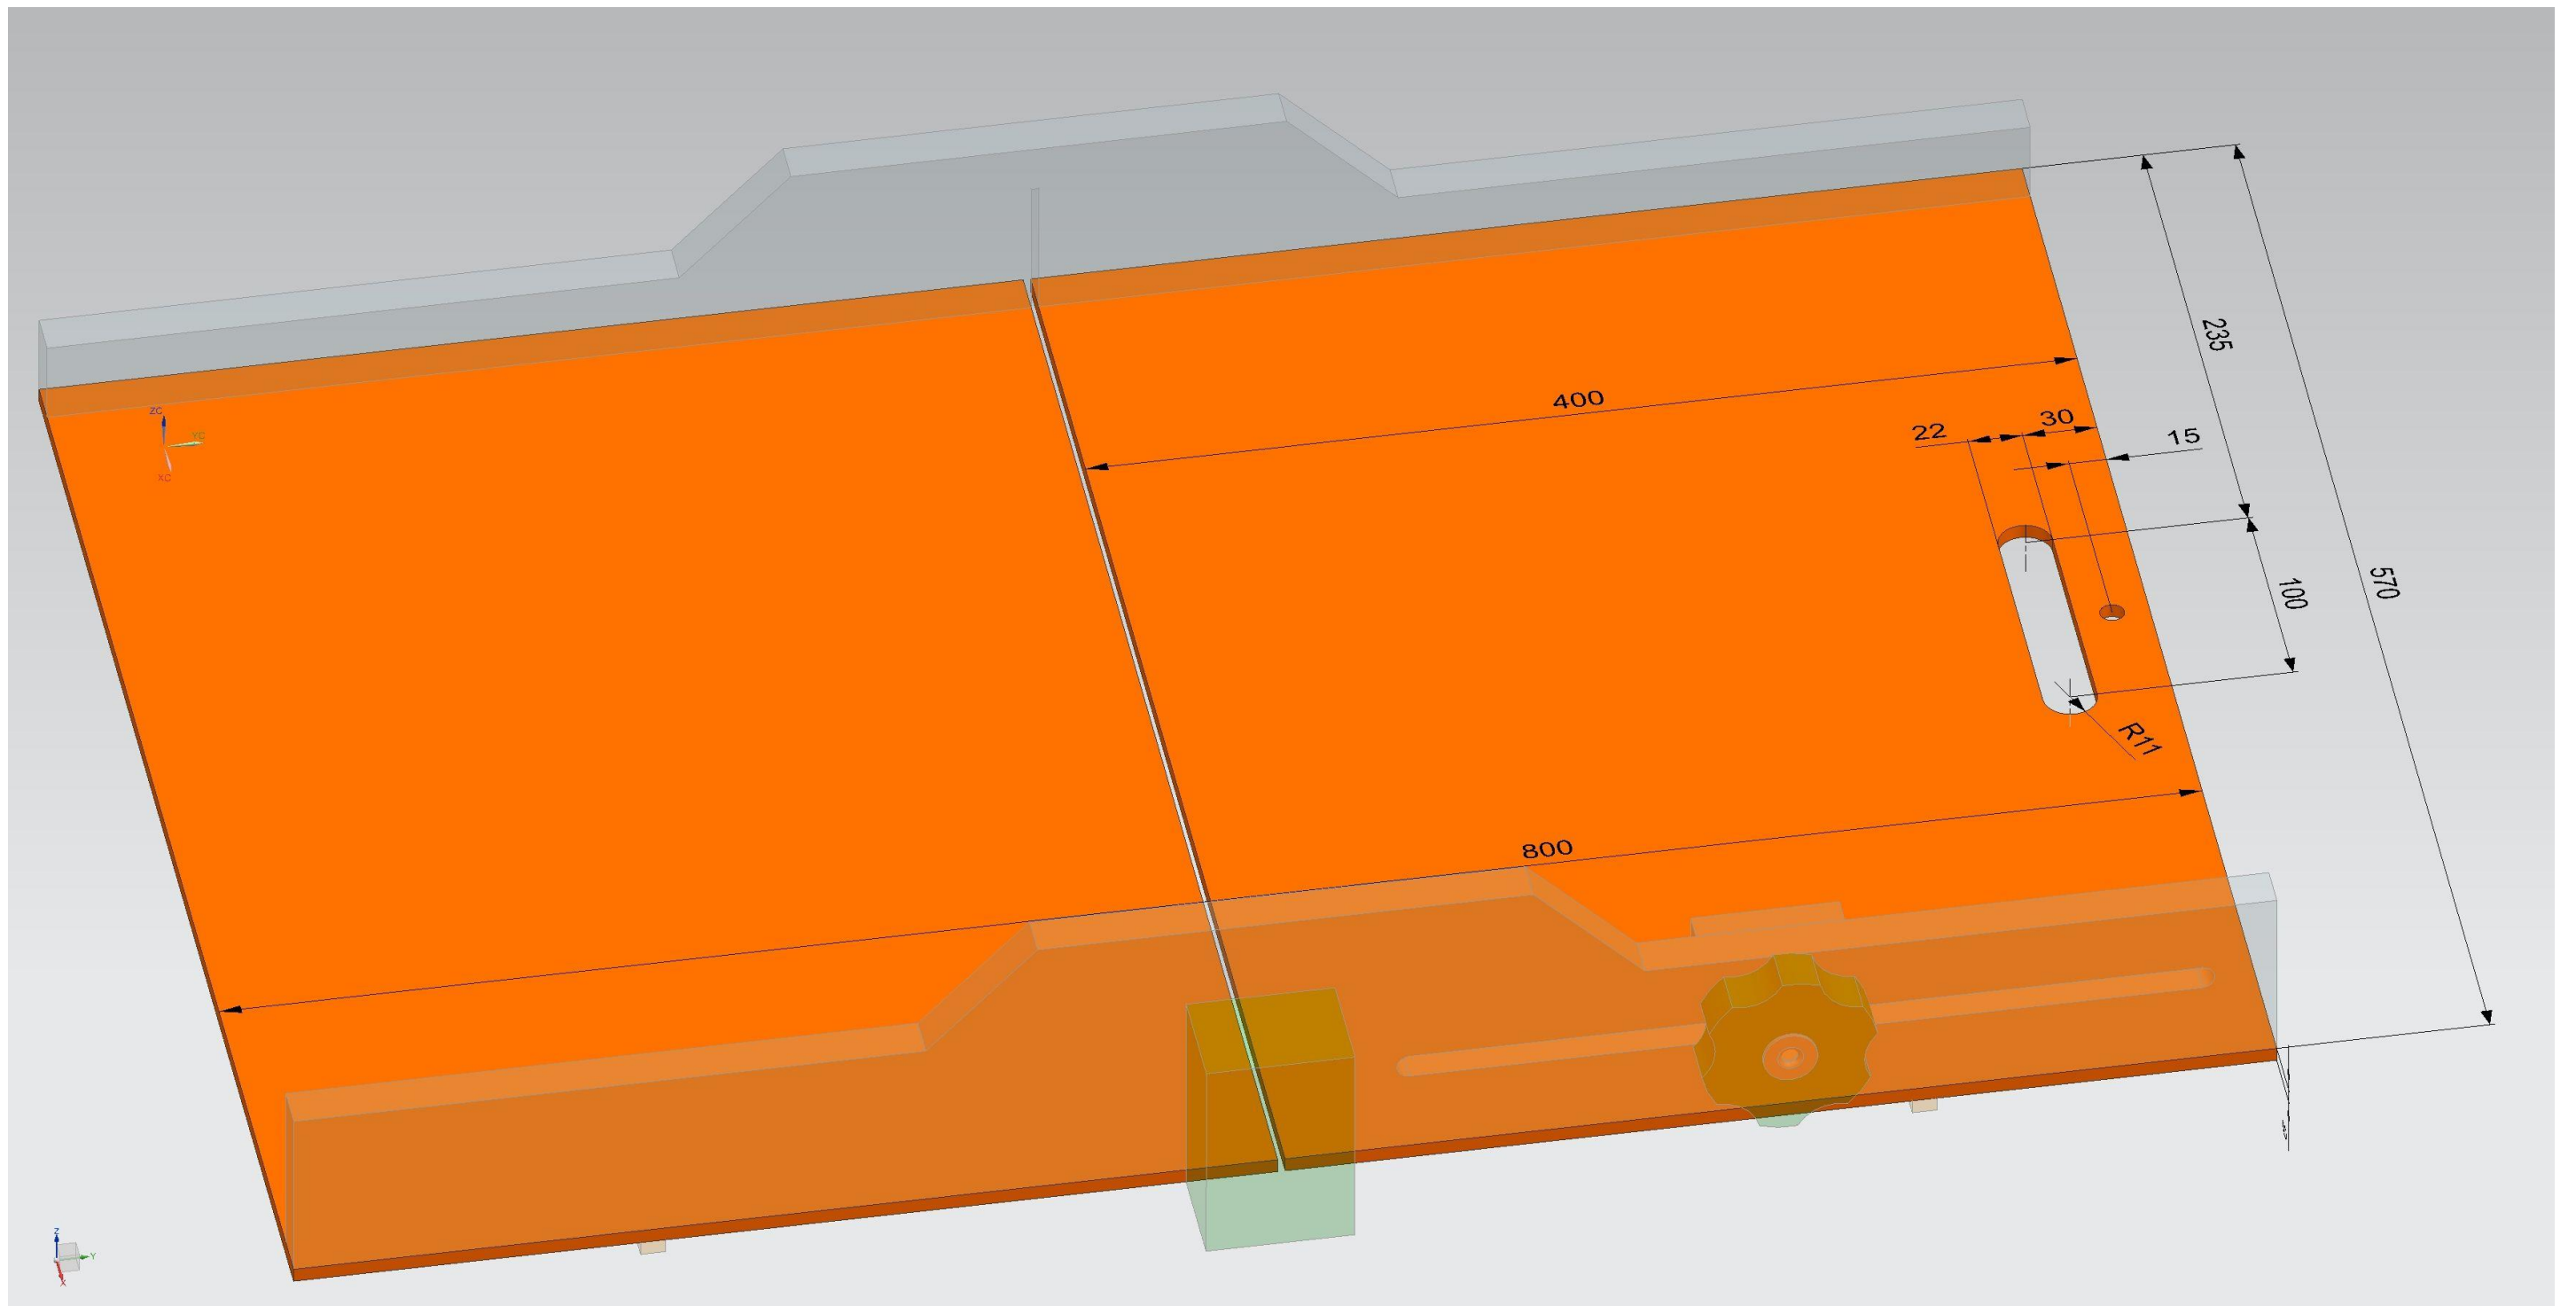


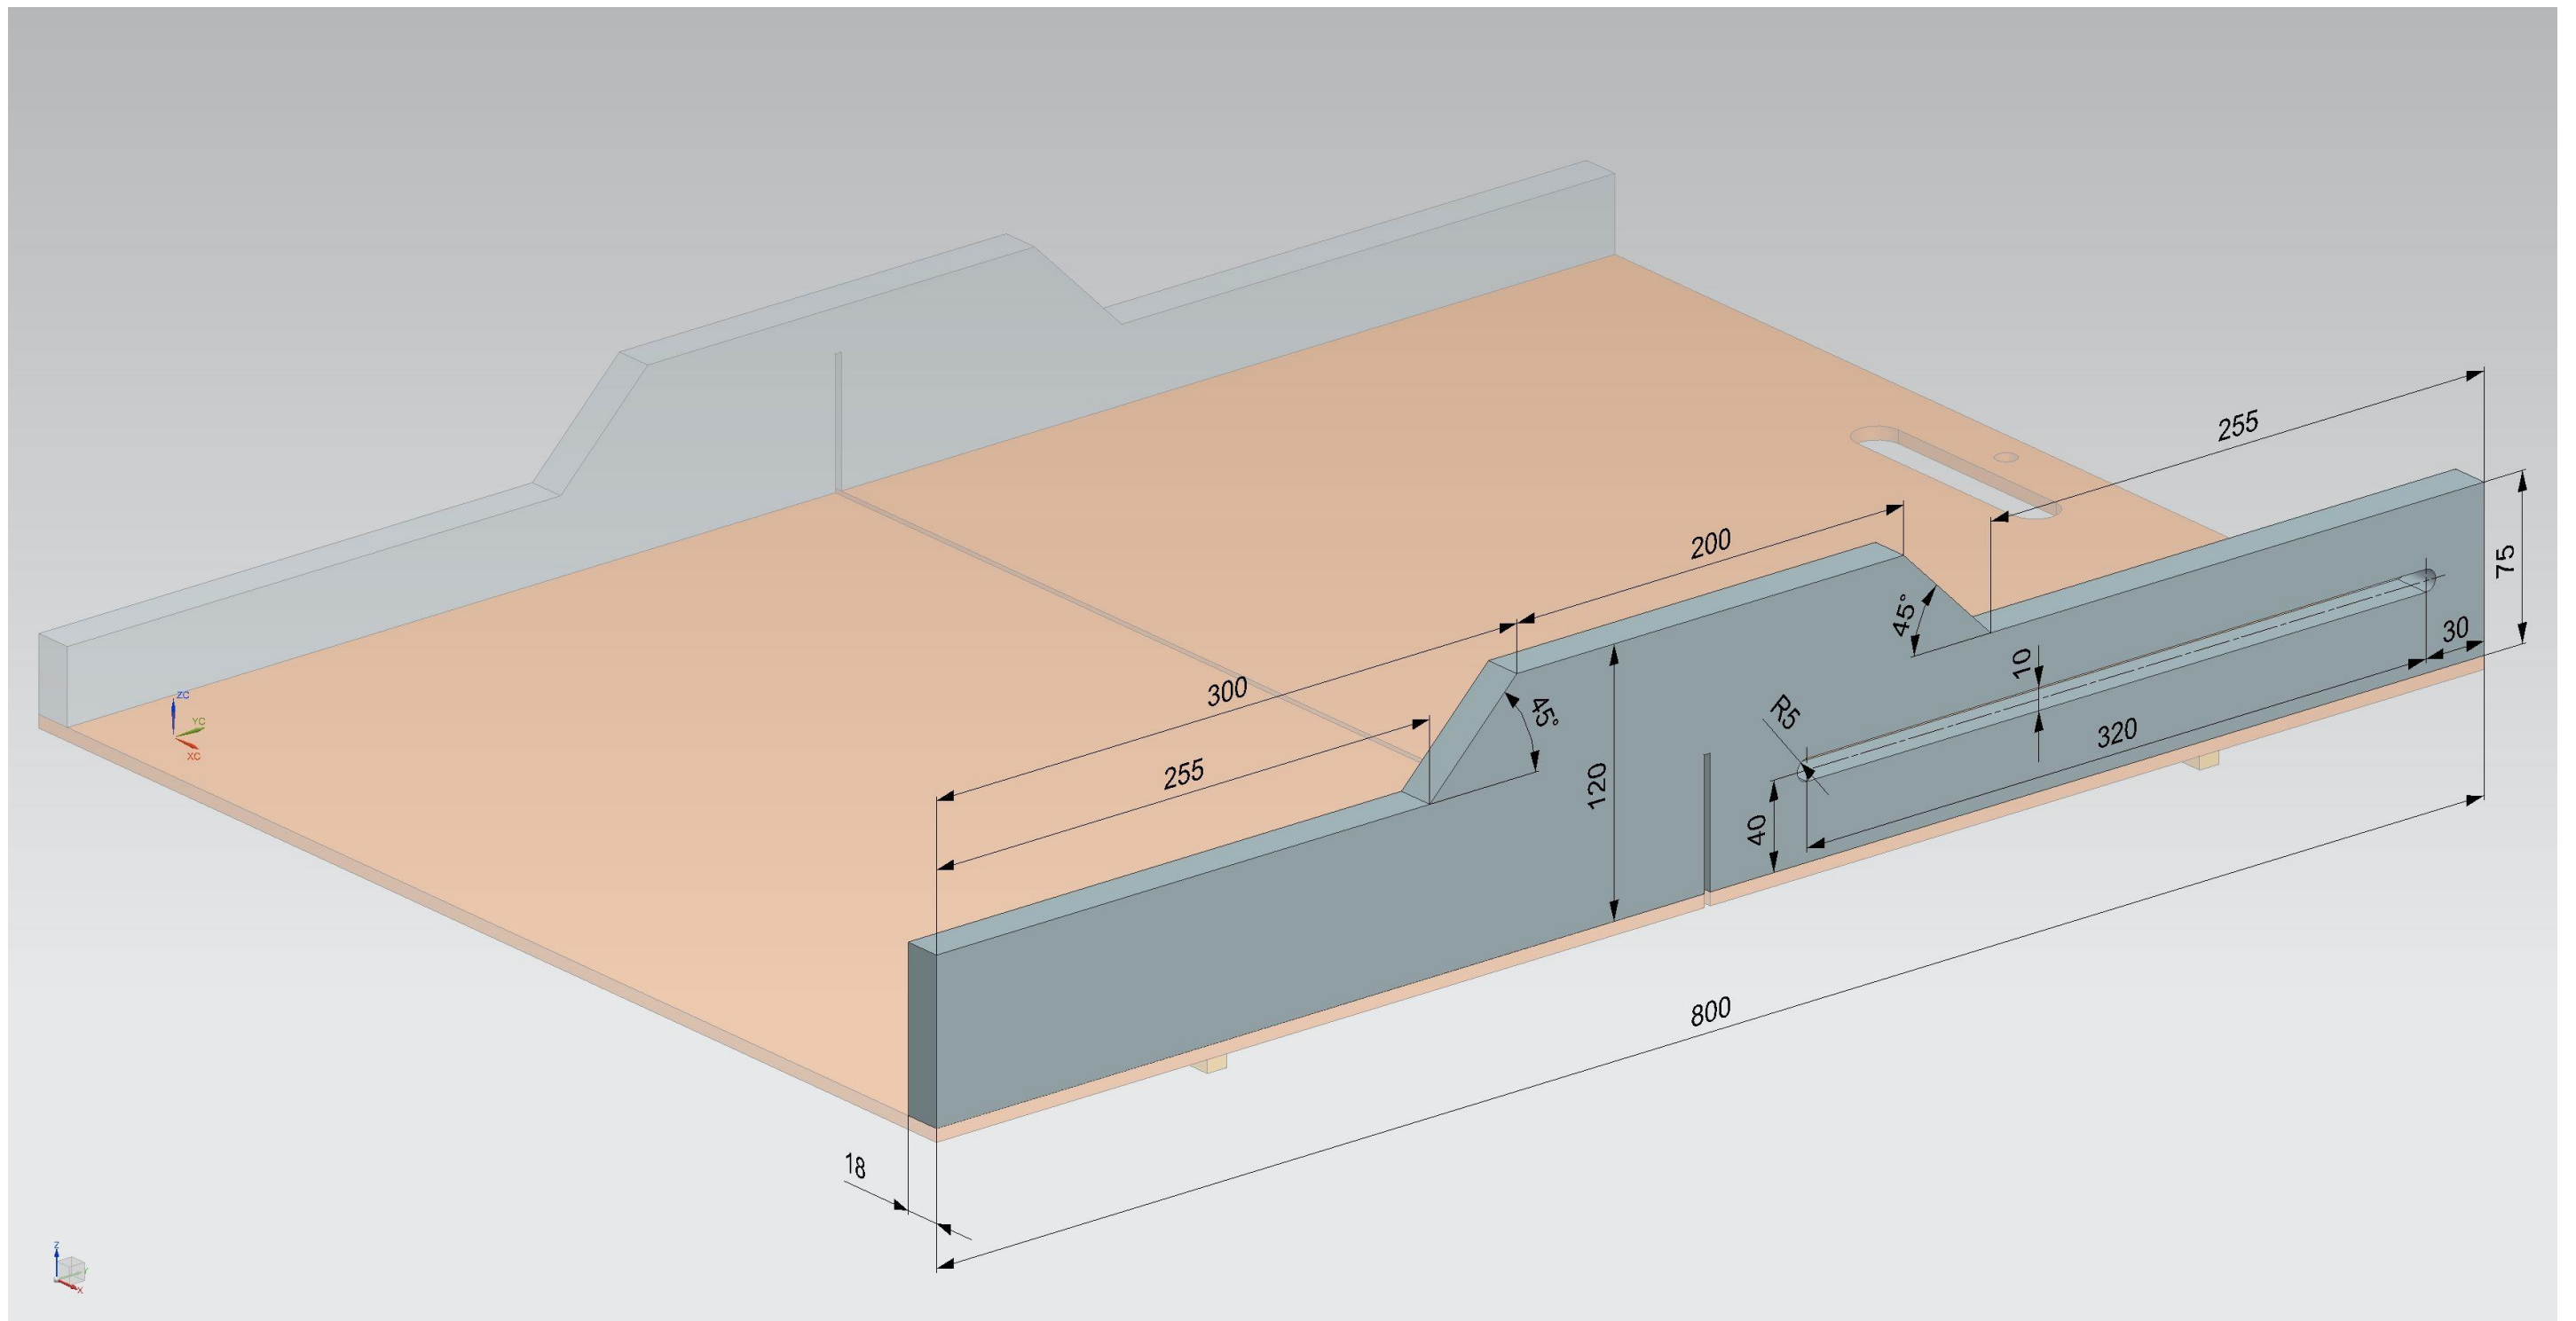


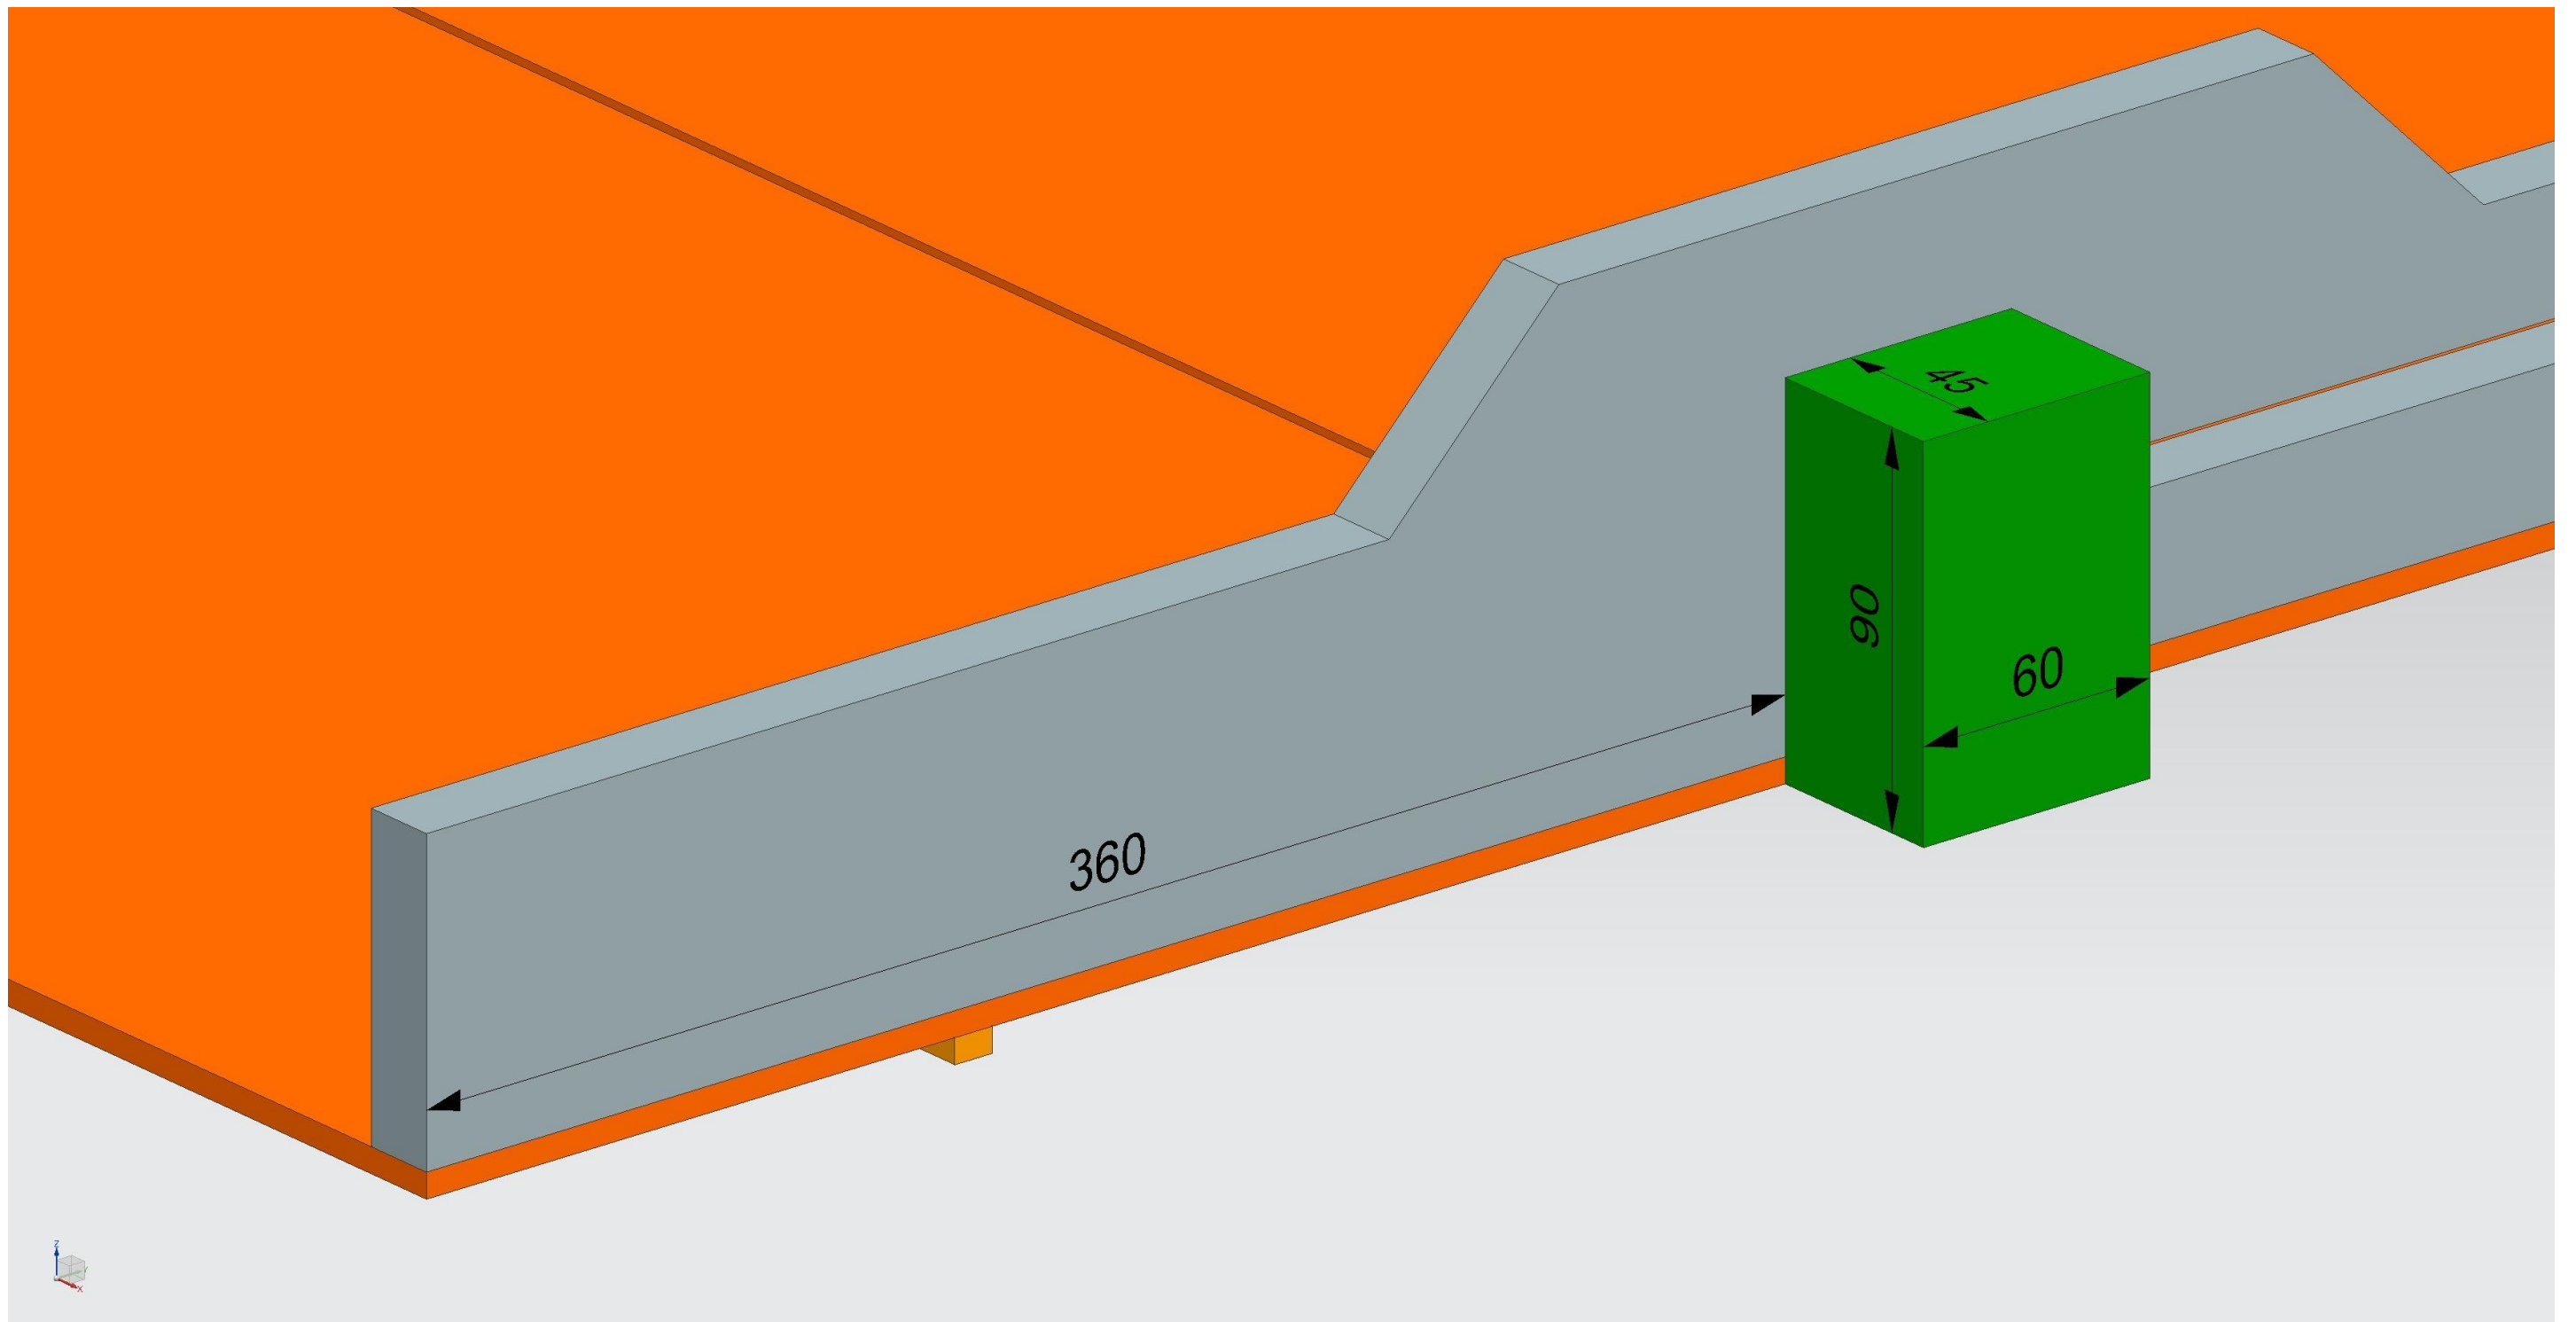


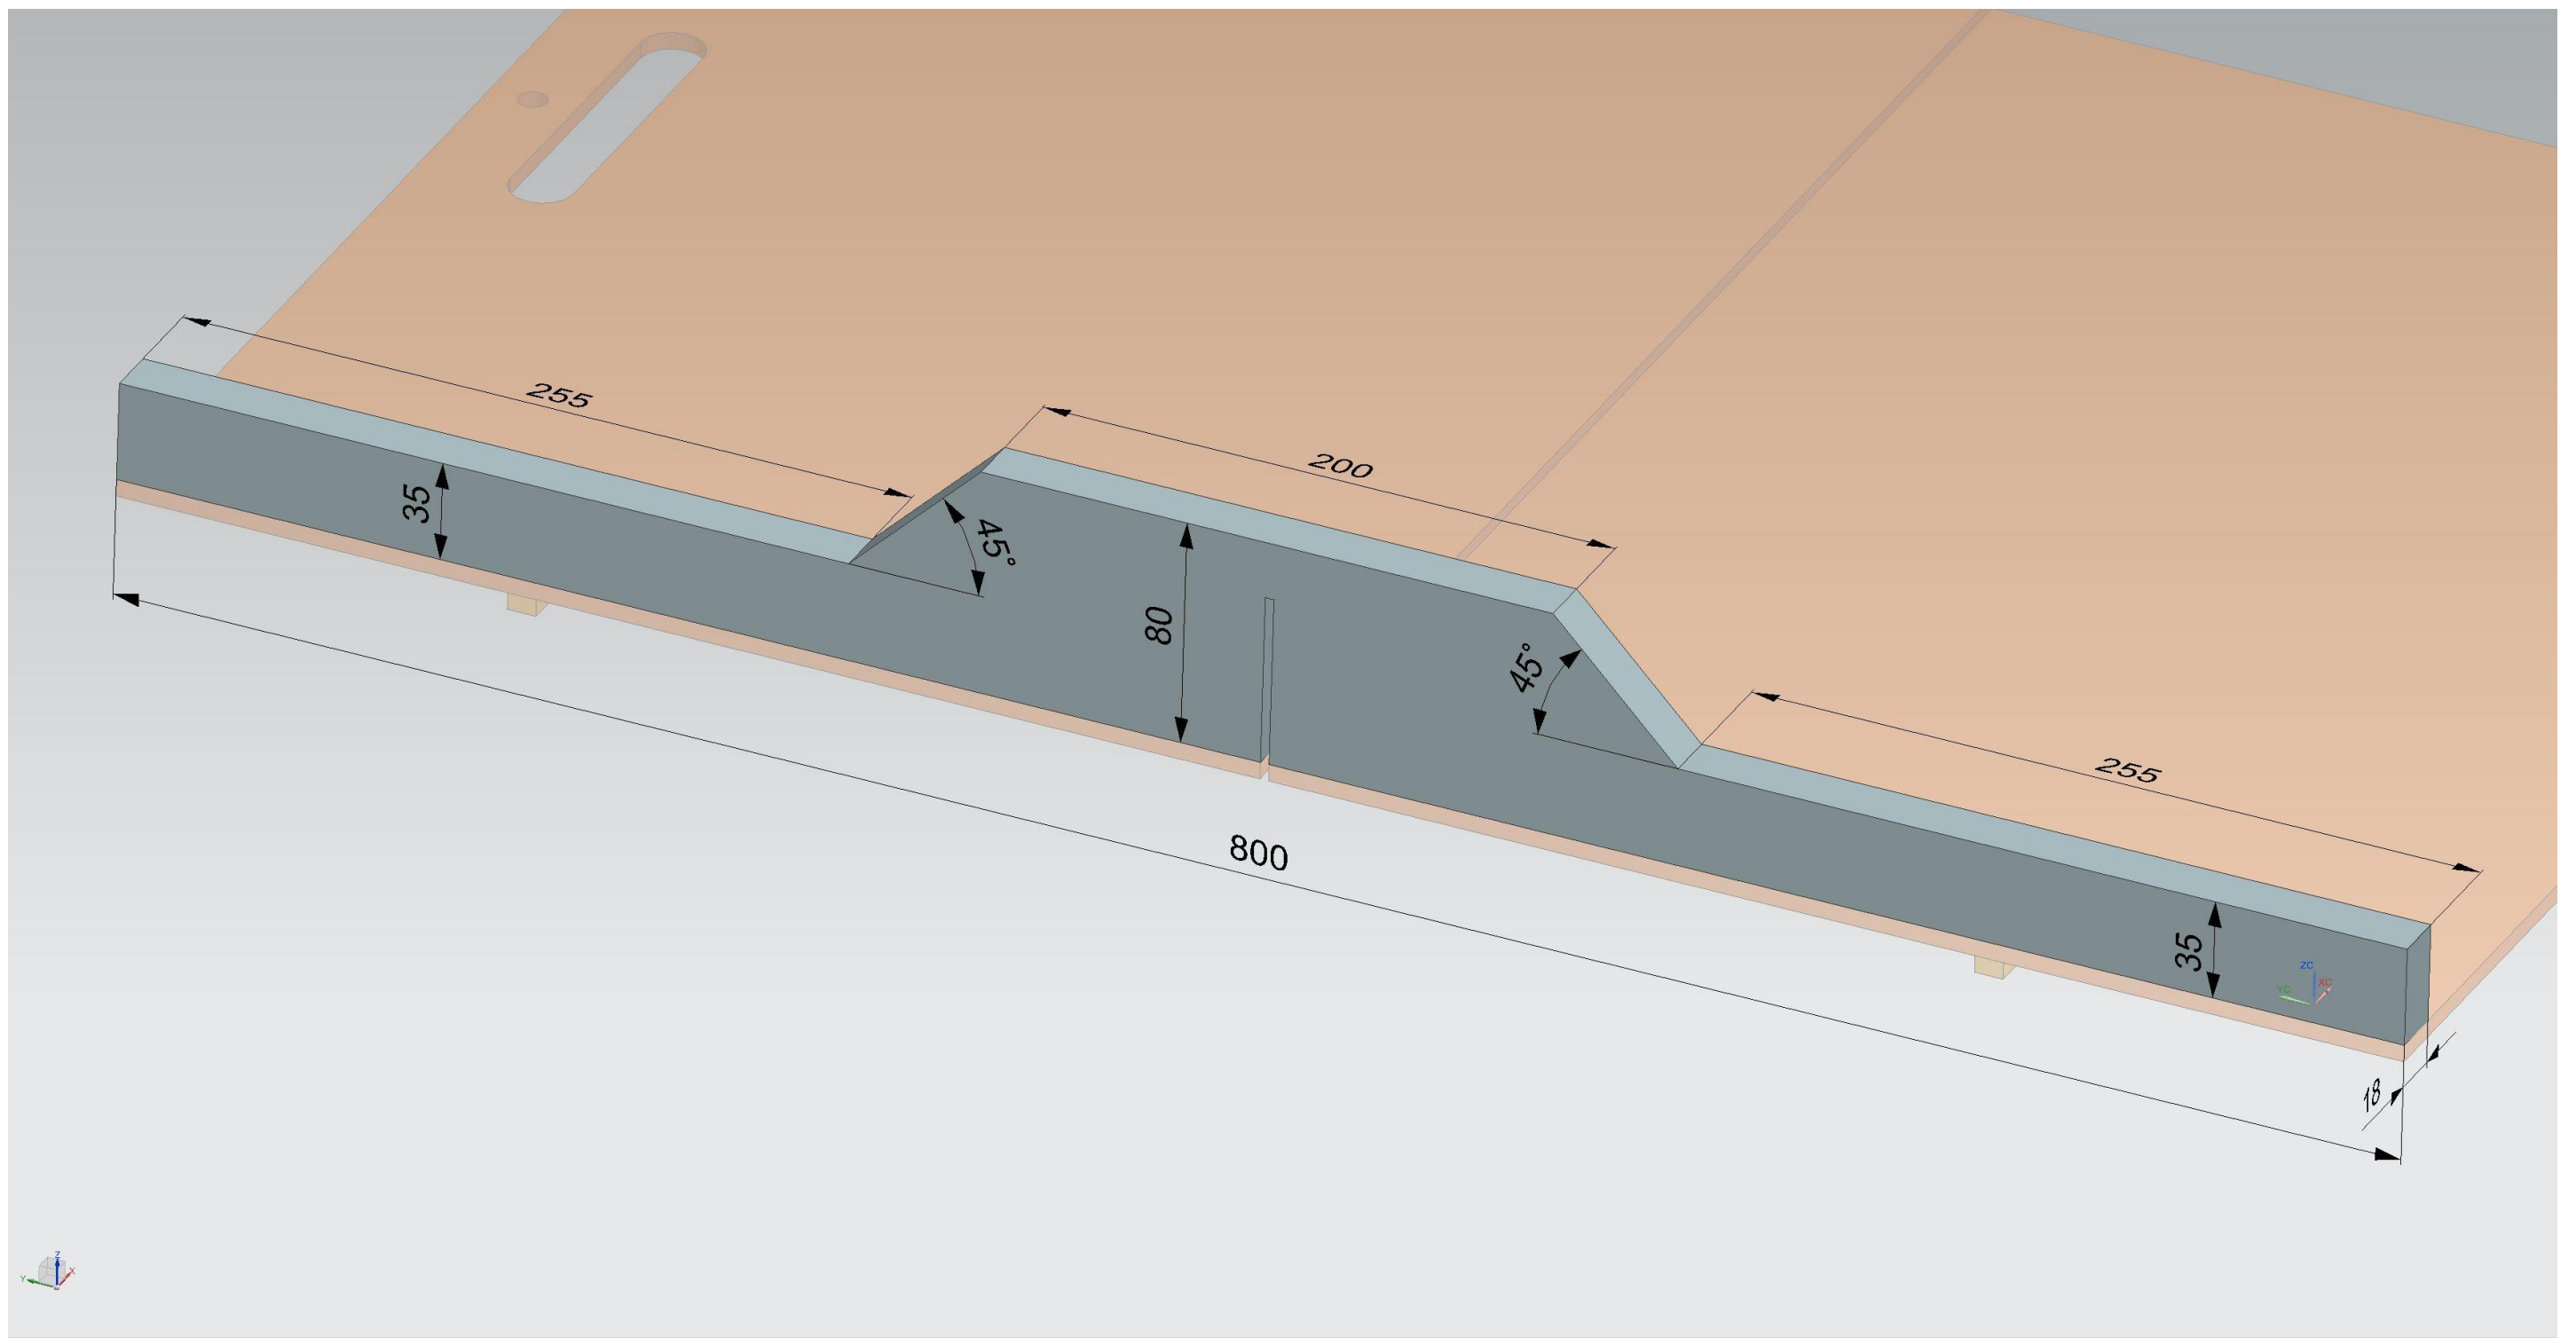

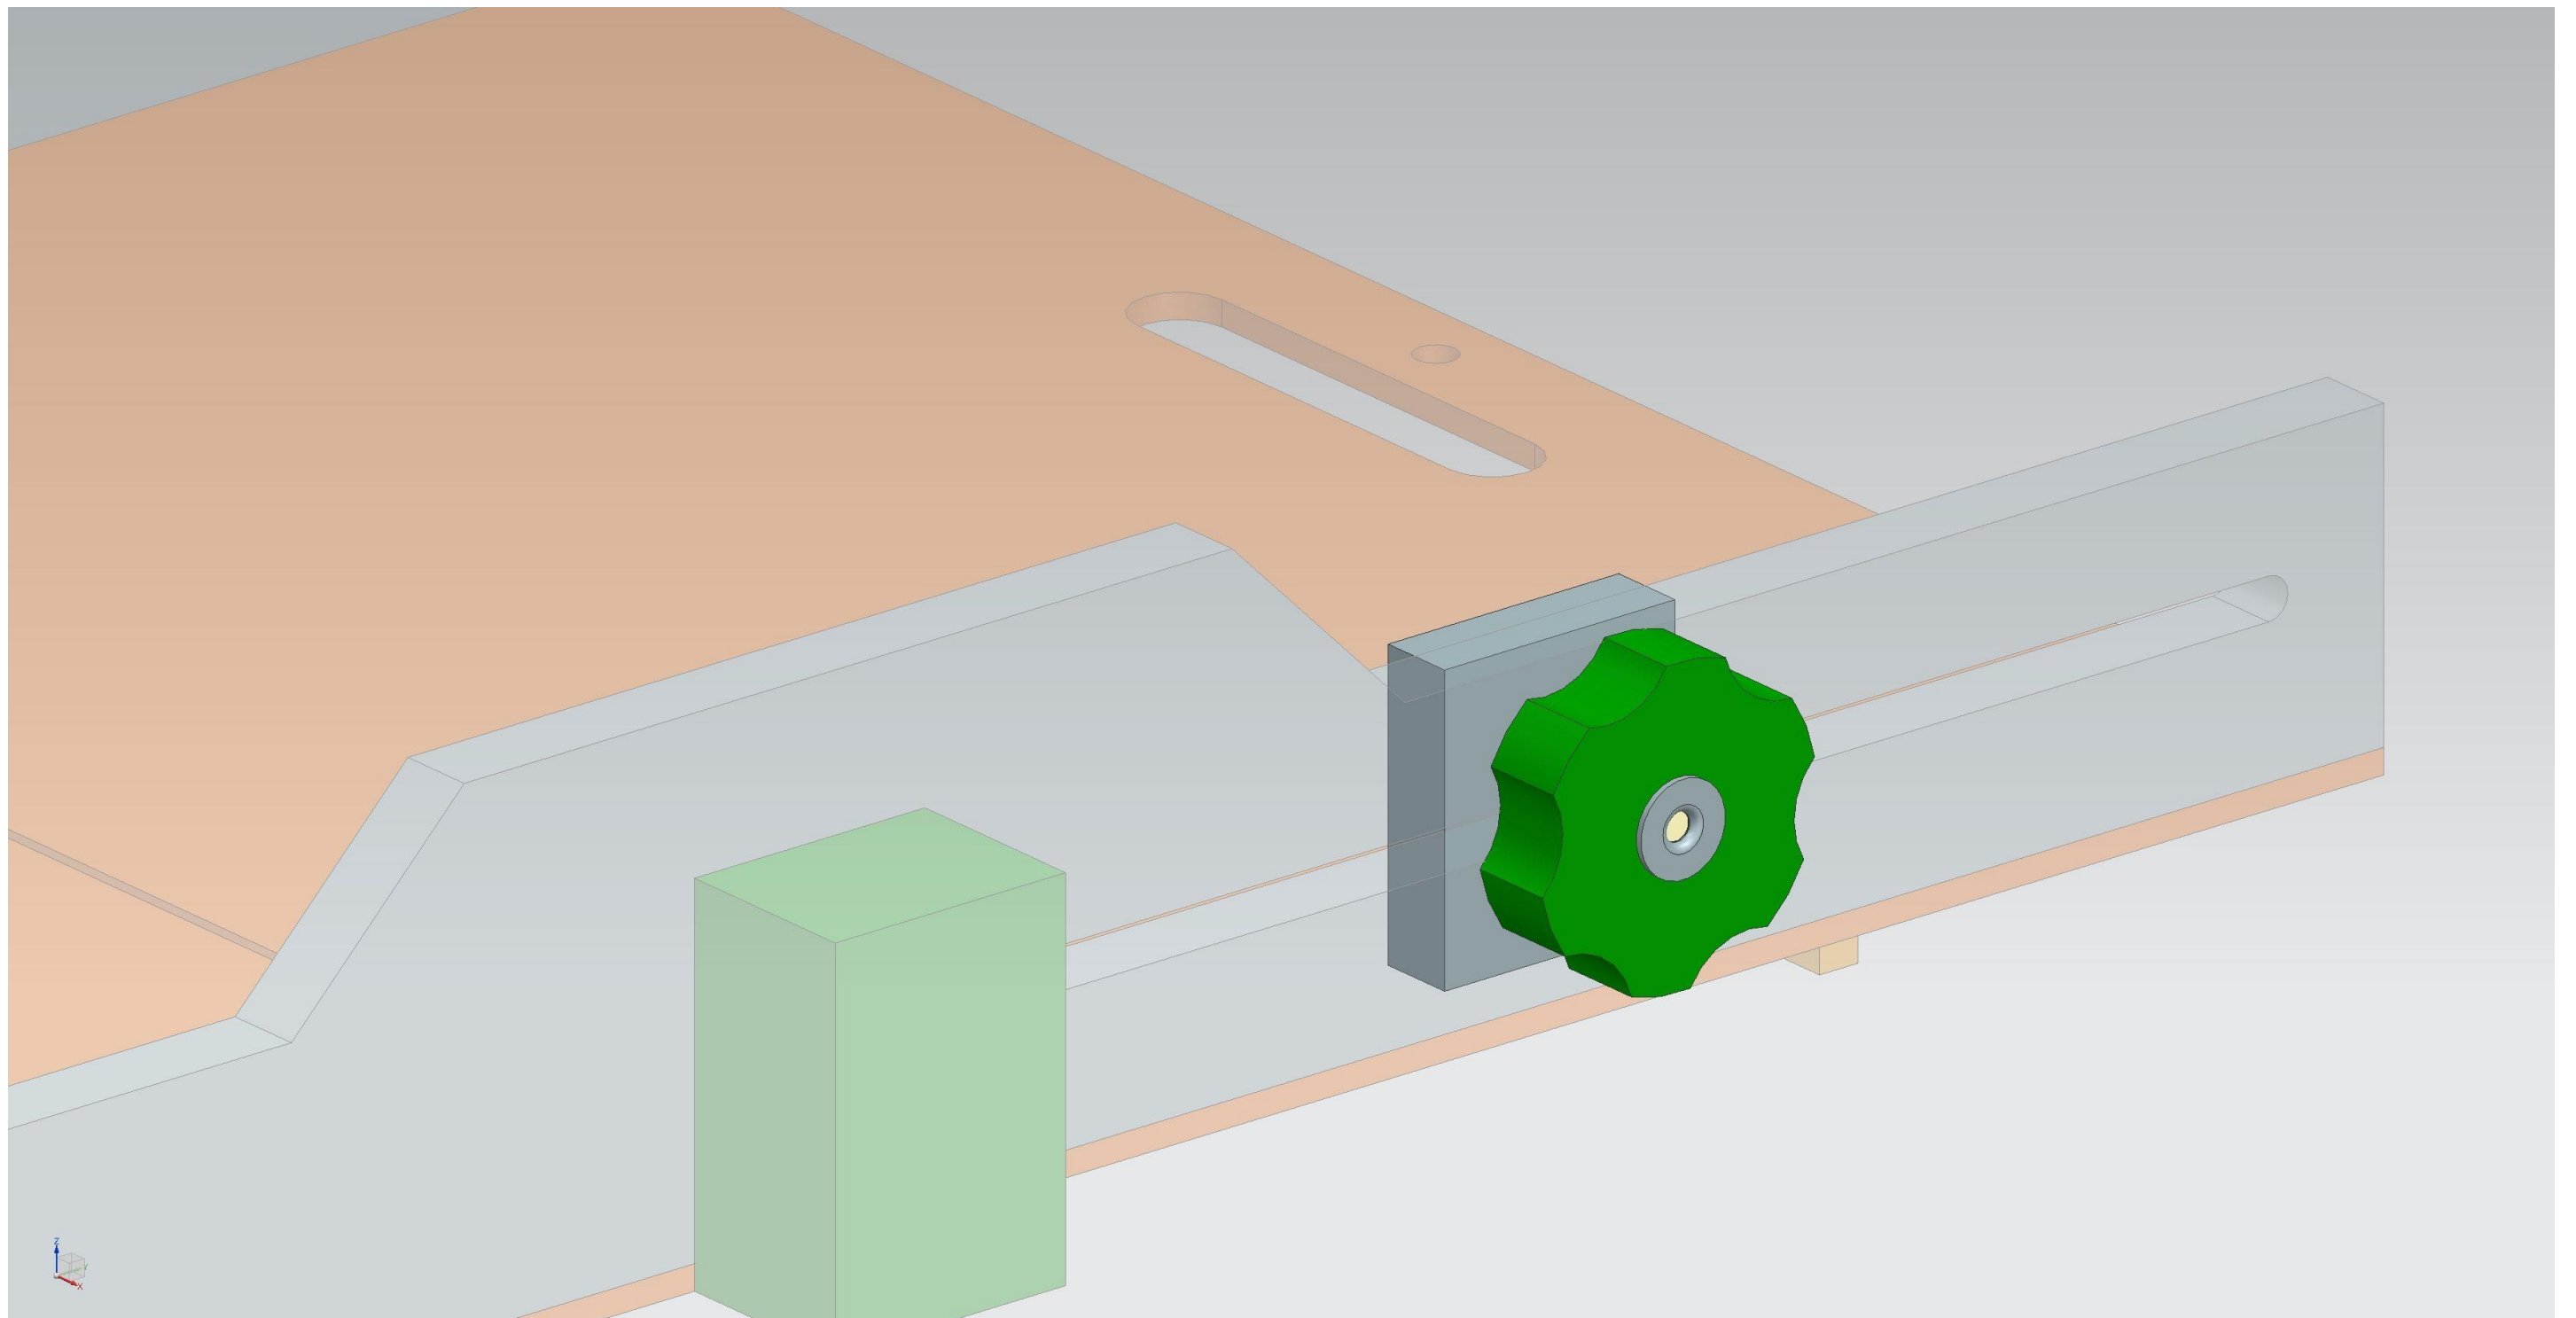

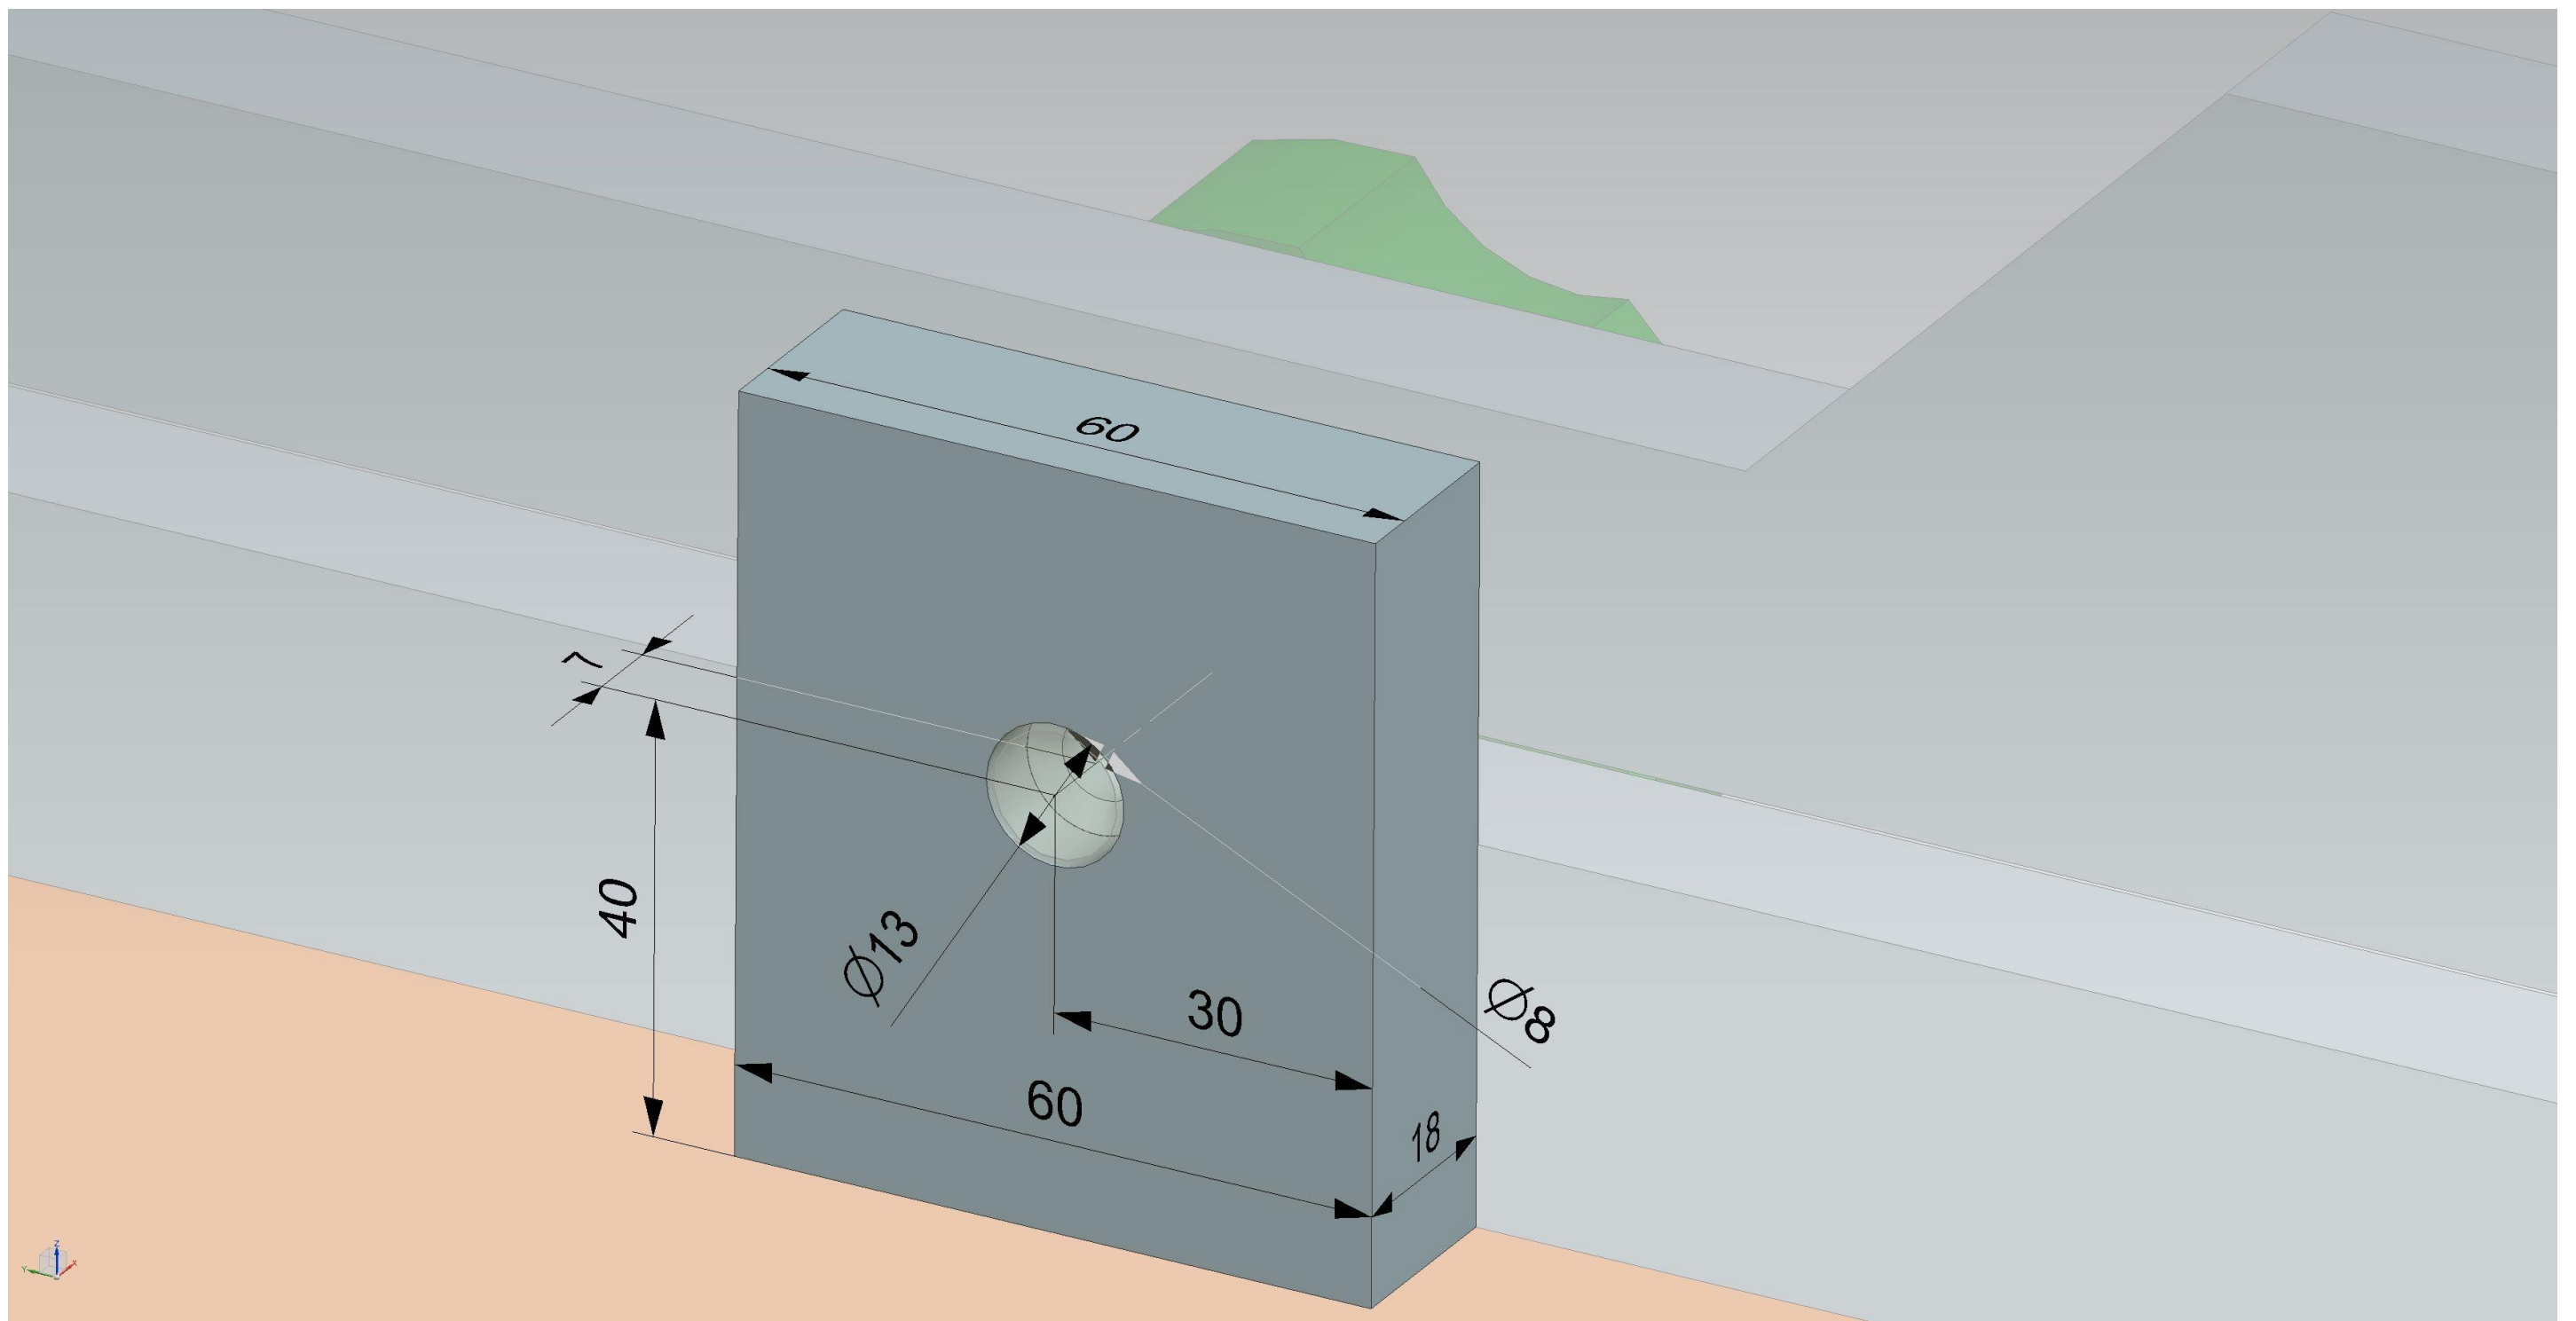

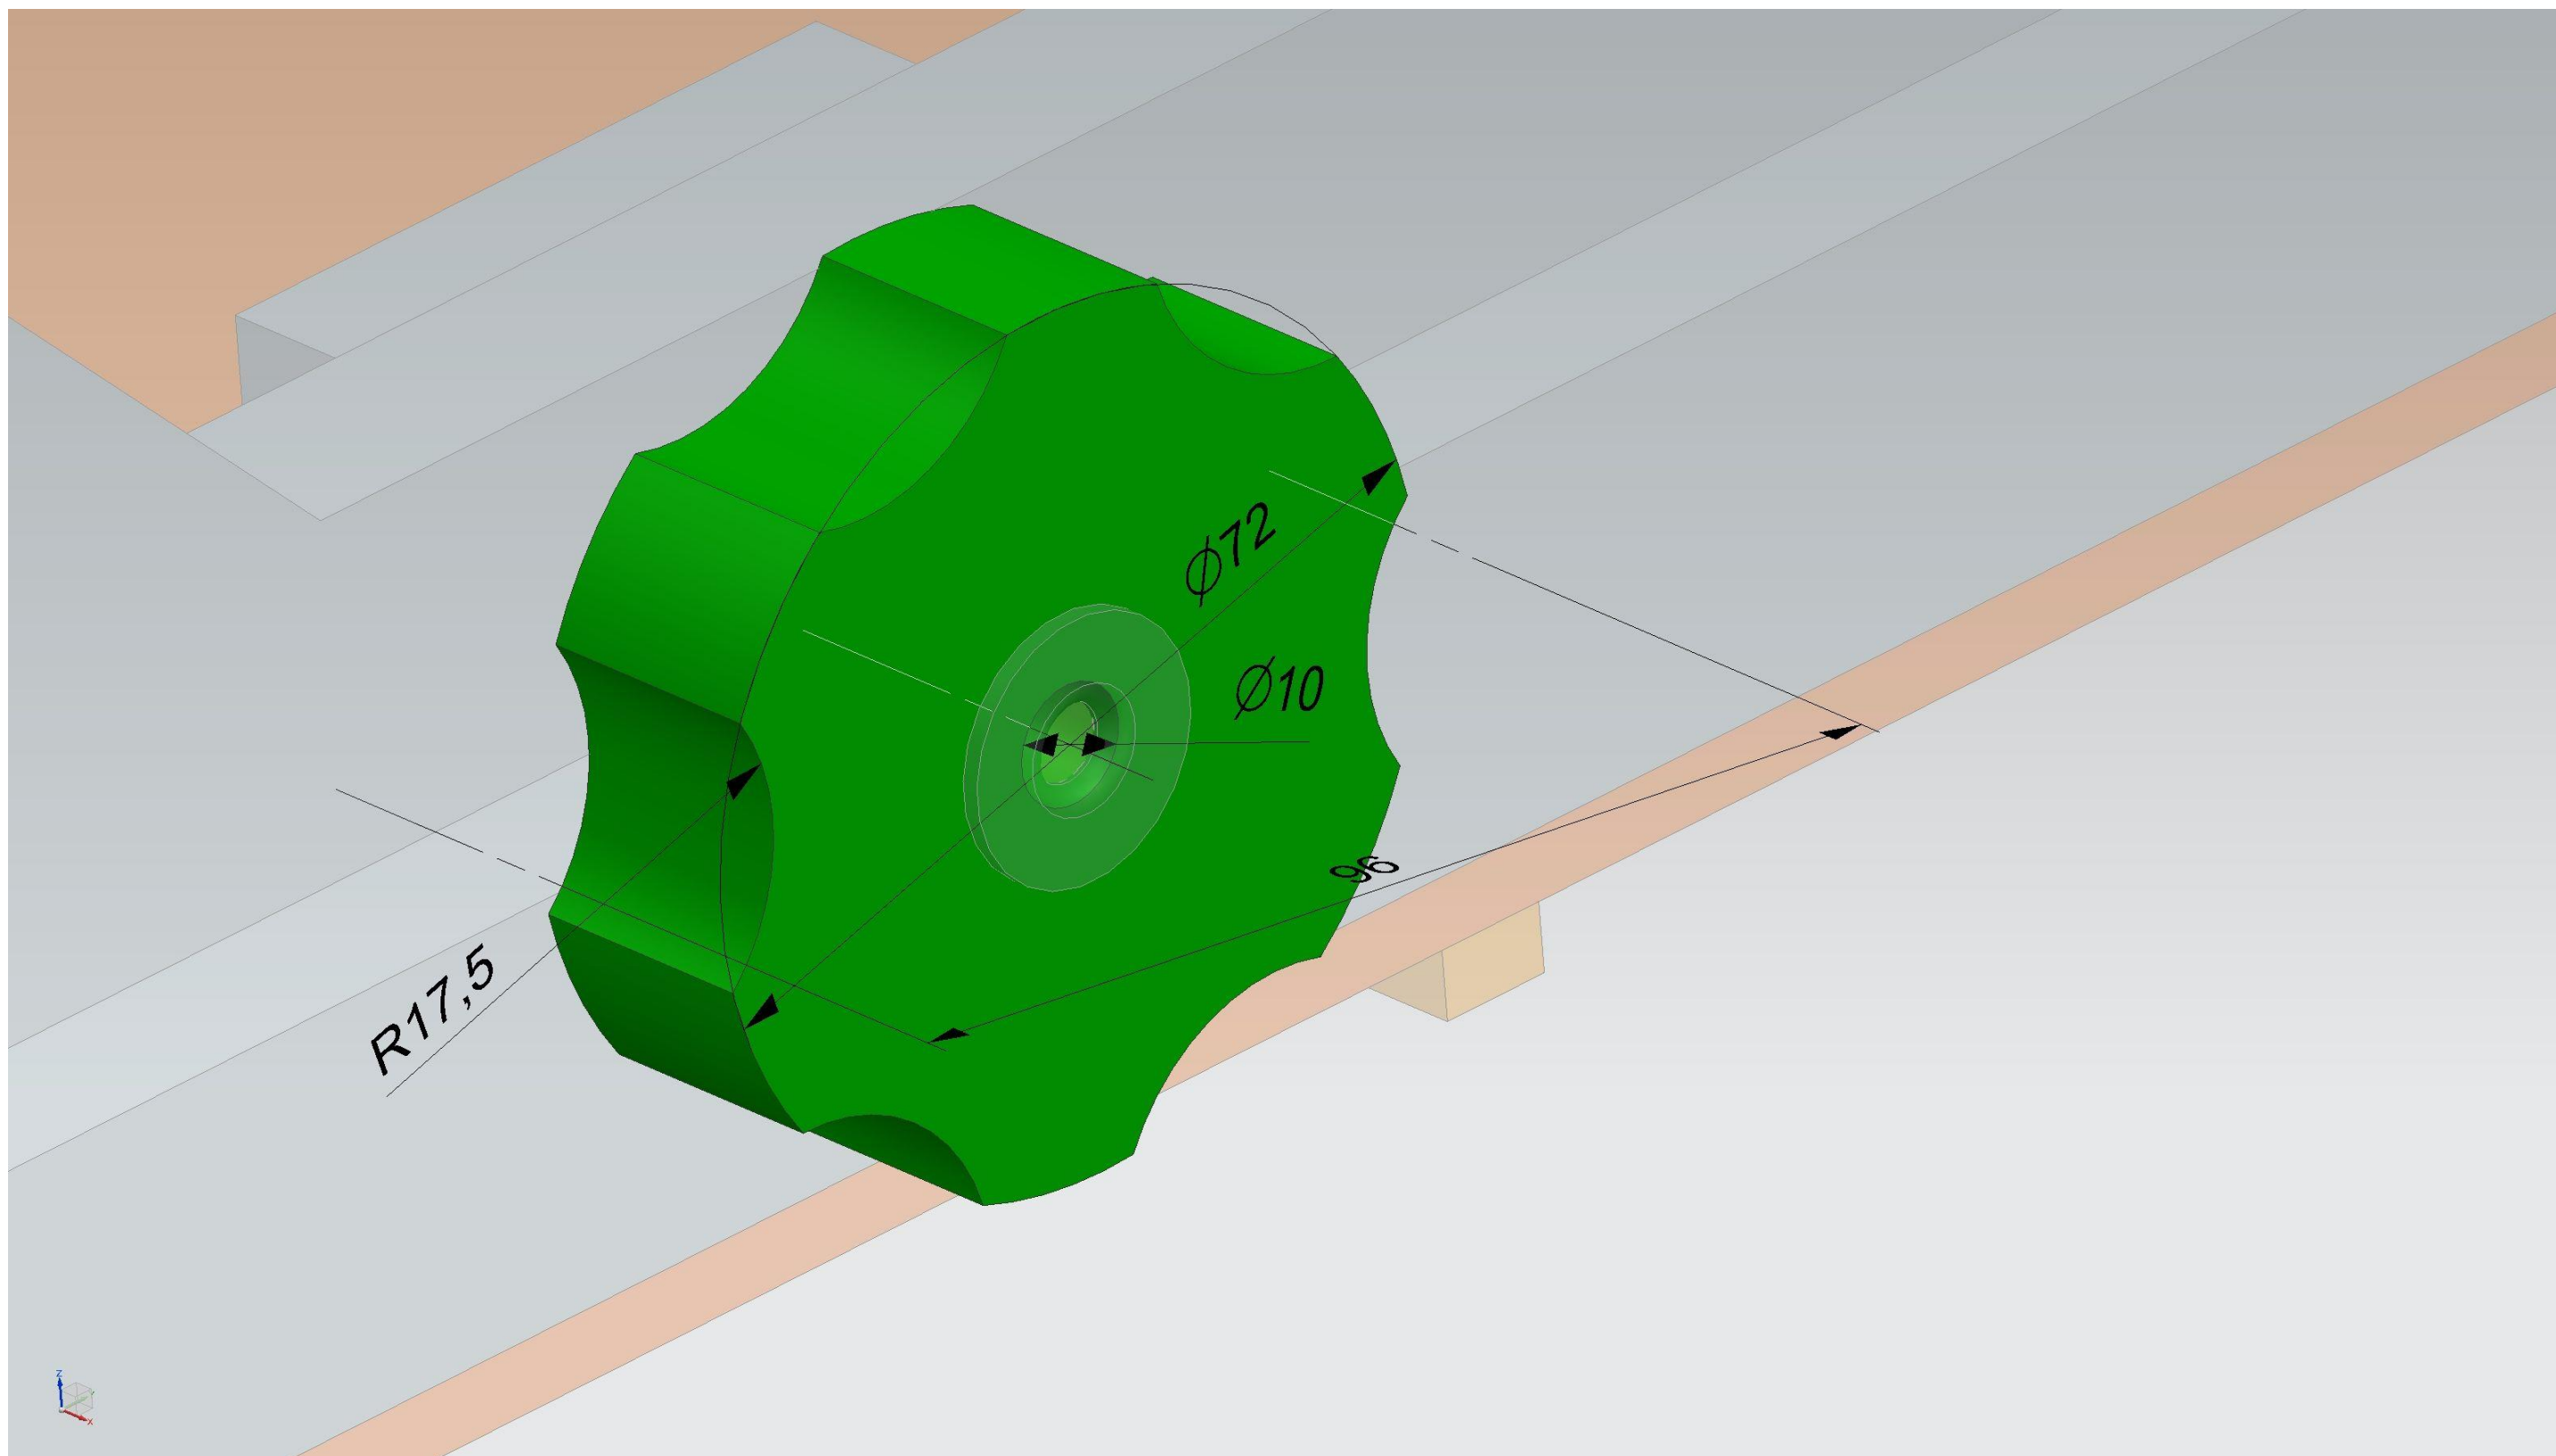

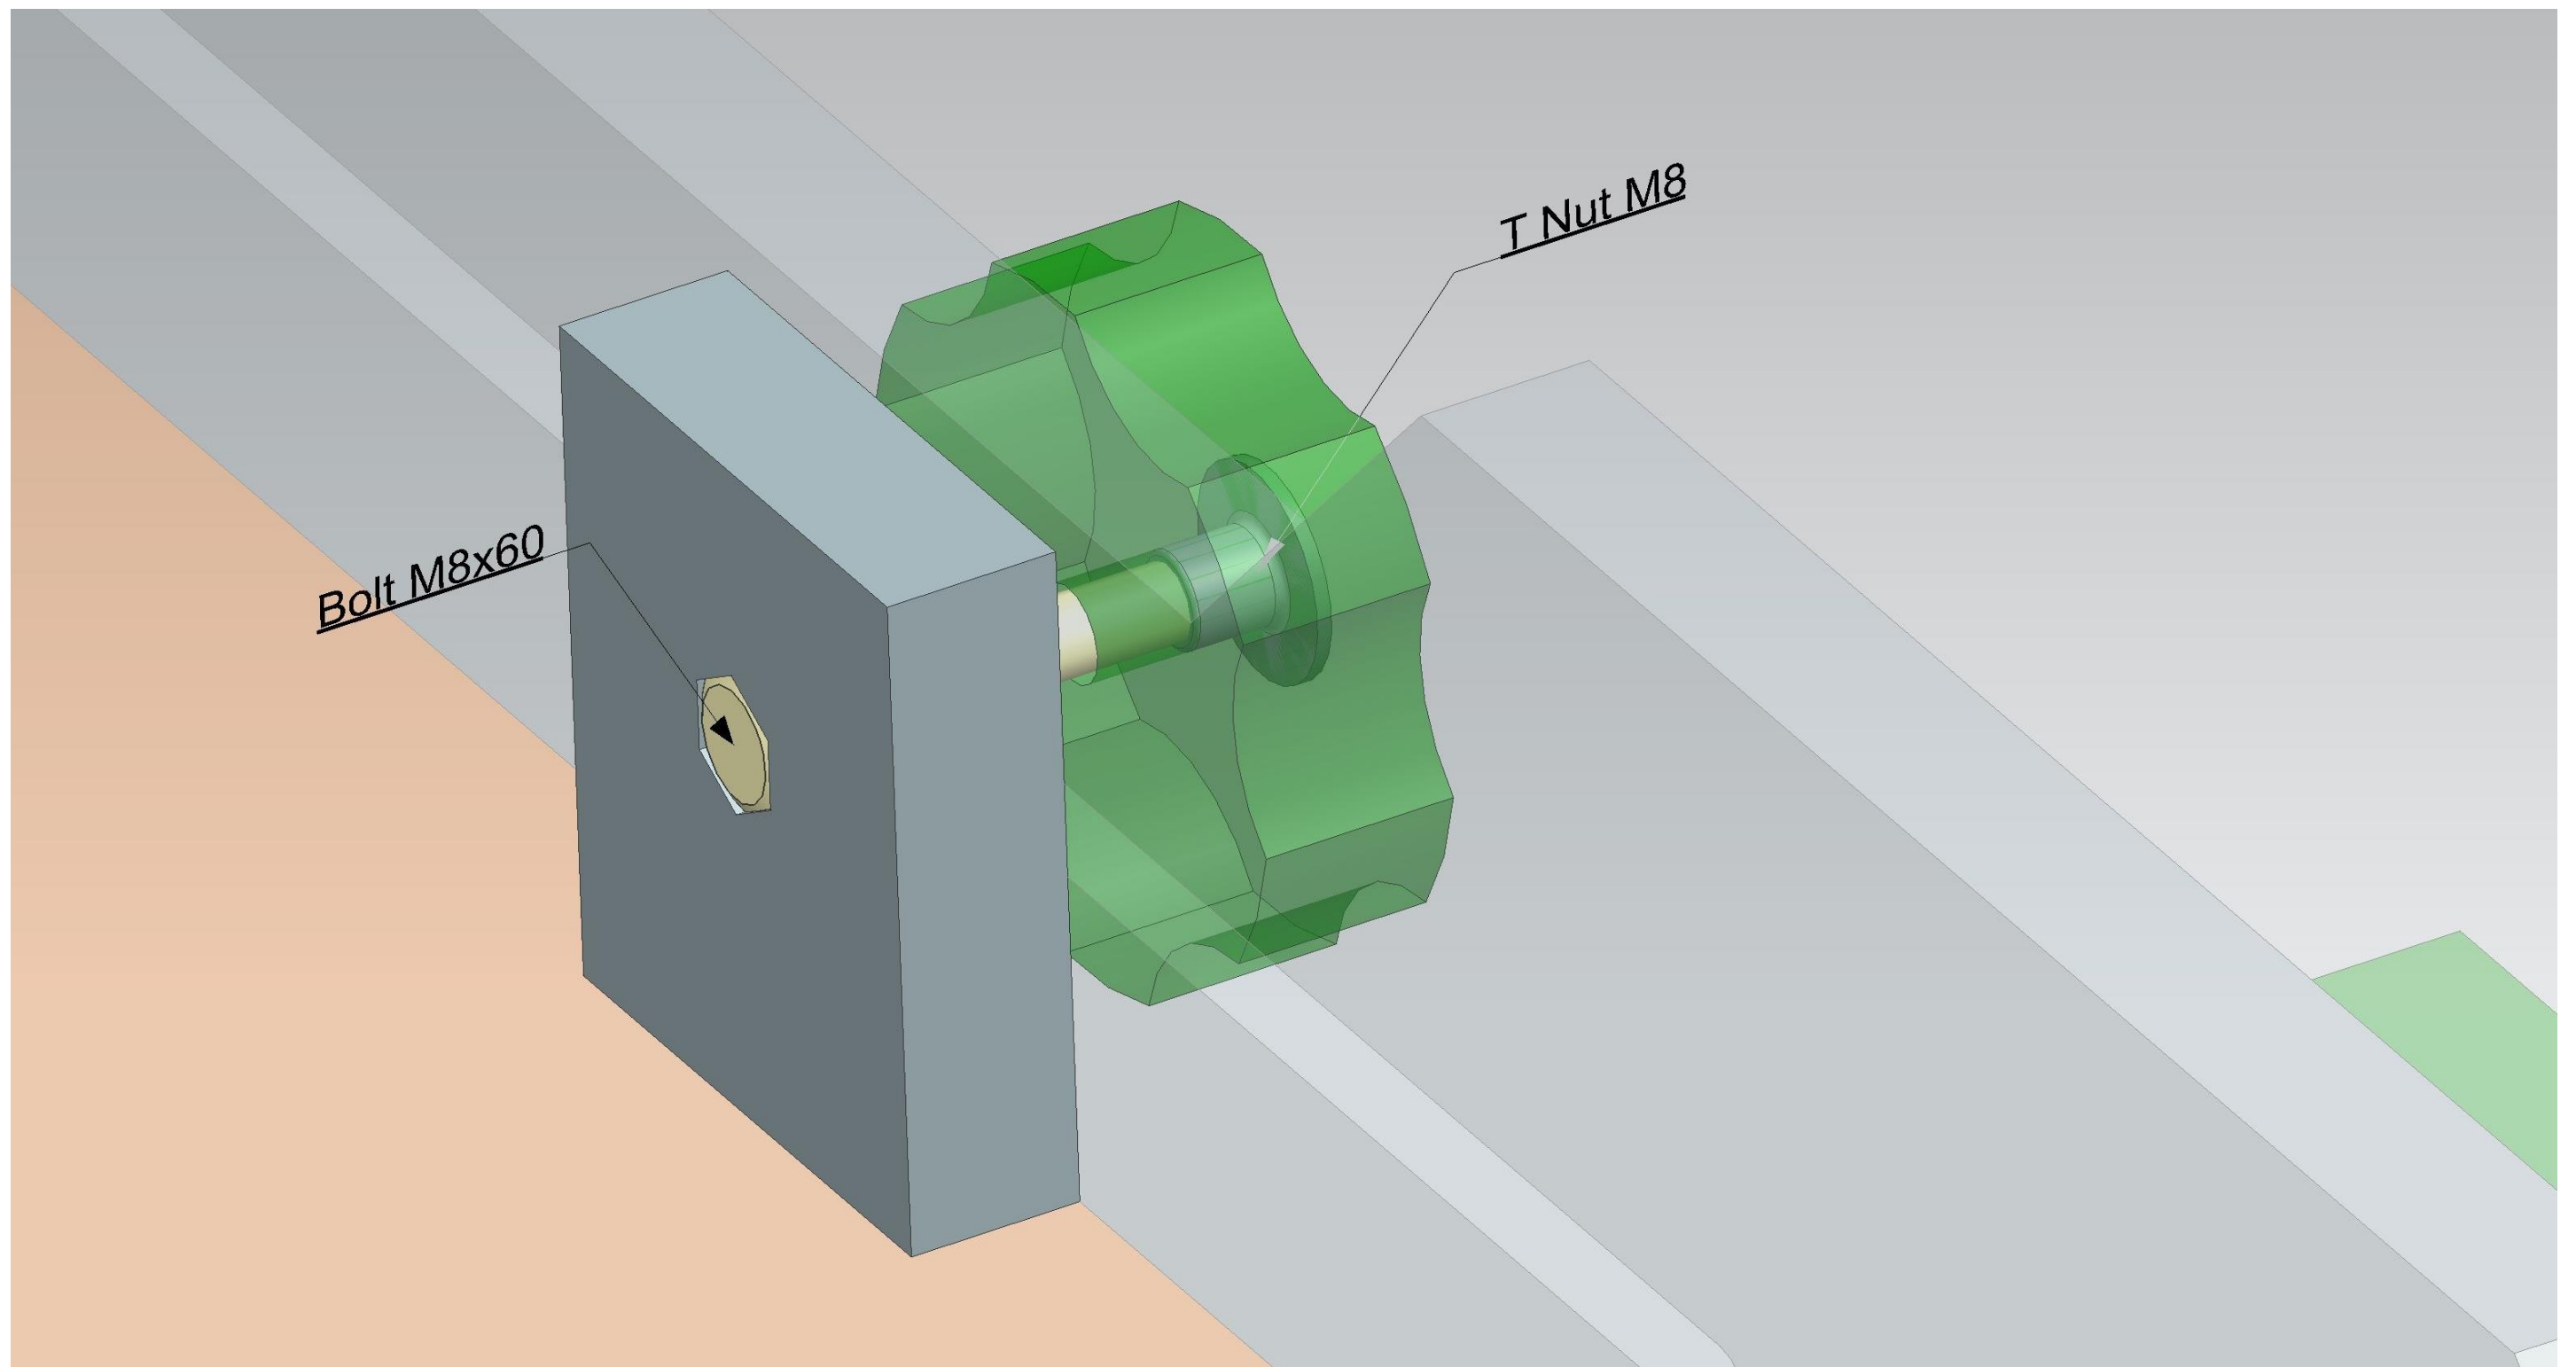

Fasteners:

- [Bolt M8 x 60](#)
- [T-nut M8](#)

All dimensions are in millimeters (mm)