




Homemade Belt Grinder Free PLANS

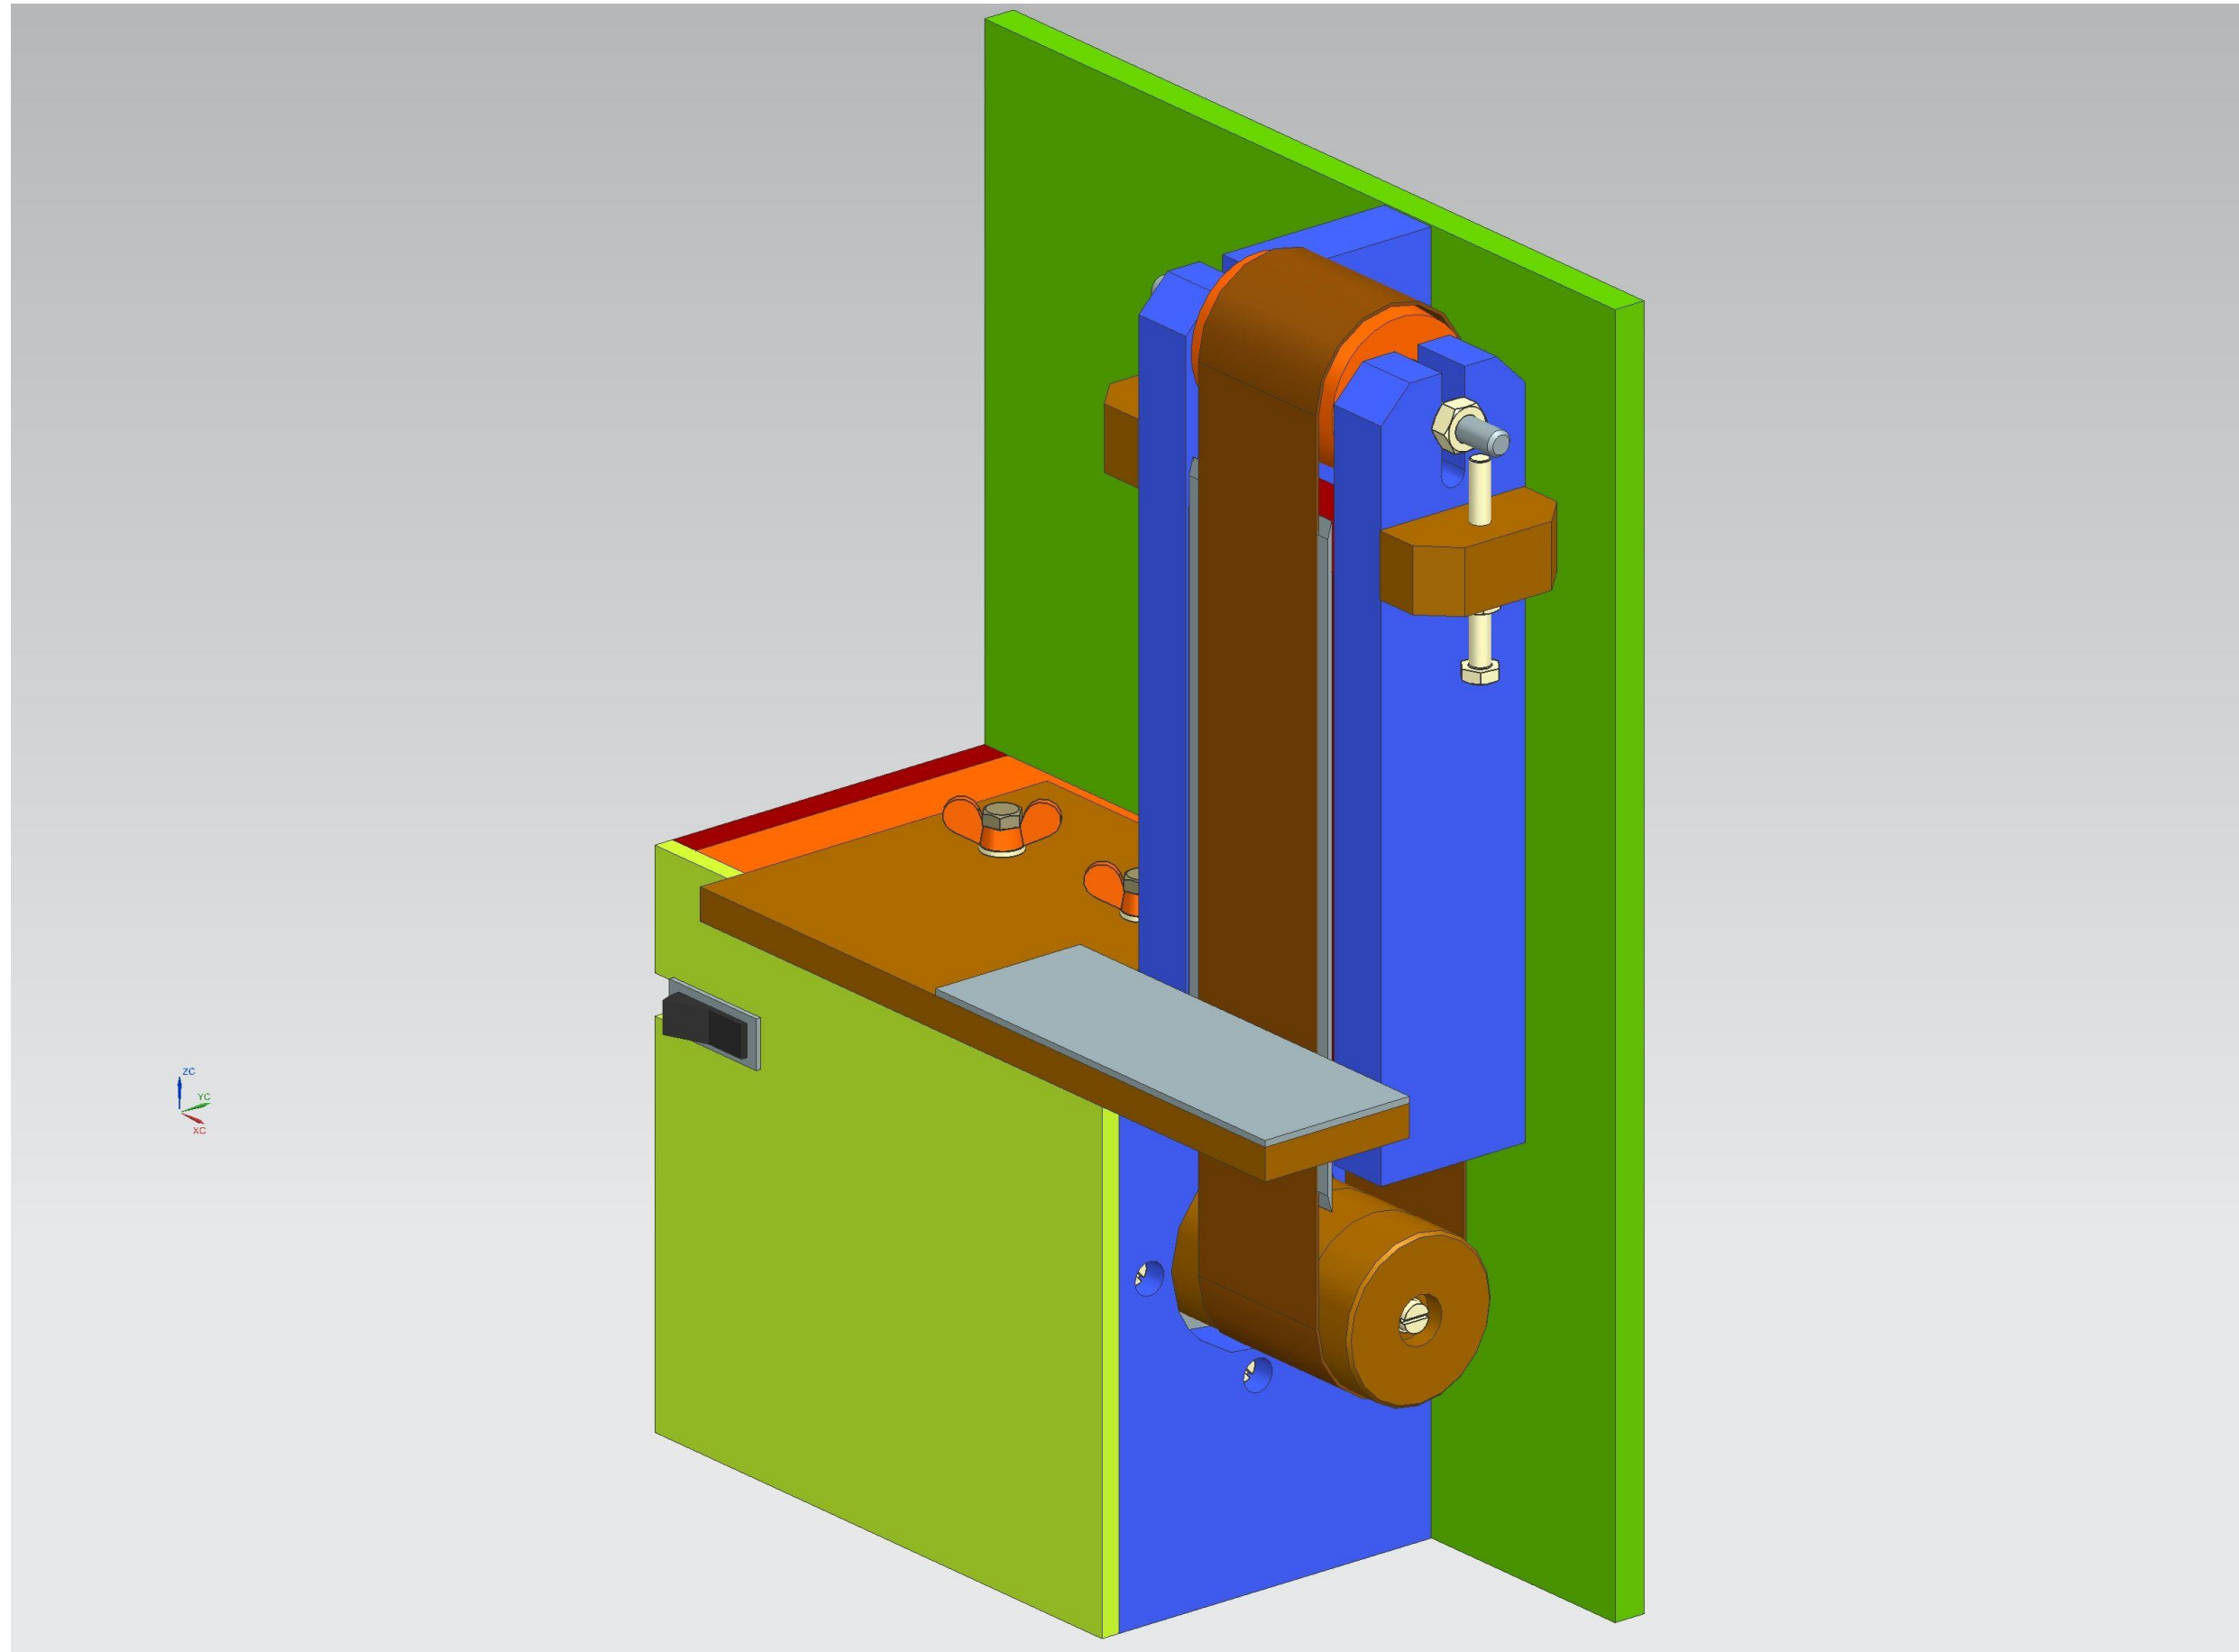


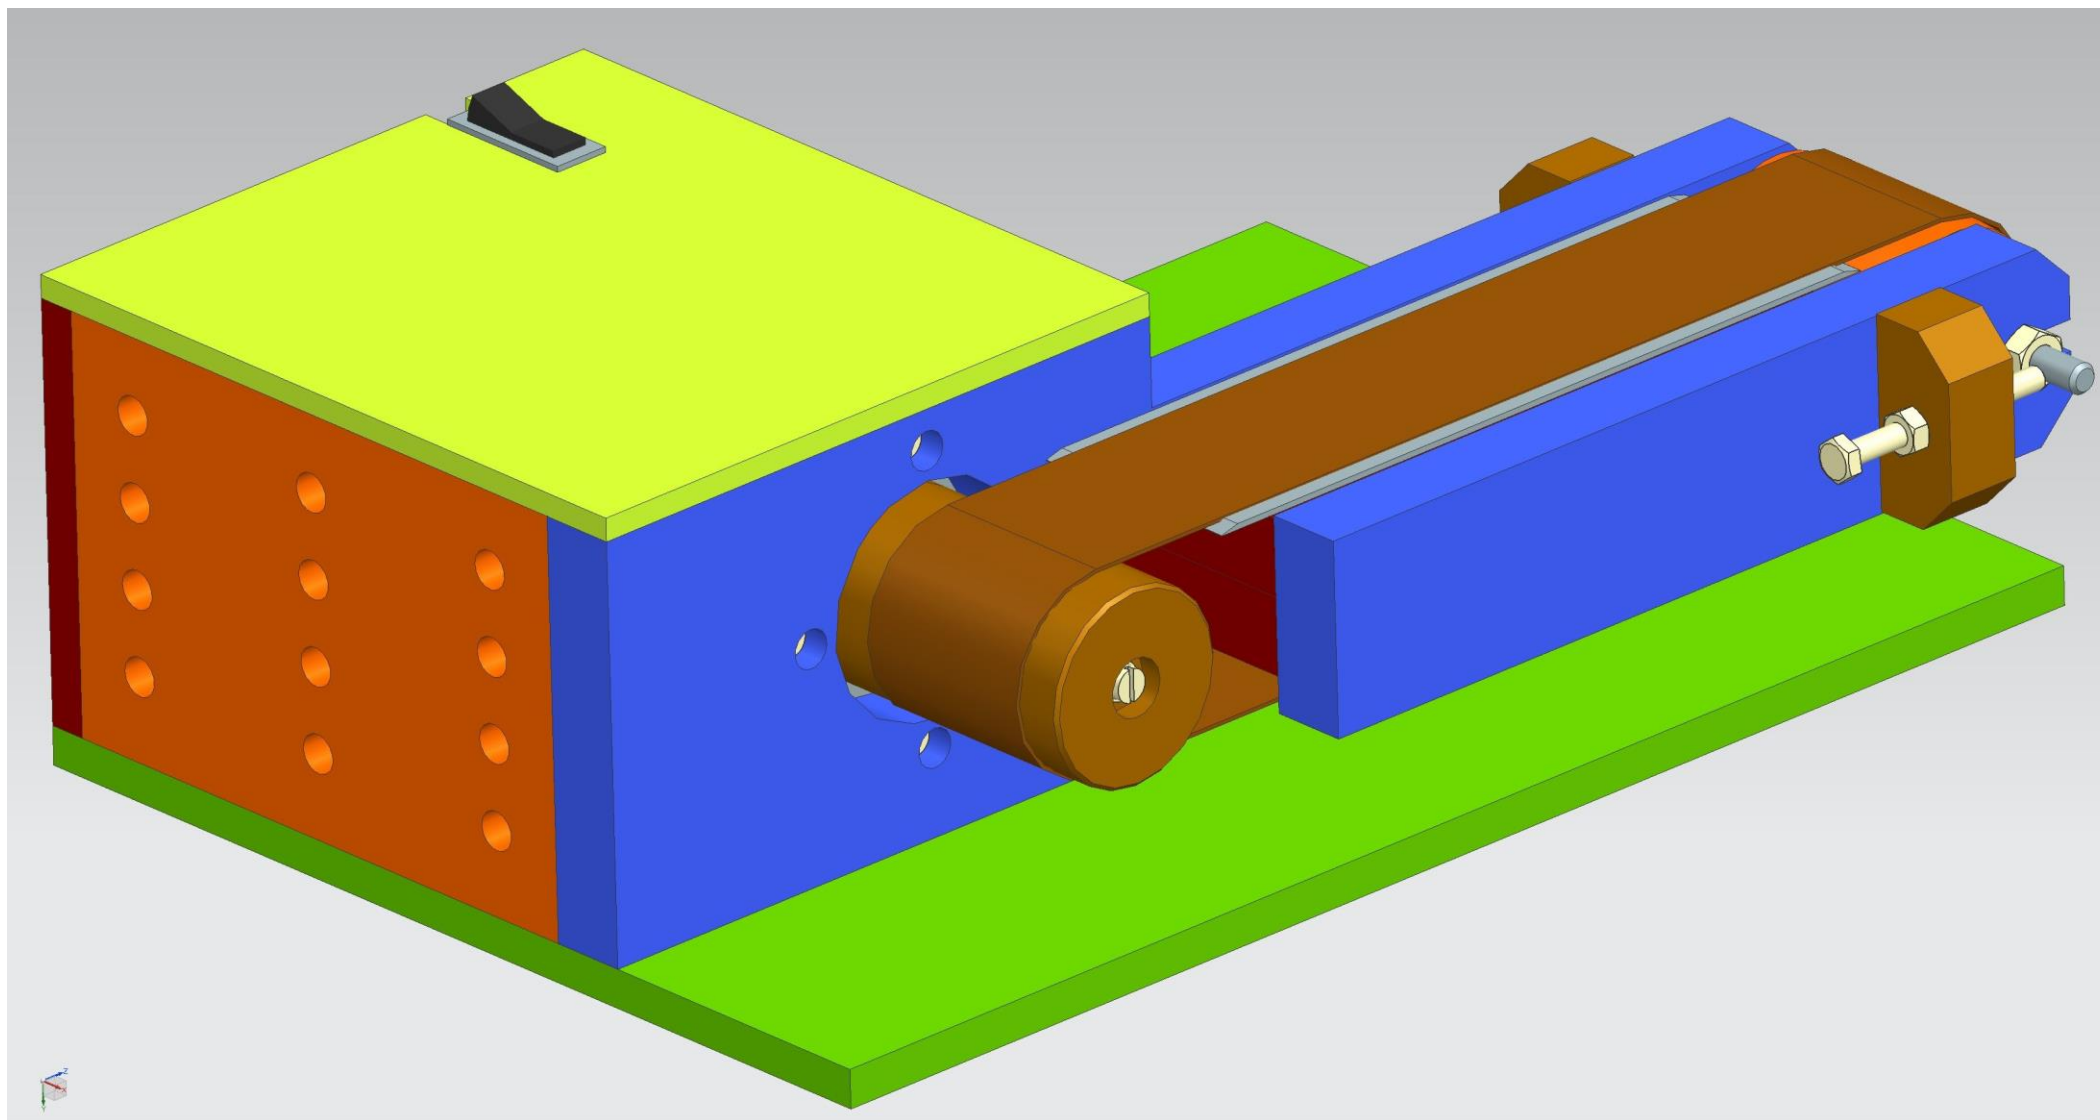



Materials:


1. [Bearing 608 ZZ](#) x 2
2. [Bolt M6x20](#) x 2
3. [Bolt M6x60](#) x 2
4. [Coupling nut](#) x 2
5. [Flat washer 5](#) x 1
6. [Flat washer 6](#) x 2
7. [Flat washer 8](#) x 2
8. [Nut M6](#) x 2
9. Cheese head screw M5x60 x 1
10. Cheese head screw M6x14 x 8
11. [Threaded Insert M6](#) x 4
12. [Threaded rod M8](#), length=150 mm
13. [Wing nut M6](#) x 2
14. [Wood Screws 3.5x16](#)
15. [Wood Screws 3.5x32](#)
16. [Wood Screws 3.5x38](#)
17. [Galvanized Steel Sheet](#)
18. [Plywood 6 mm](#)
19. Plywood 10 mm
20. Plywood 20 mm
21. Sander belt 50x686
22. Steel angle

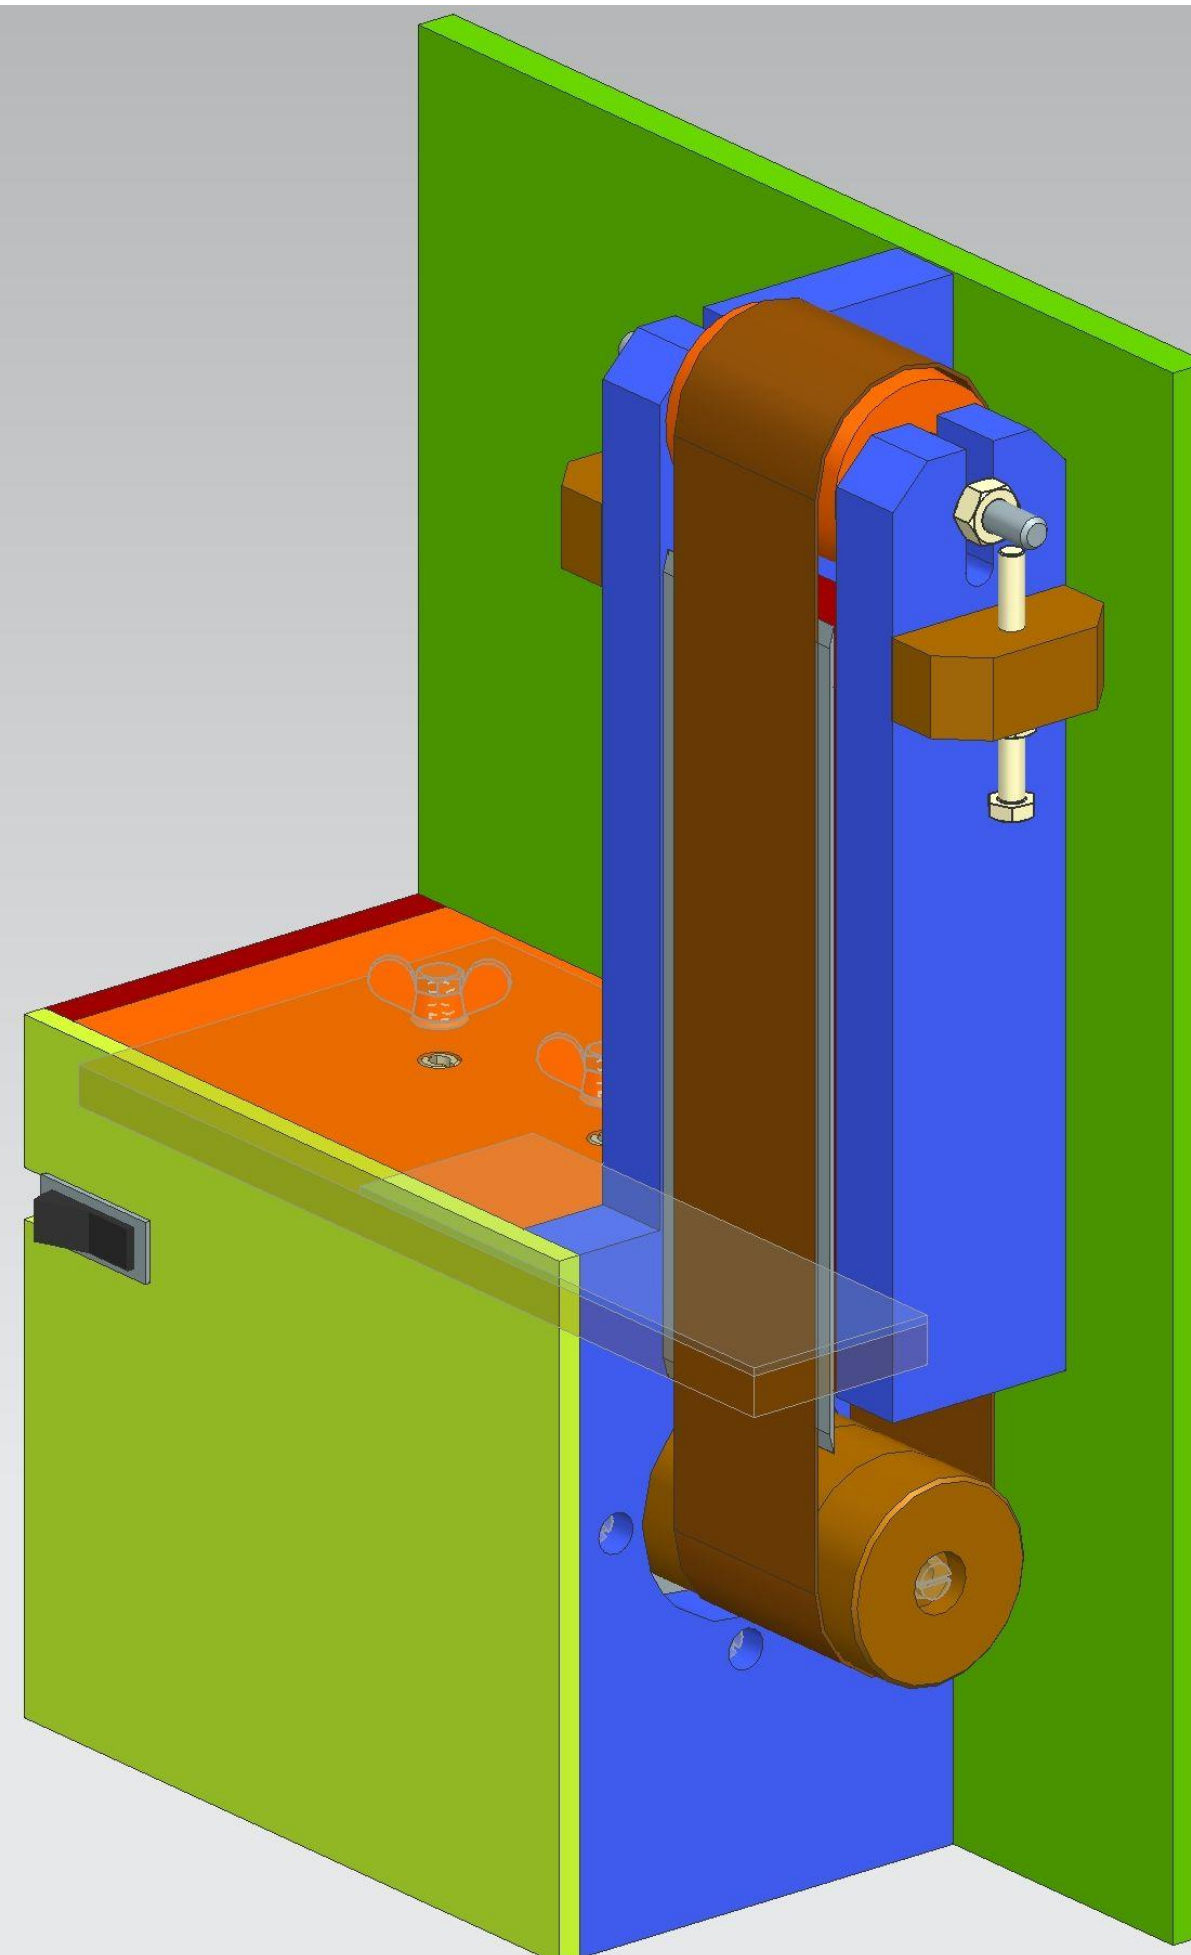


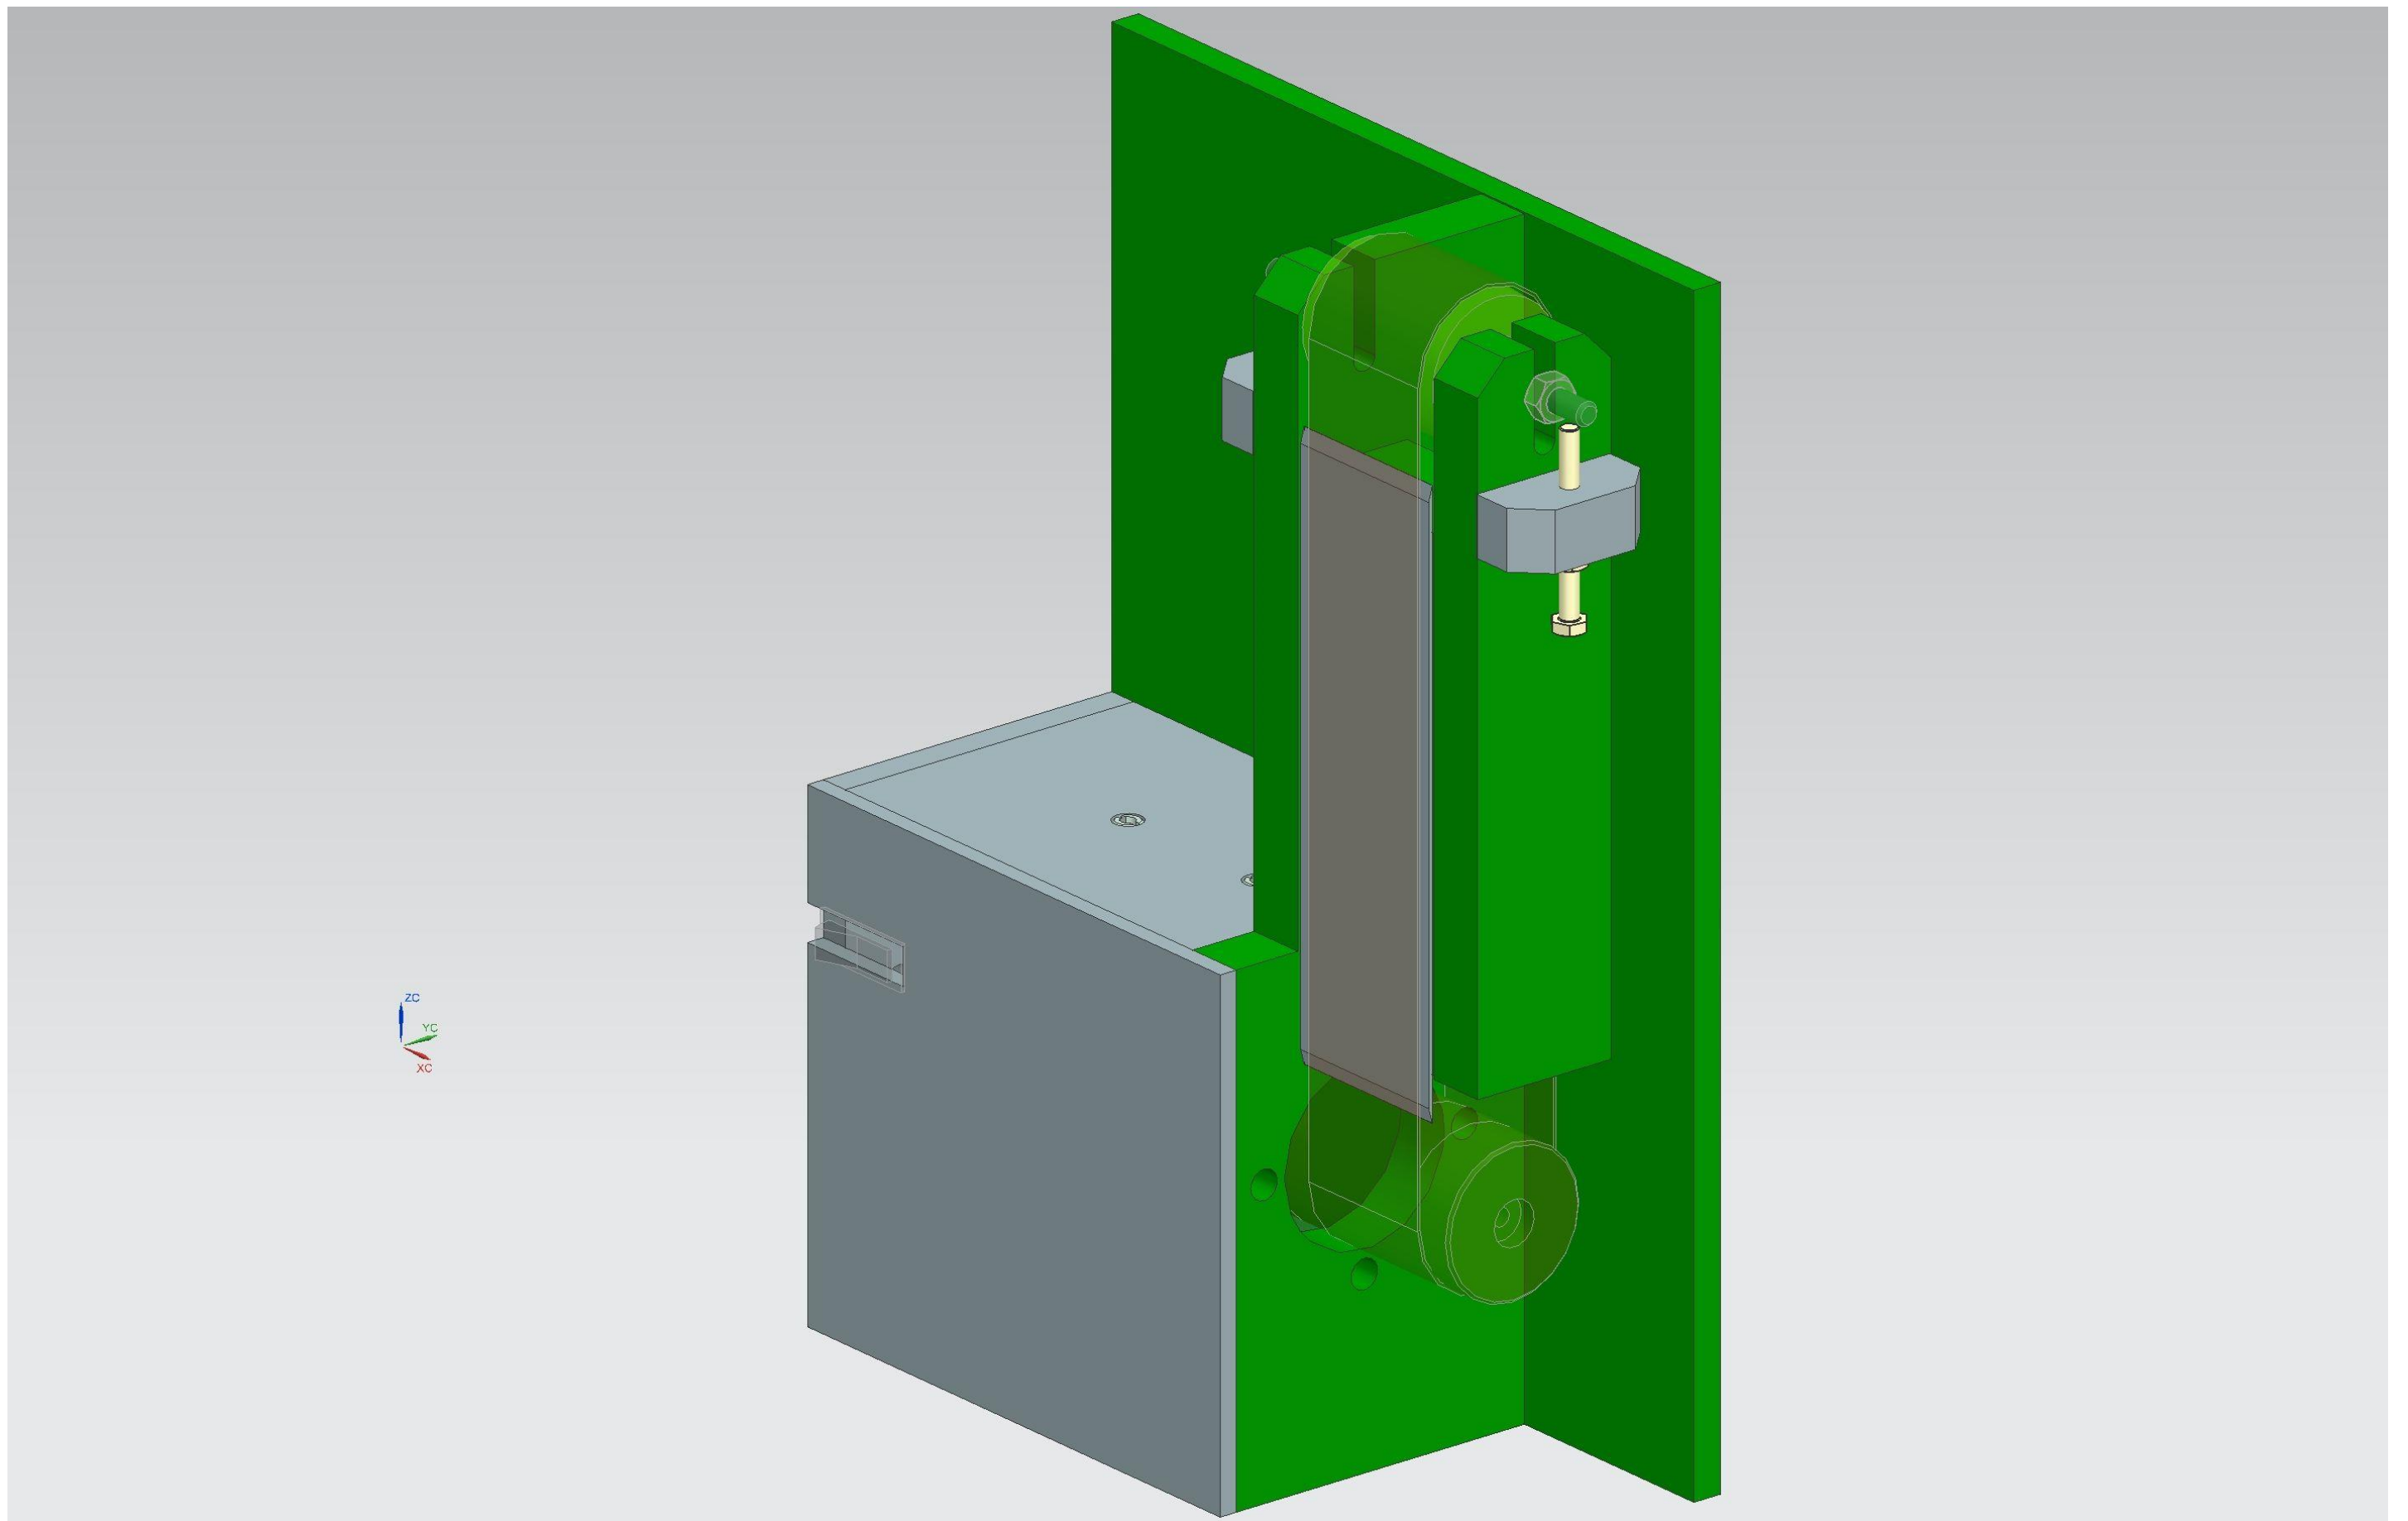


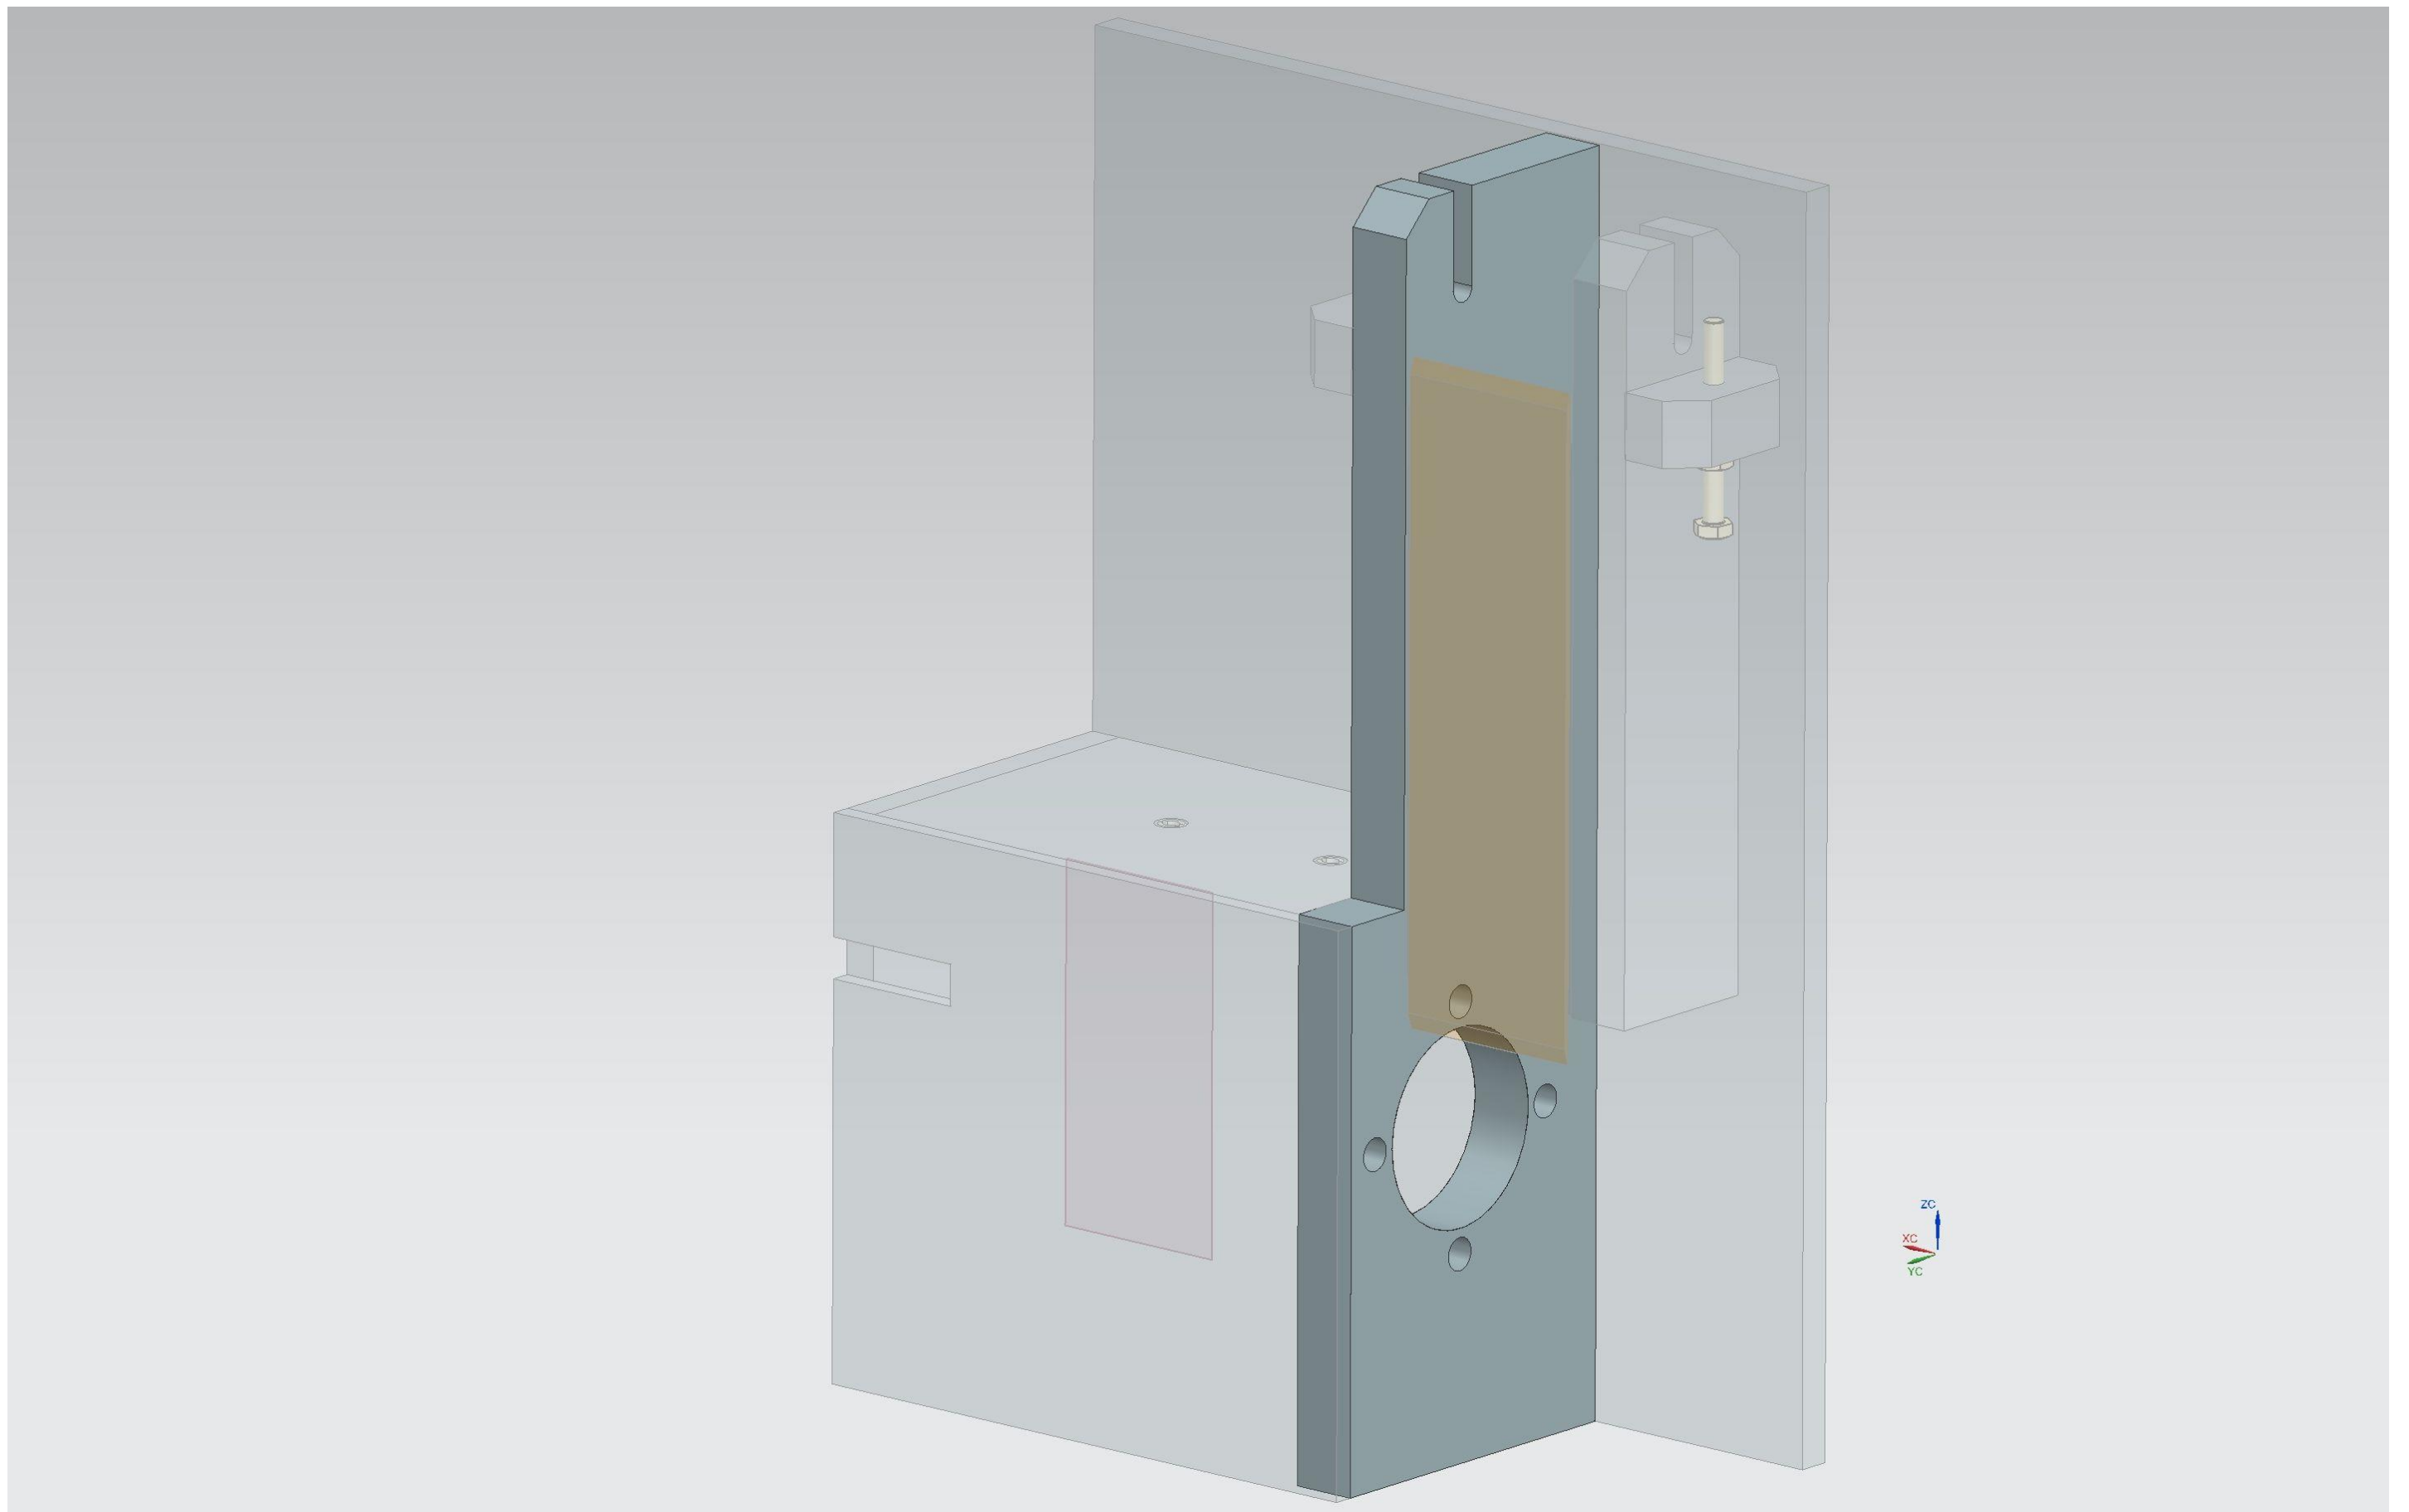


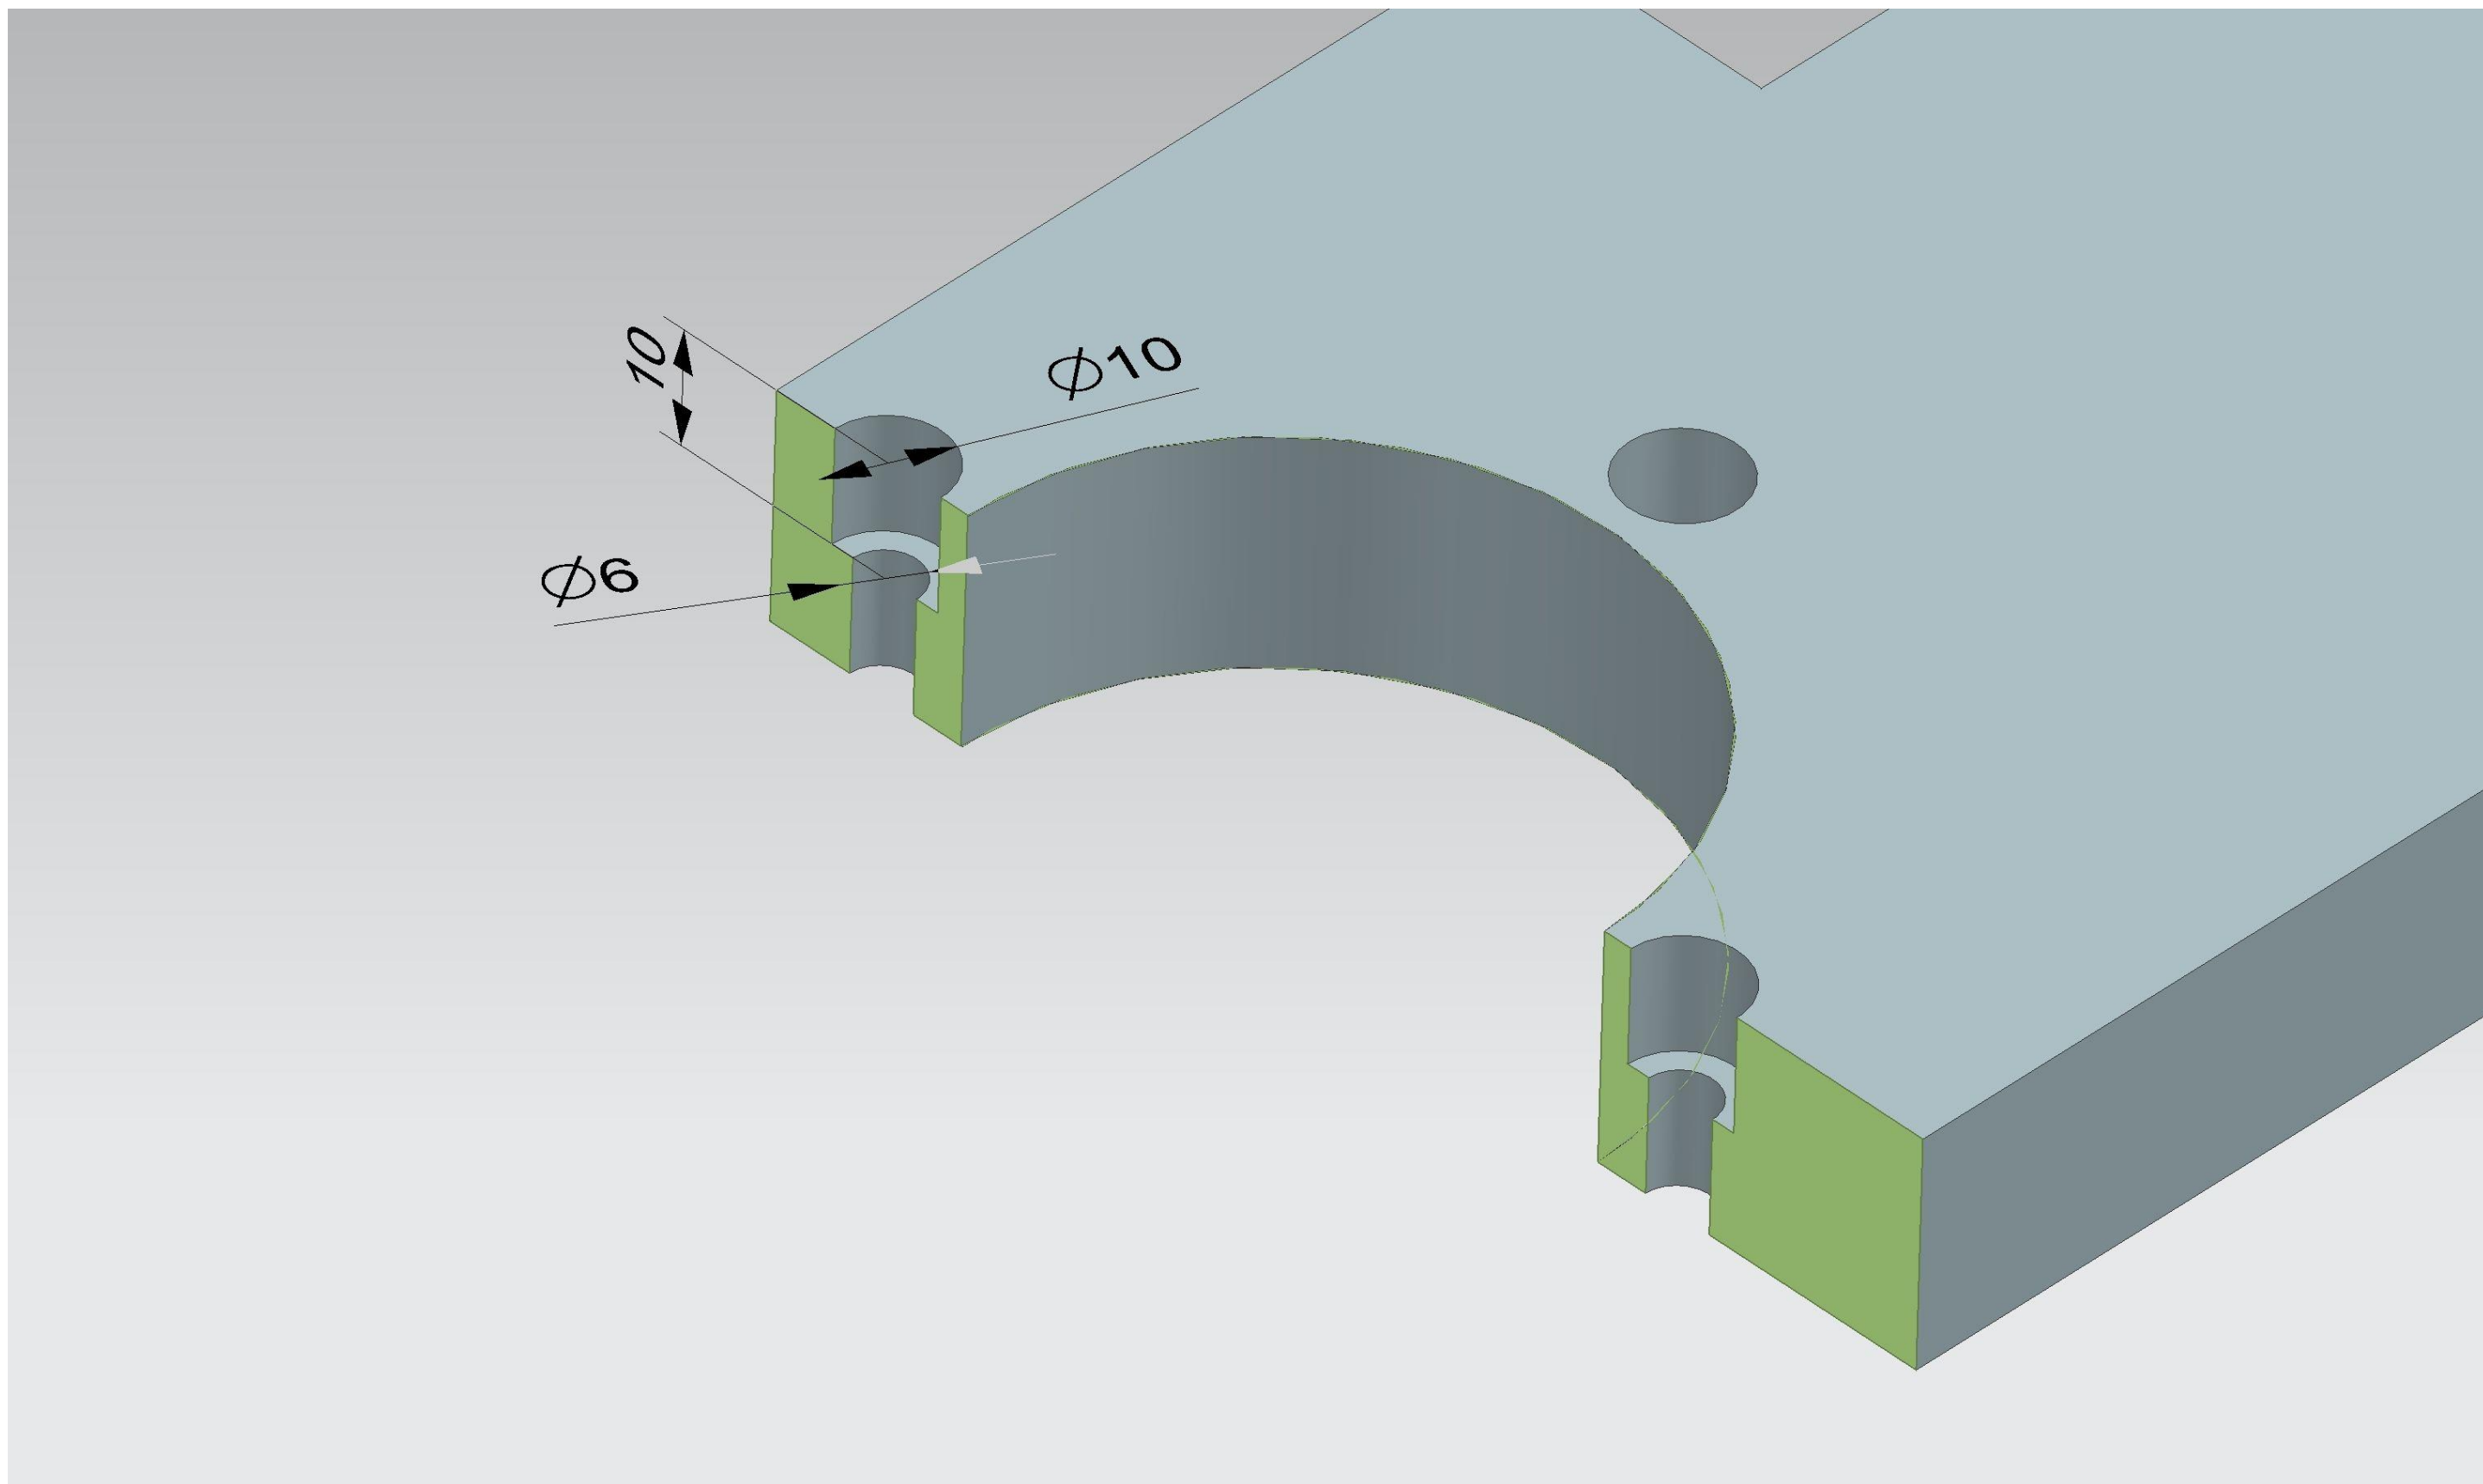


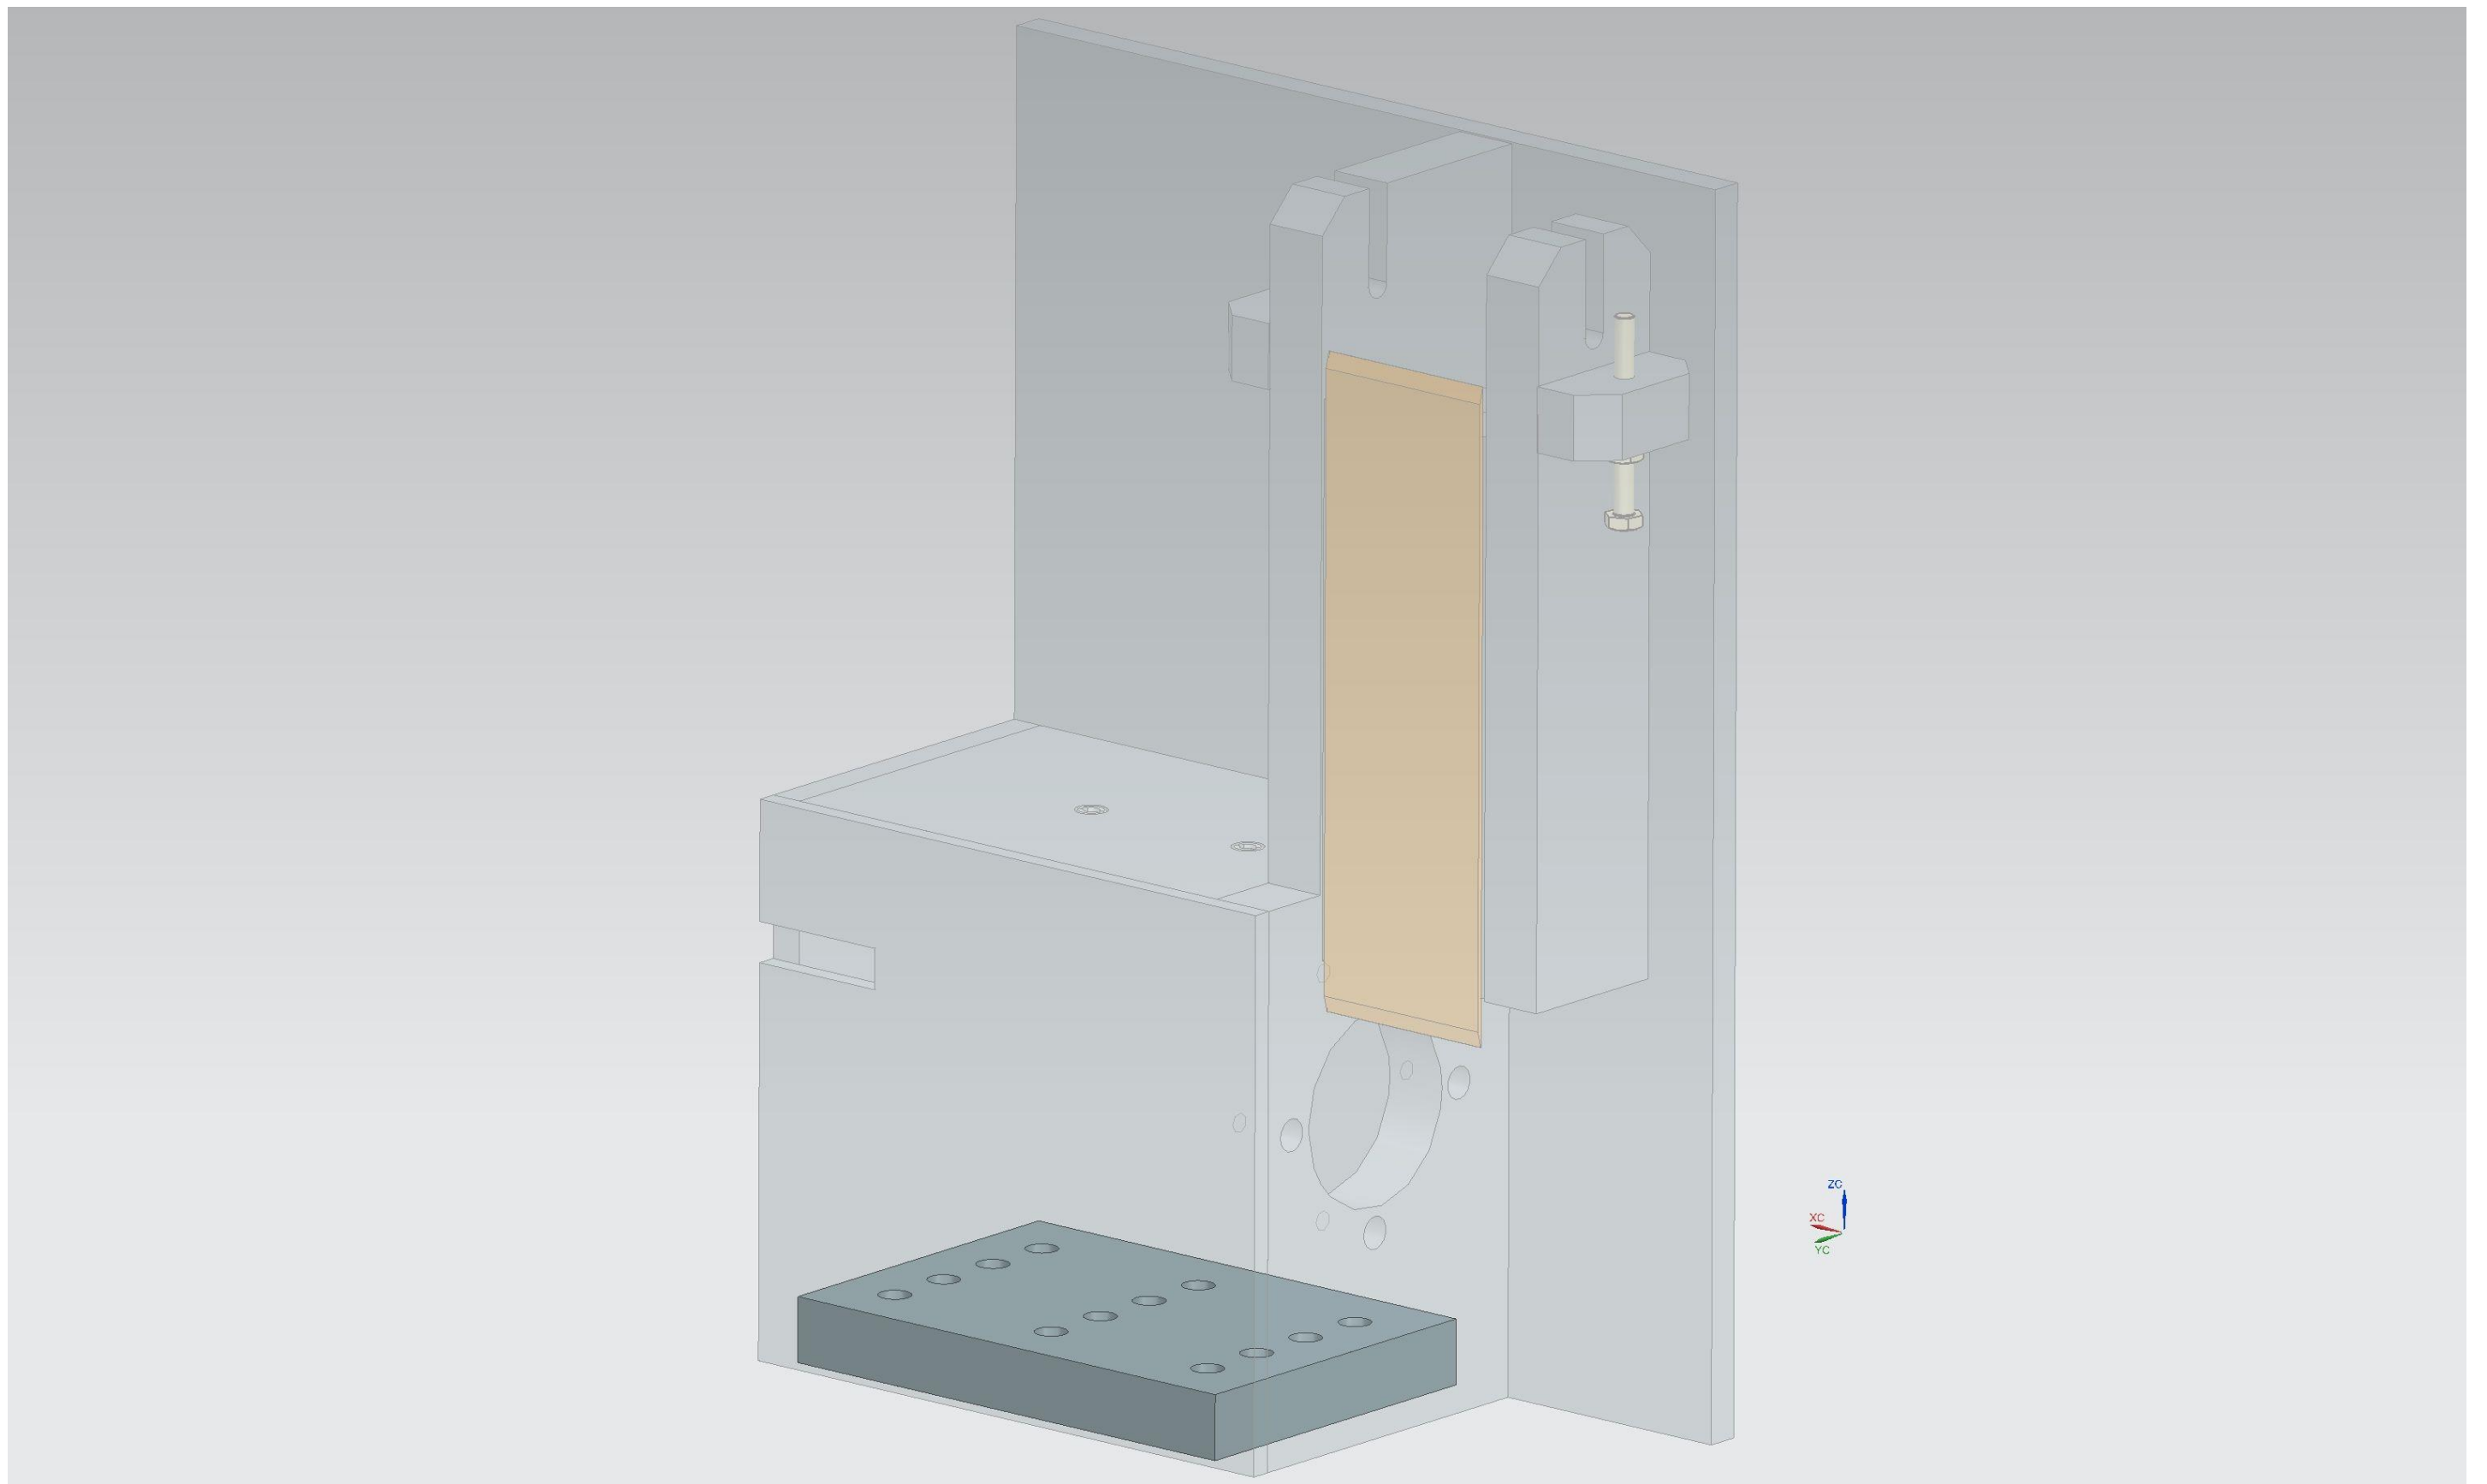


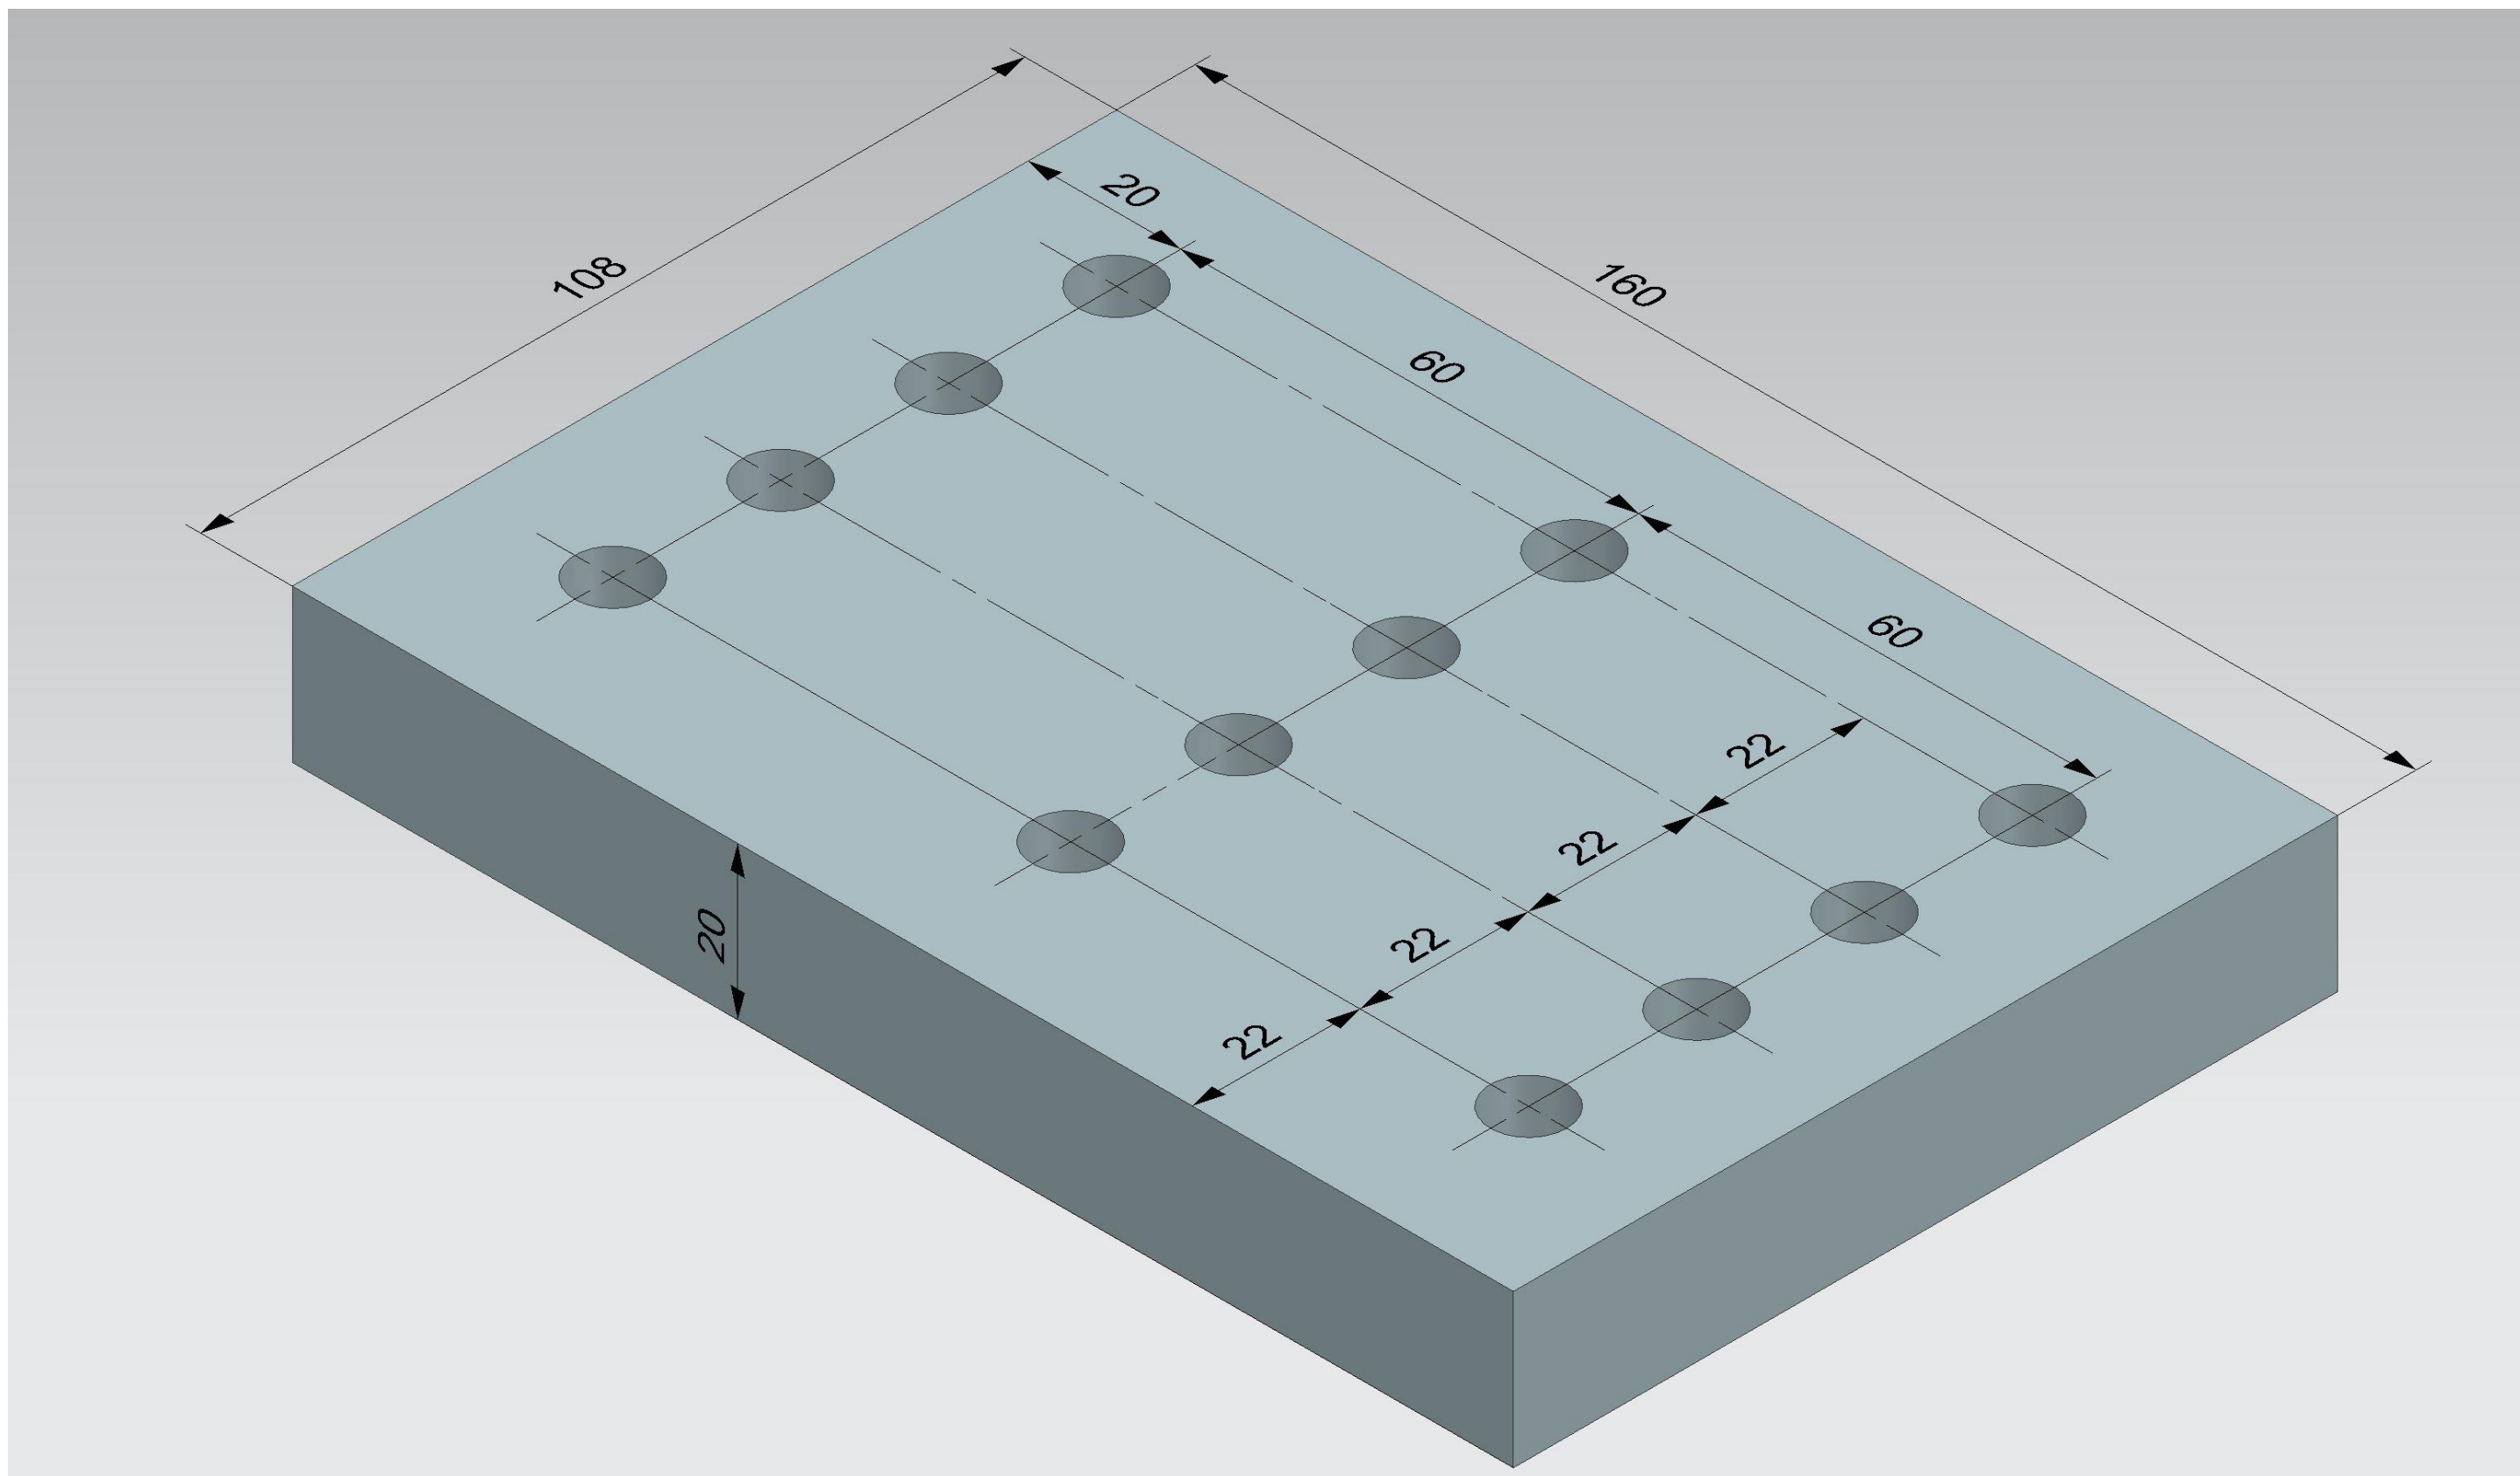


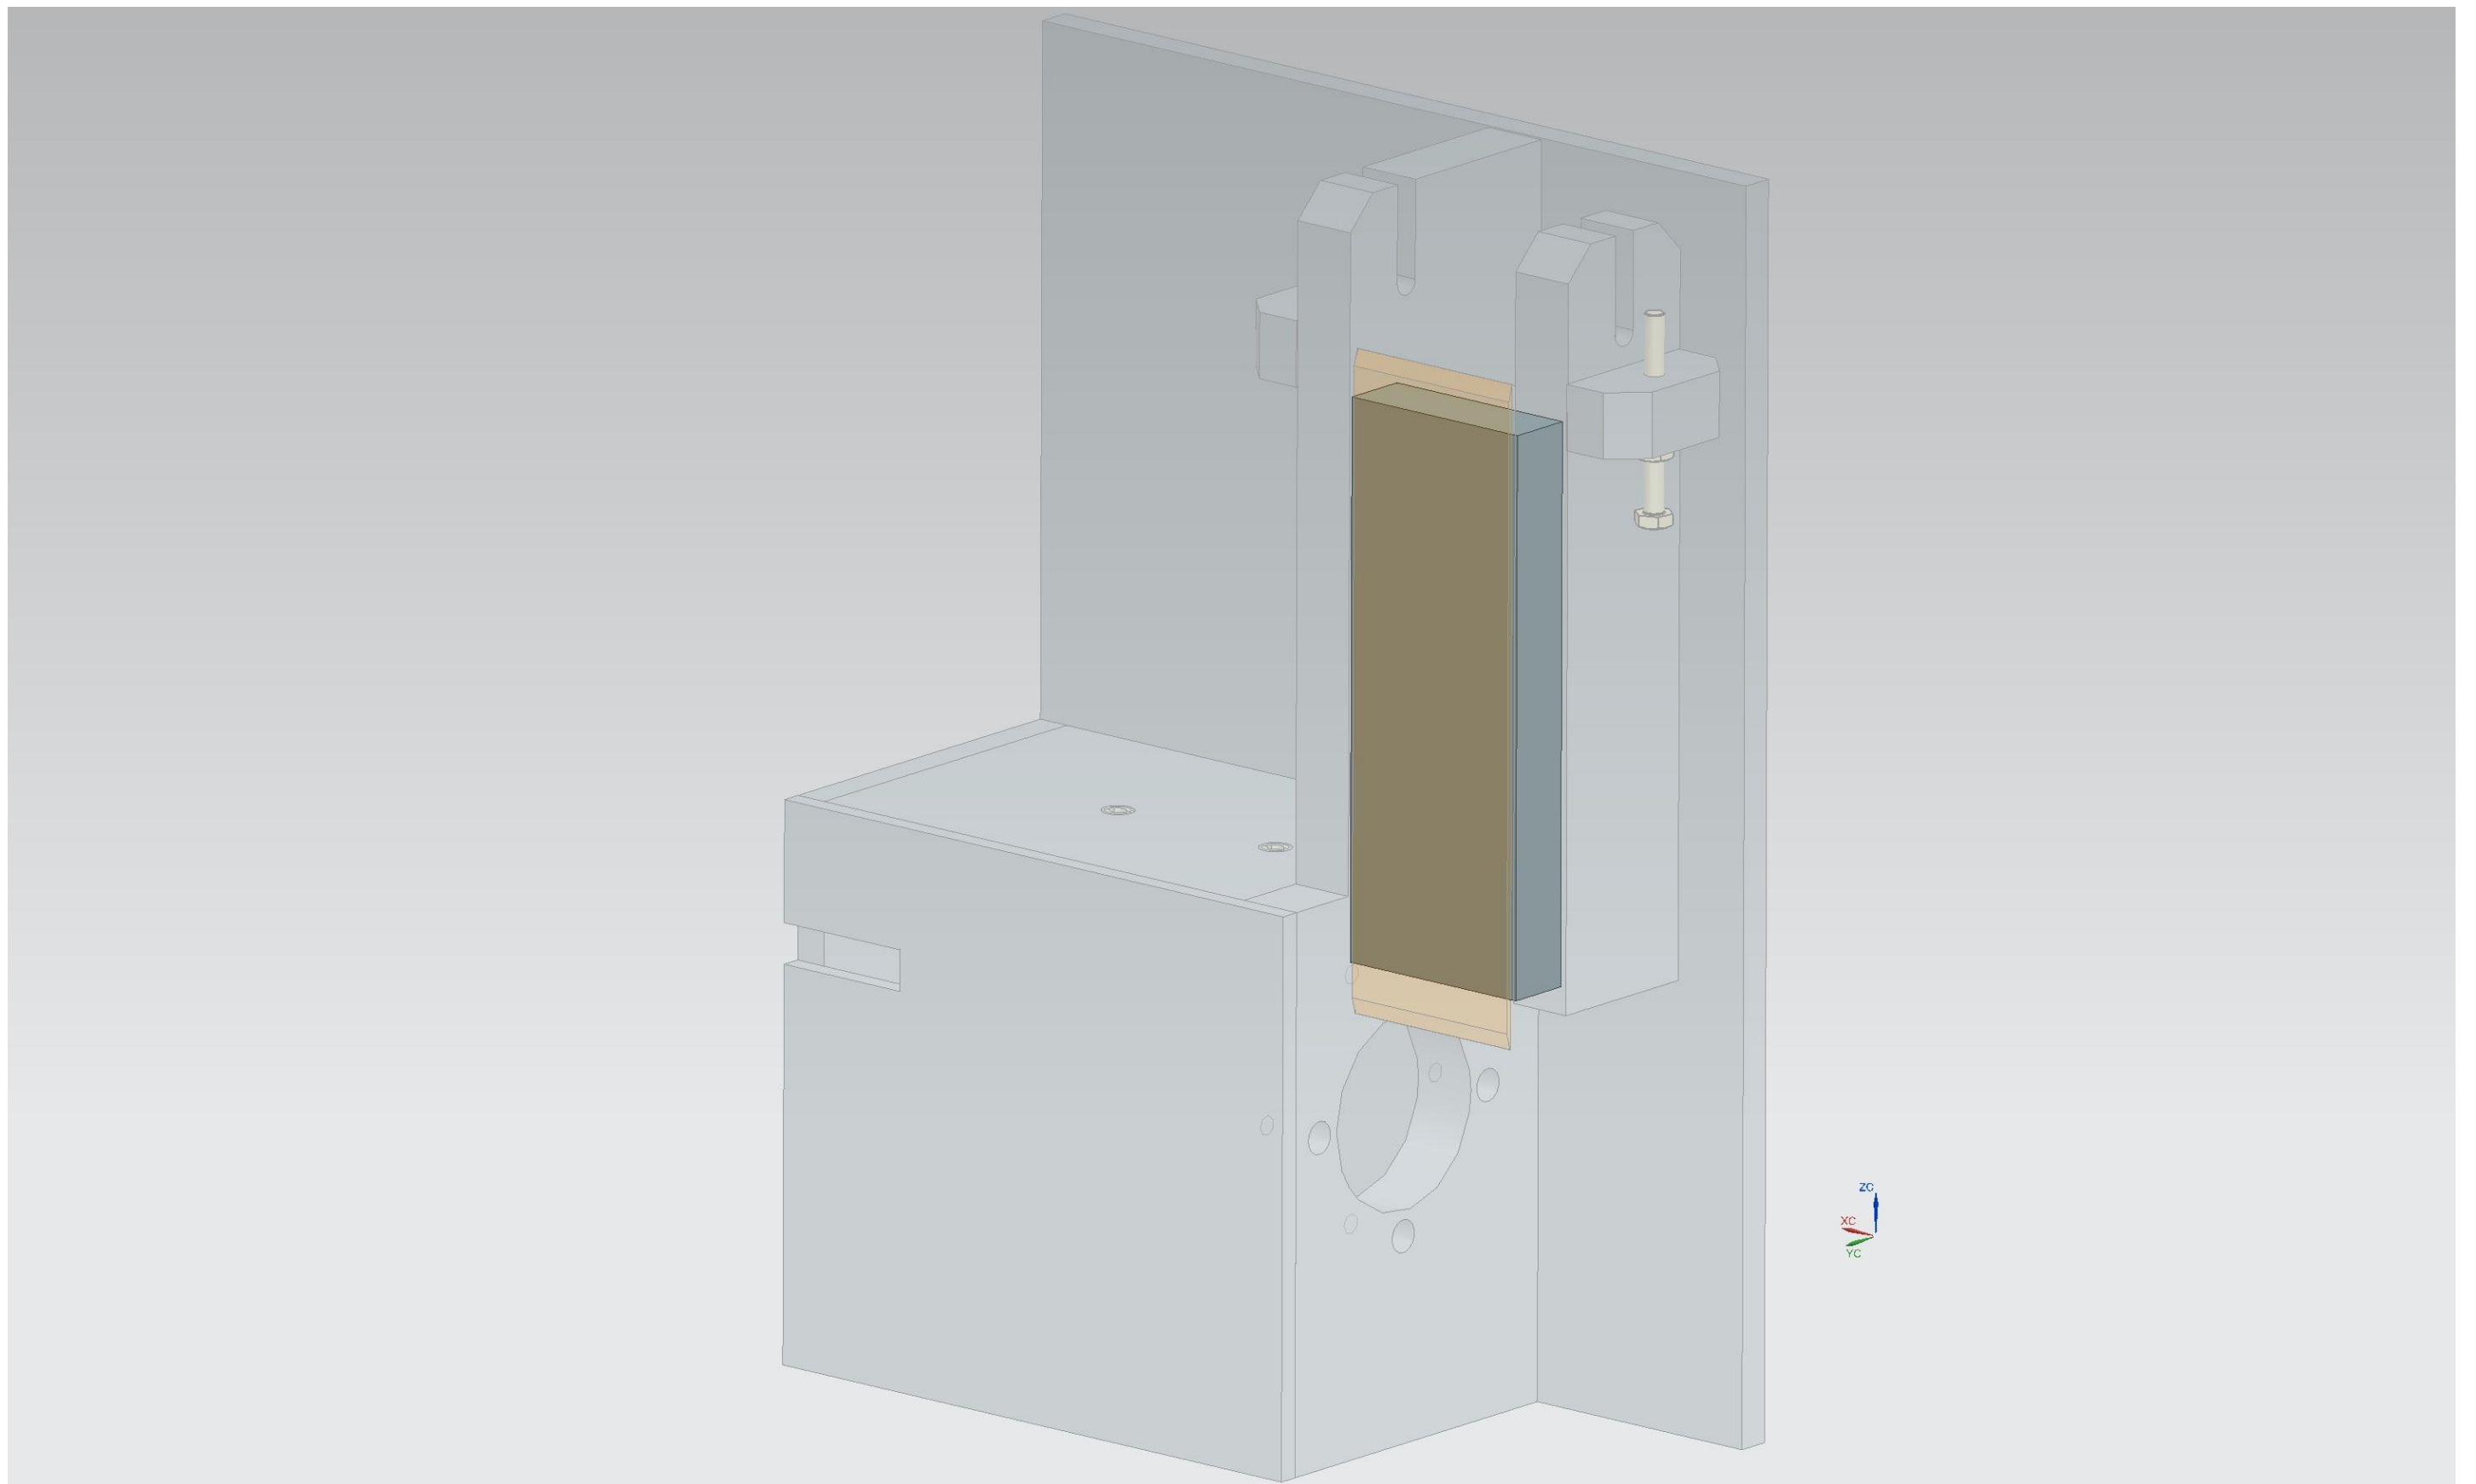


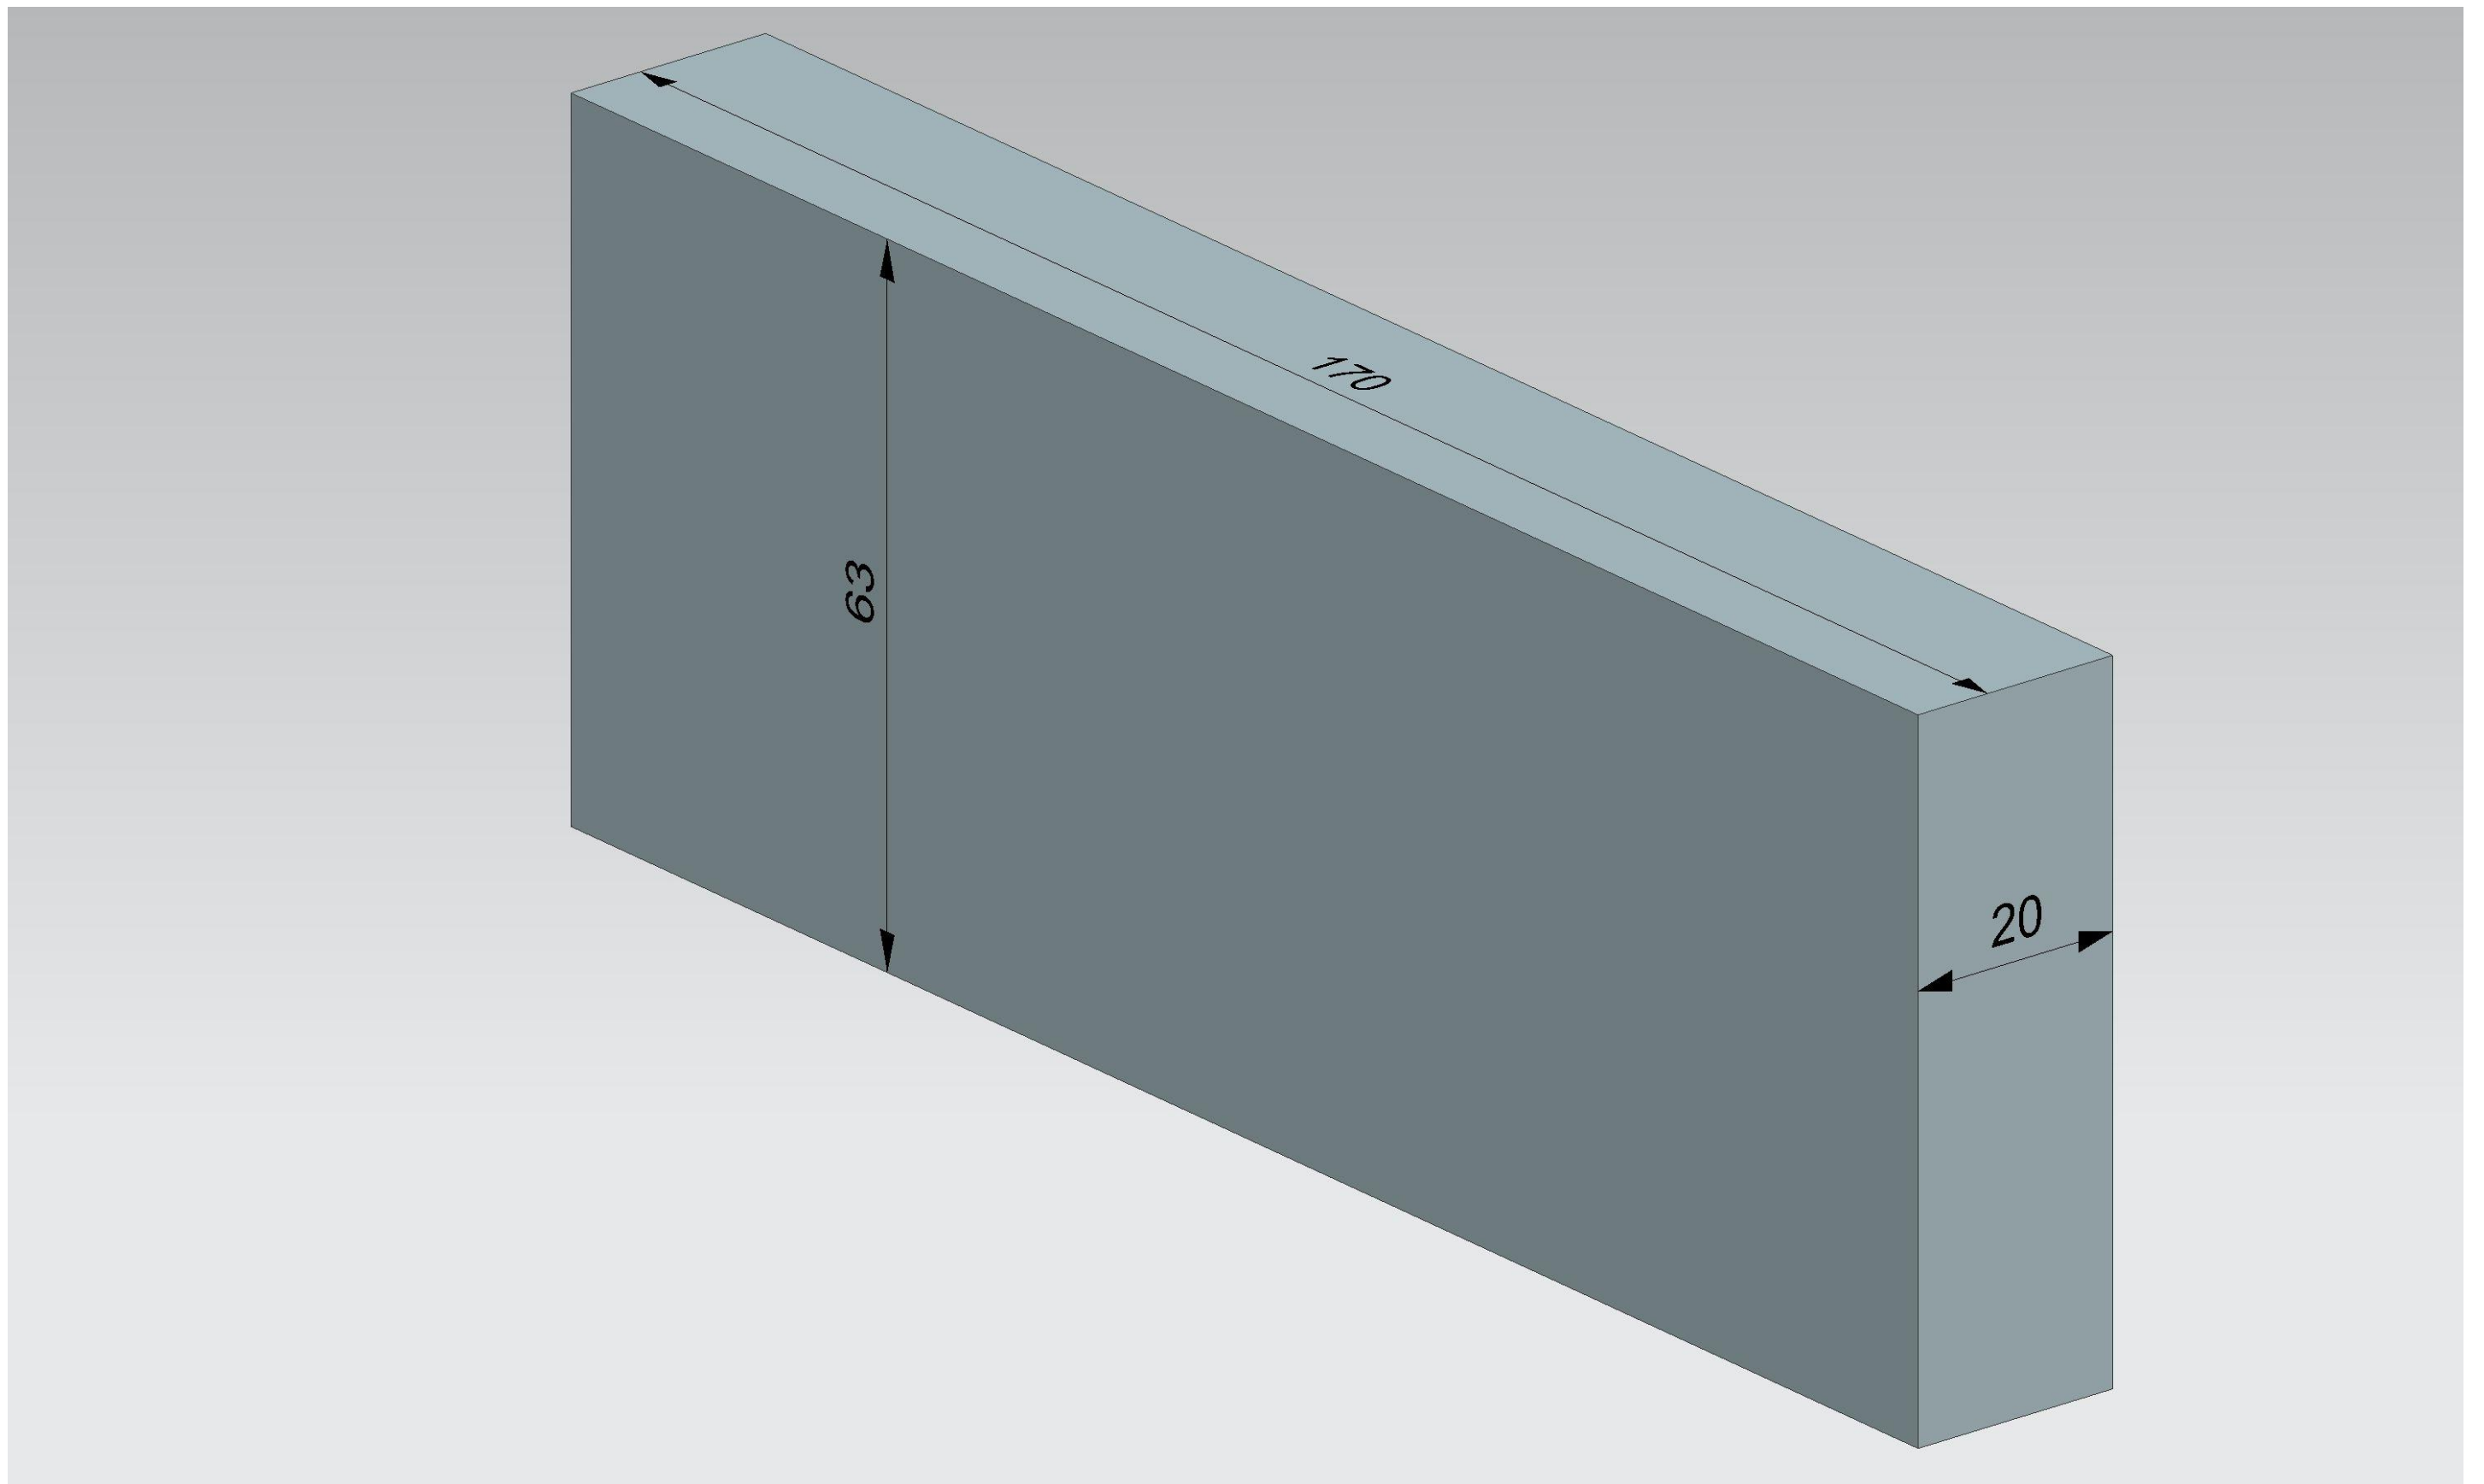


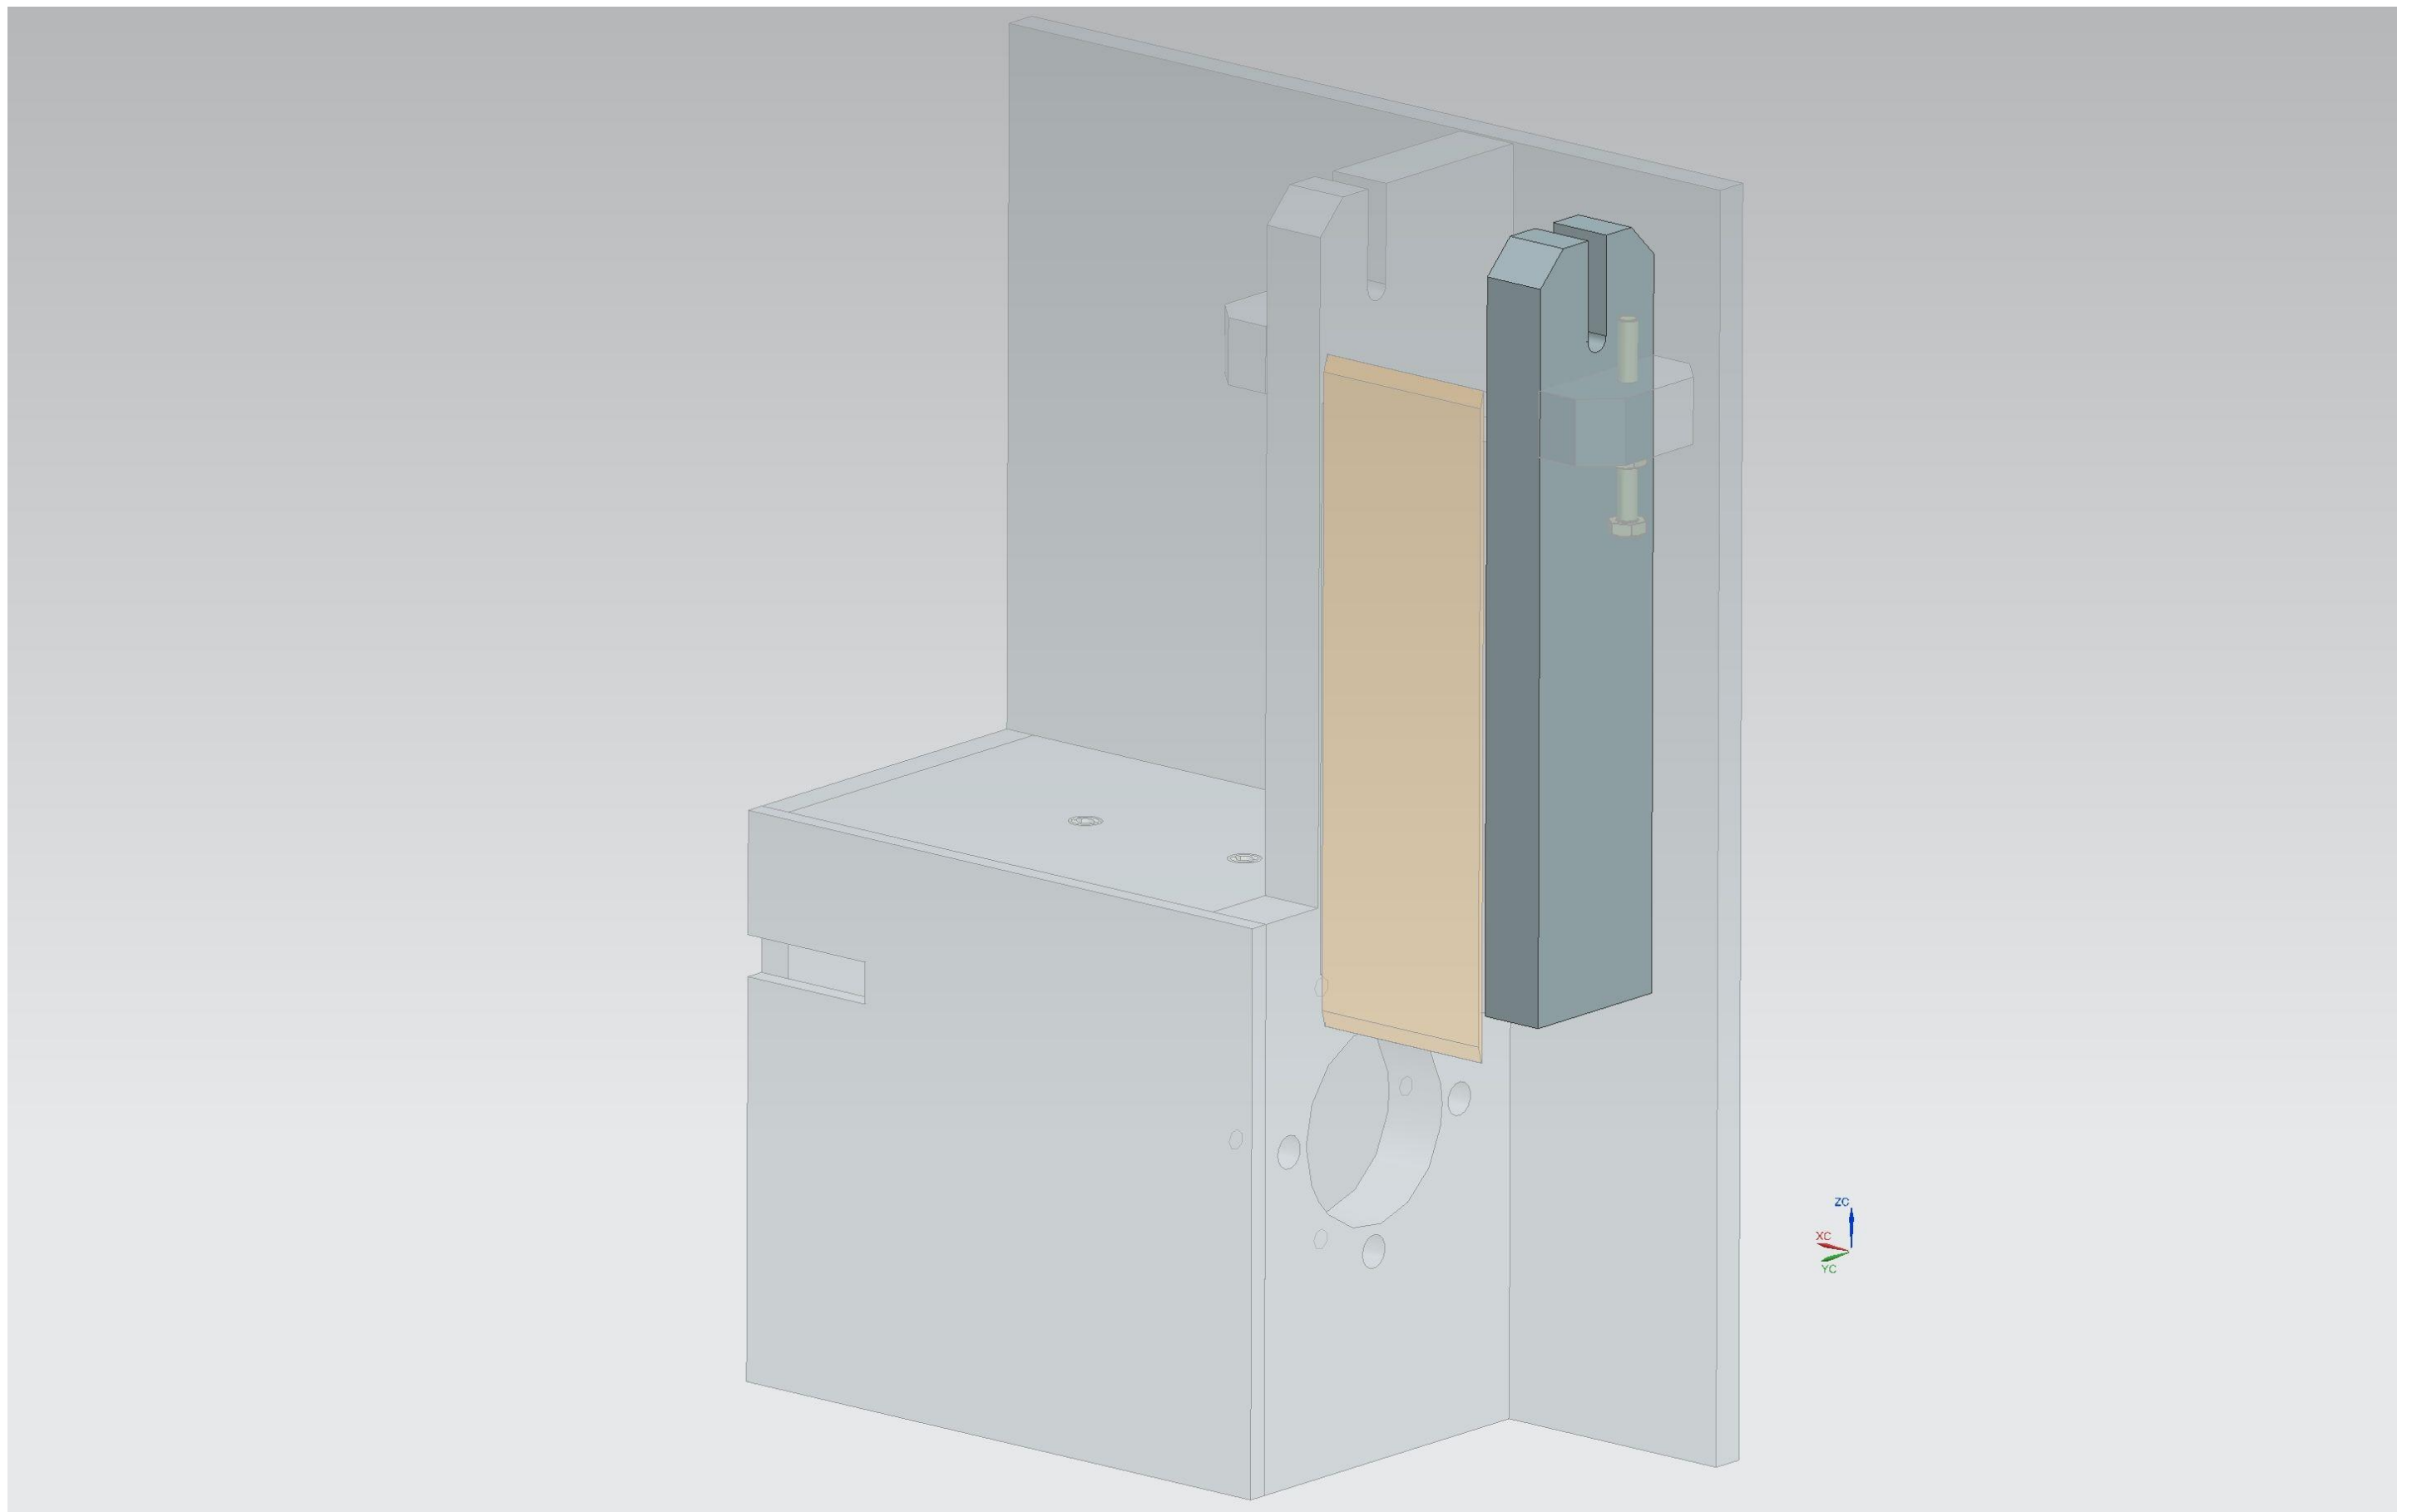


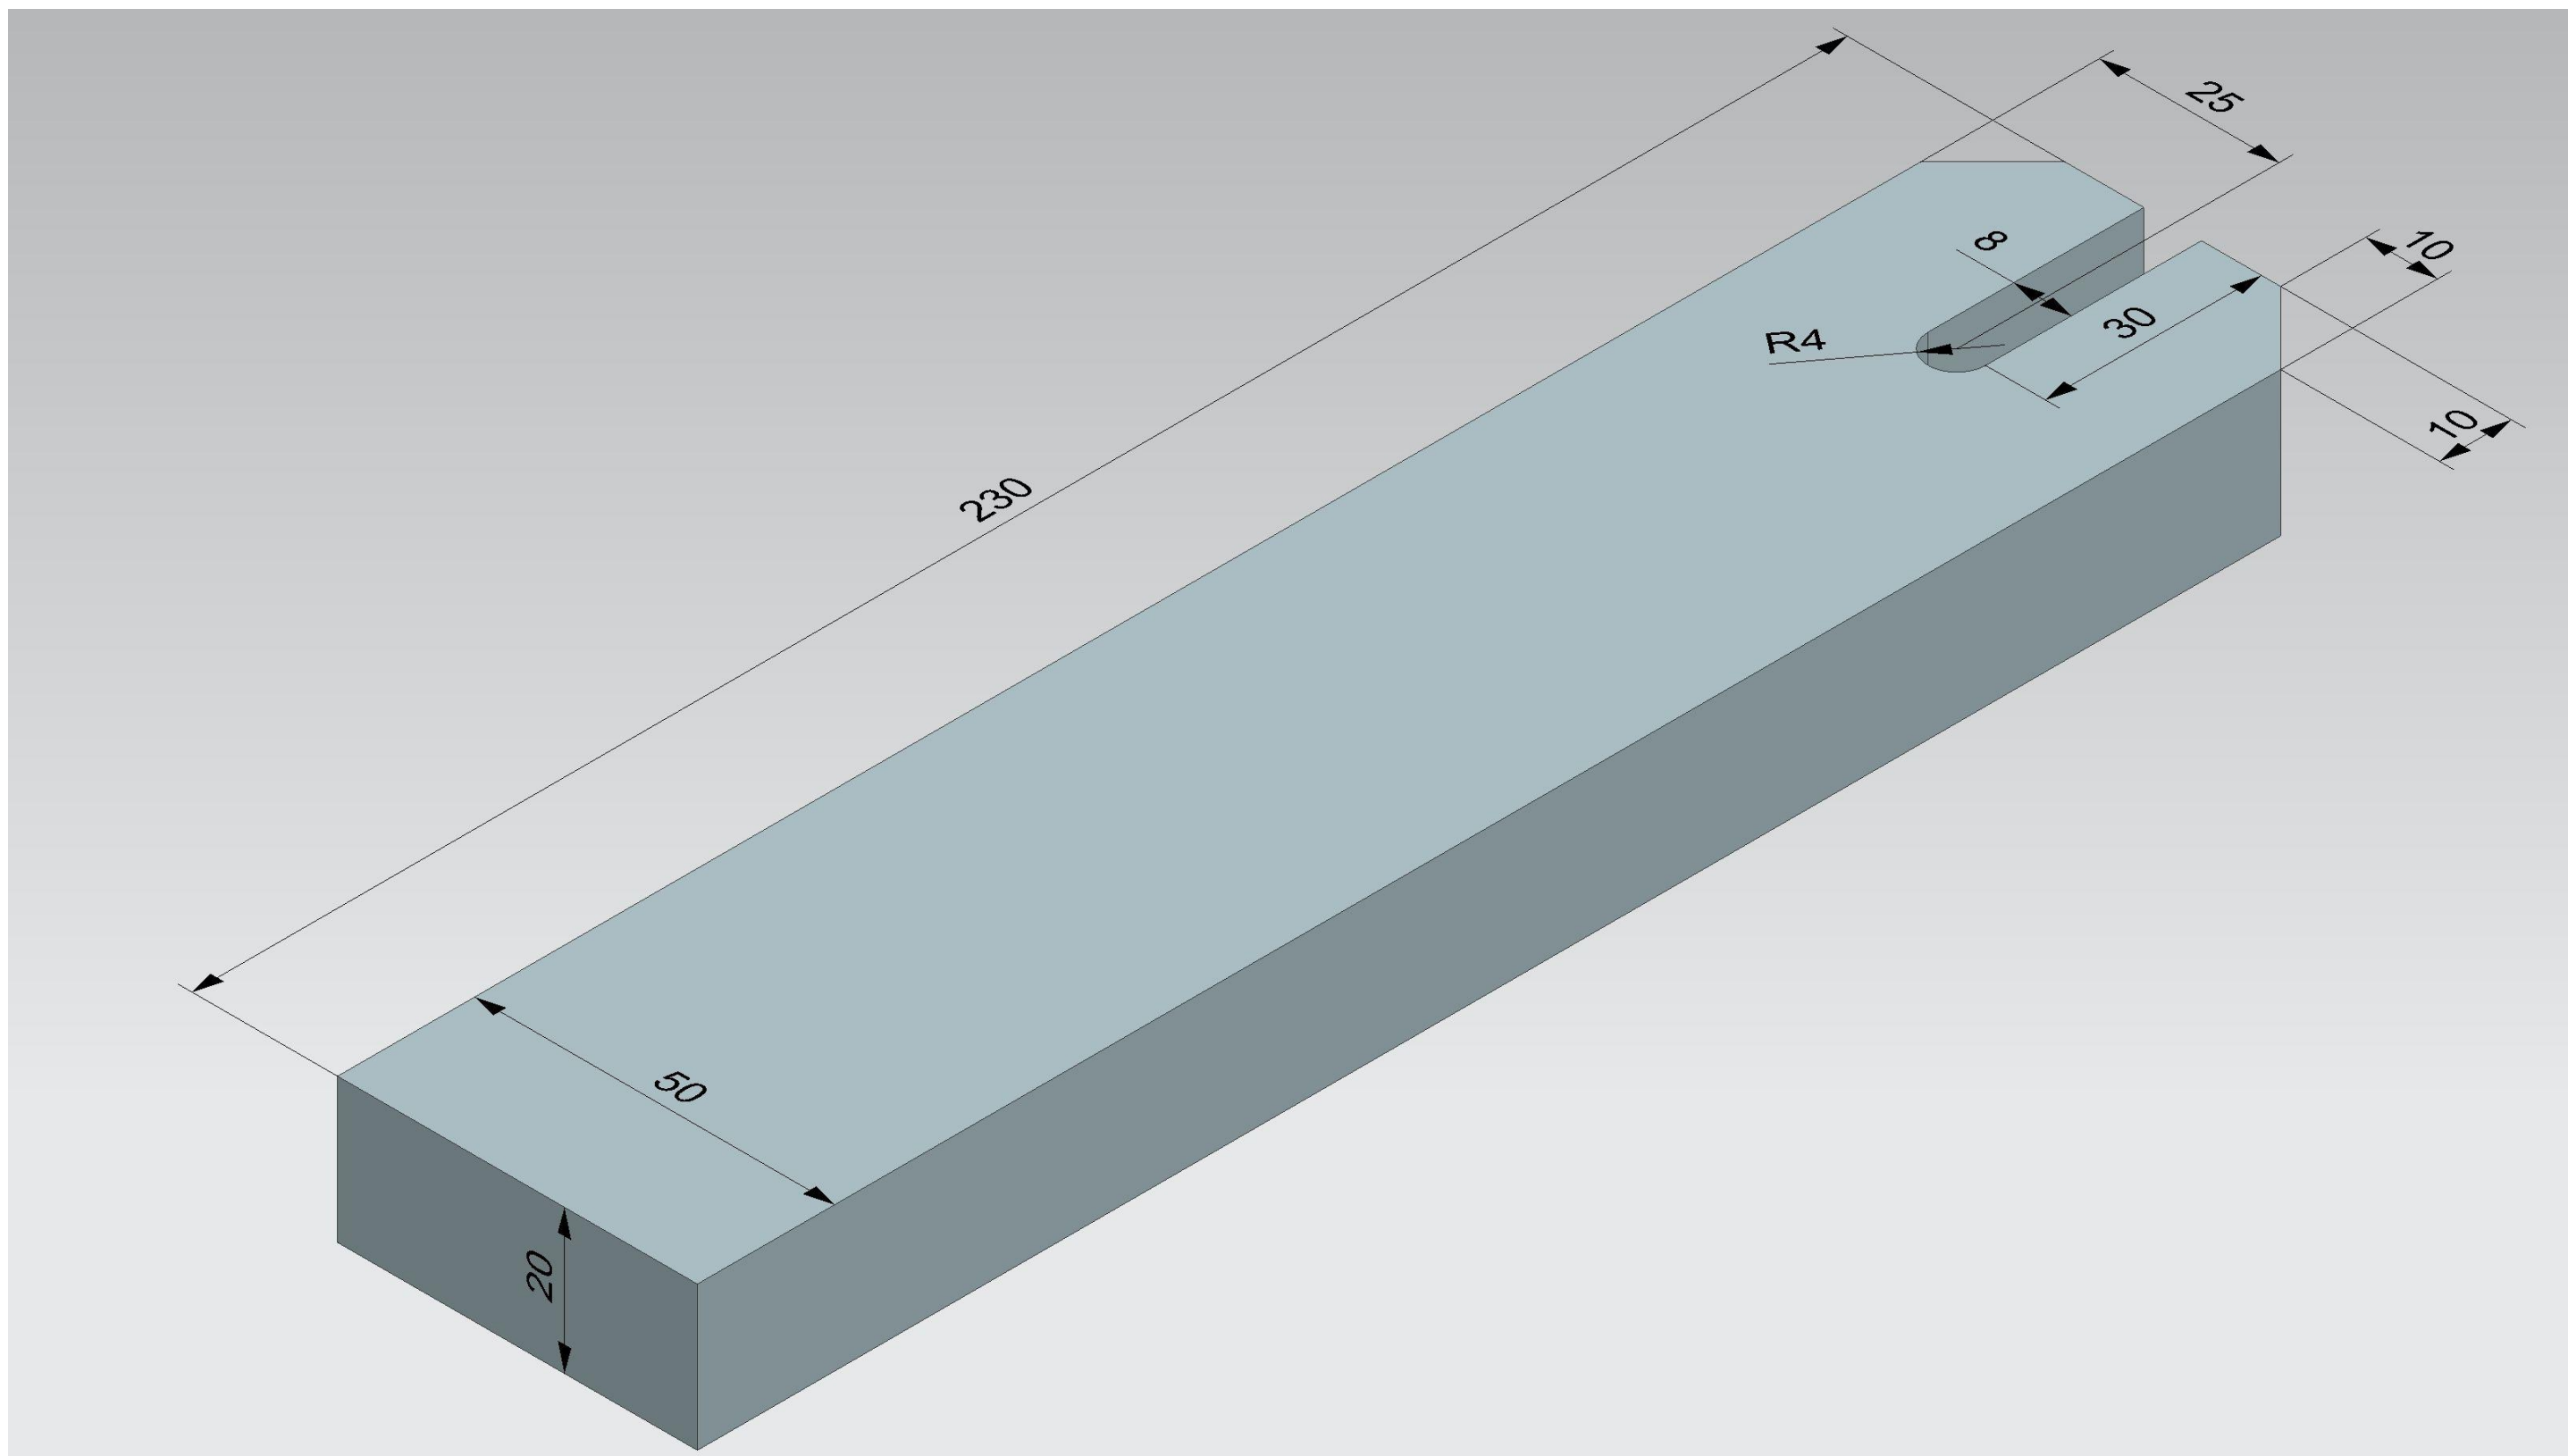


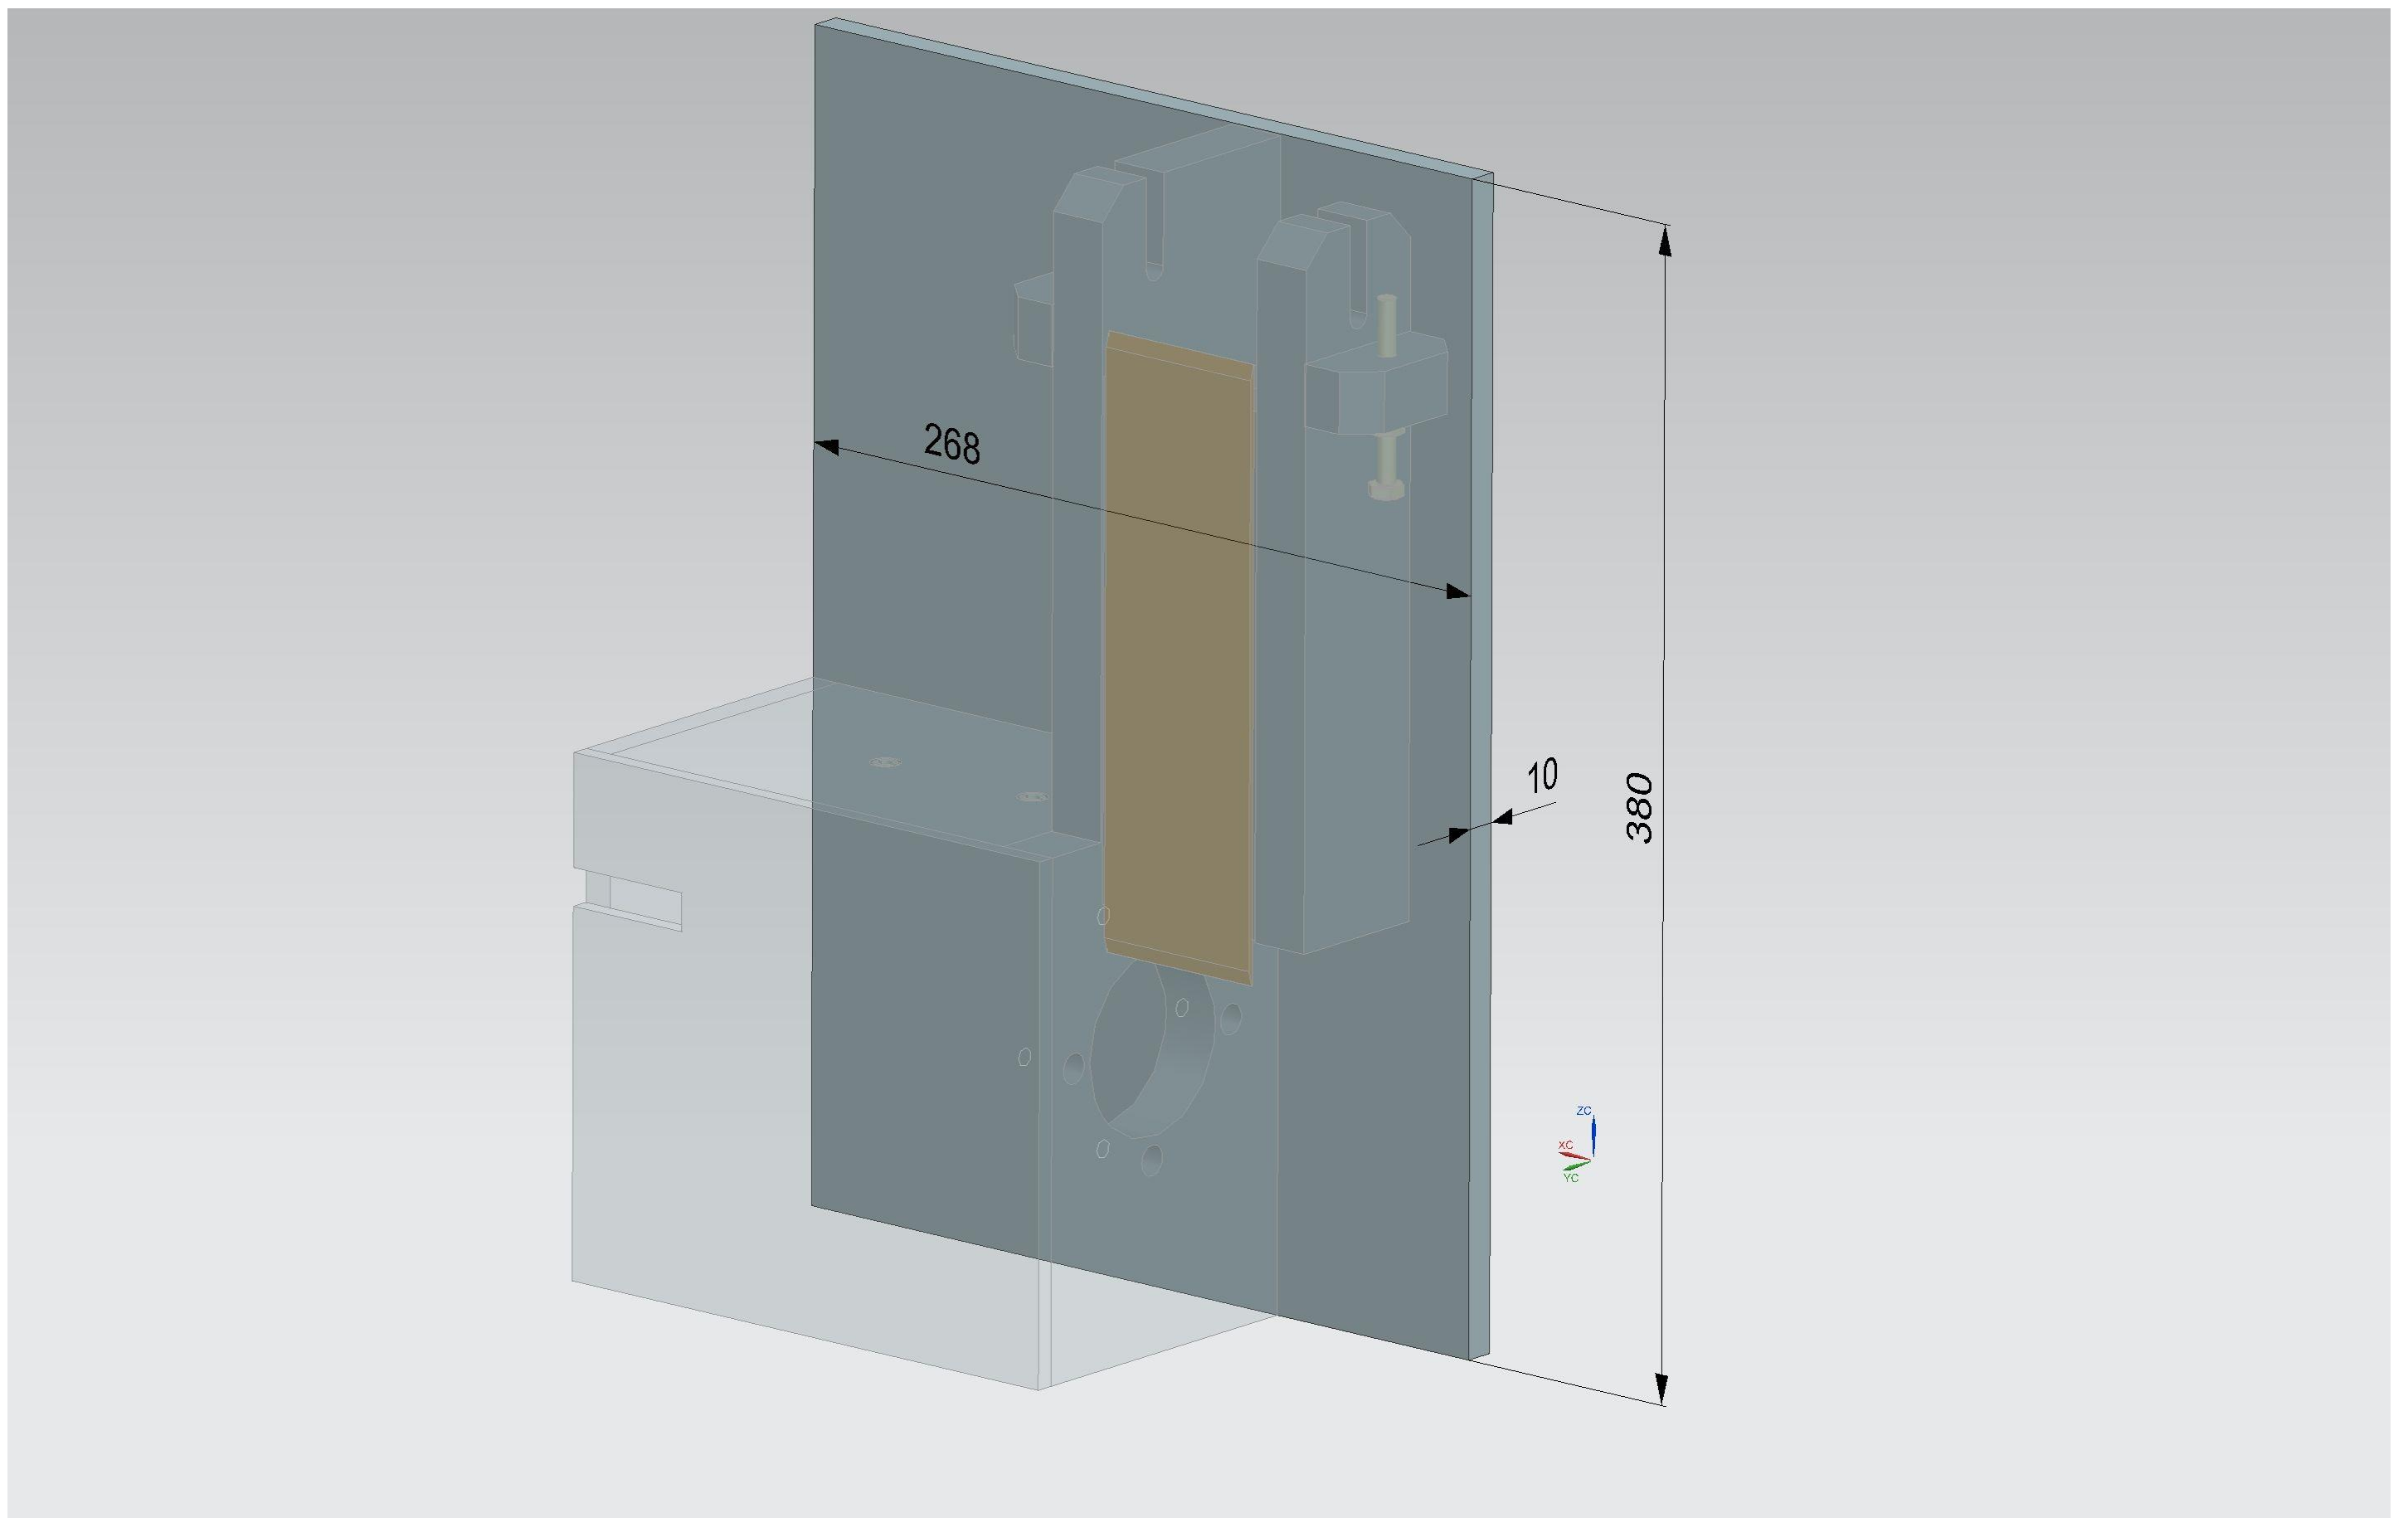


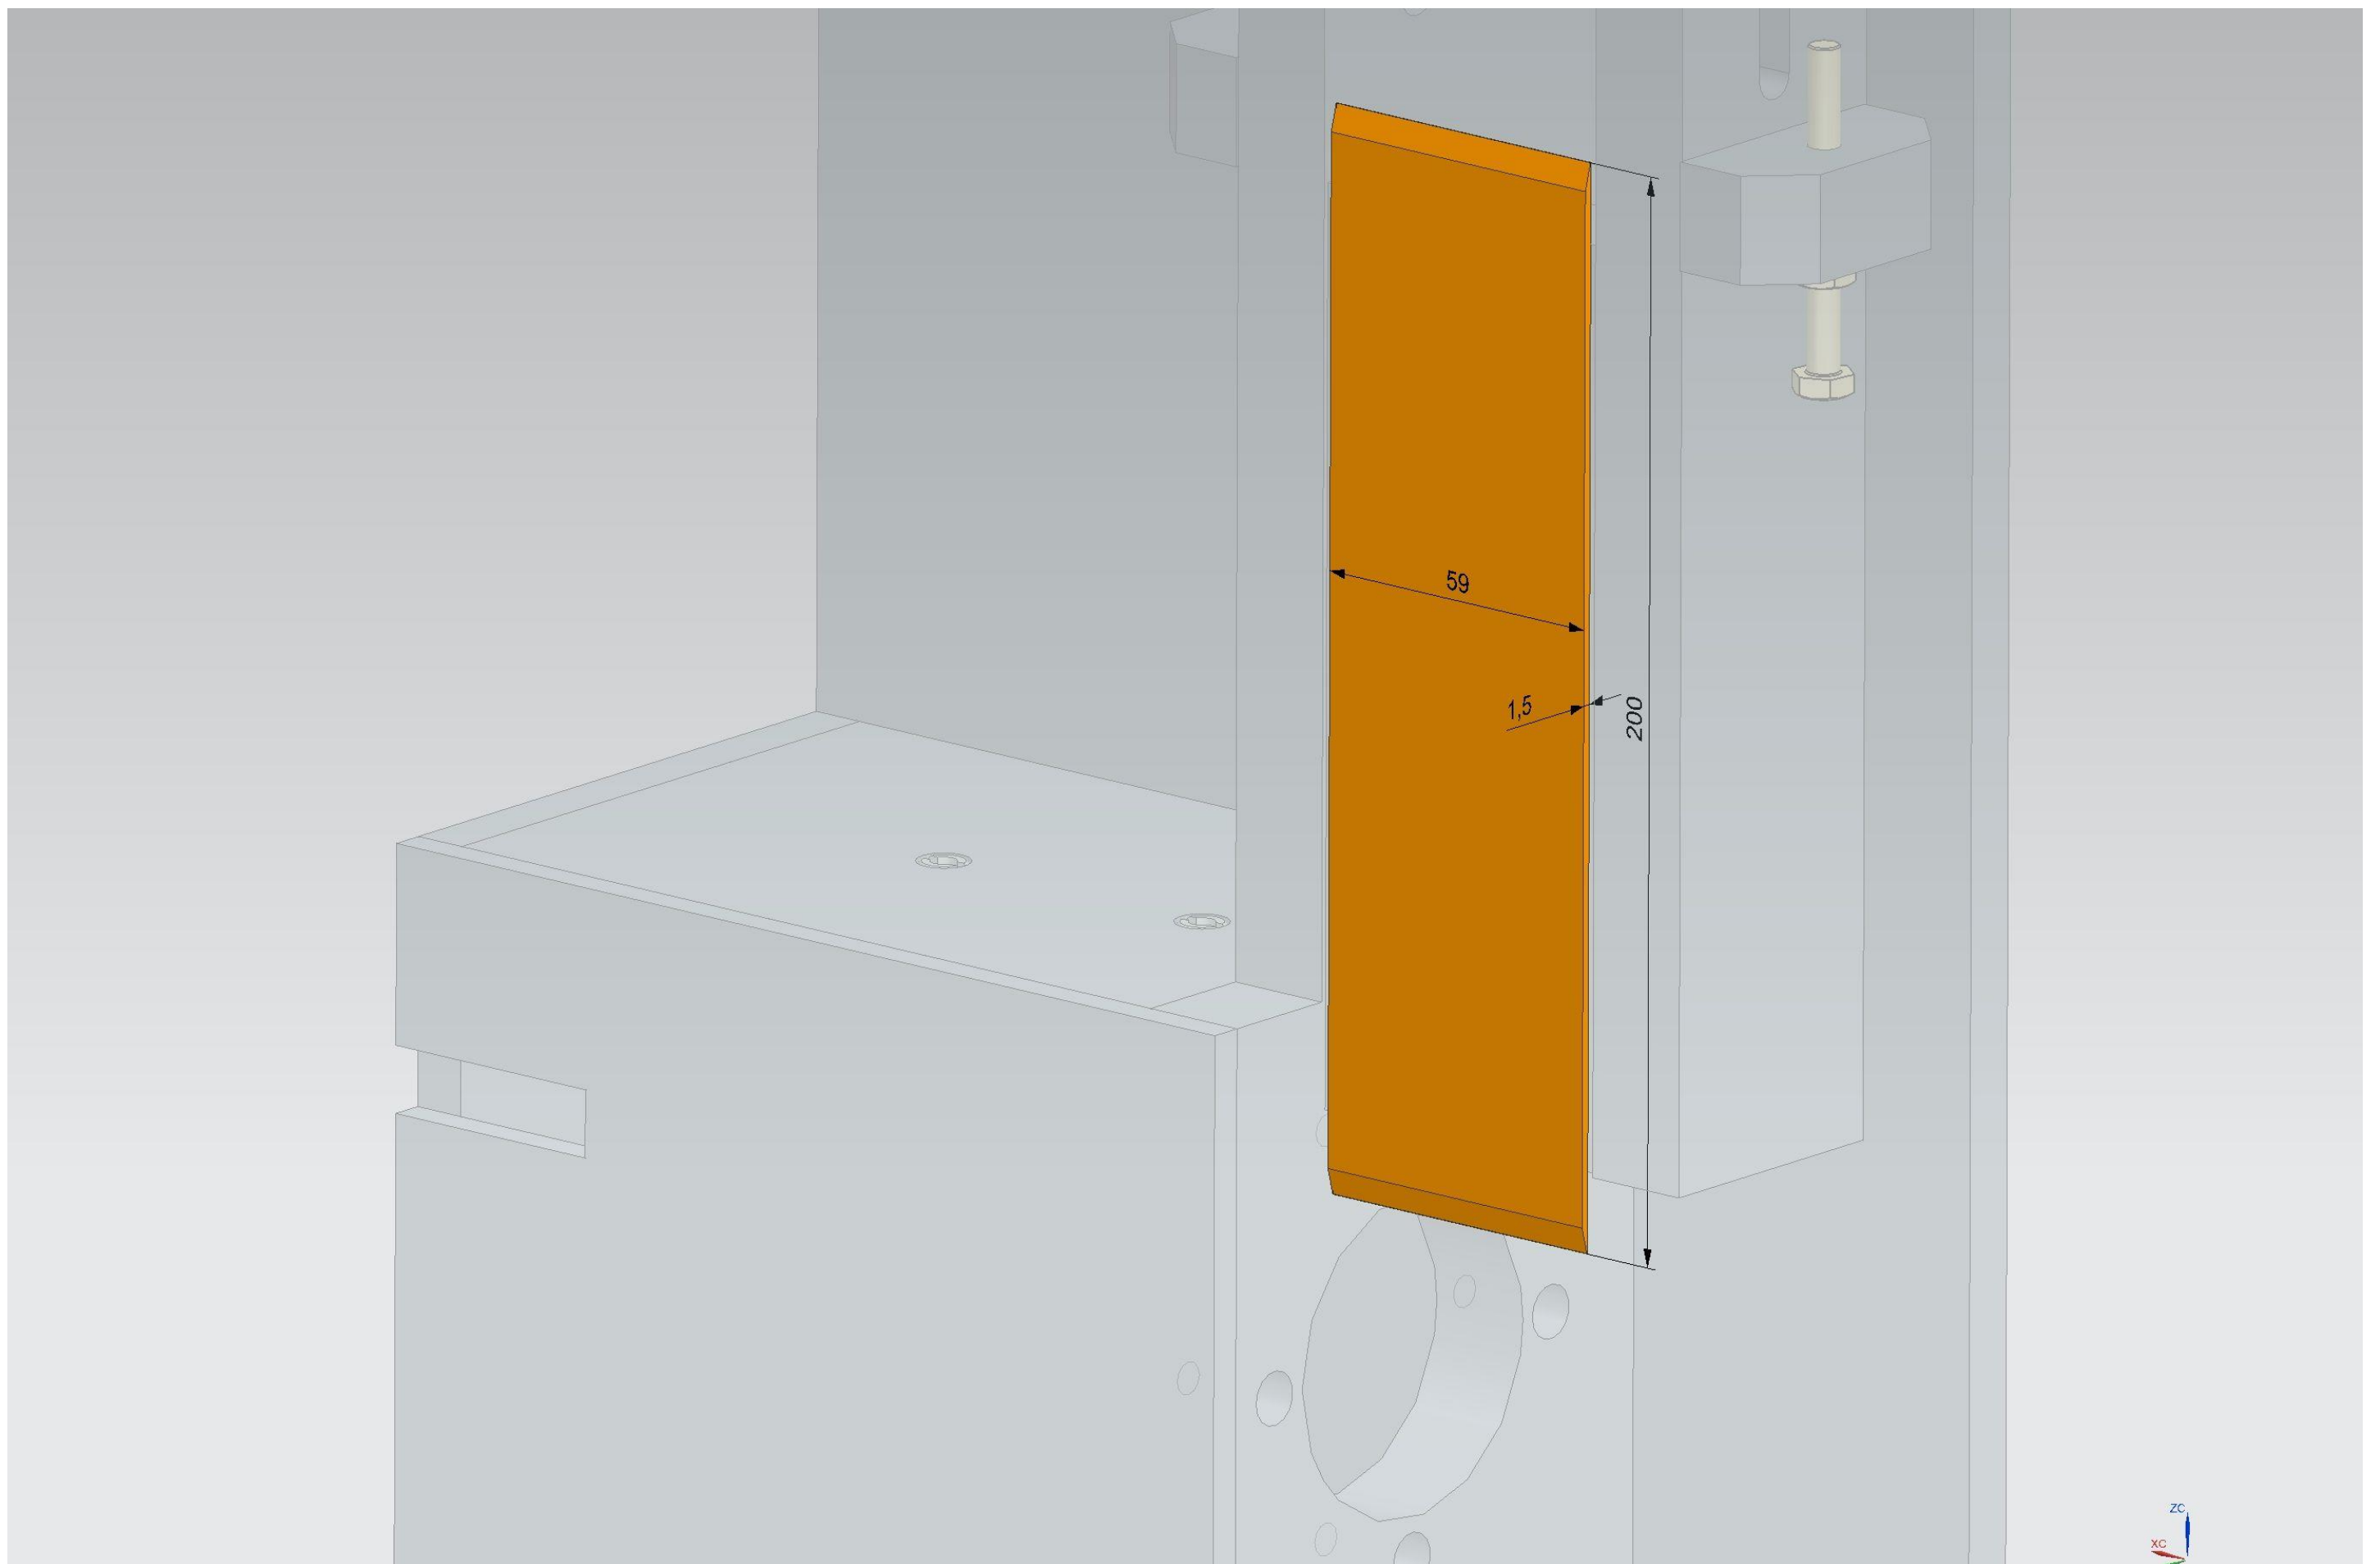


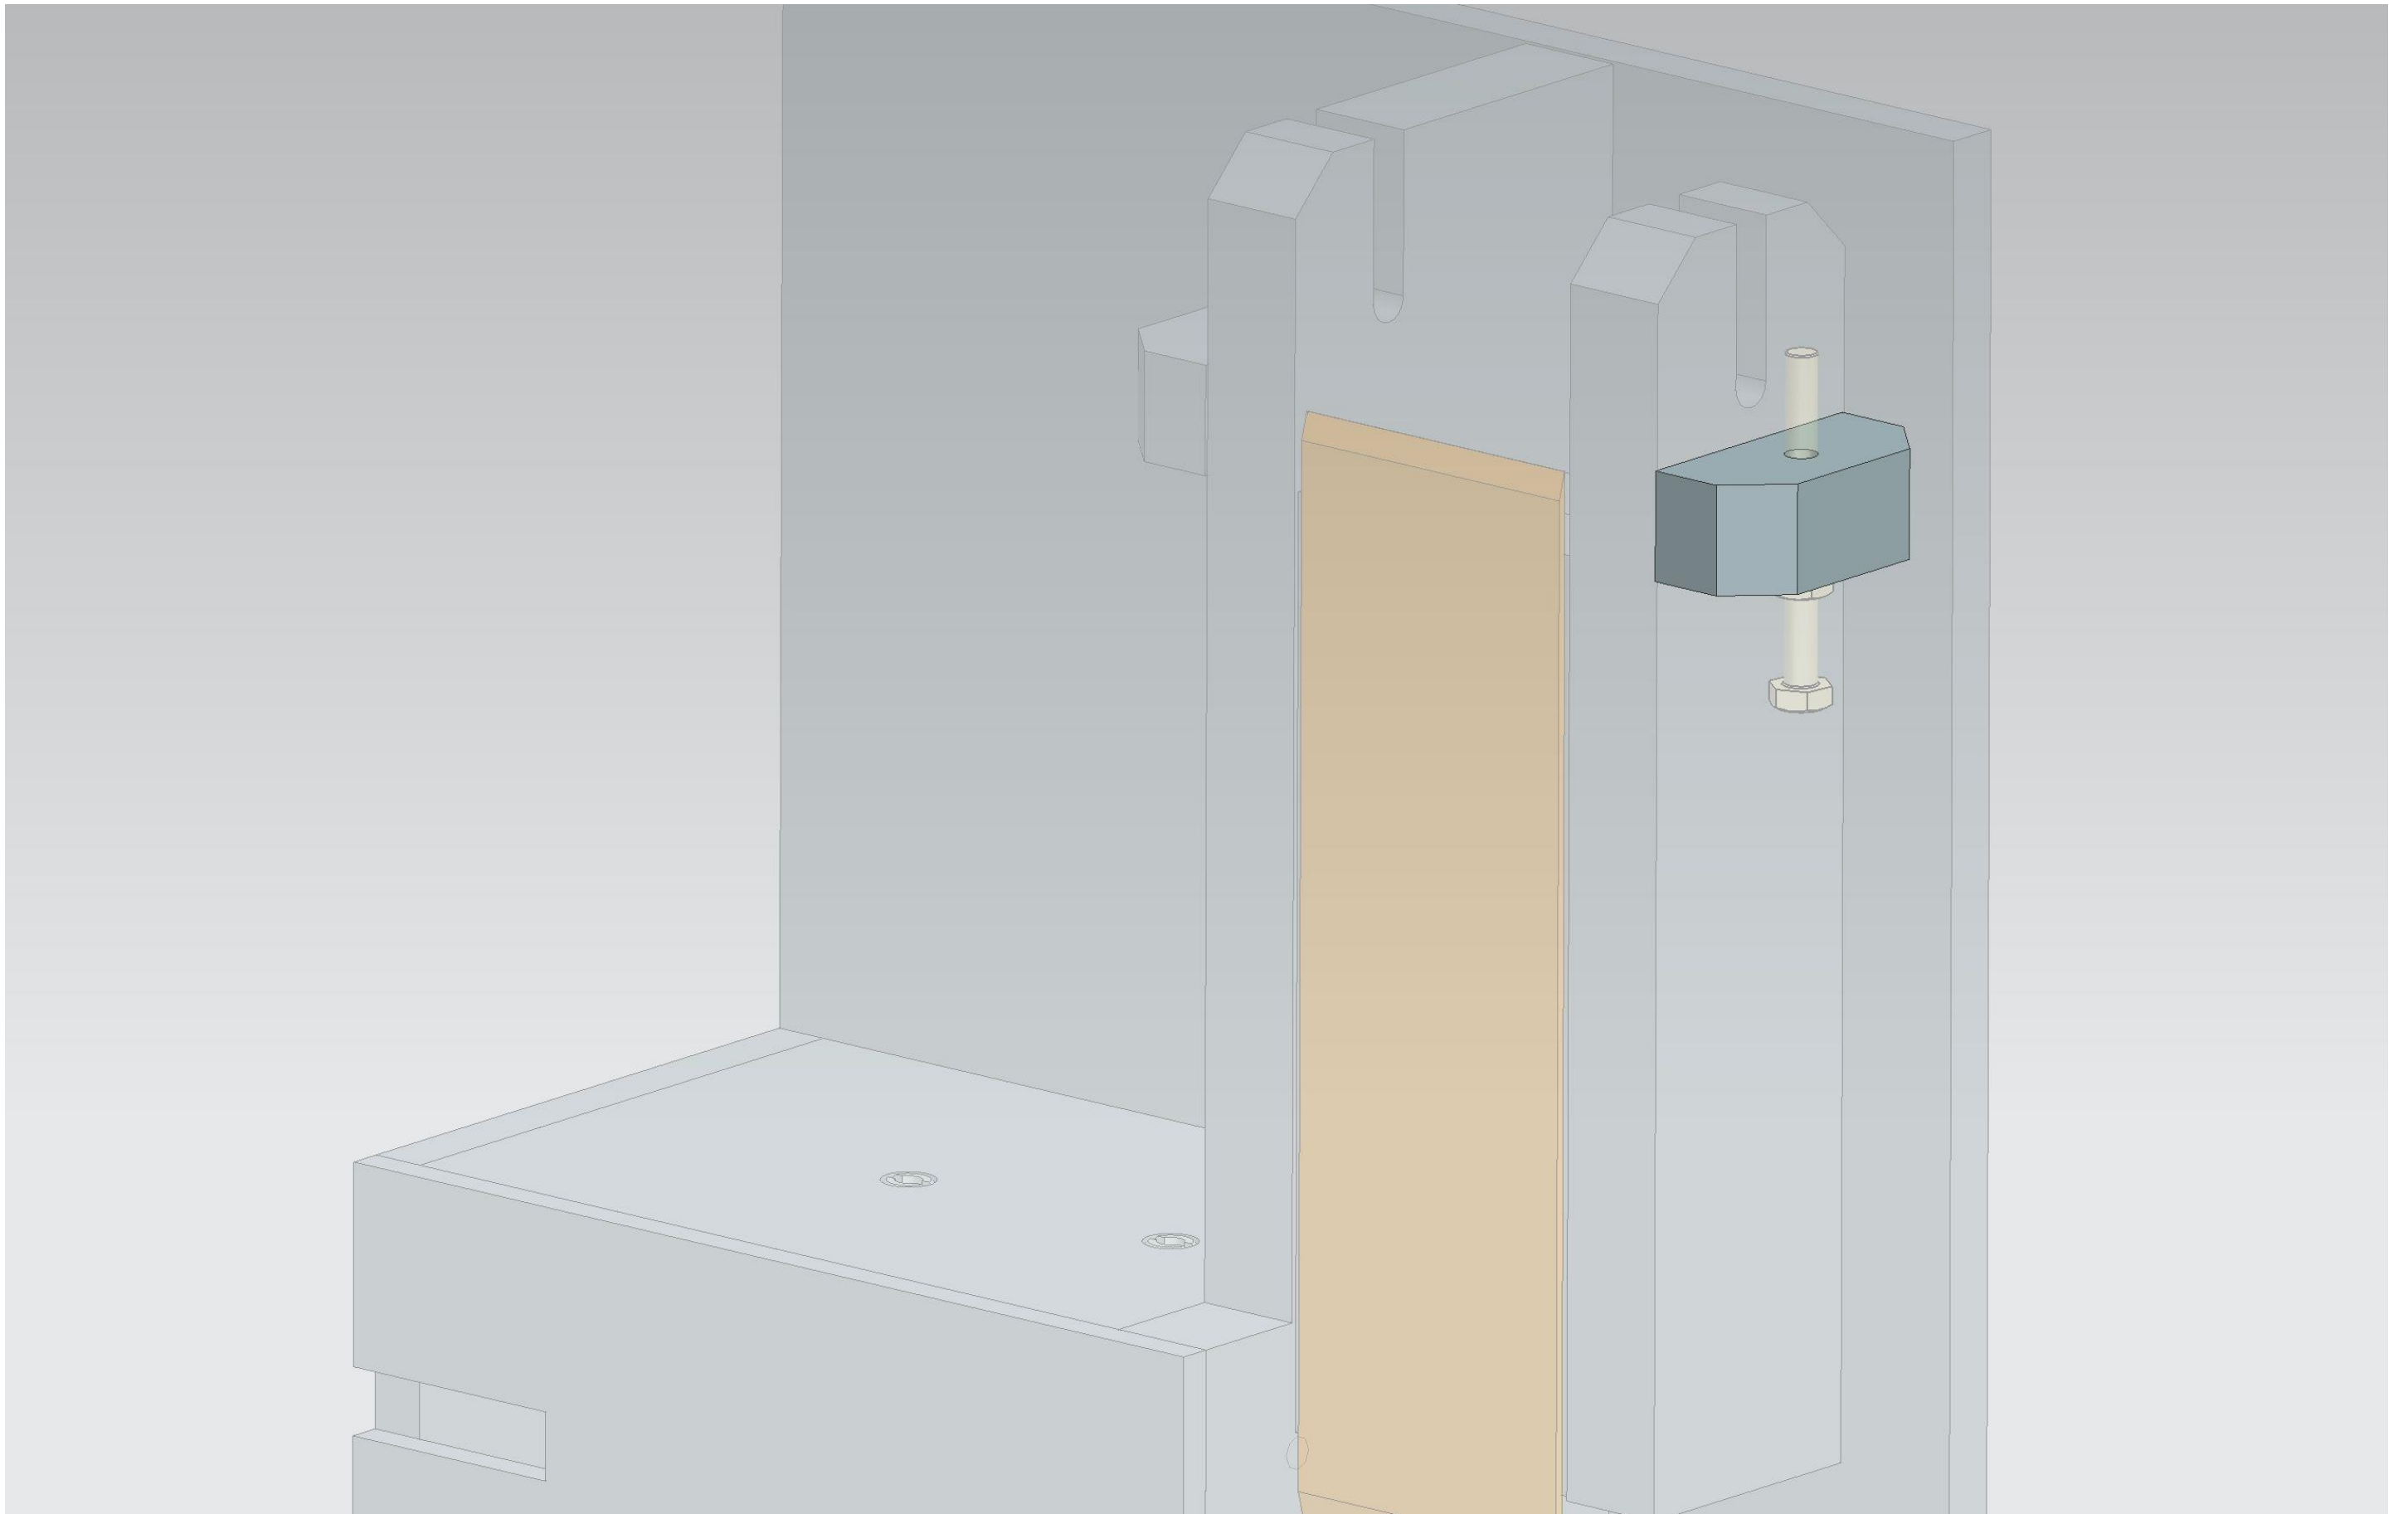


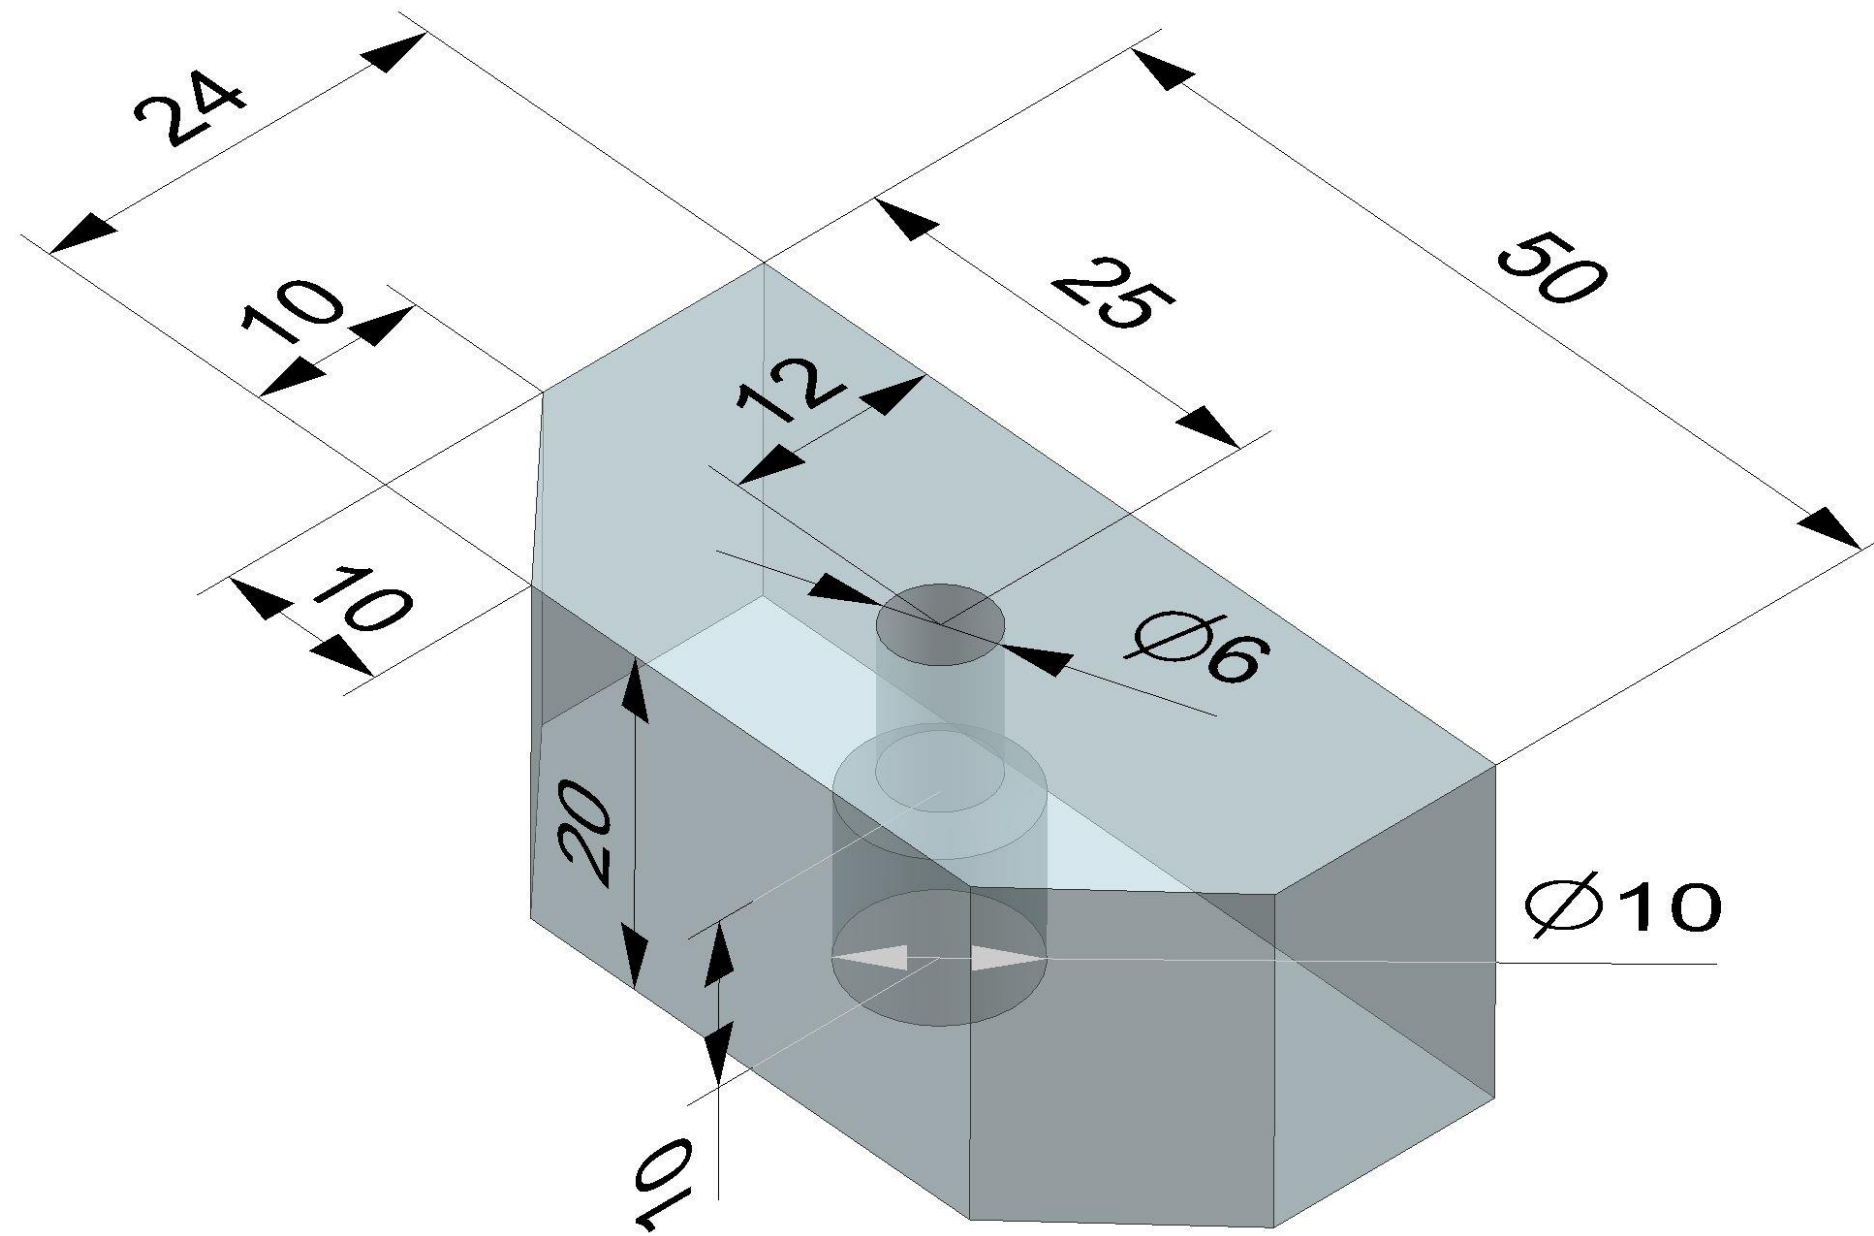


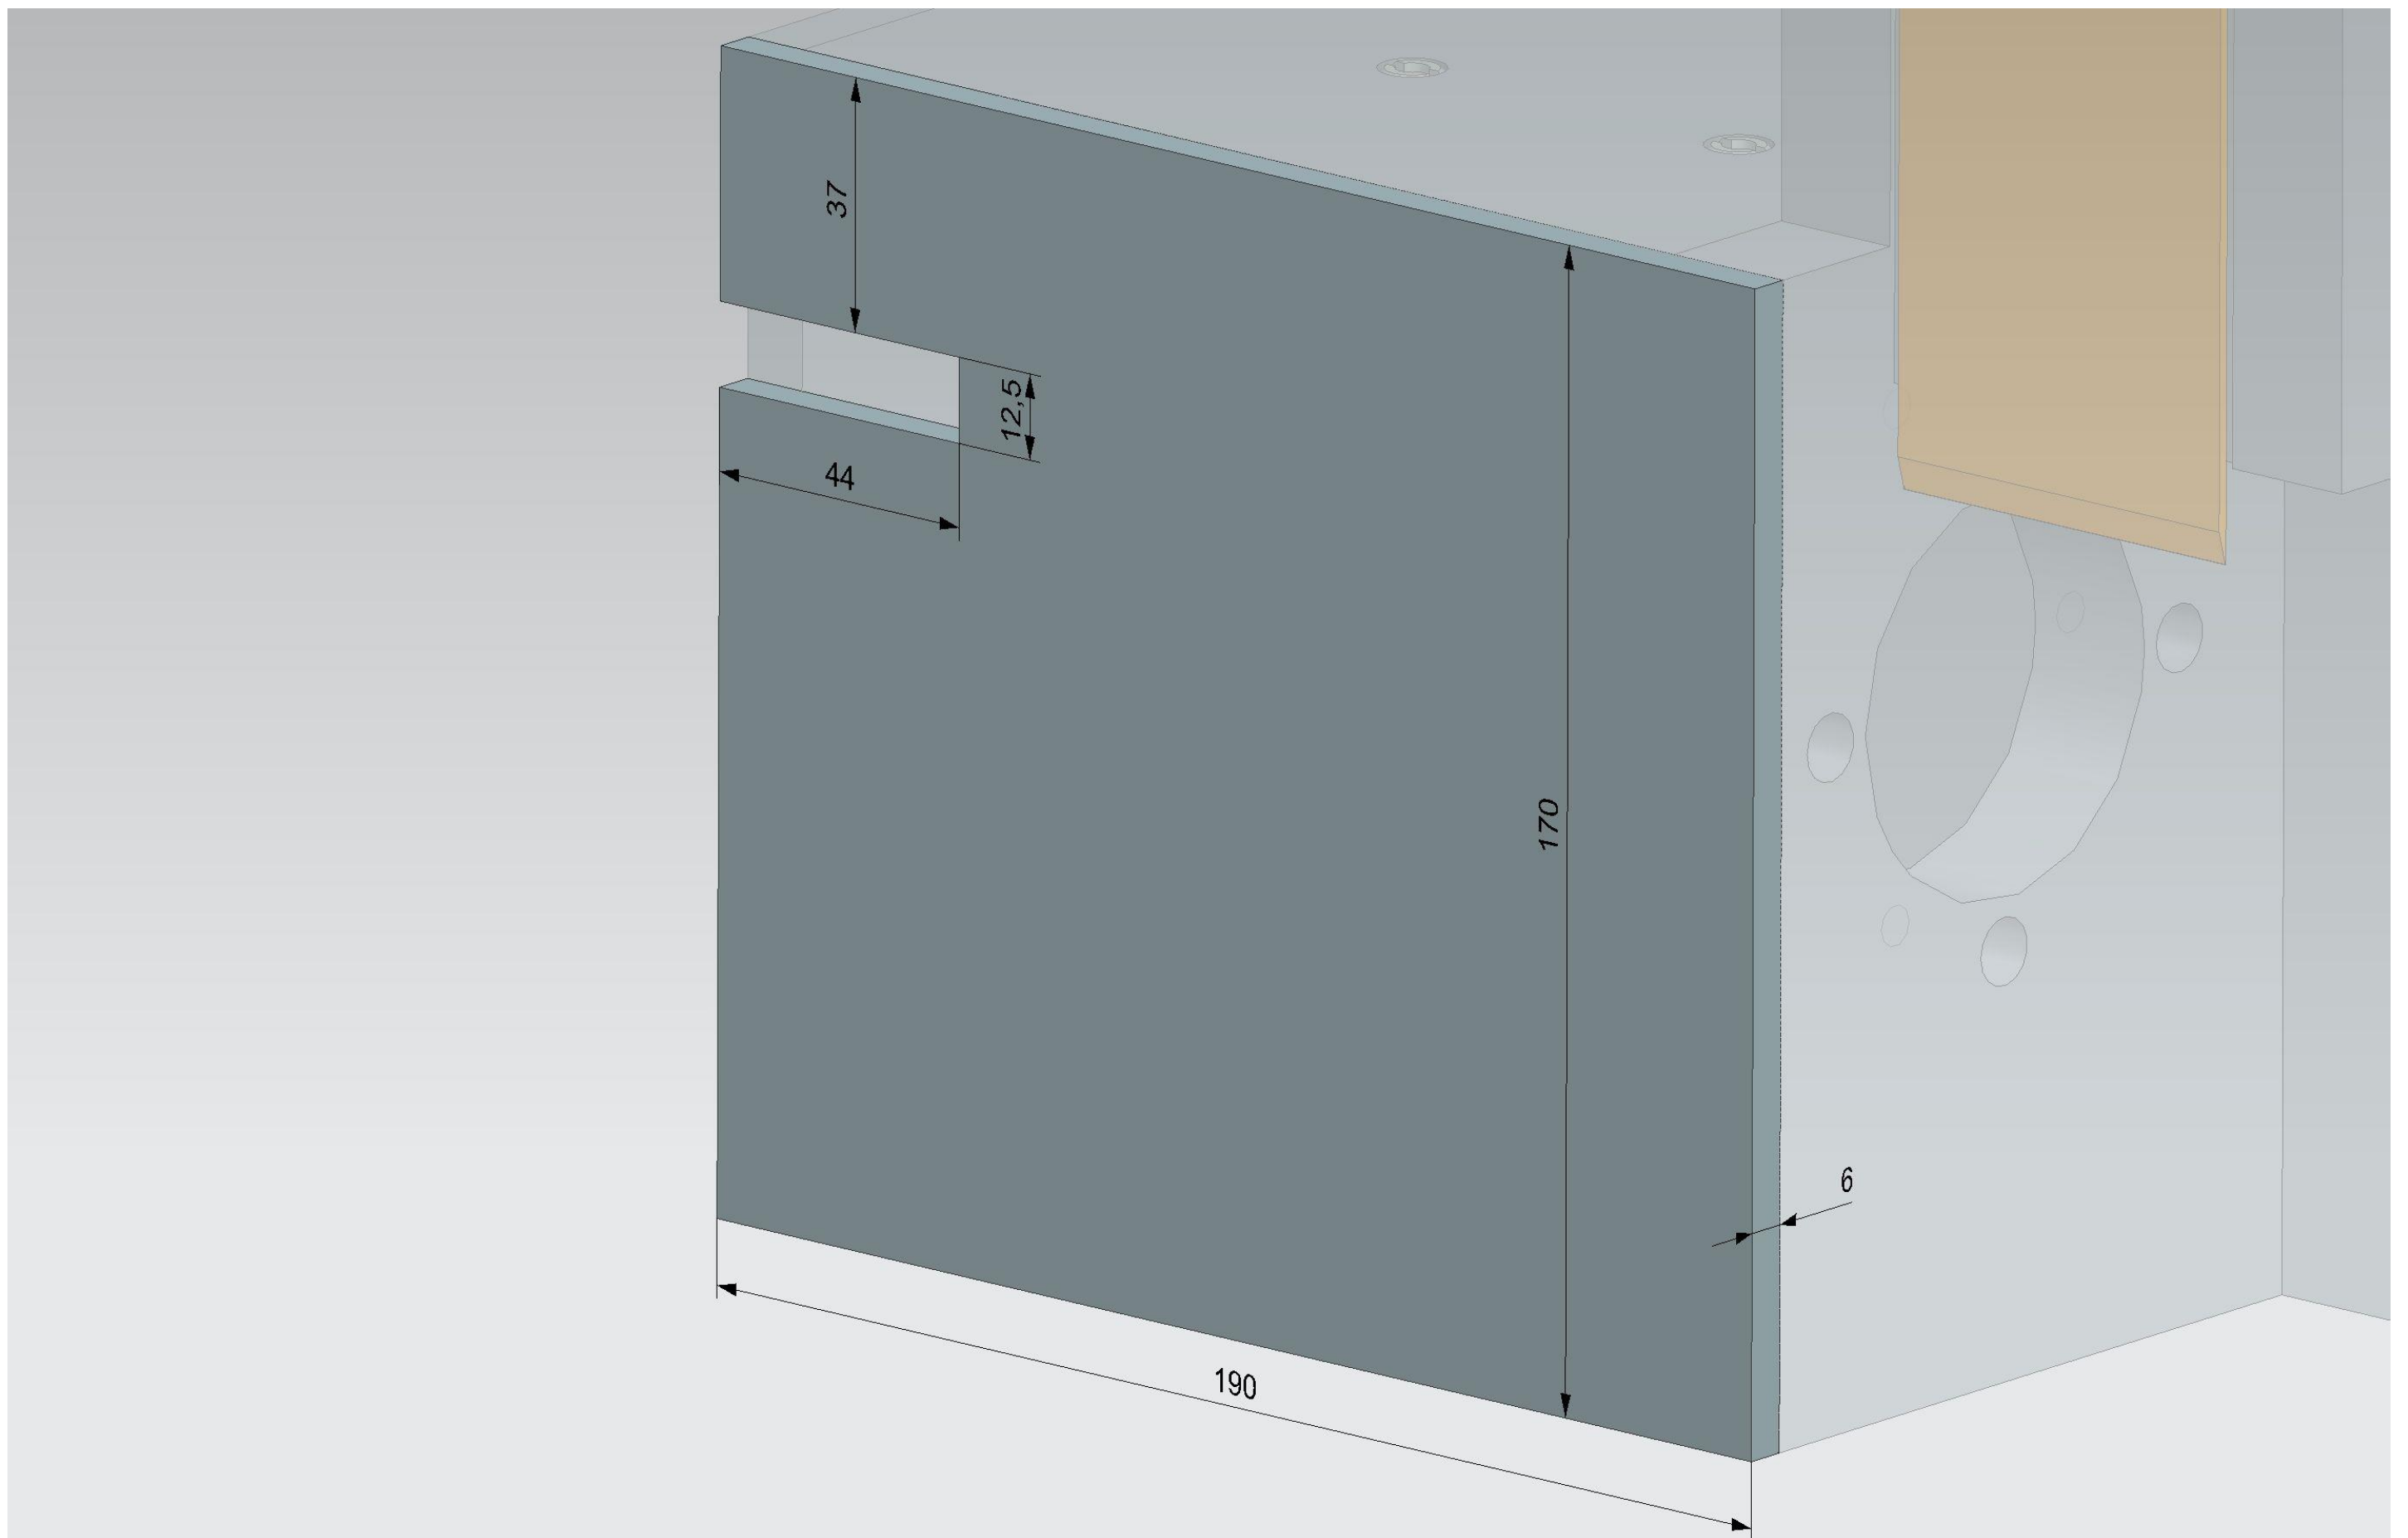


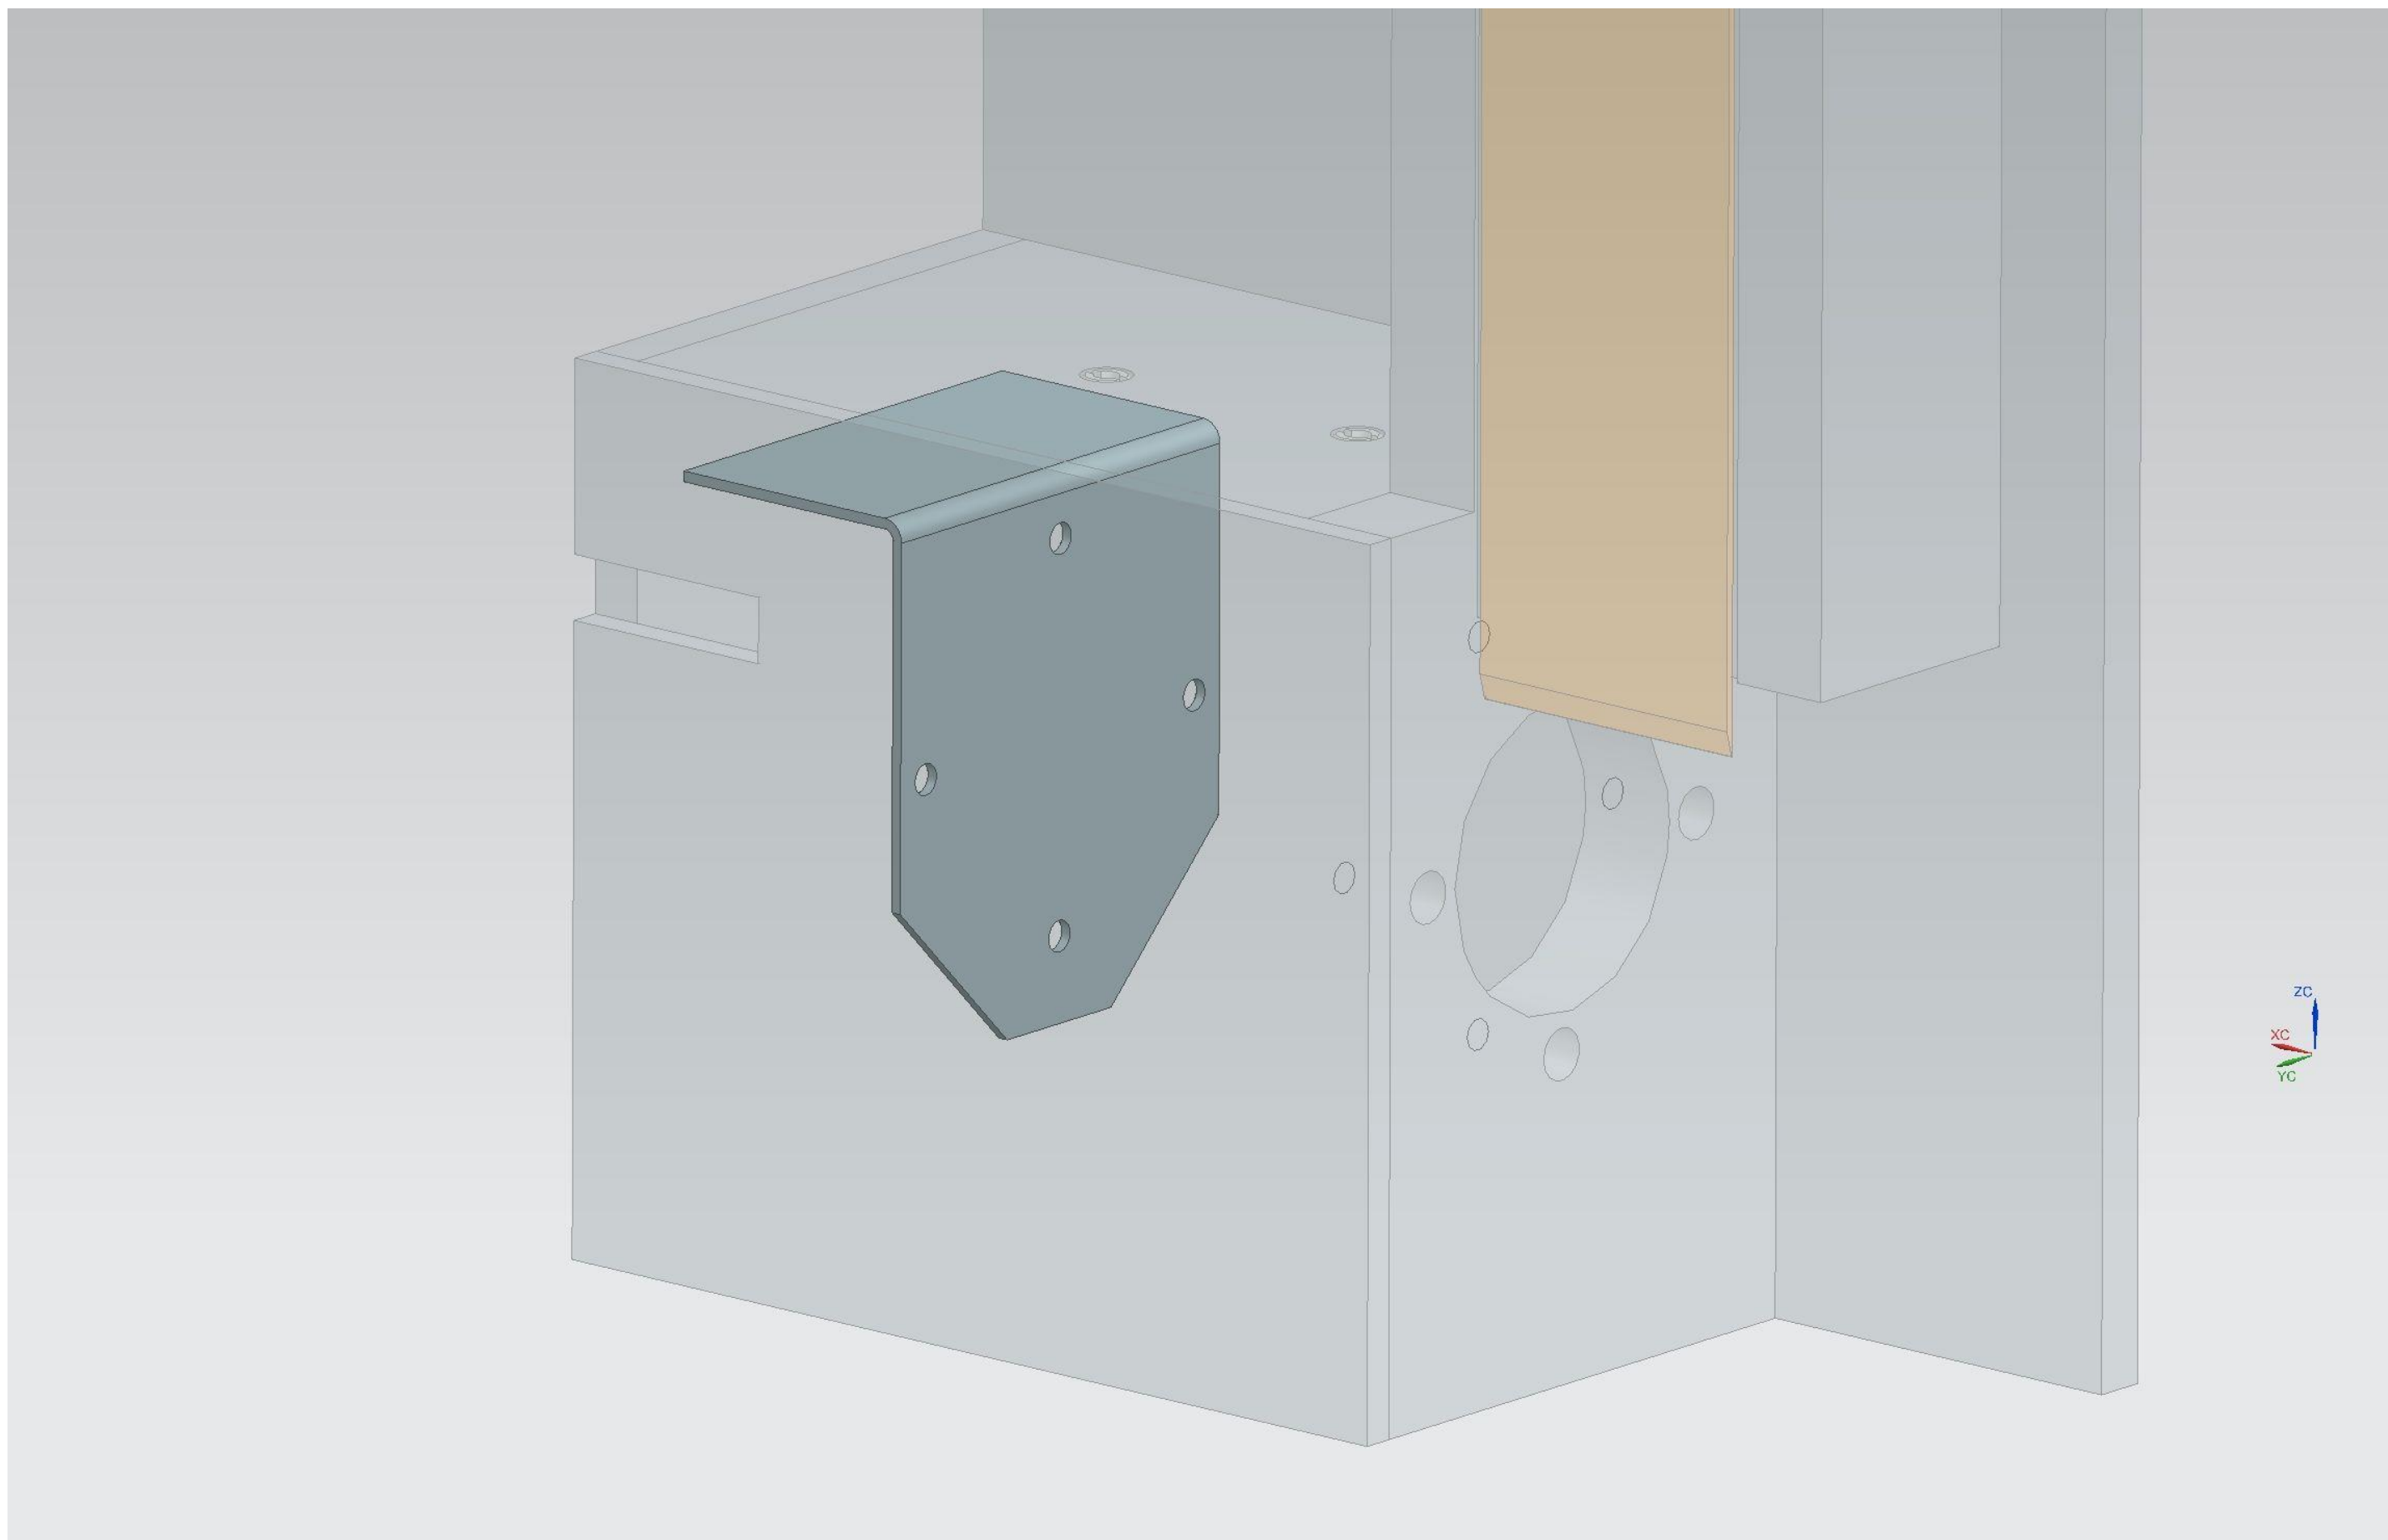


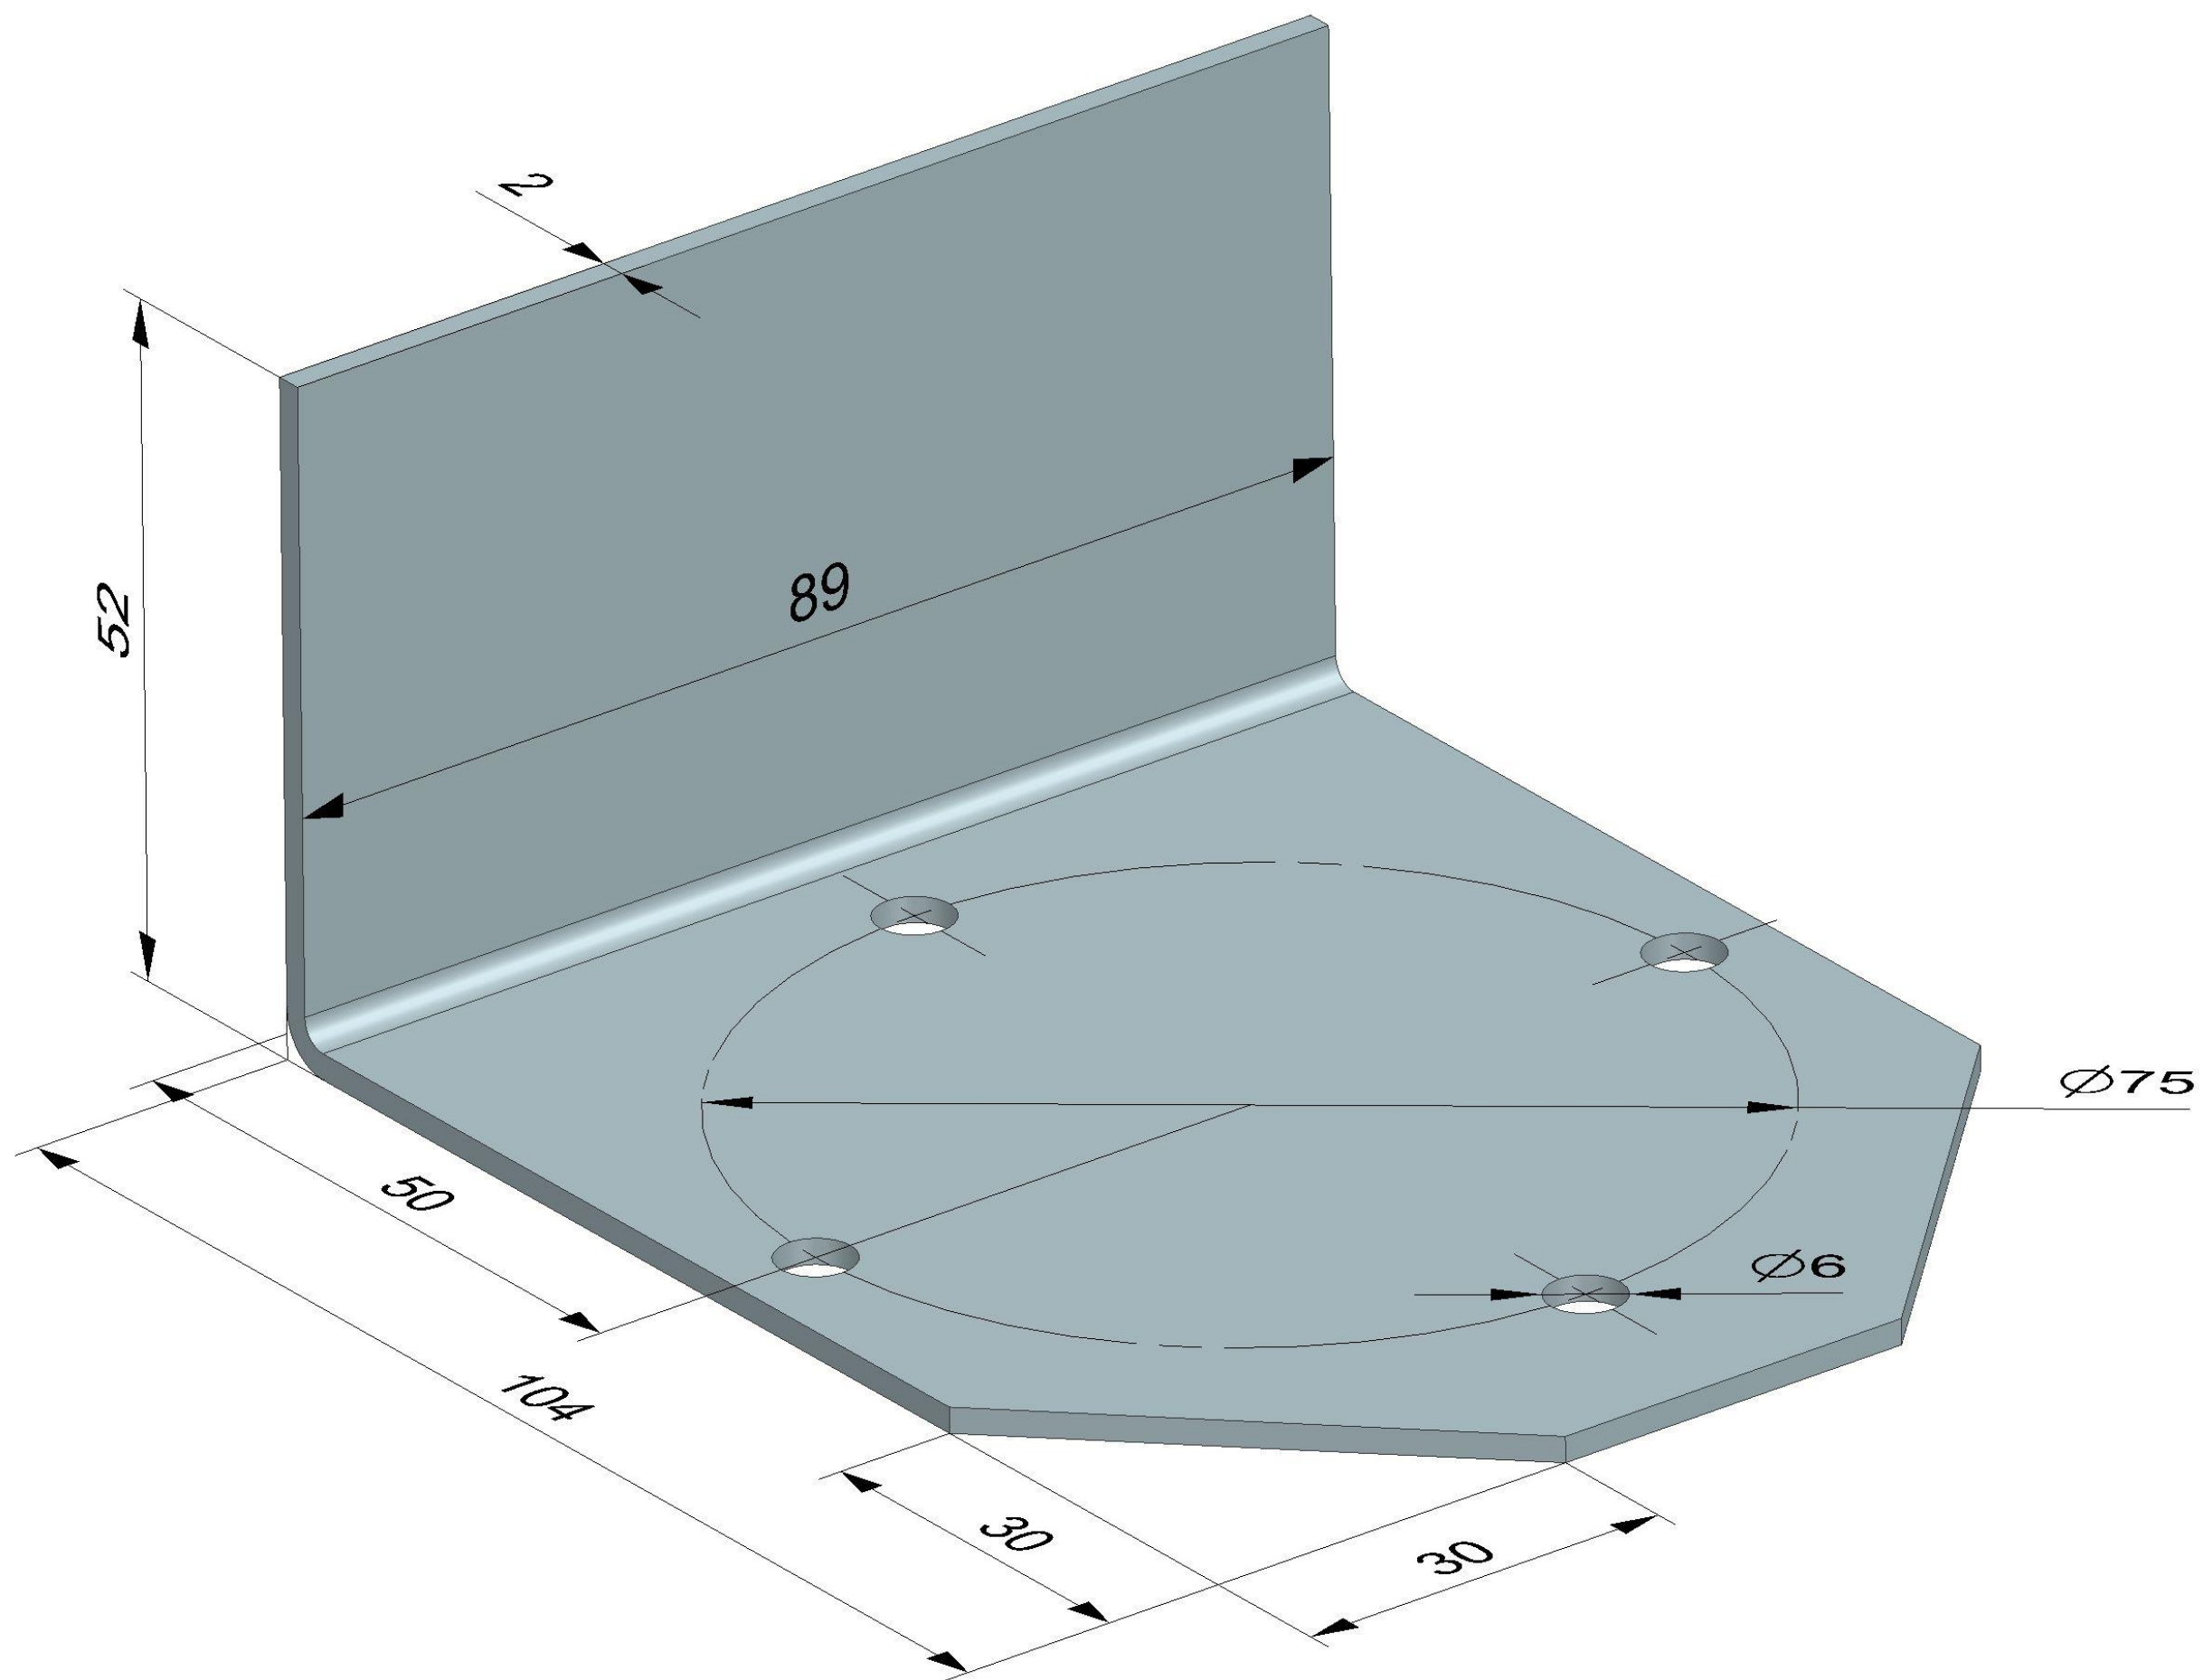


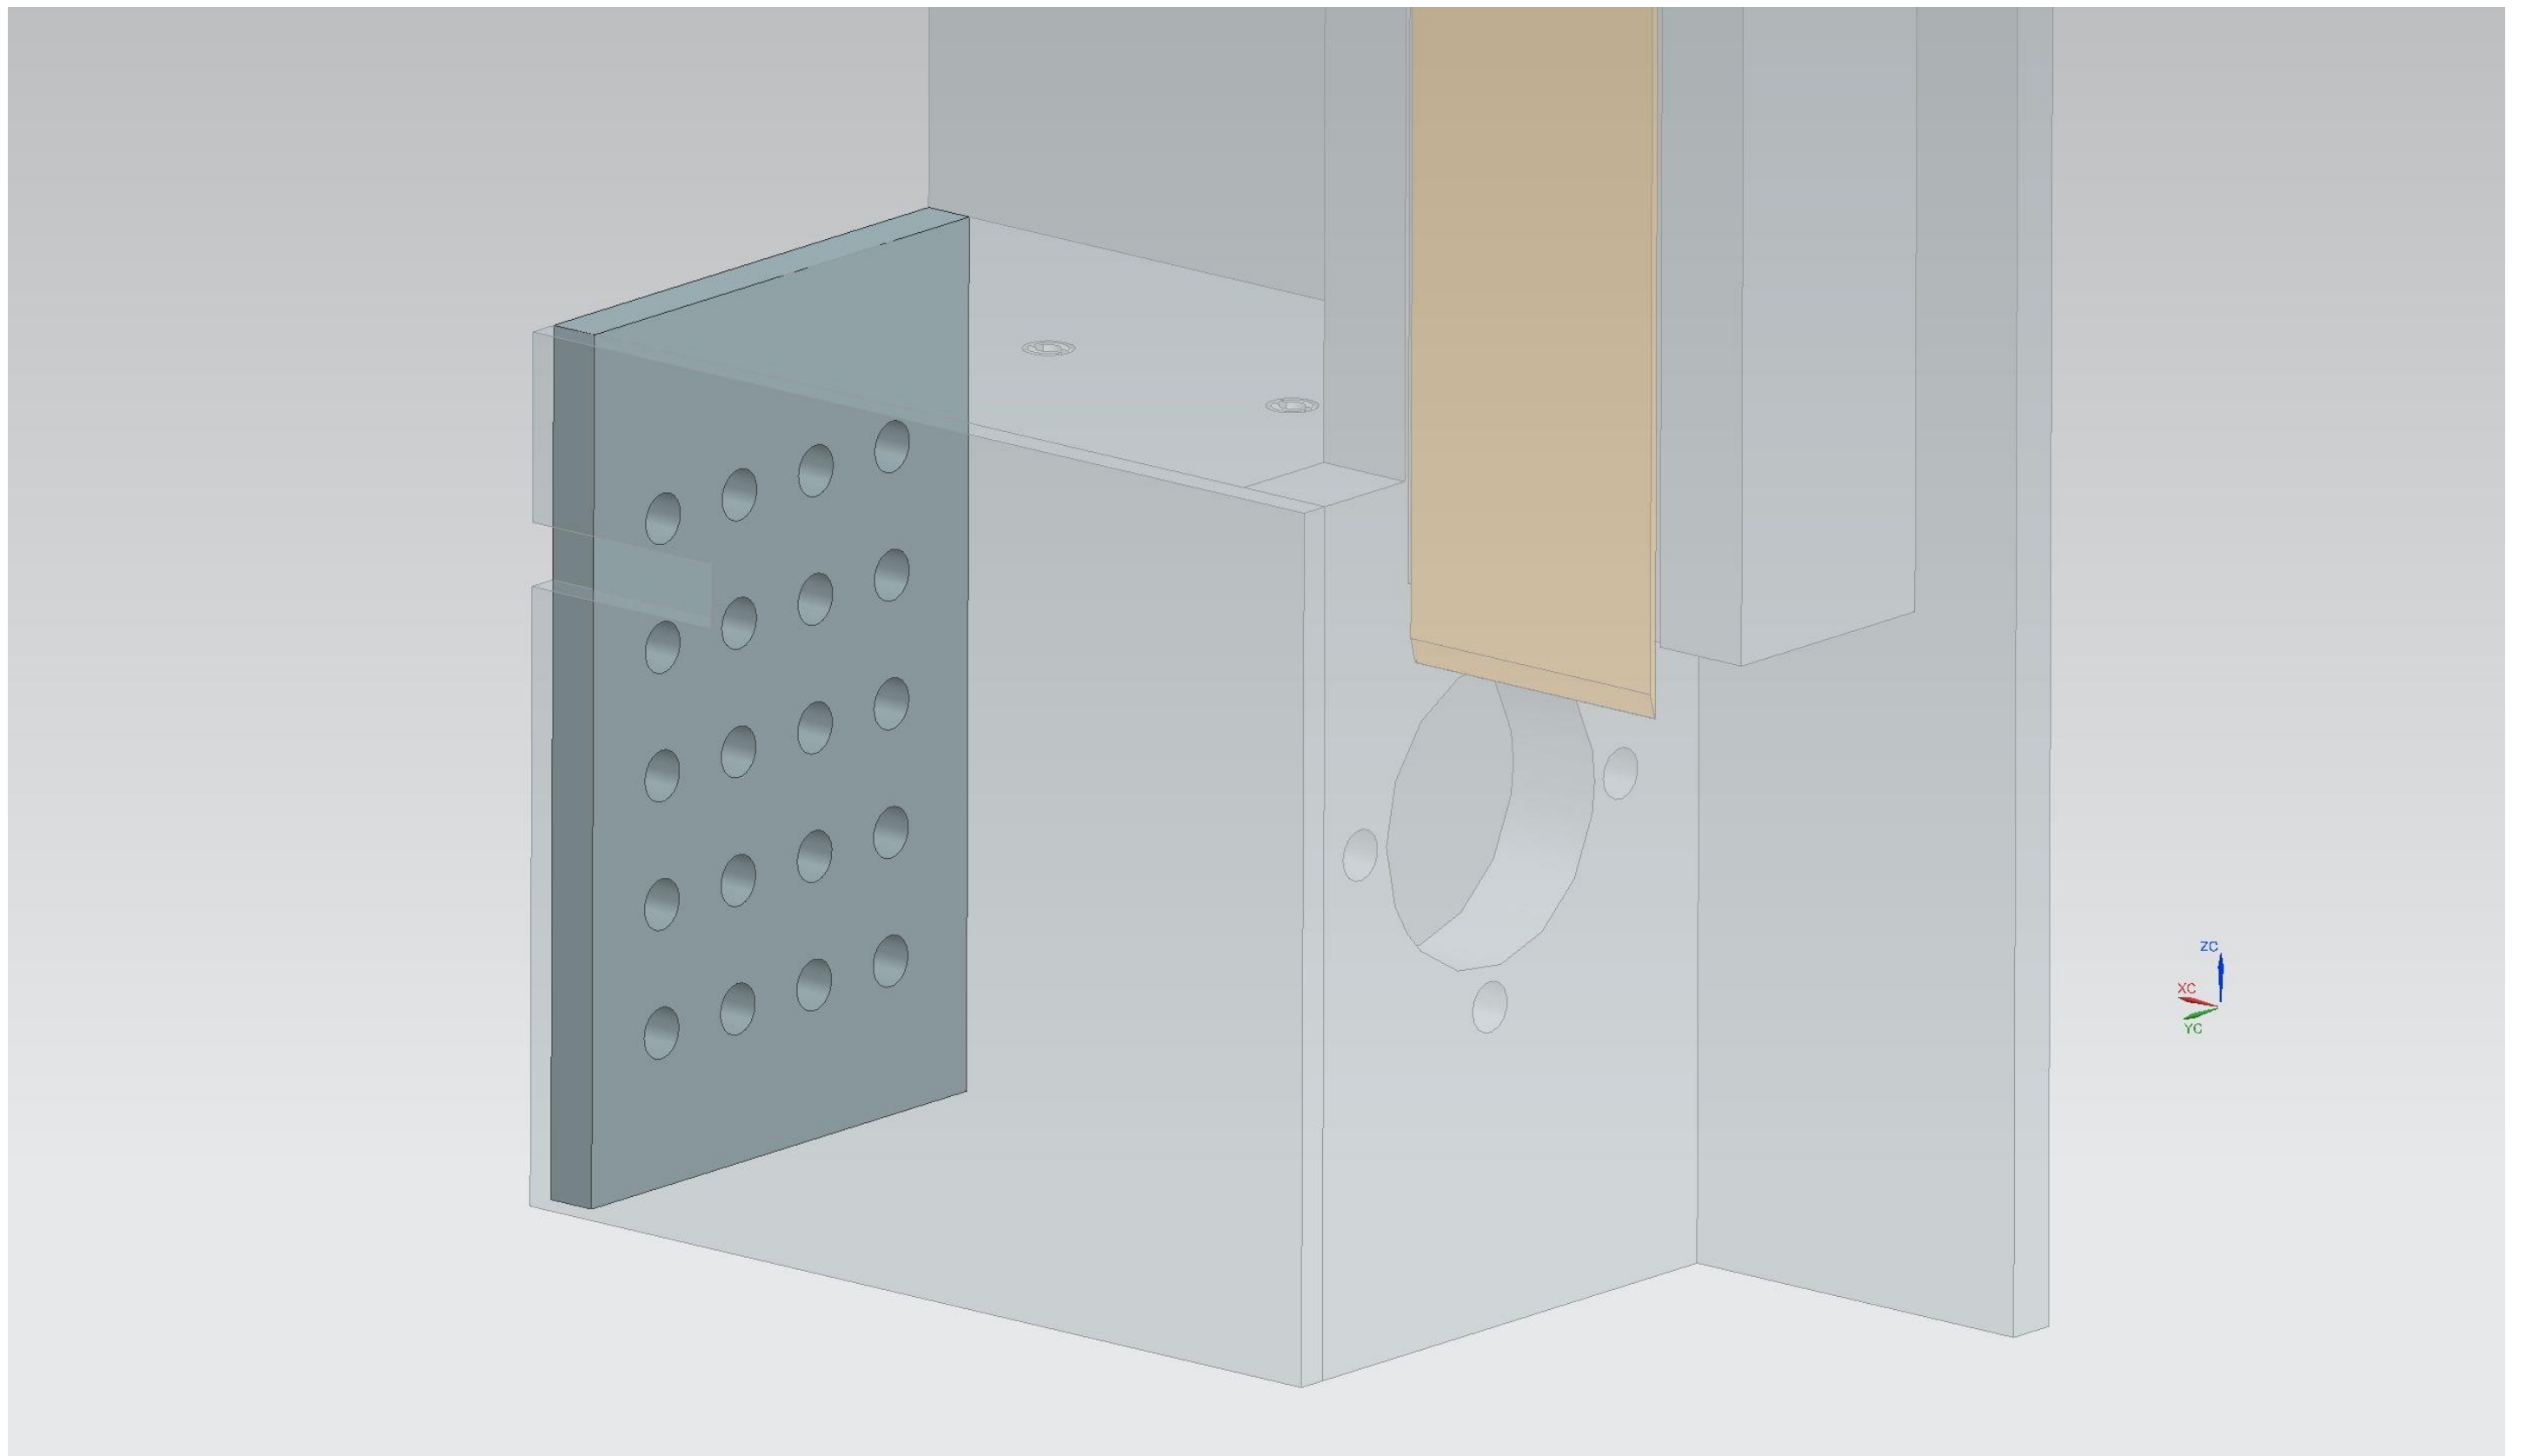

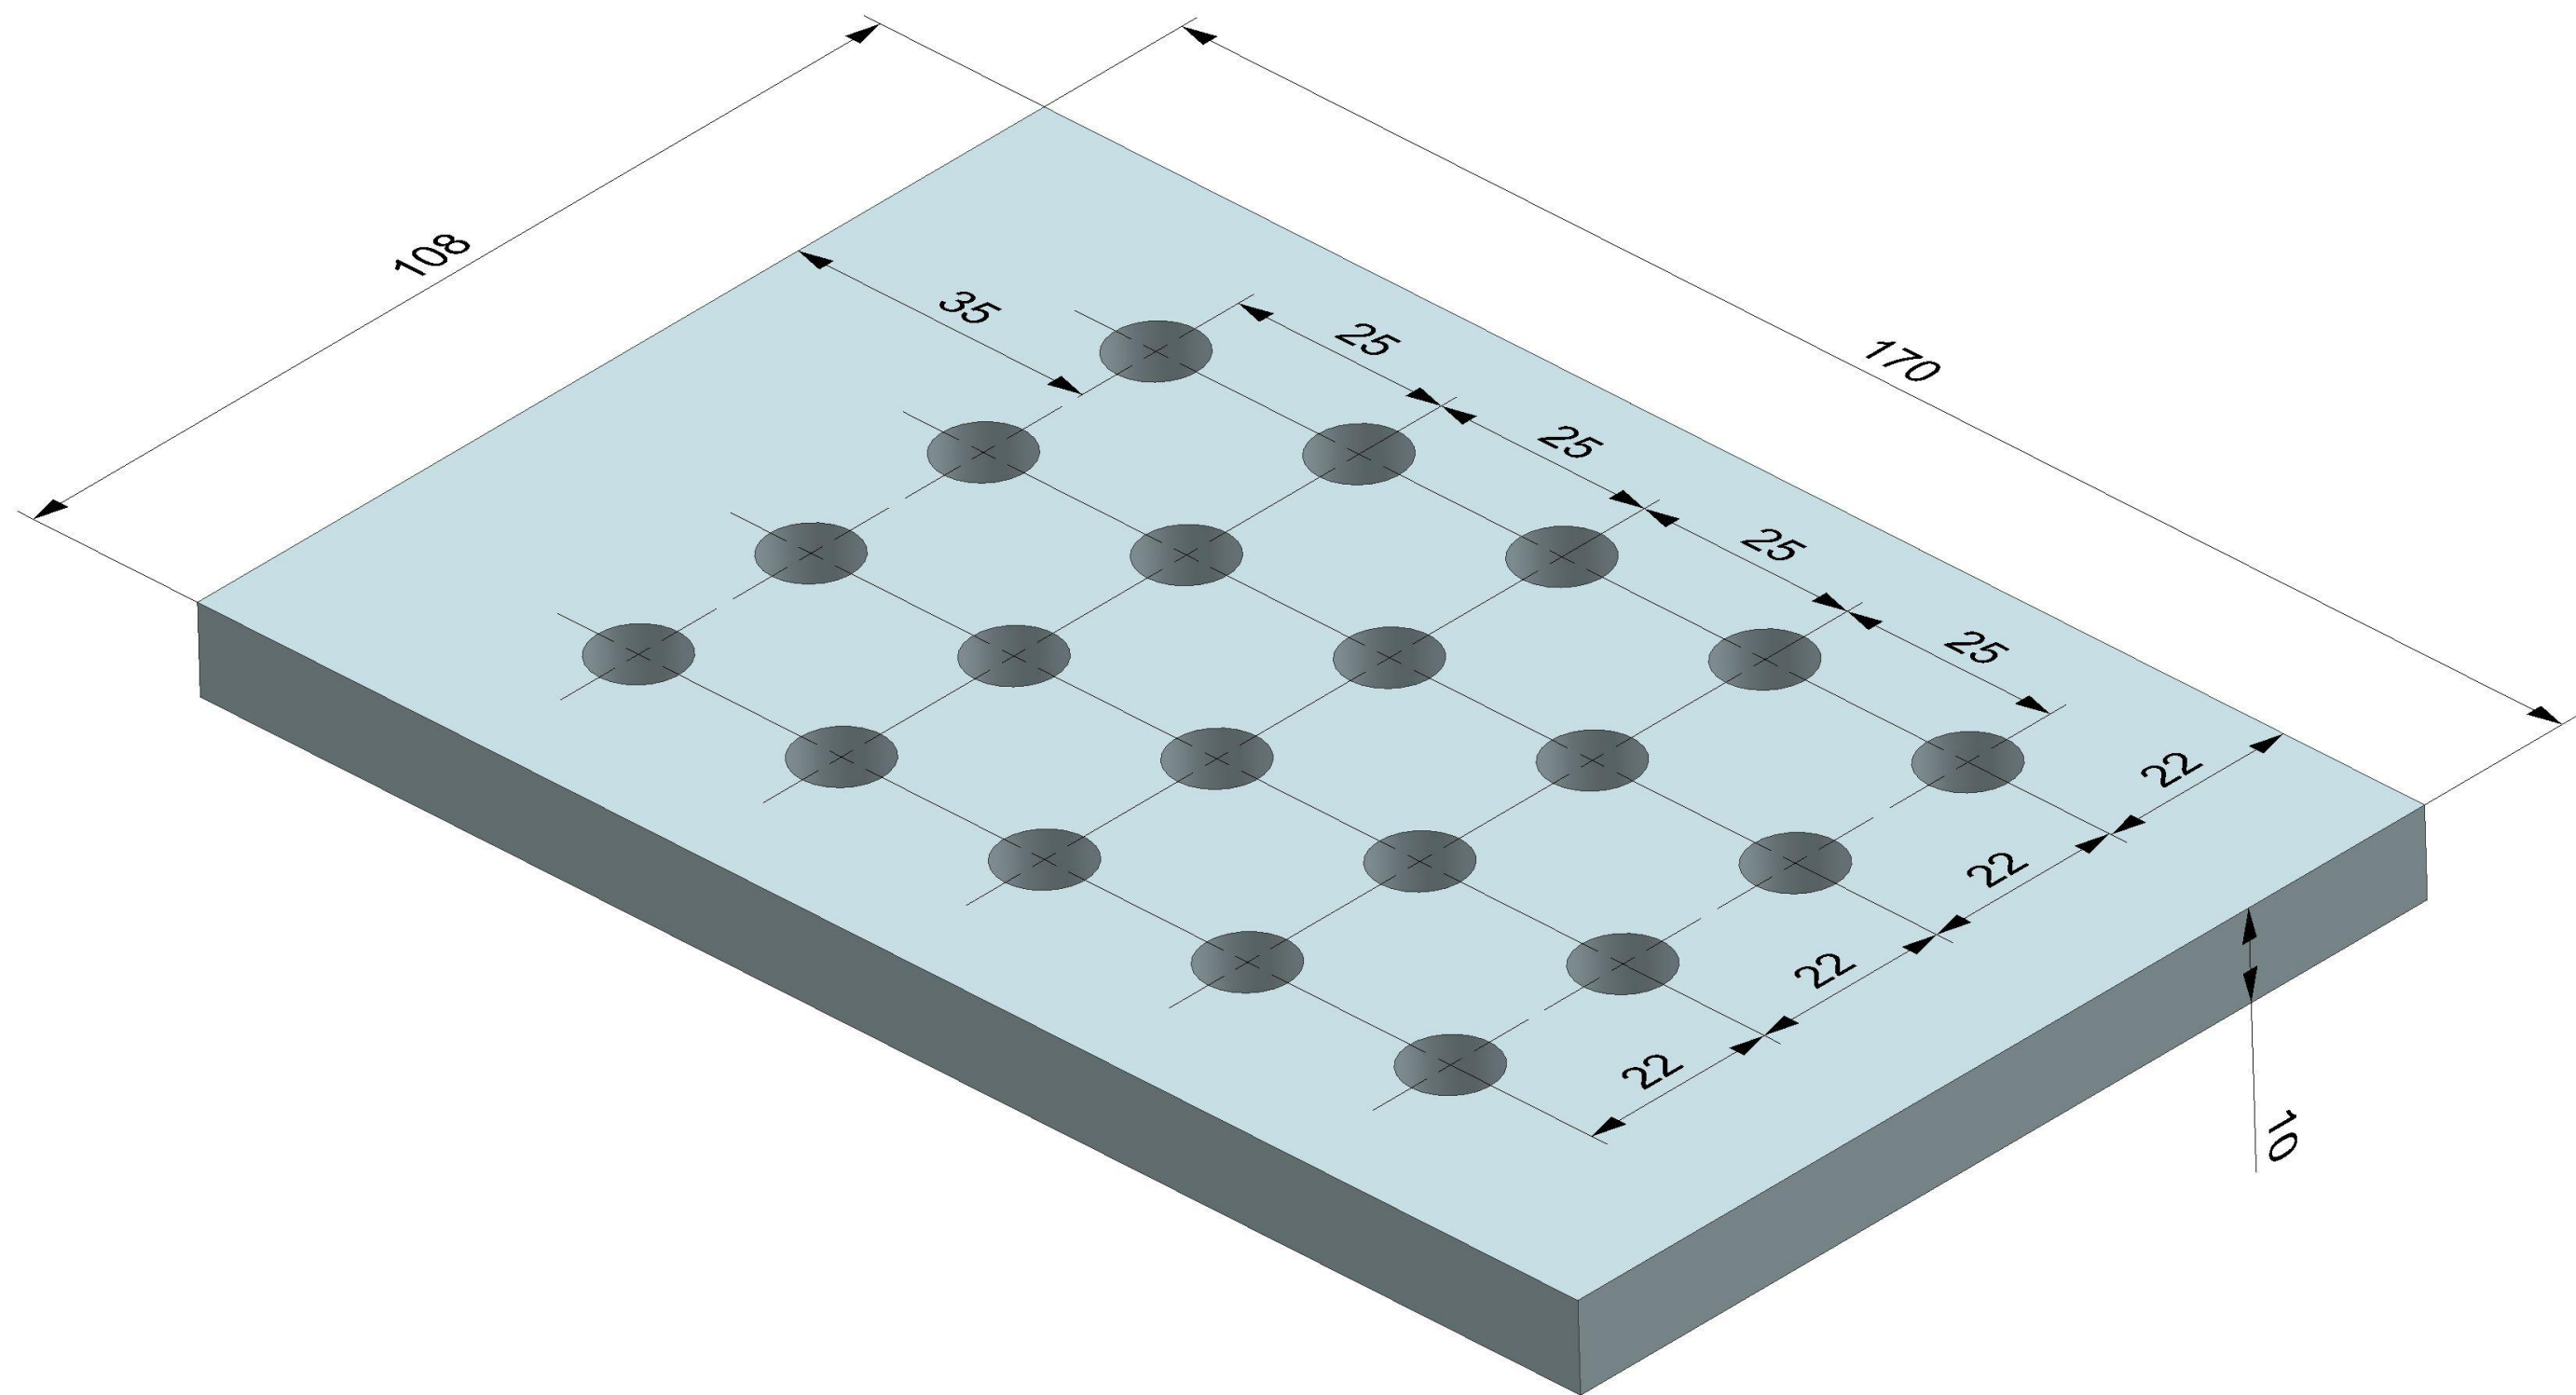

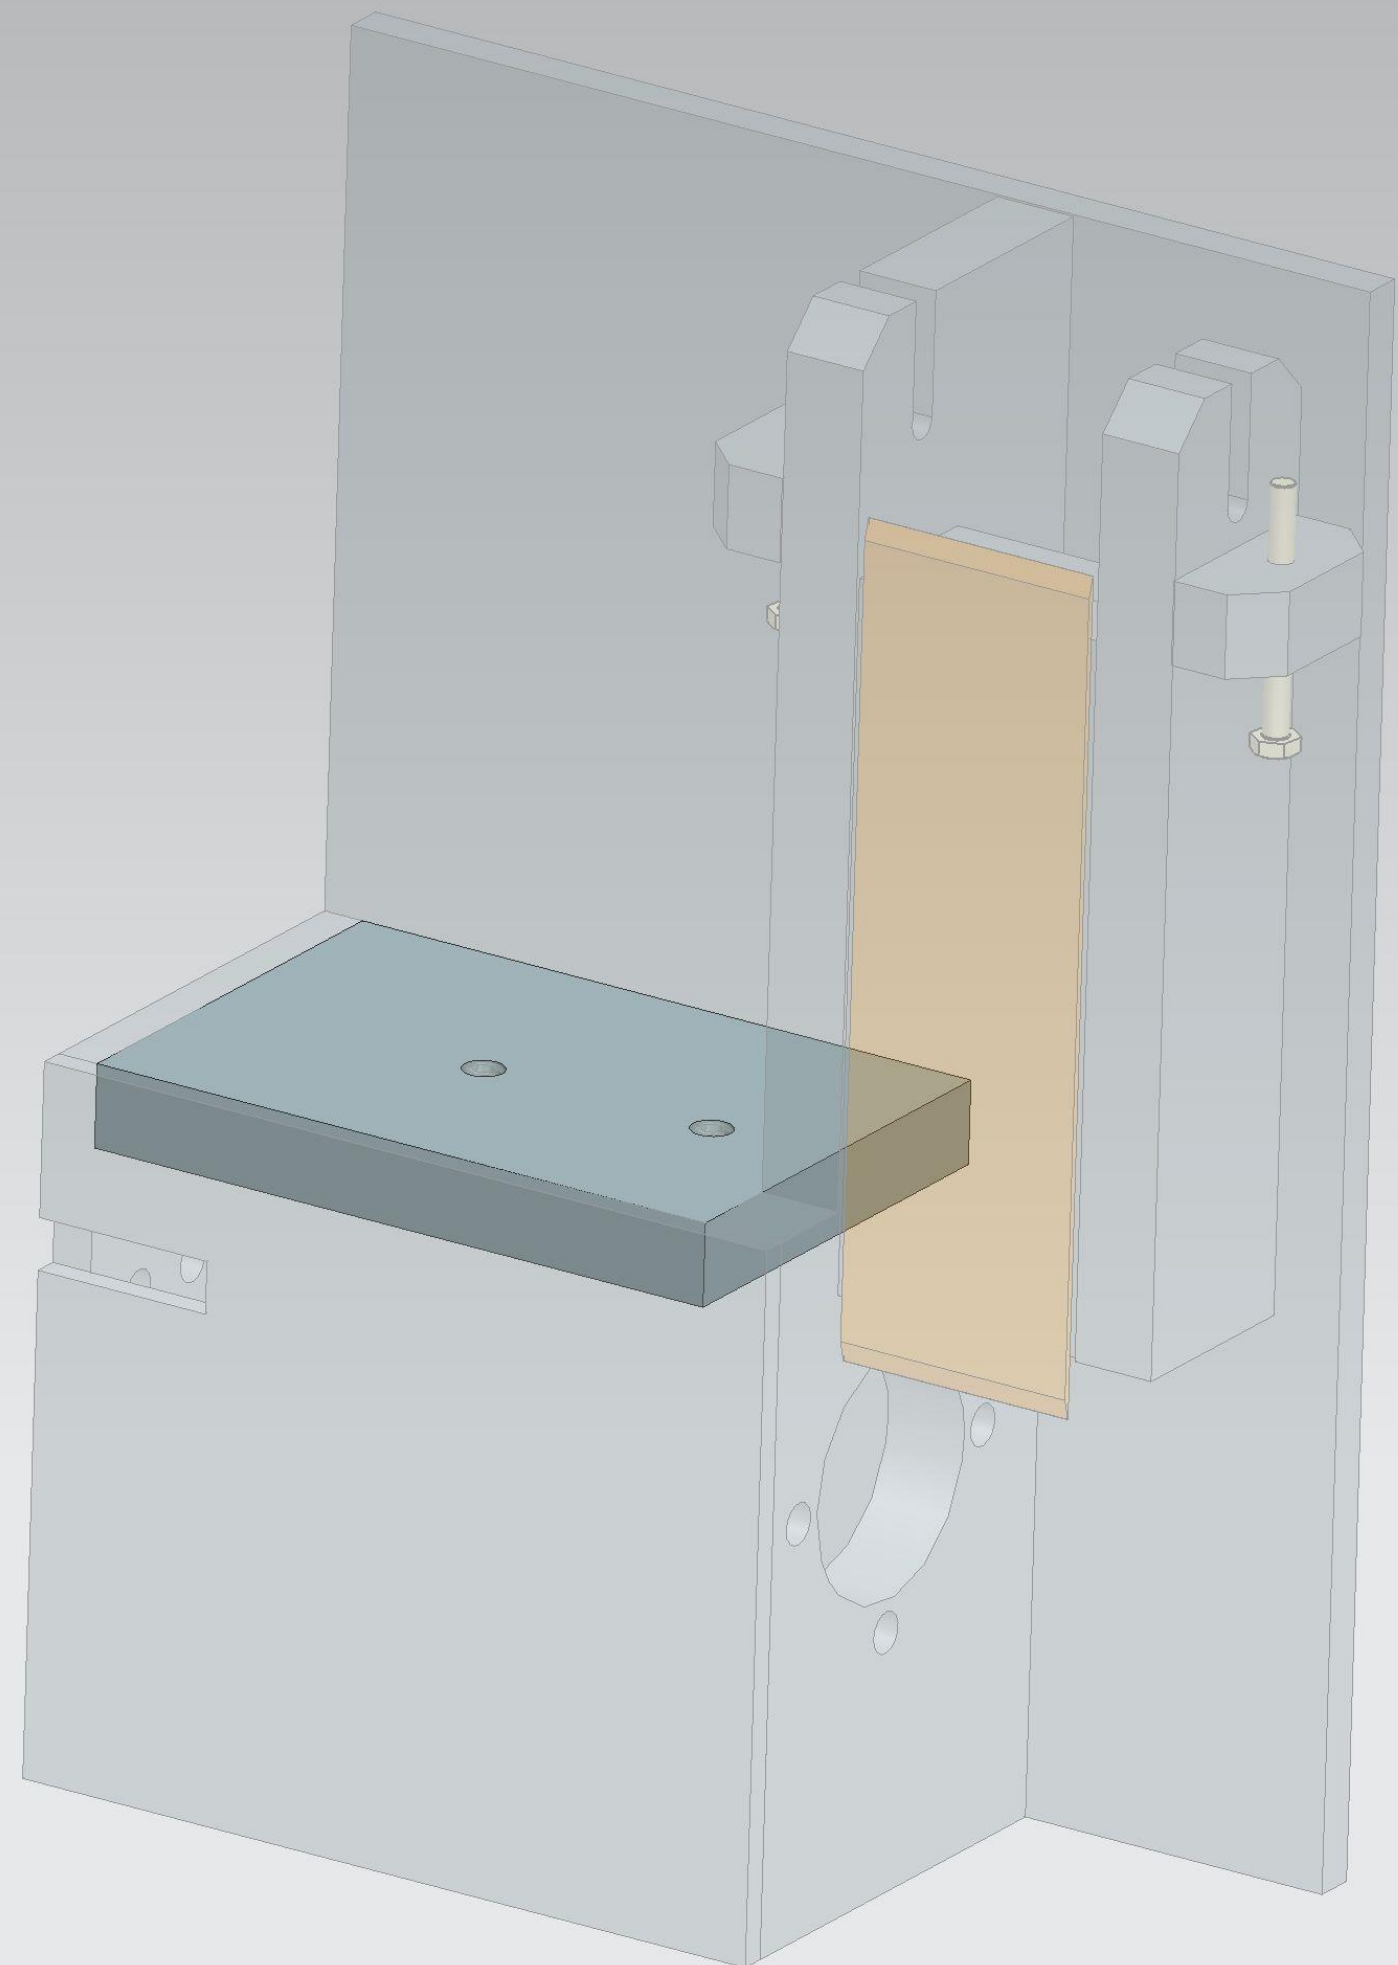


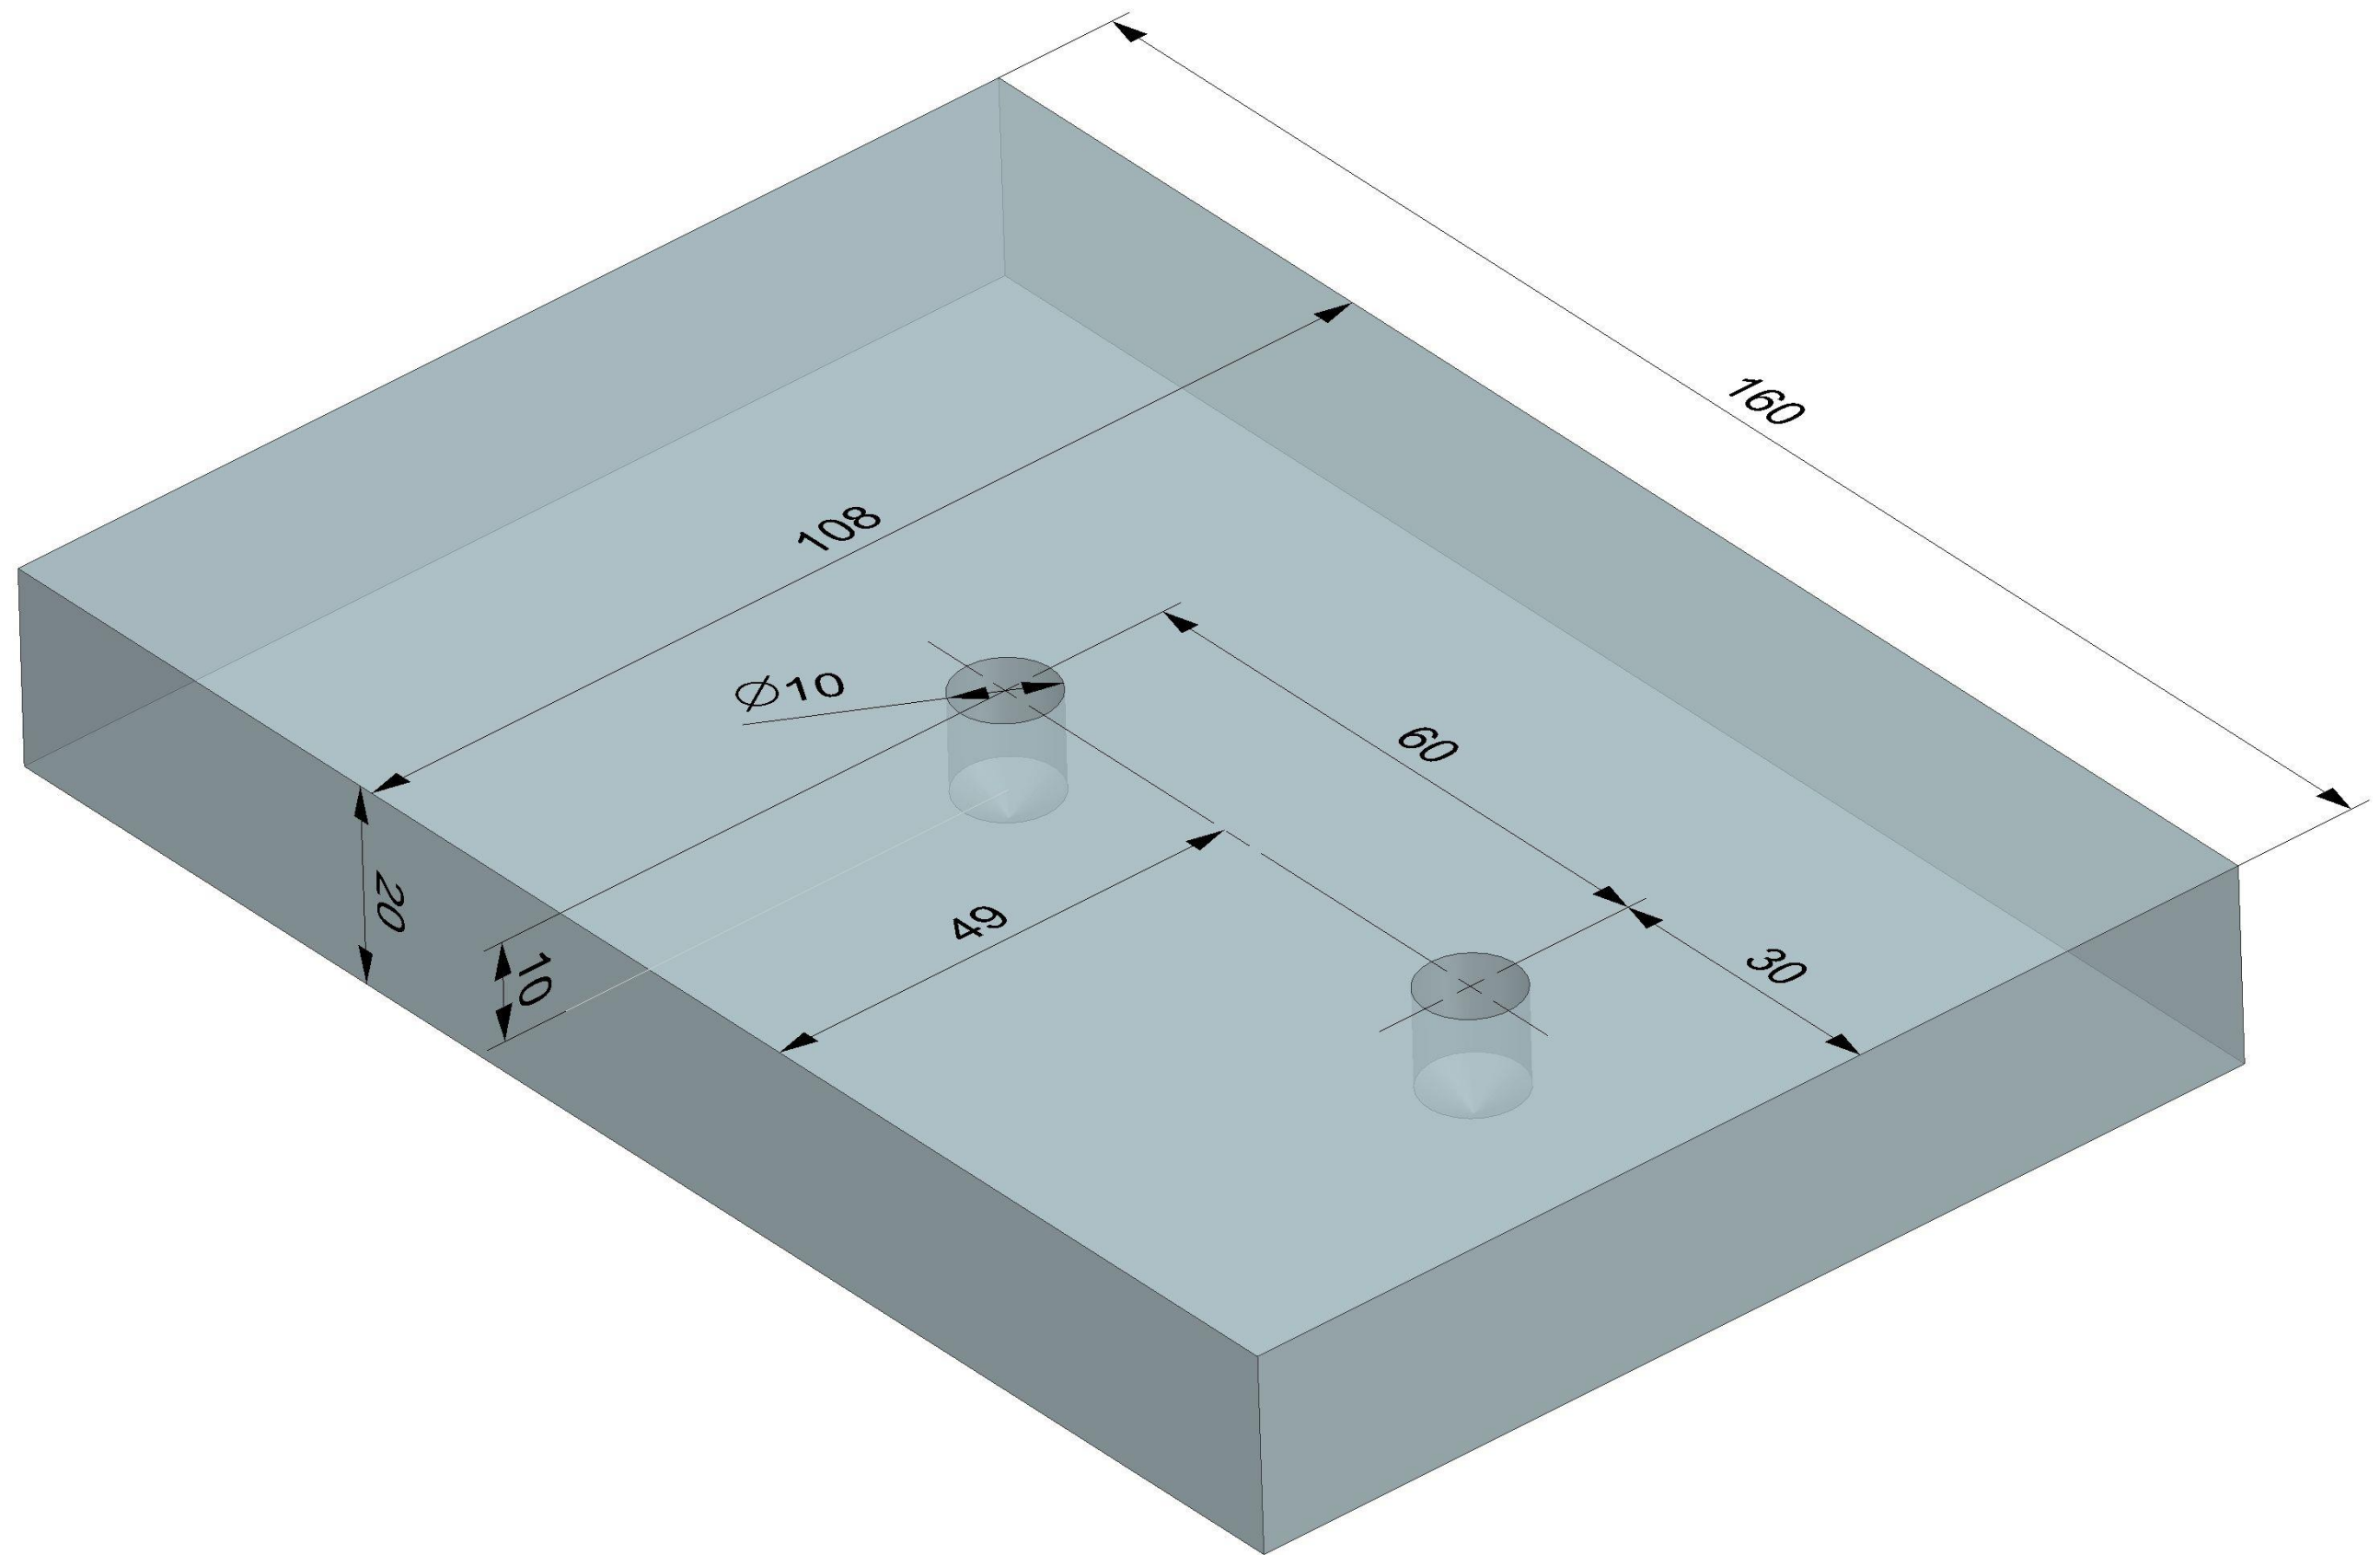


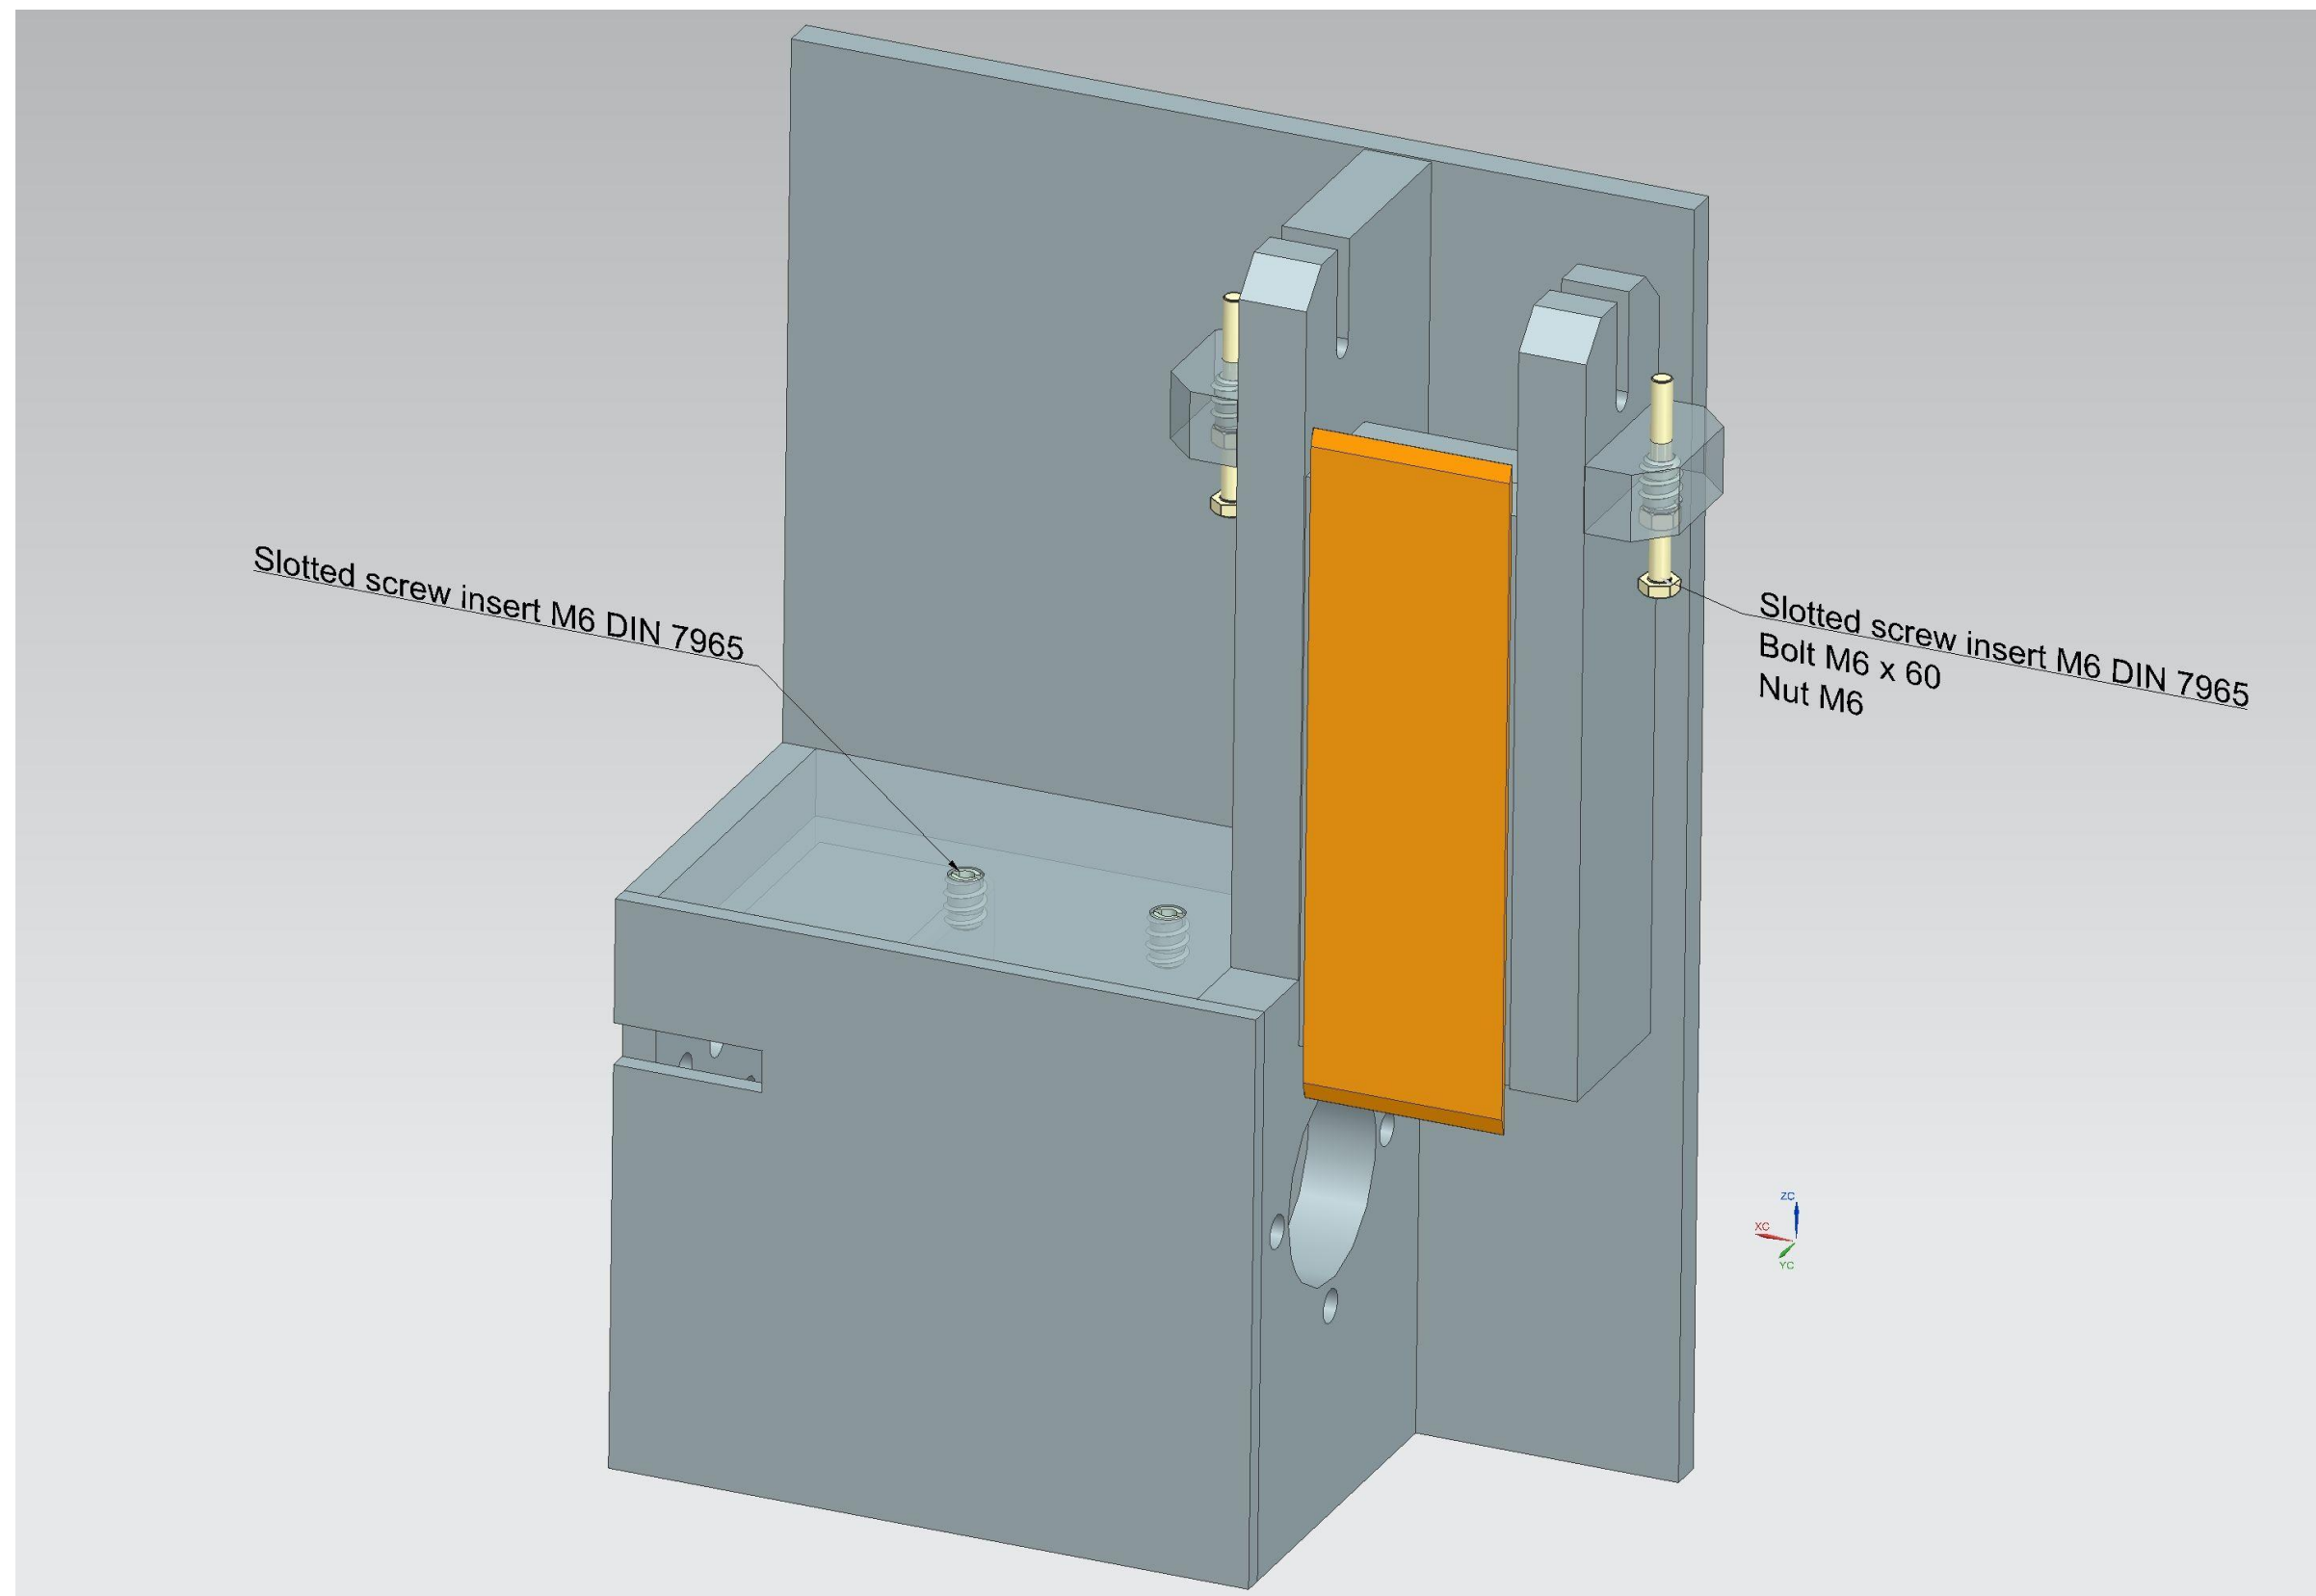


Fasteners:

- [Bolt M6x60](#)
- [Nut M6](#)
- [Threaded Insert M6](#)

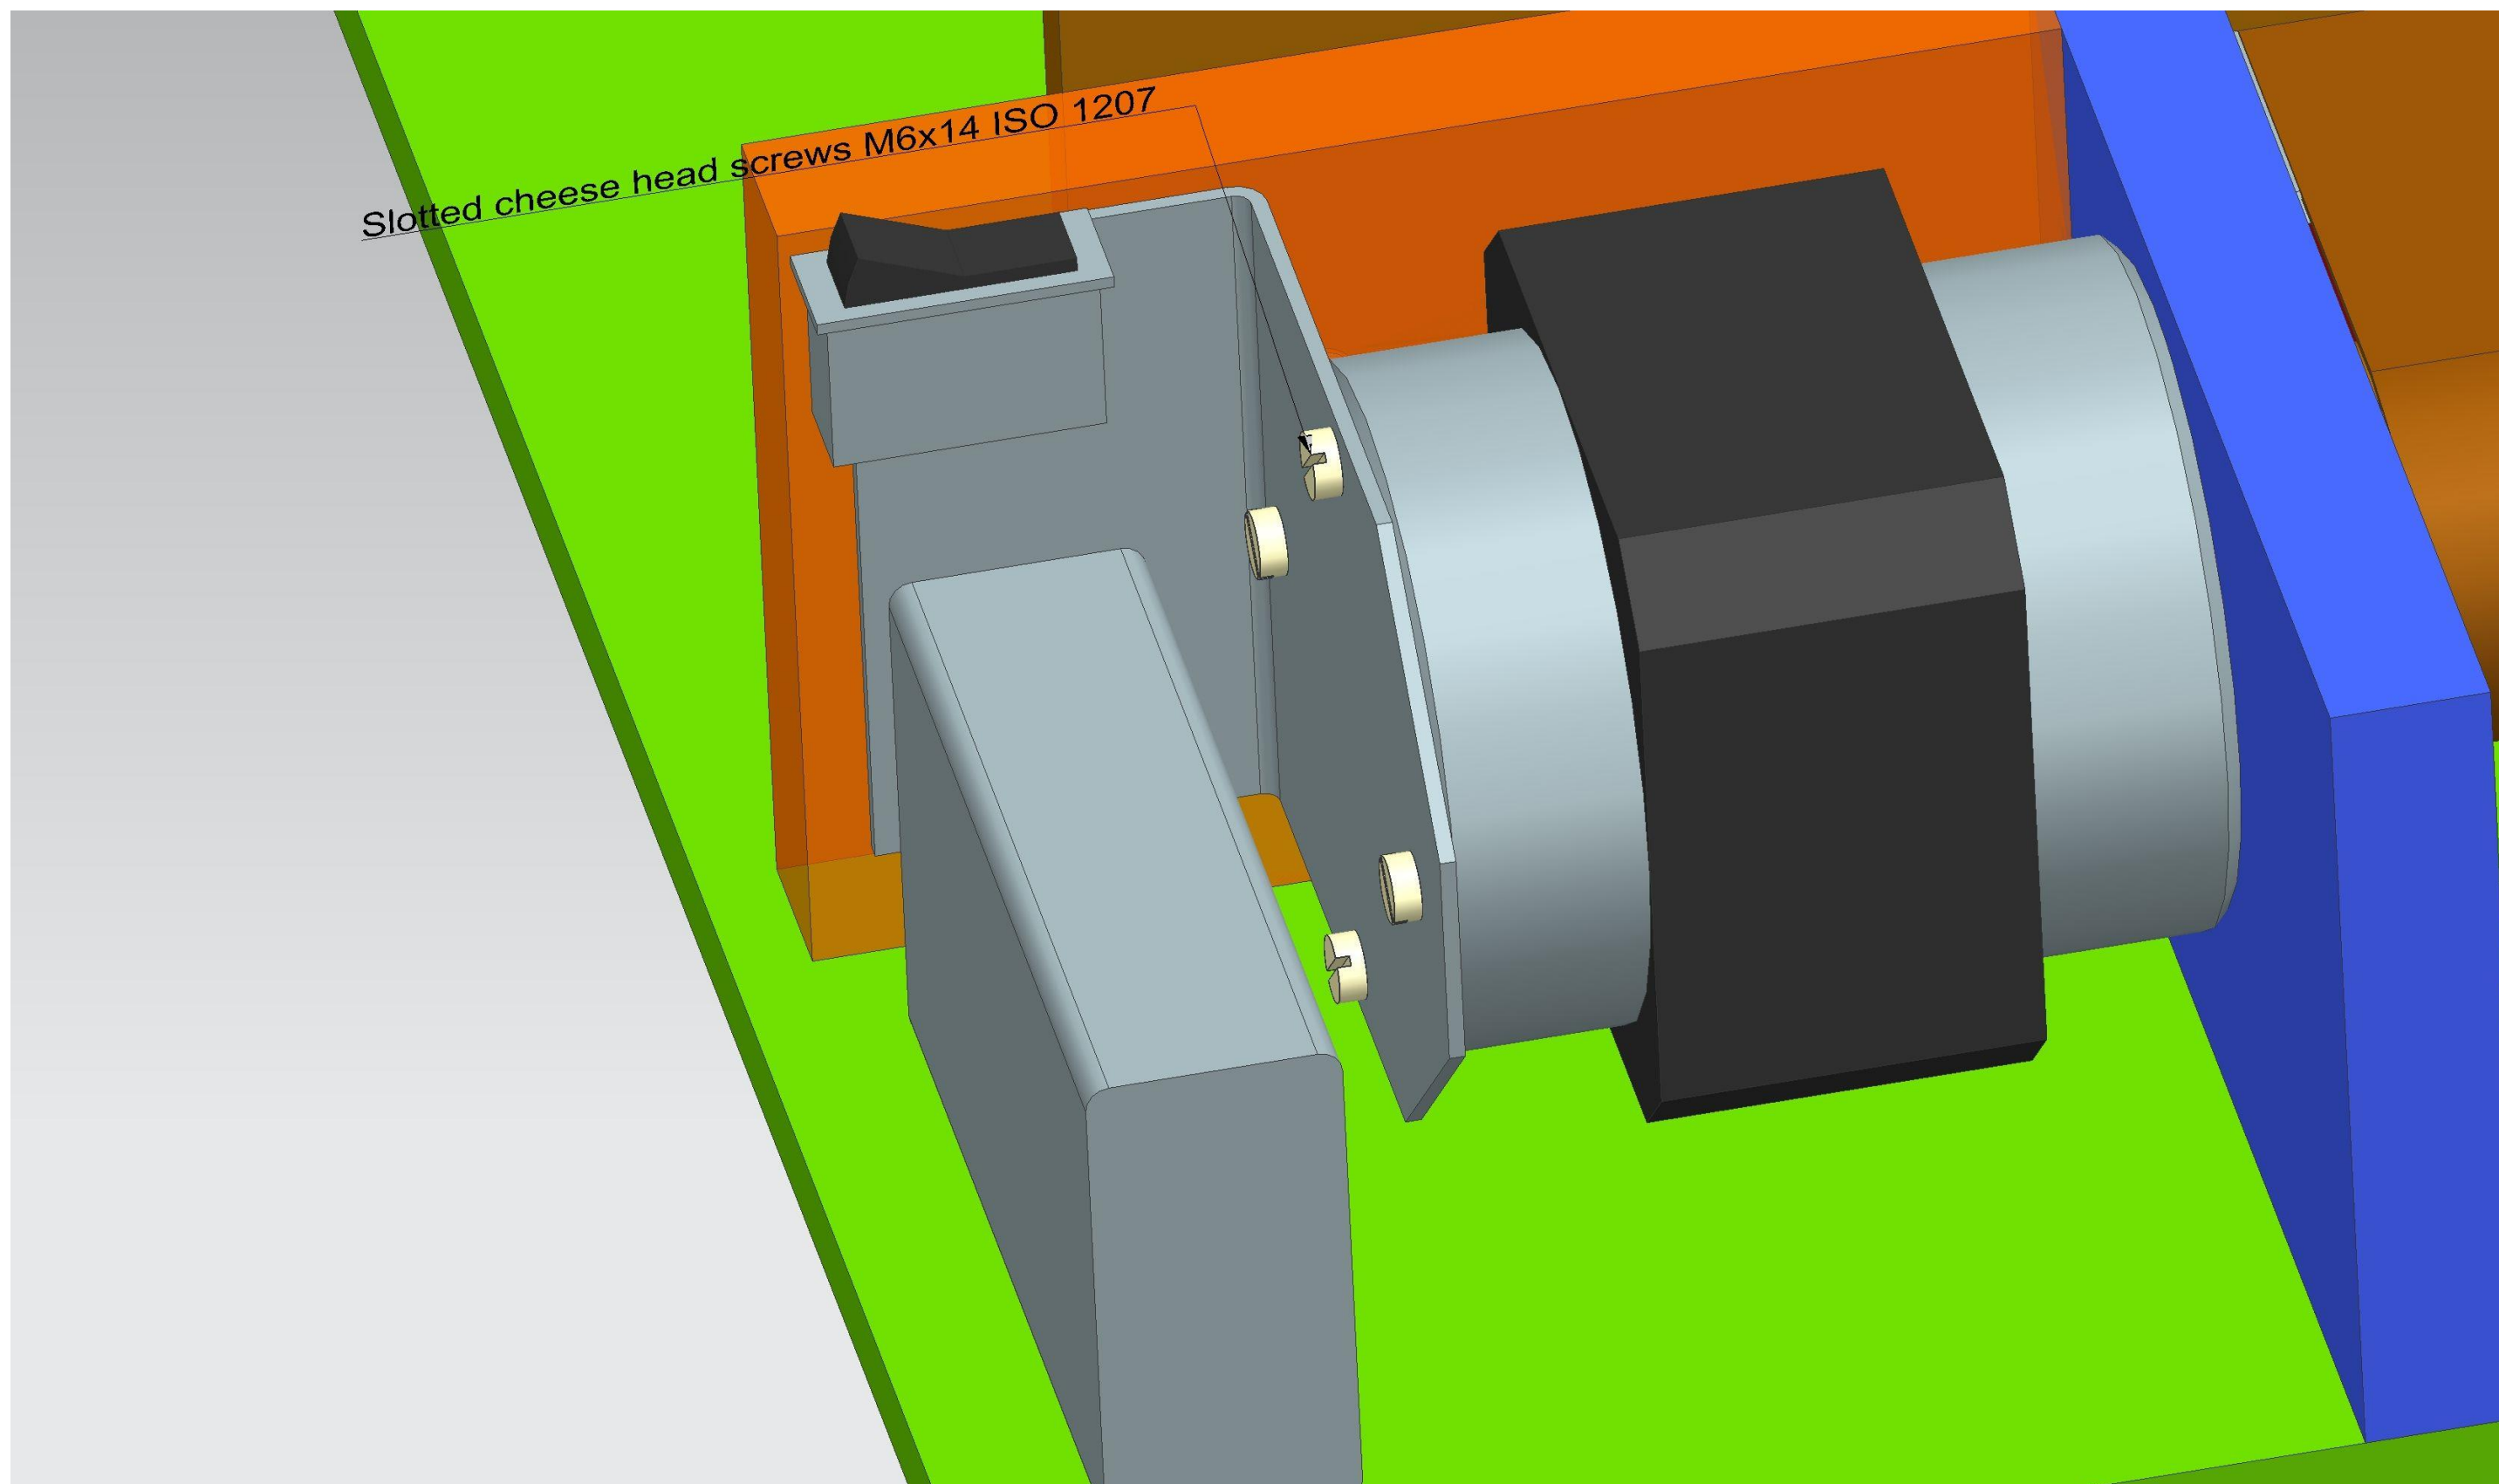


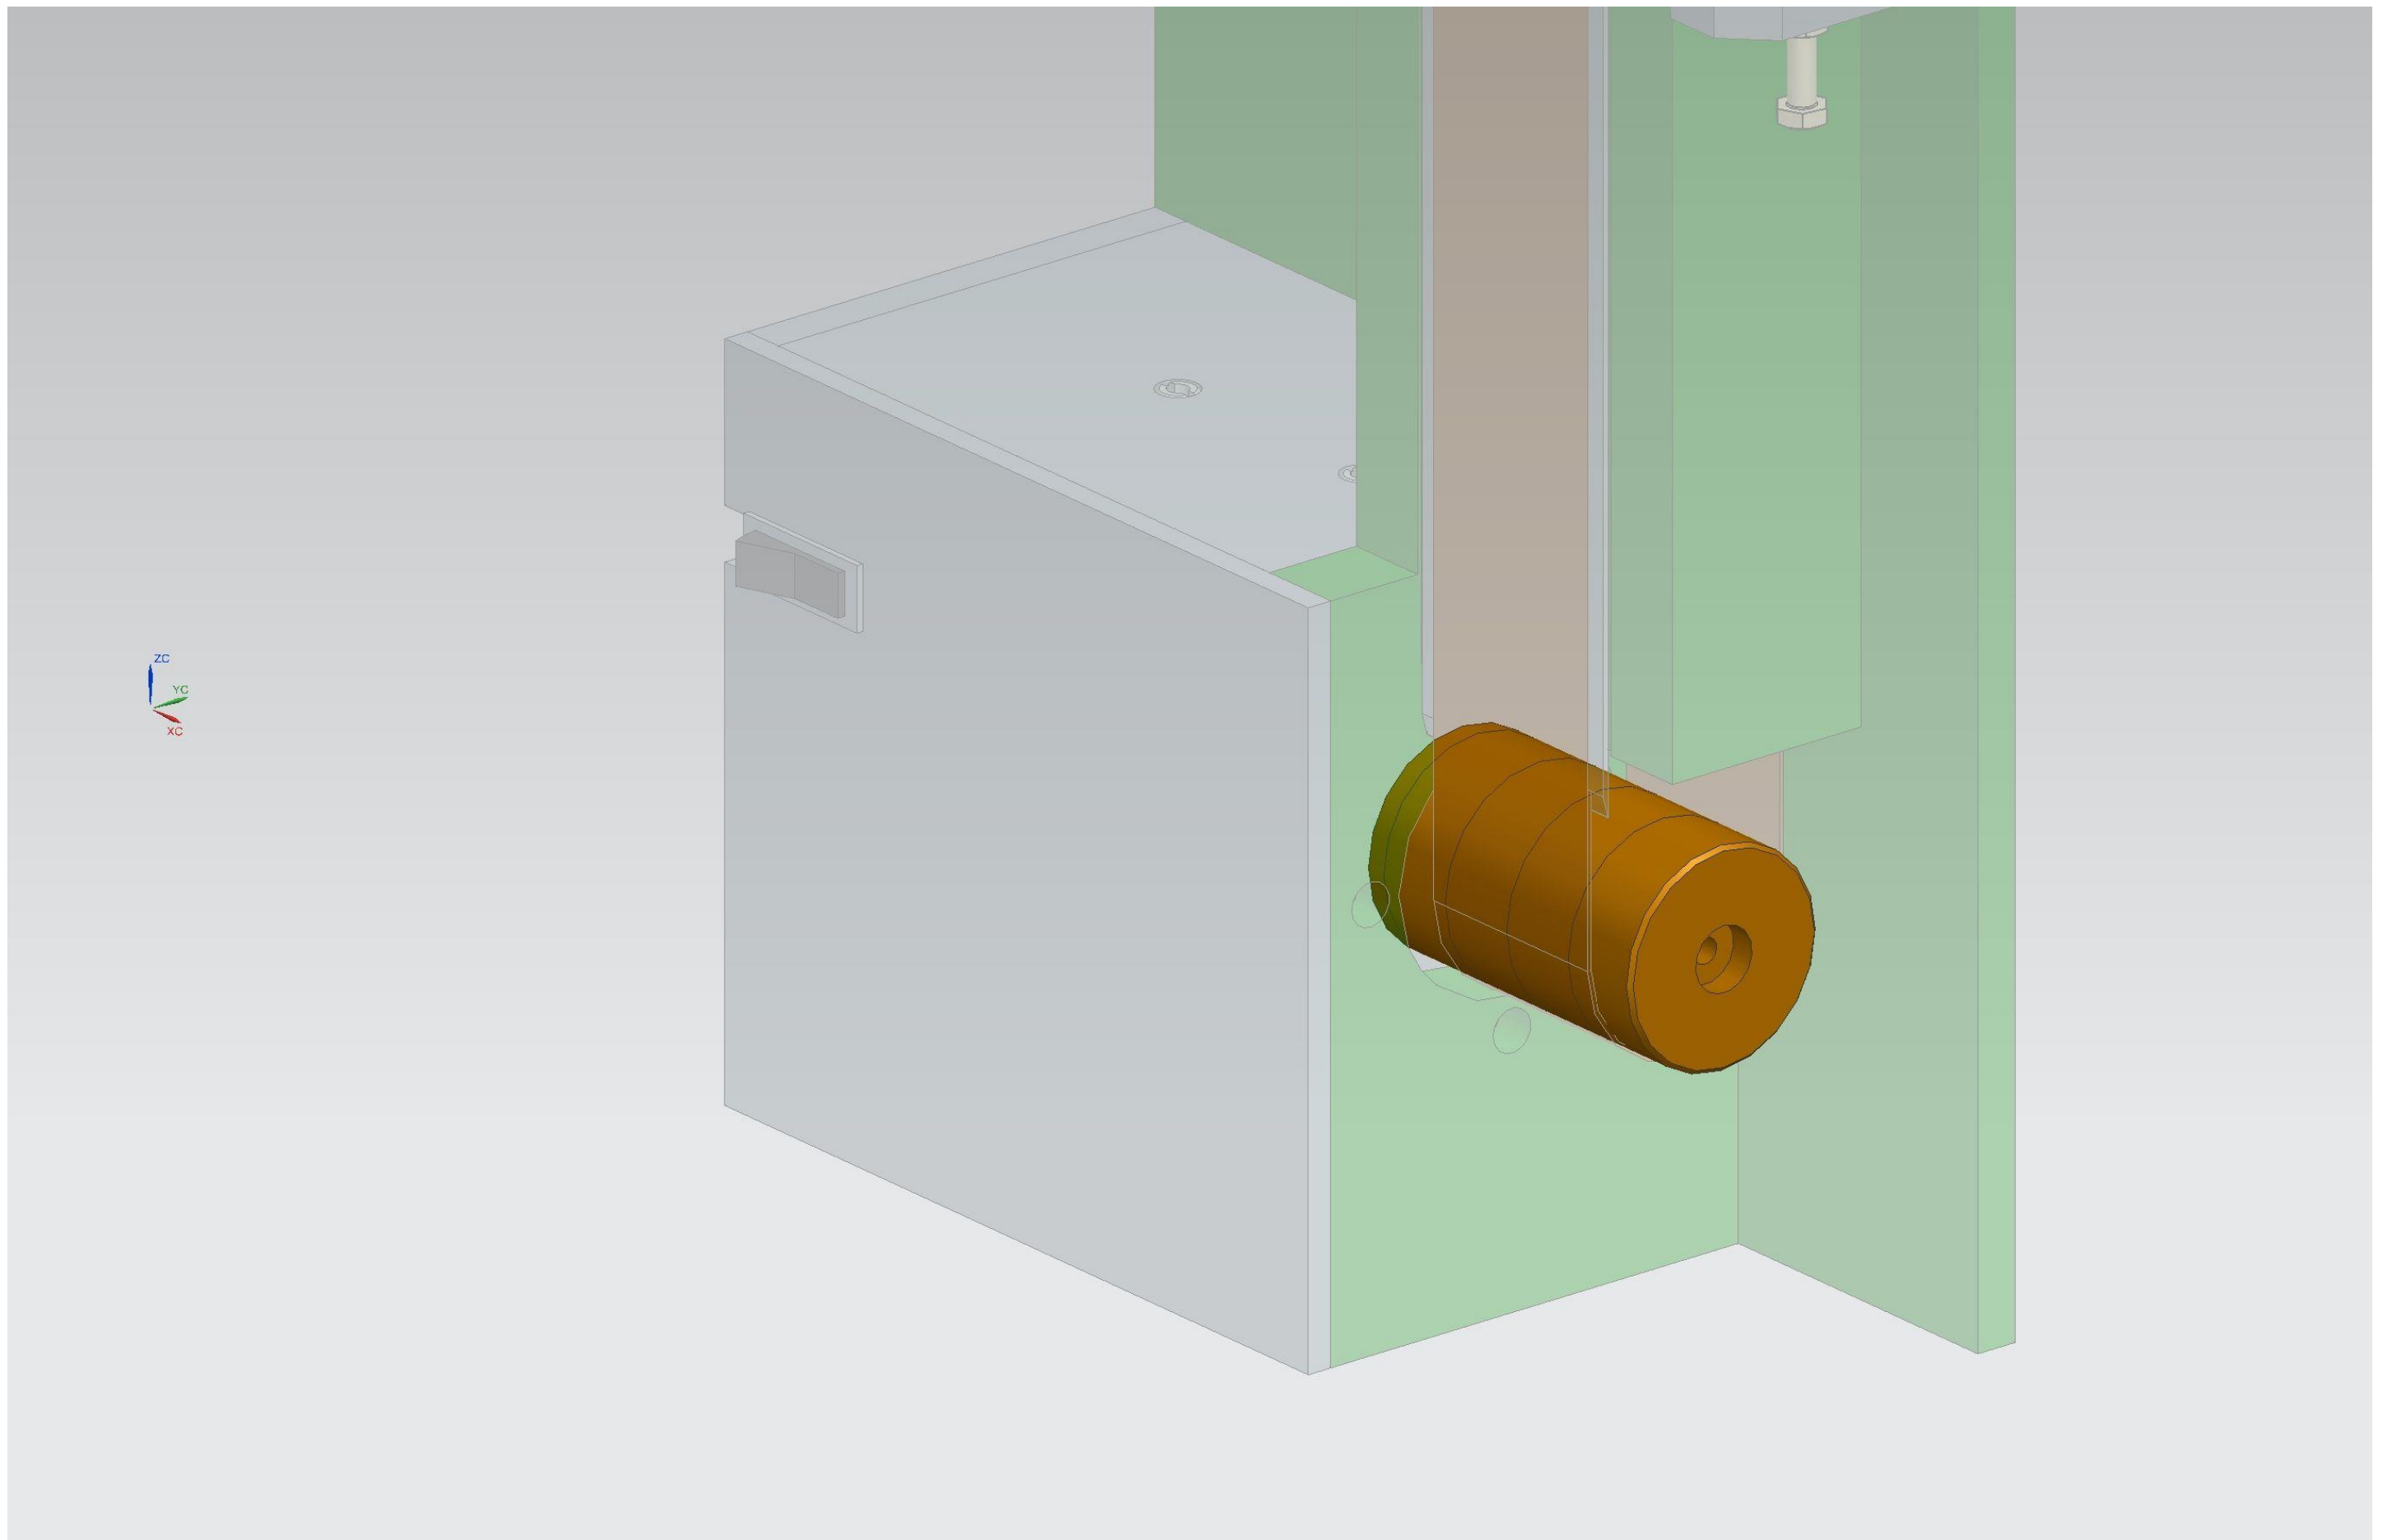


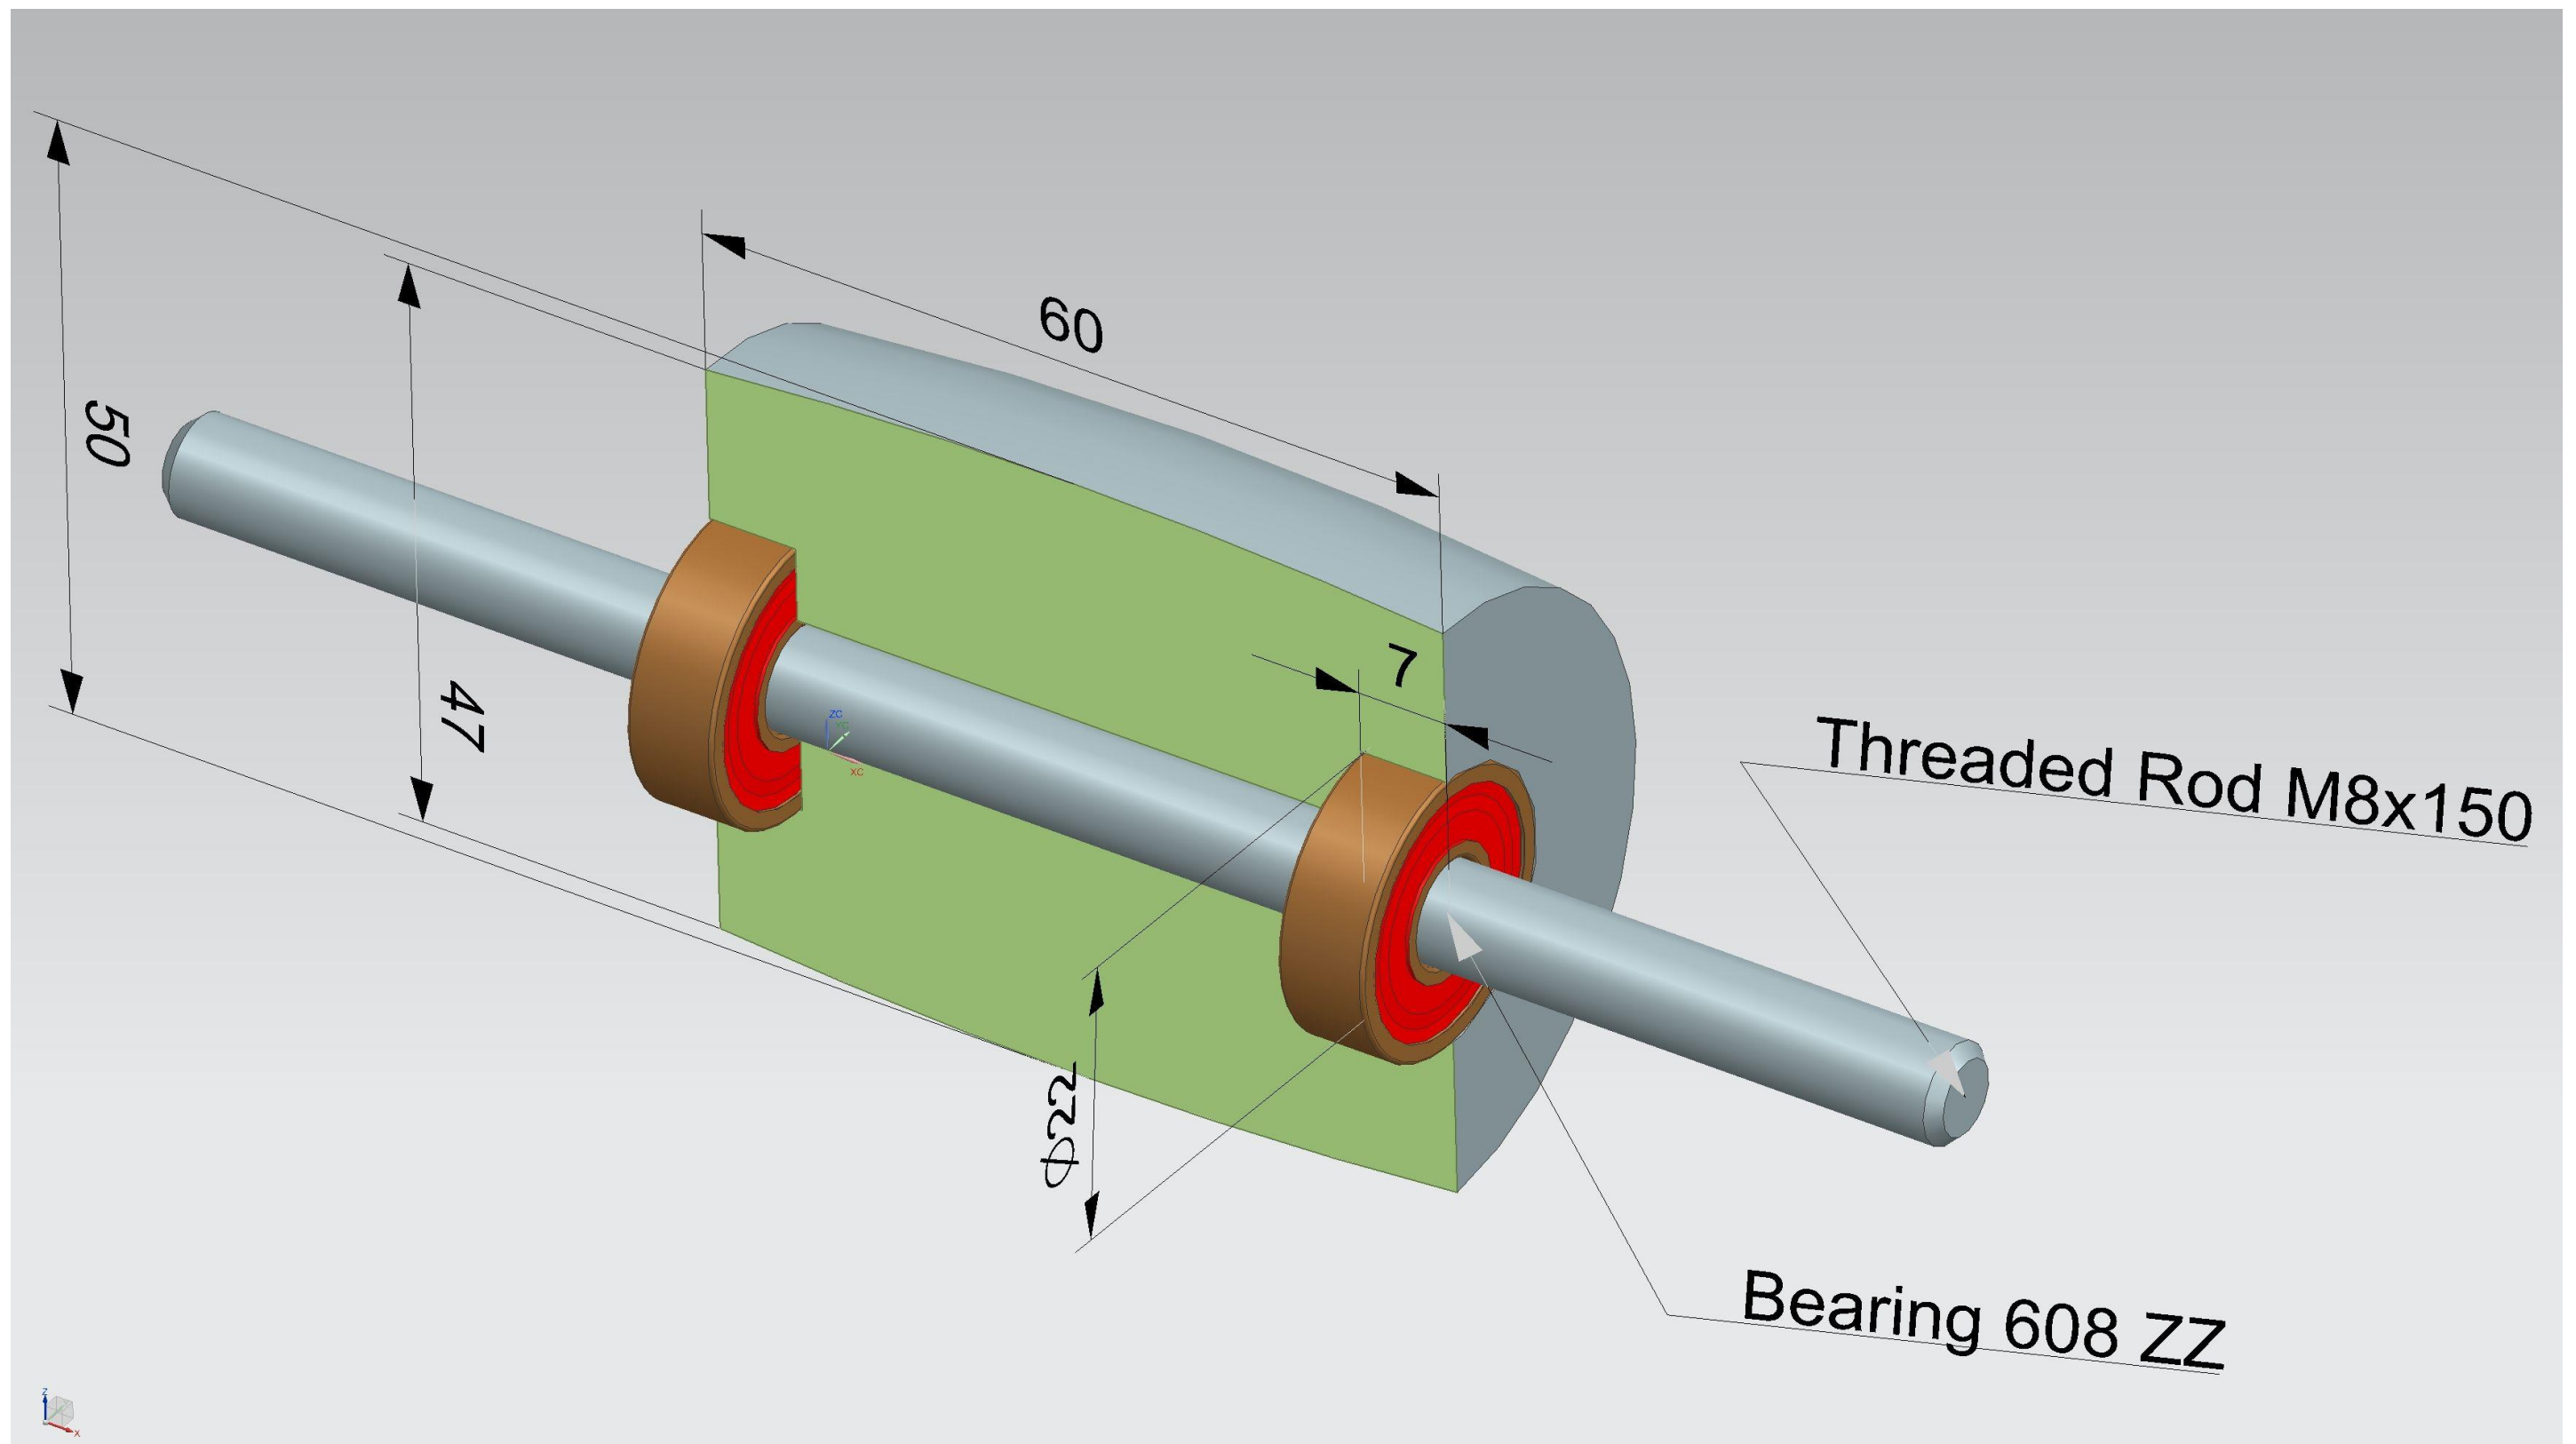


Materials:

- [Bearing 608 ZZ](#)
- [Threaded rod M8](#)

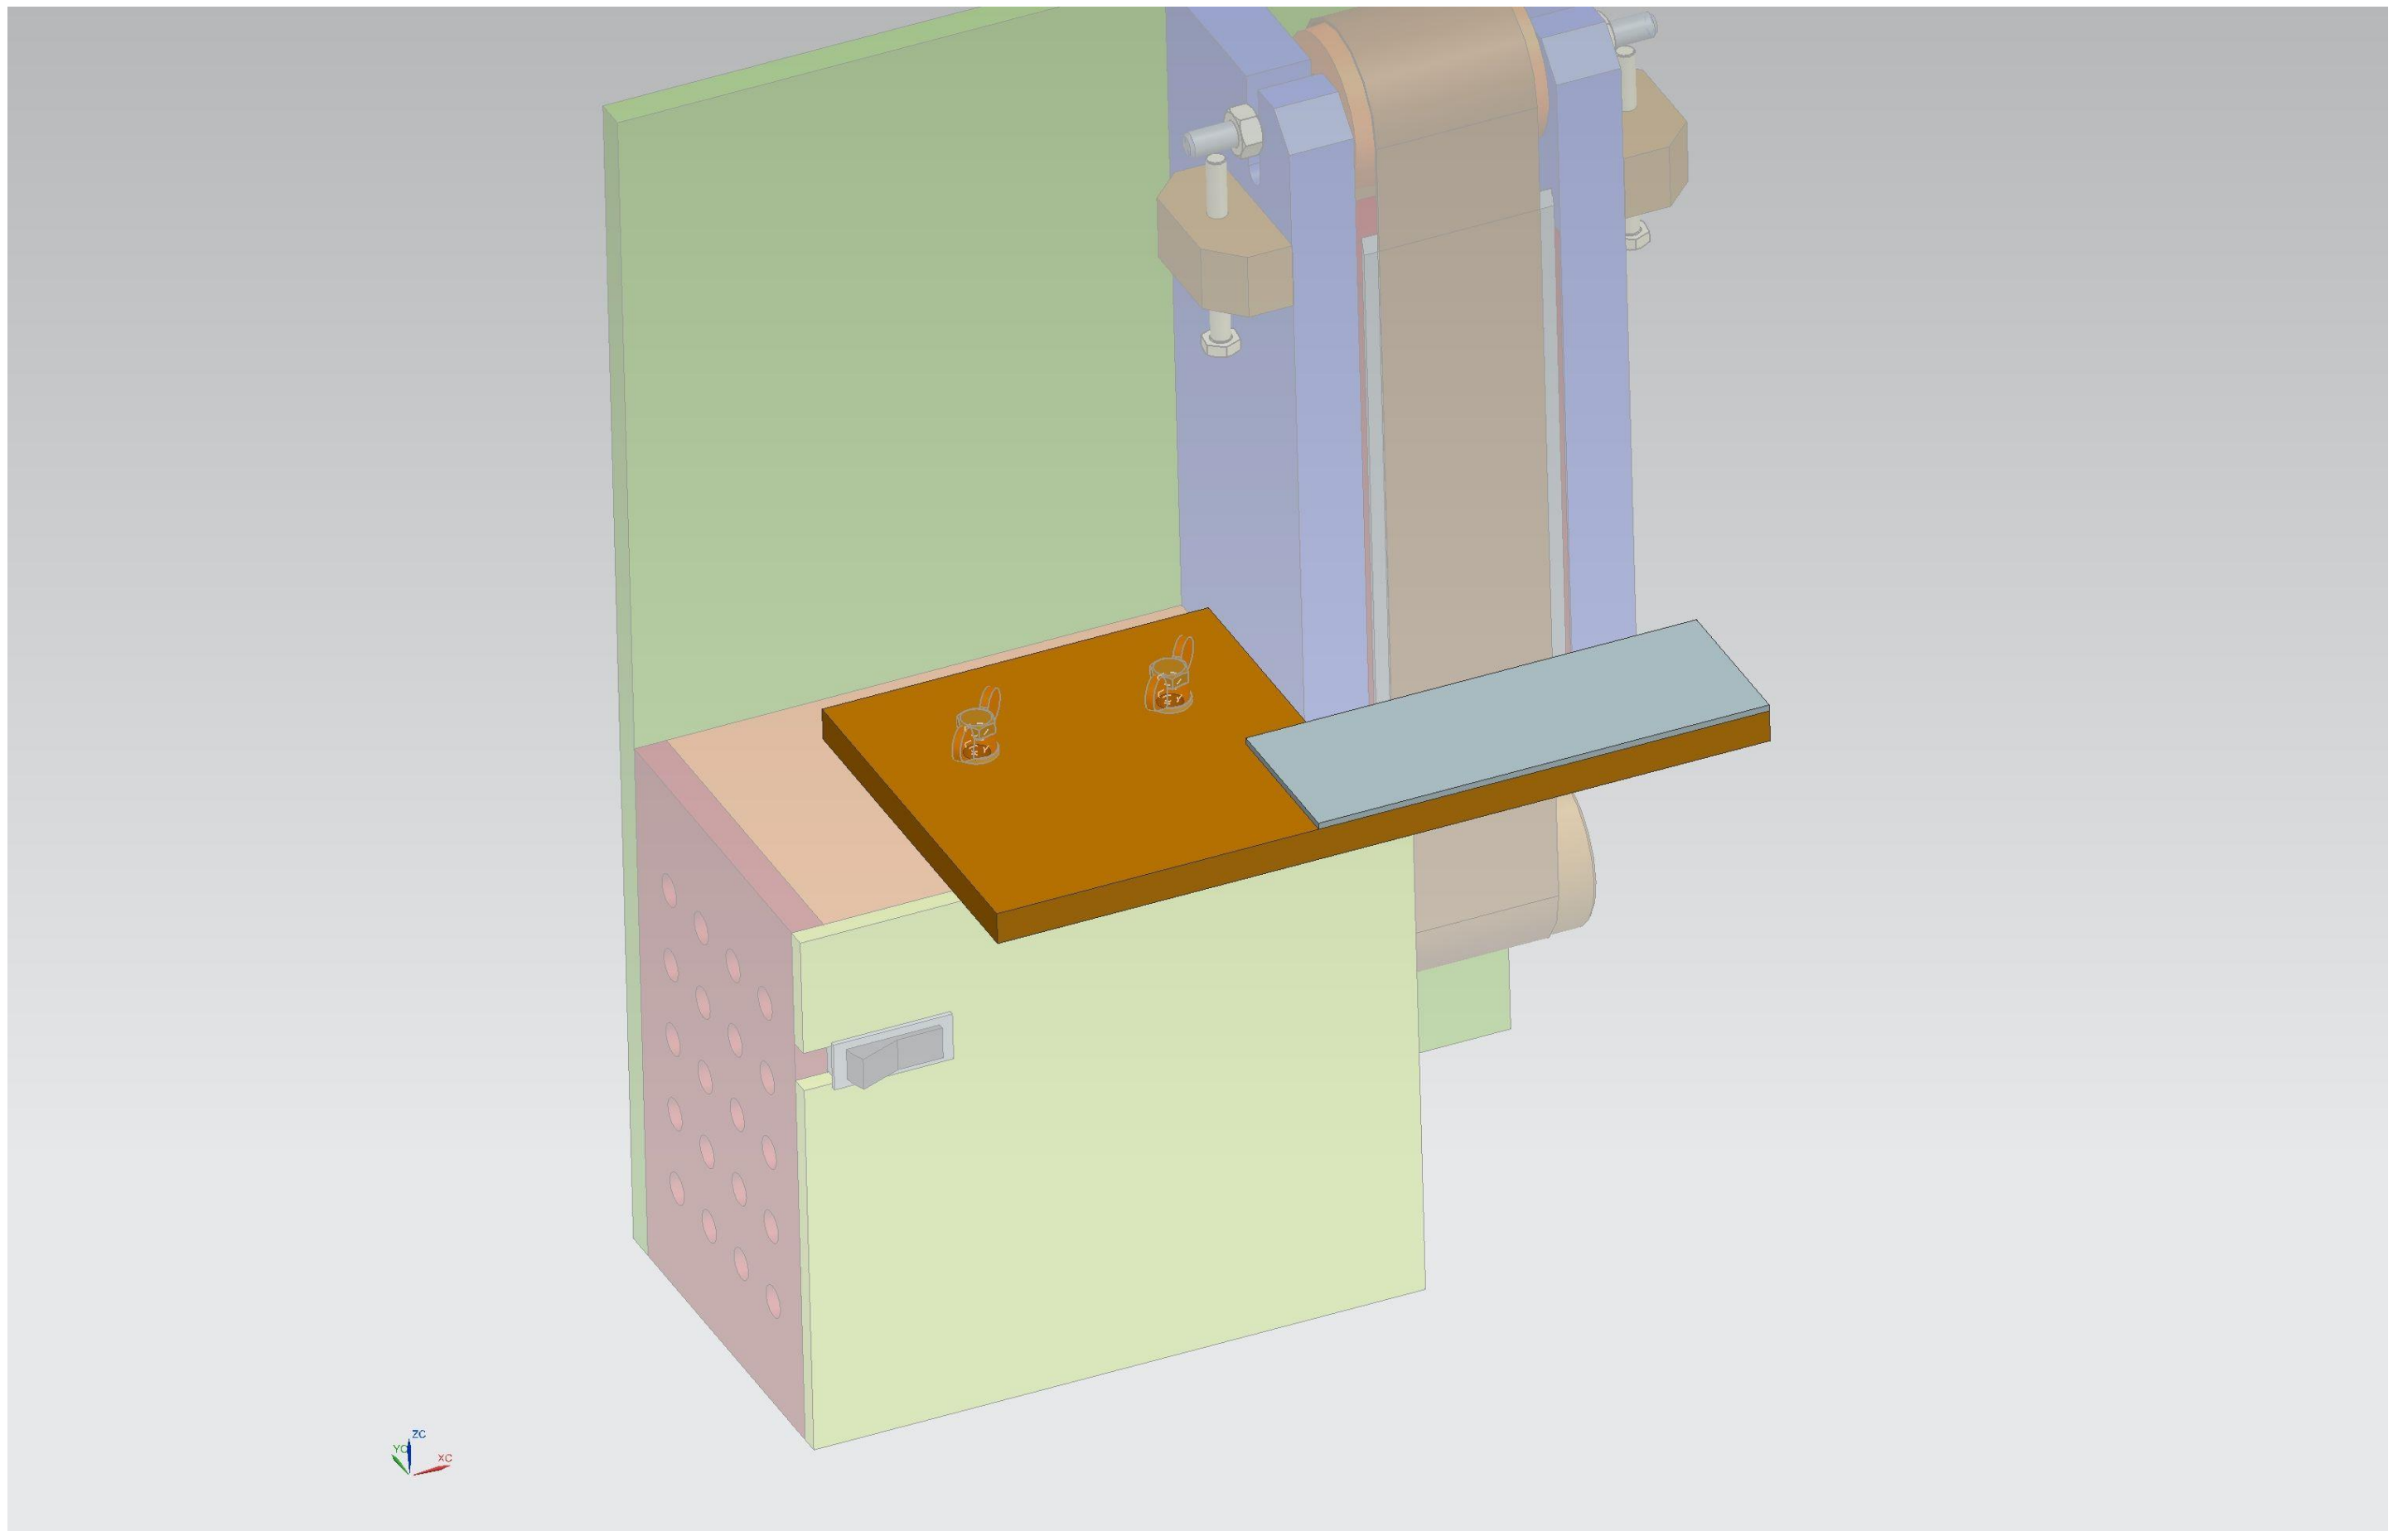

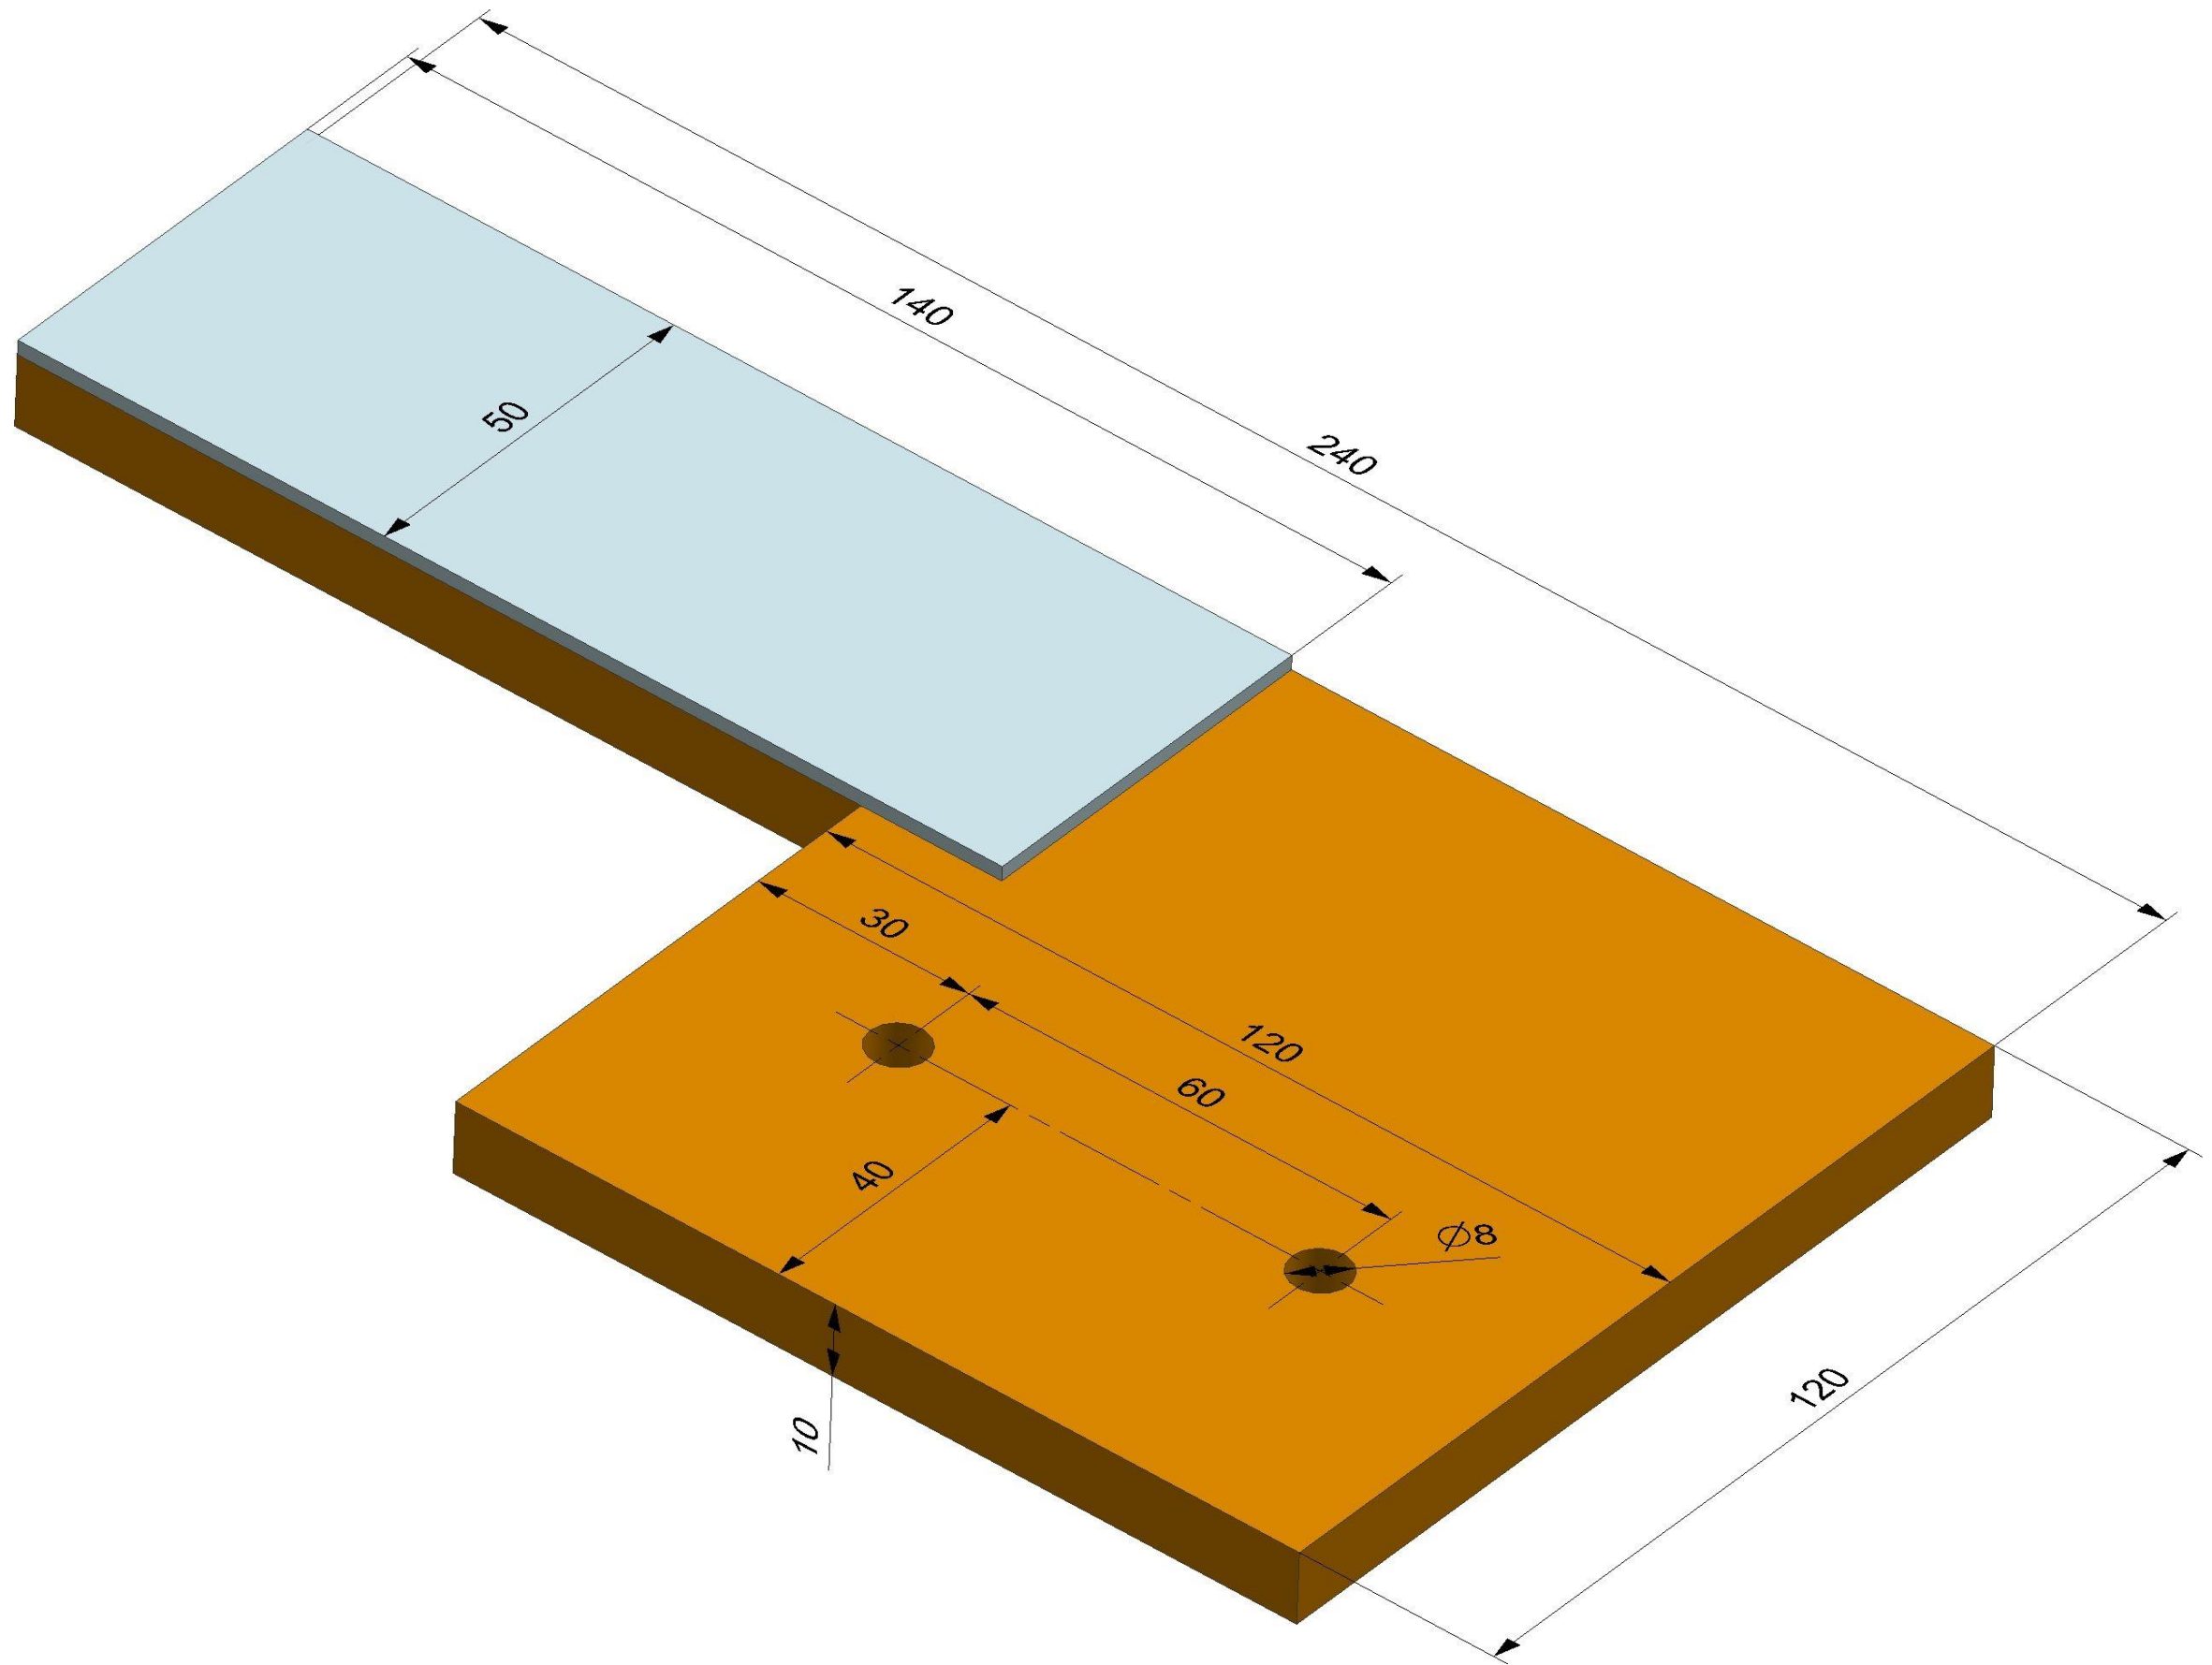


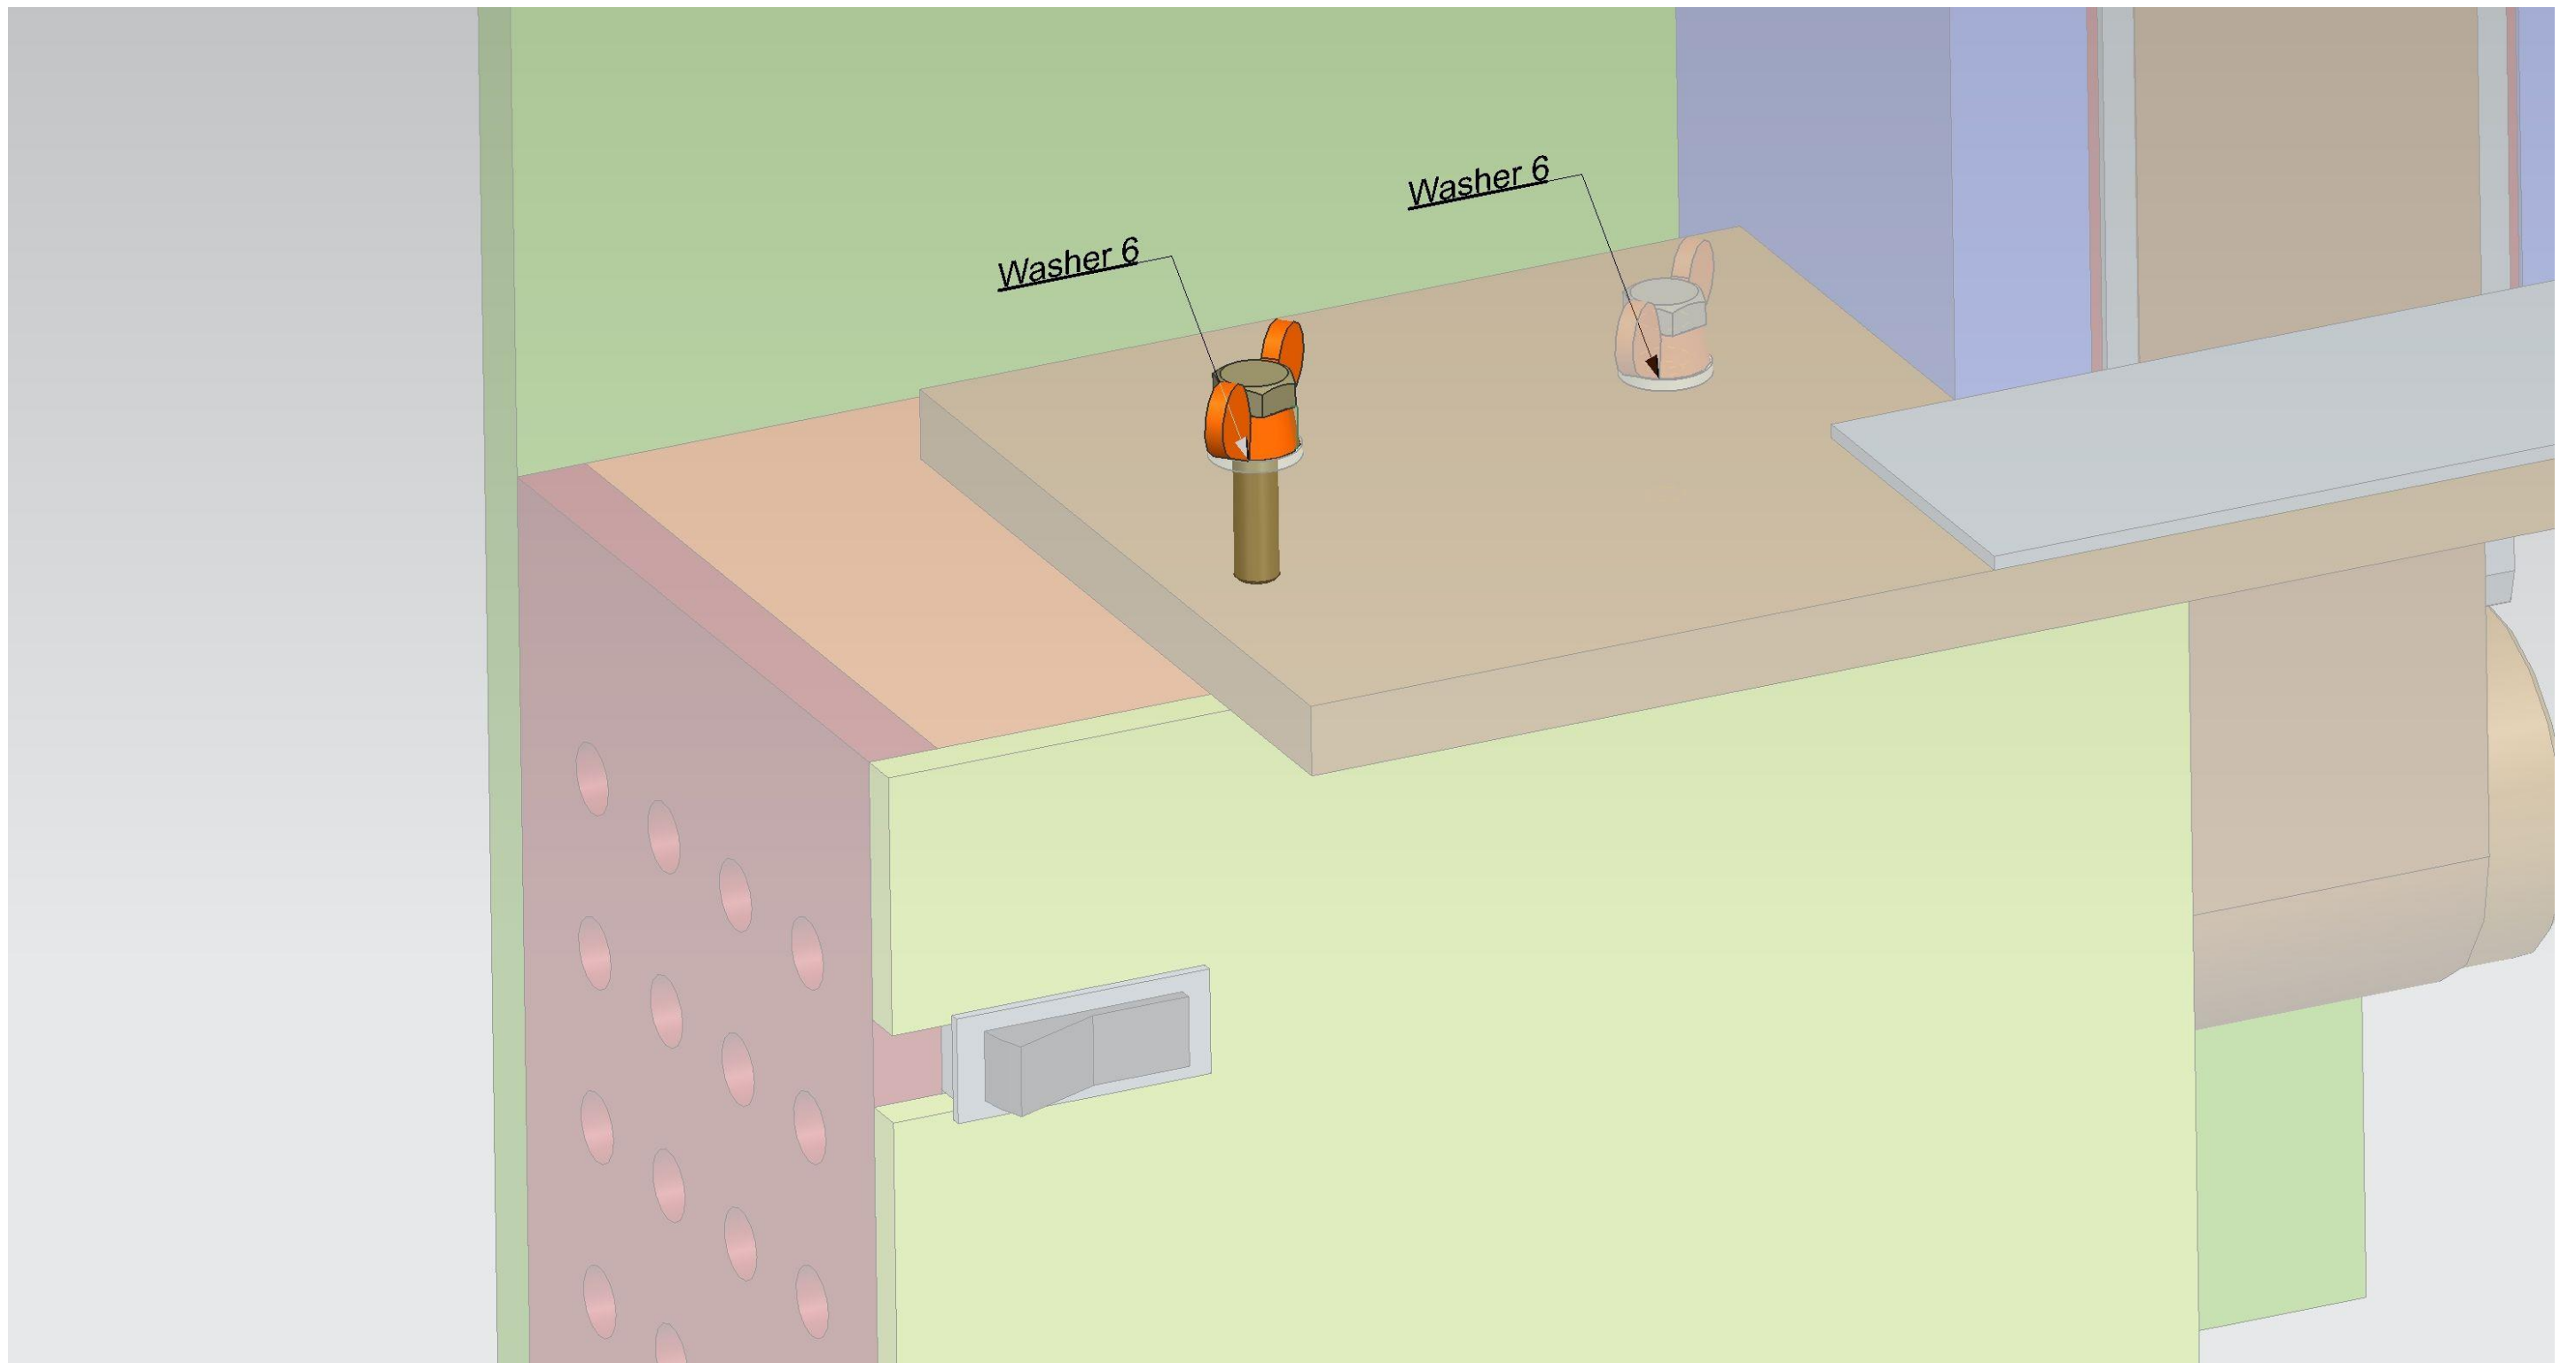

Fasteners:


- [Flat washer 6](#)

Bolt M6 x 20 Wing nut M6

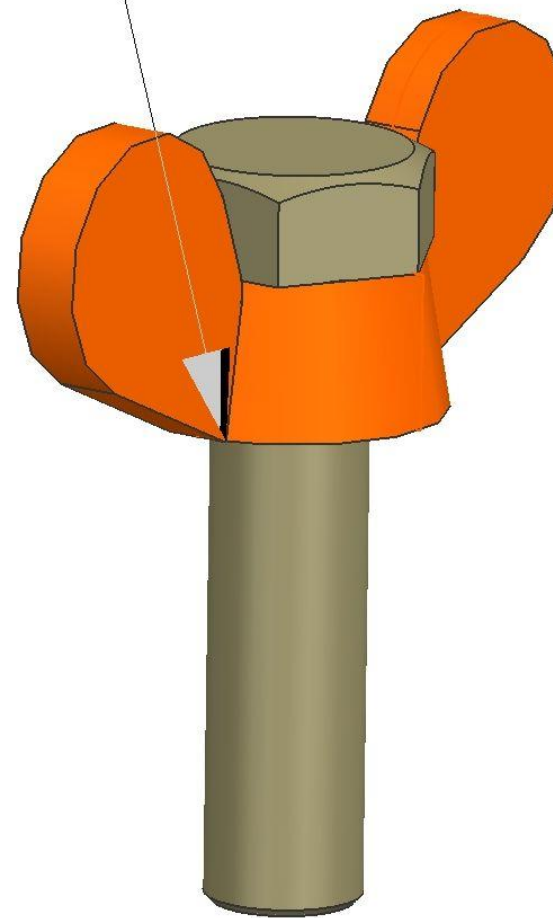


Fasteners:

- [Bolt M6x20](#)
- [Wing nut M6](#)

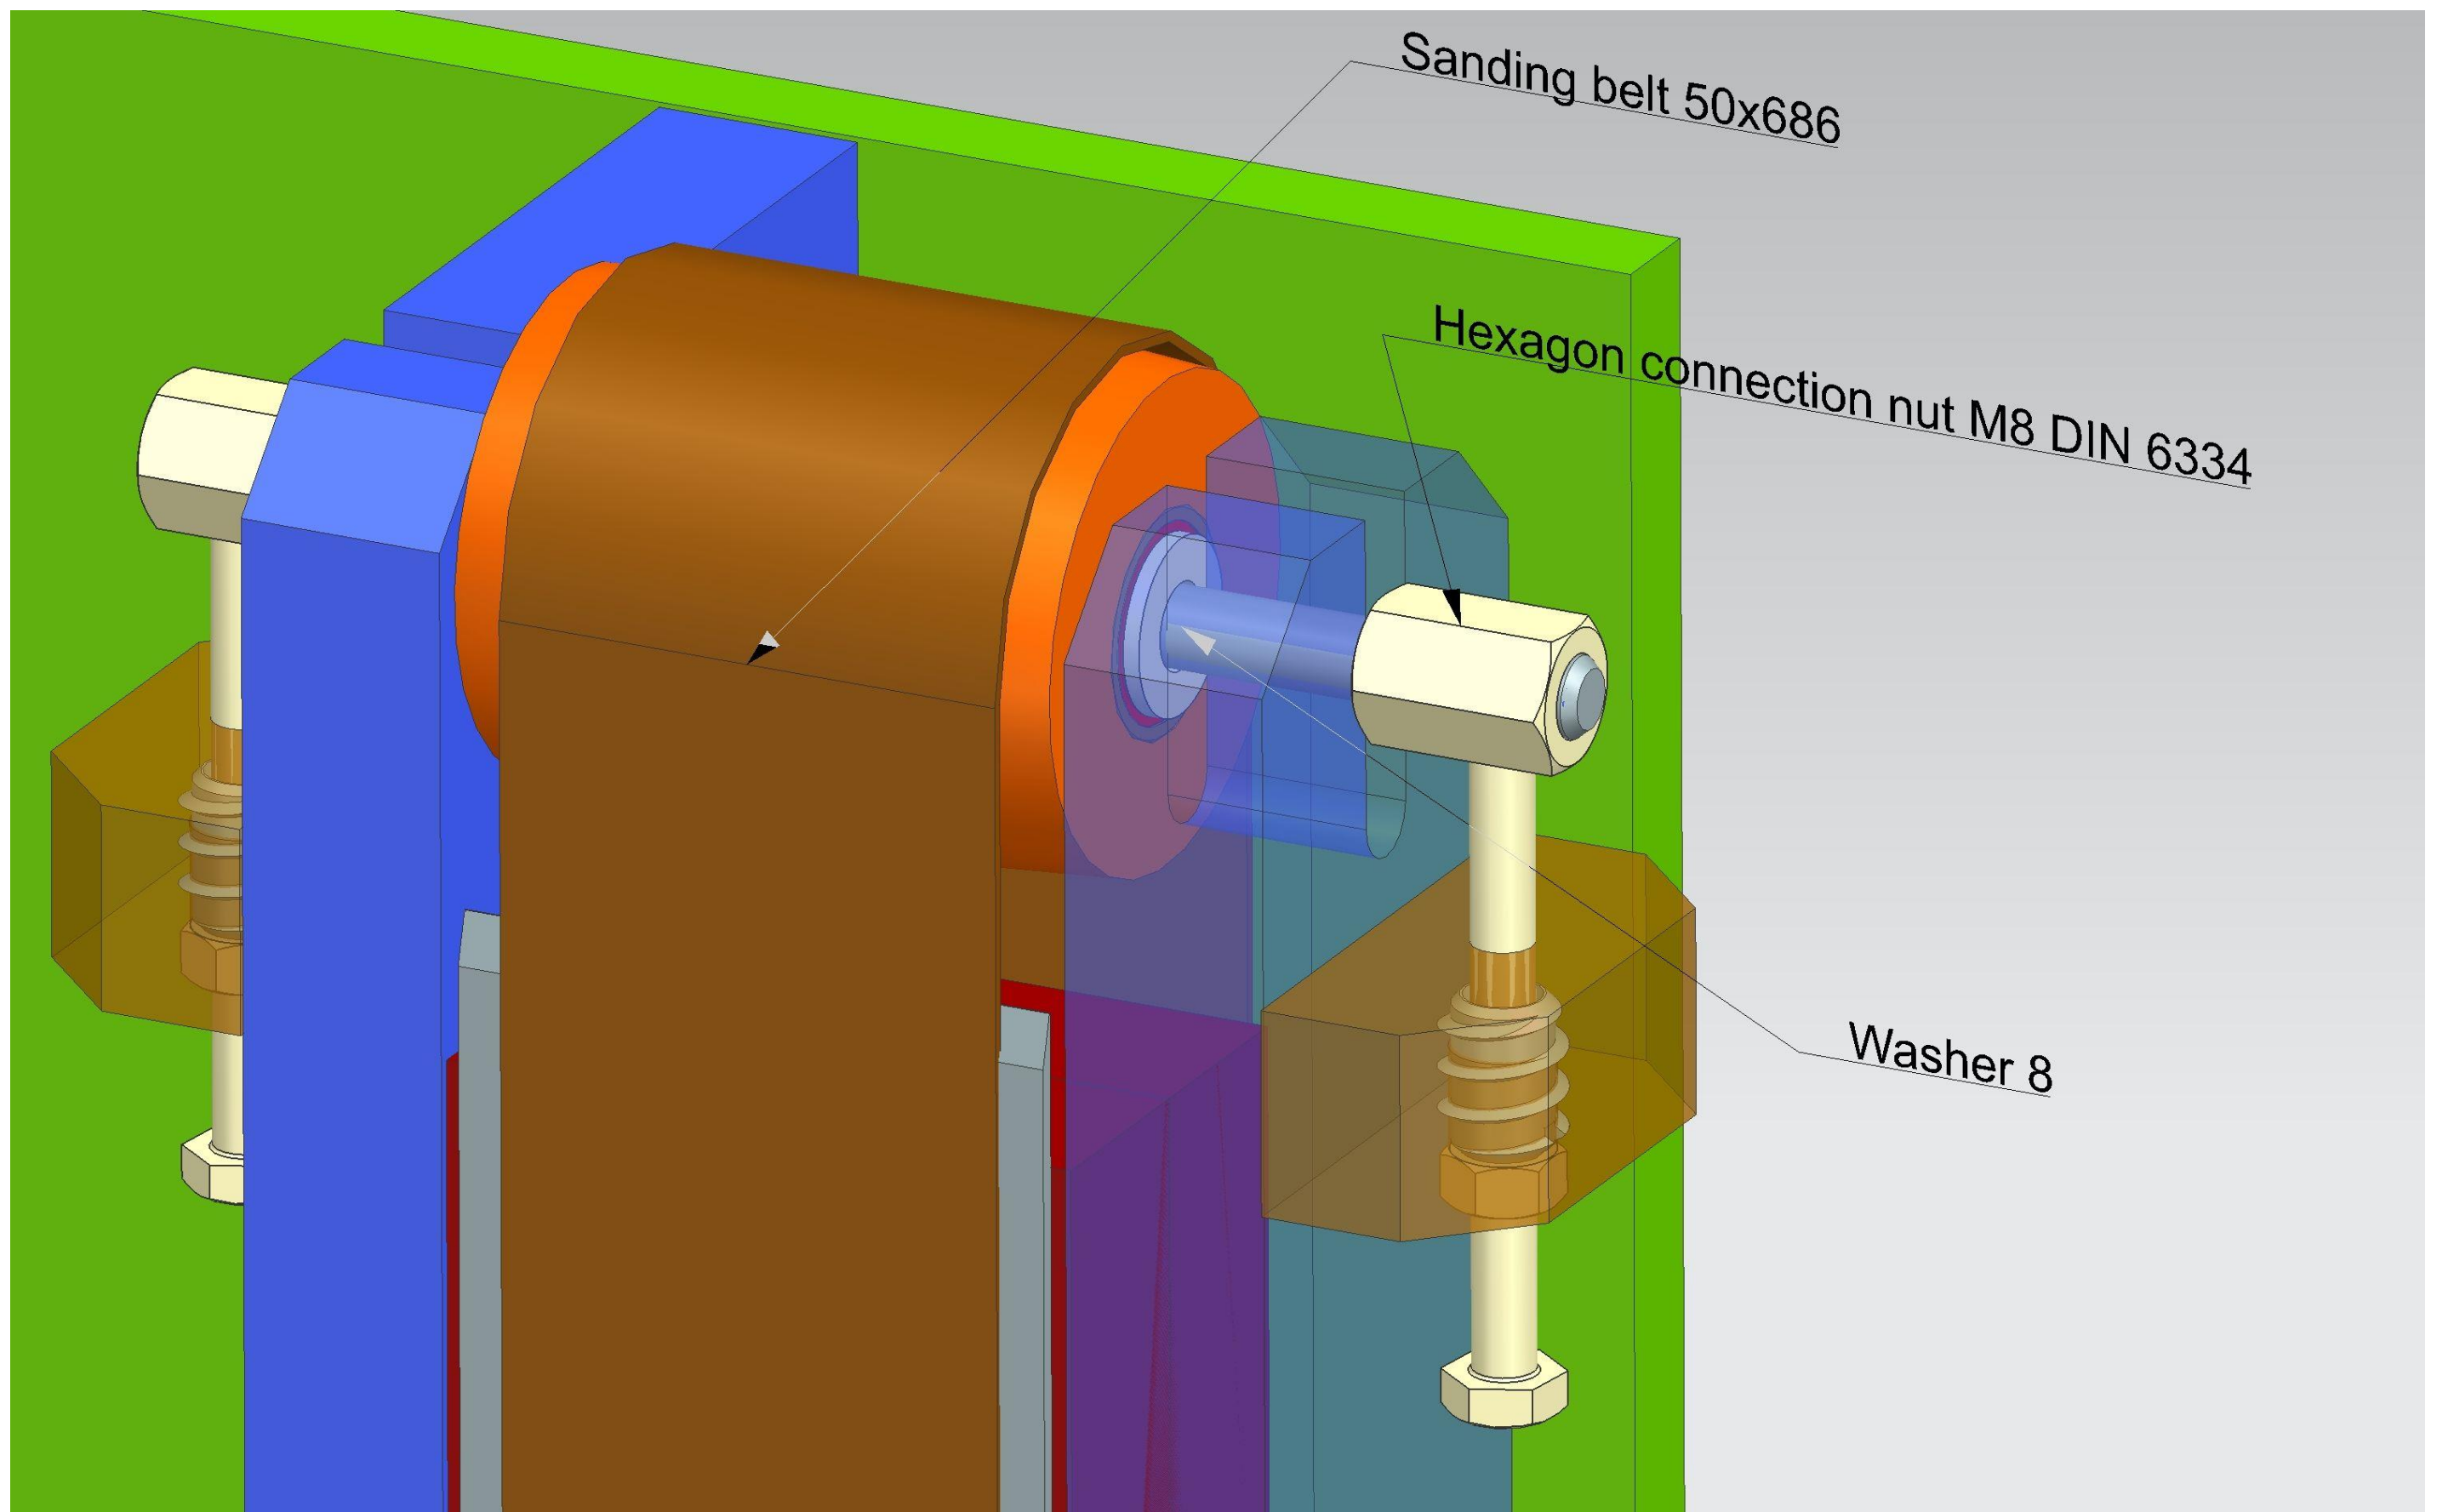

Fasteners:

- [Coupling nut](#)
- [Flat washer 8](#)

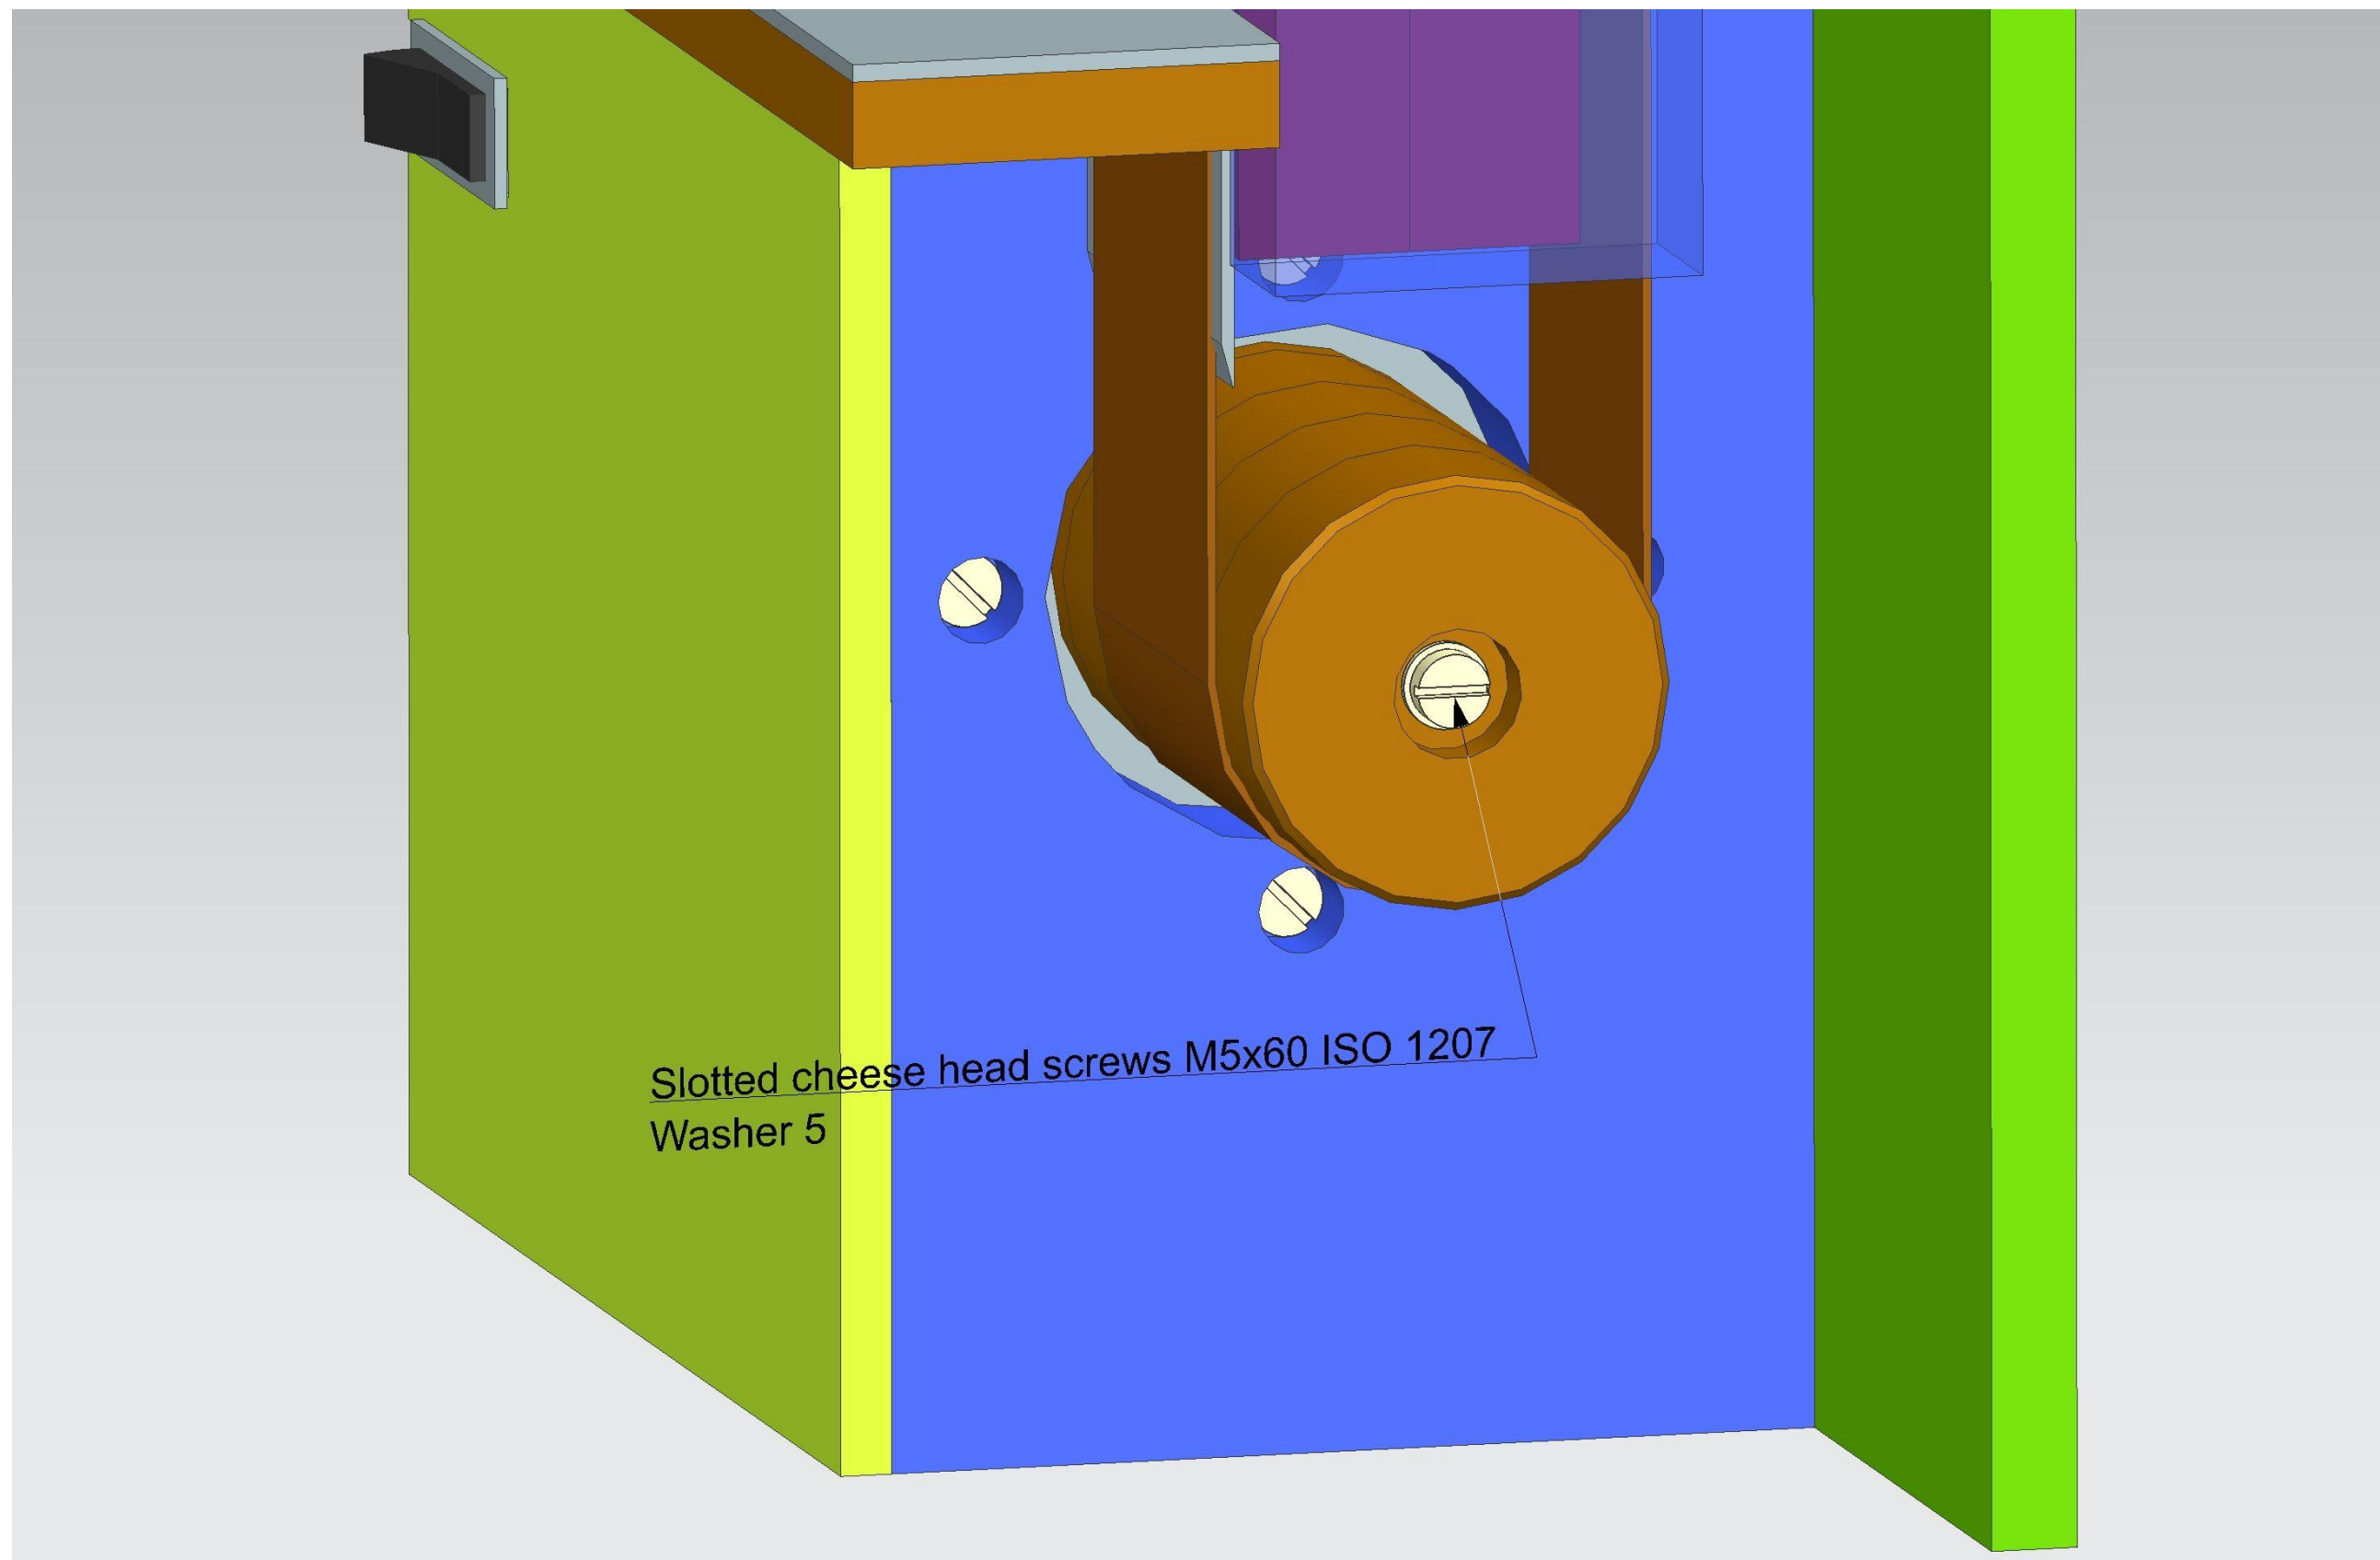

Fasteners:

- [Cheese head screw M5x60](#)
- [Flat washer 5](#)