




Homemade Drill Press Table Plans

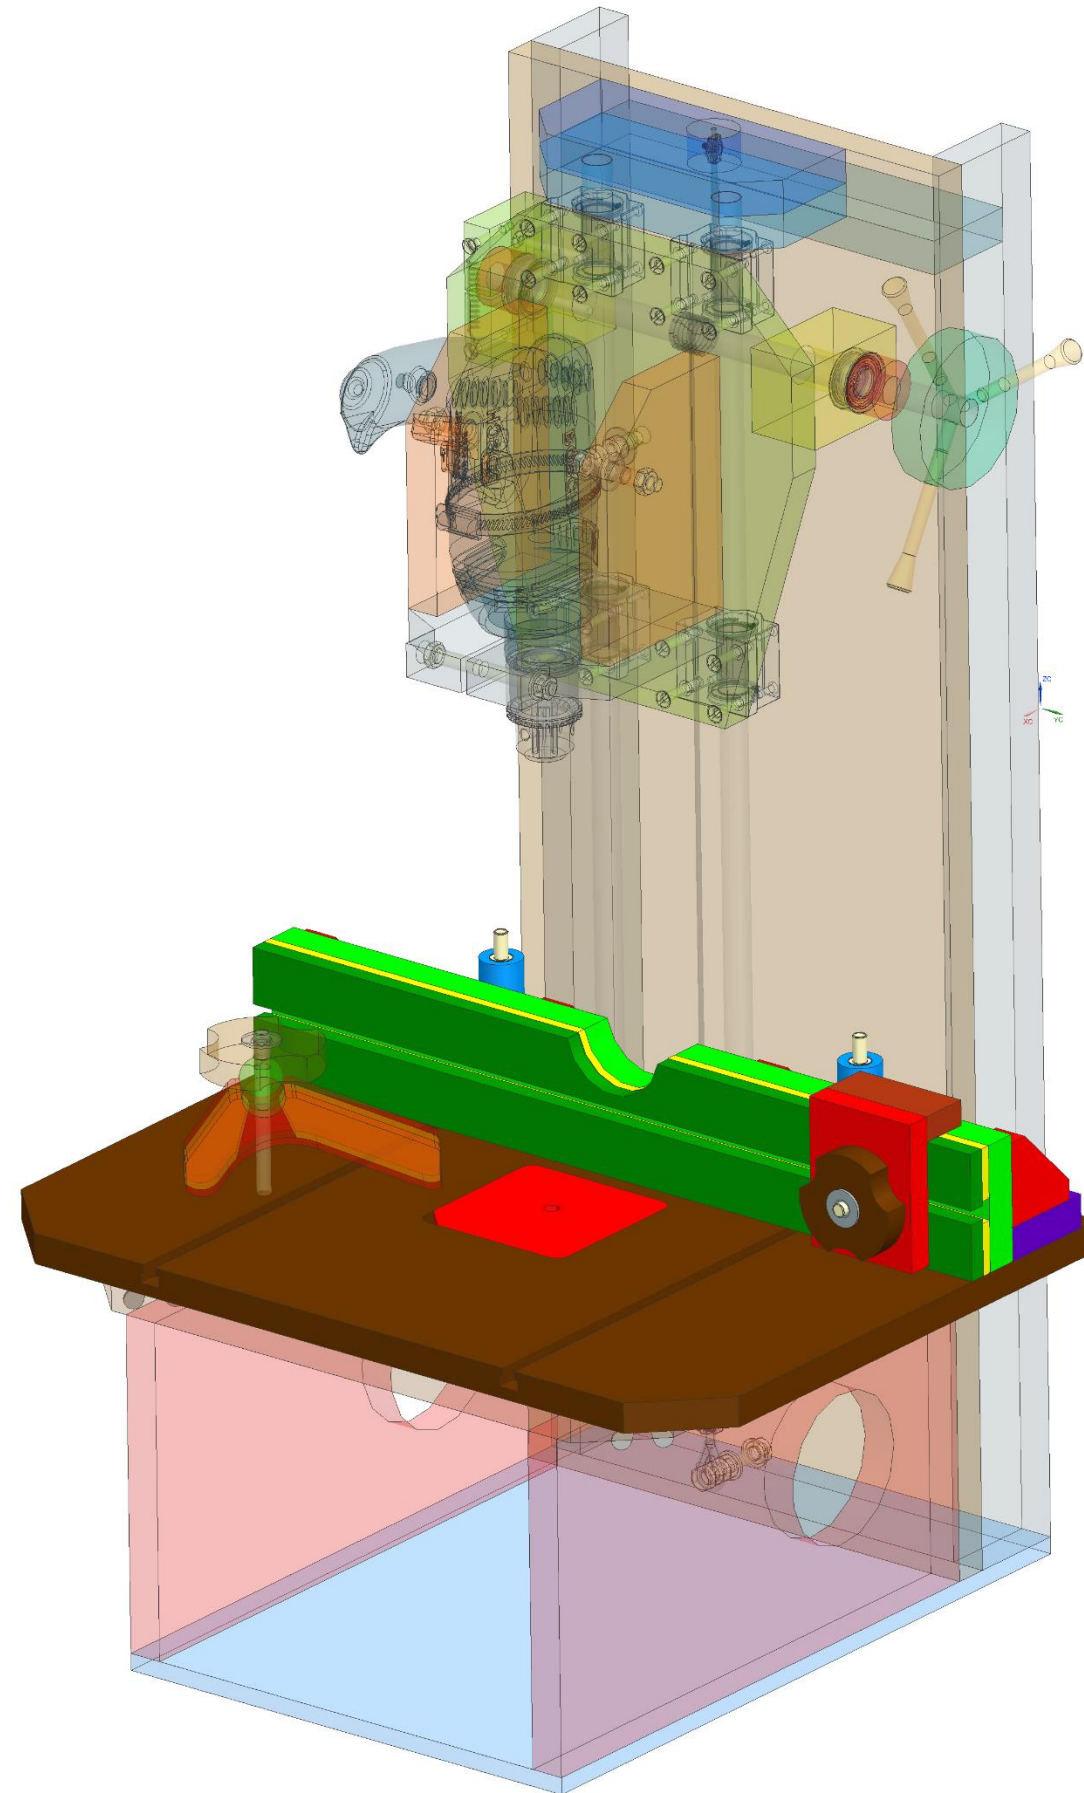

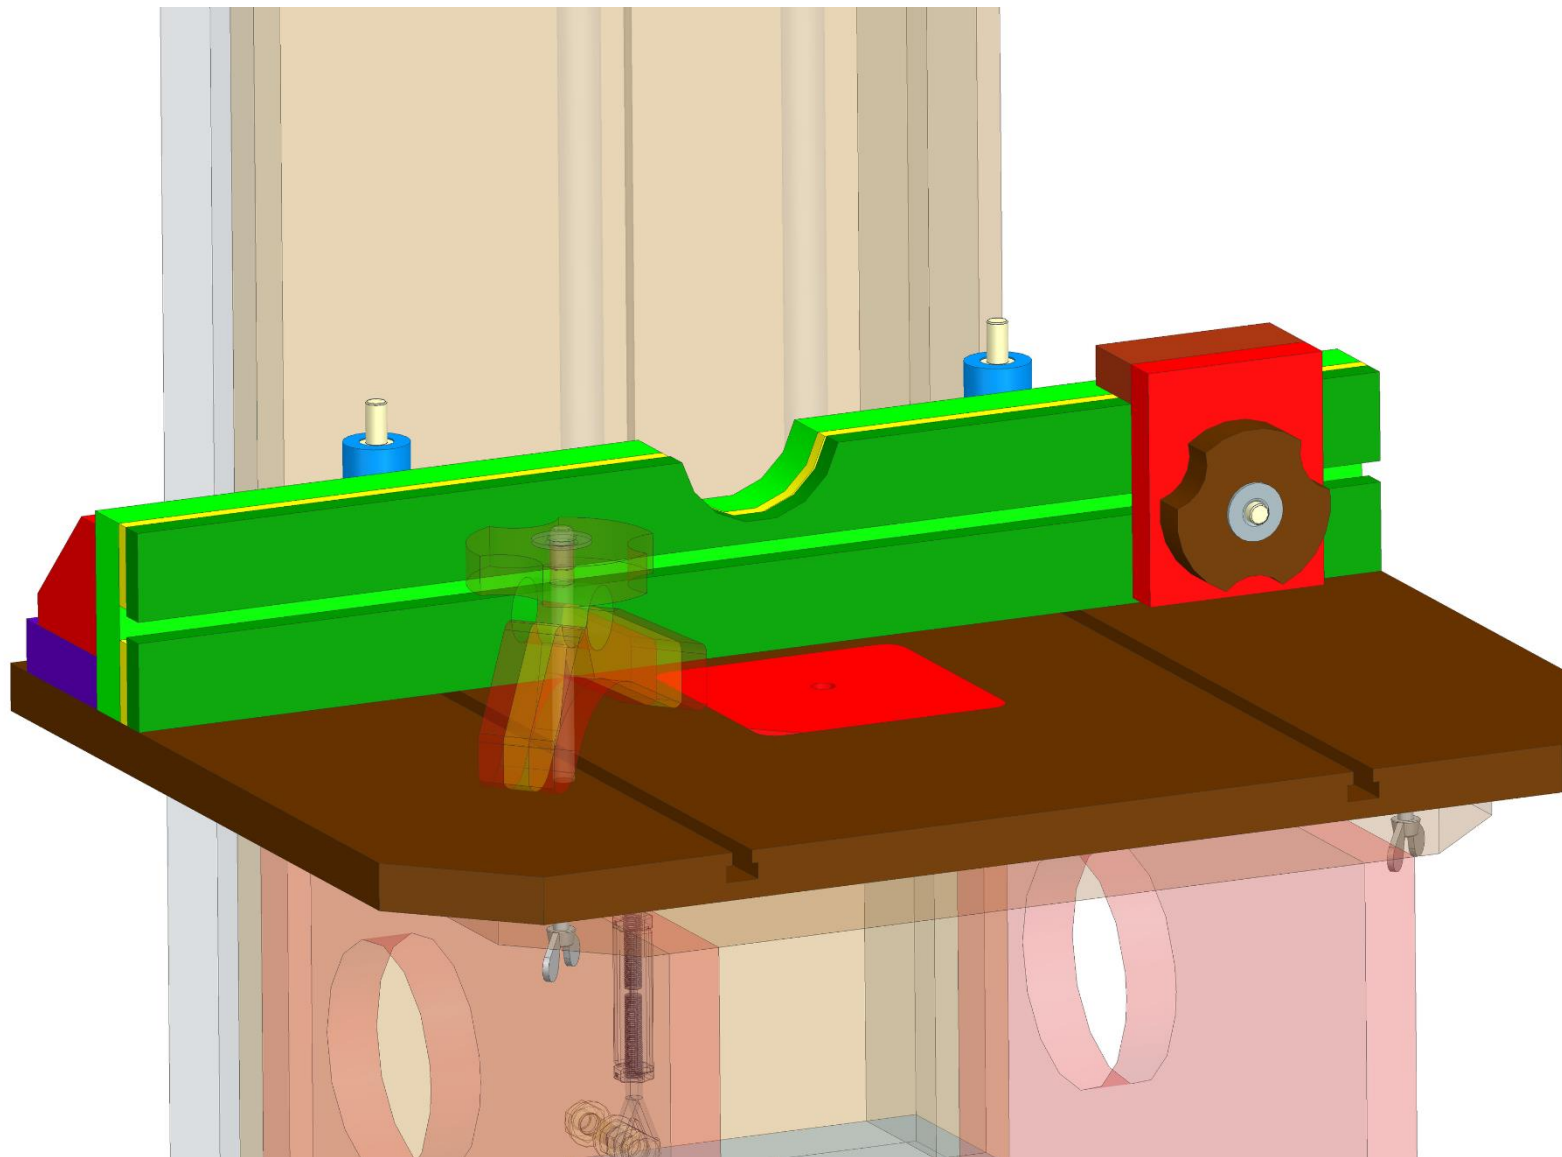


Fasteners and Materials:


1. [Bolt M8 x 50](#) x 1
2. [Bolt M8 x 100](#) x 2
3. [Nut M8](#) x 2
4. [Threaded Insert M6](#) x 4
5. [T-nut M8](#) x 1
6. [Wing screw](#) M6x30 DIN 316 x 4
7. [Plywood 6 mm](#)
8. Plywood 10 mm OR [12 mm](#)
9. Plywood 15 mm
10. [Plywood 18 mm](#) or 20 mm

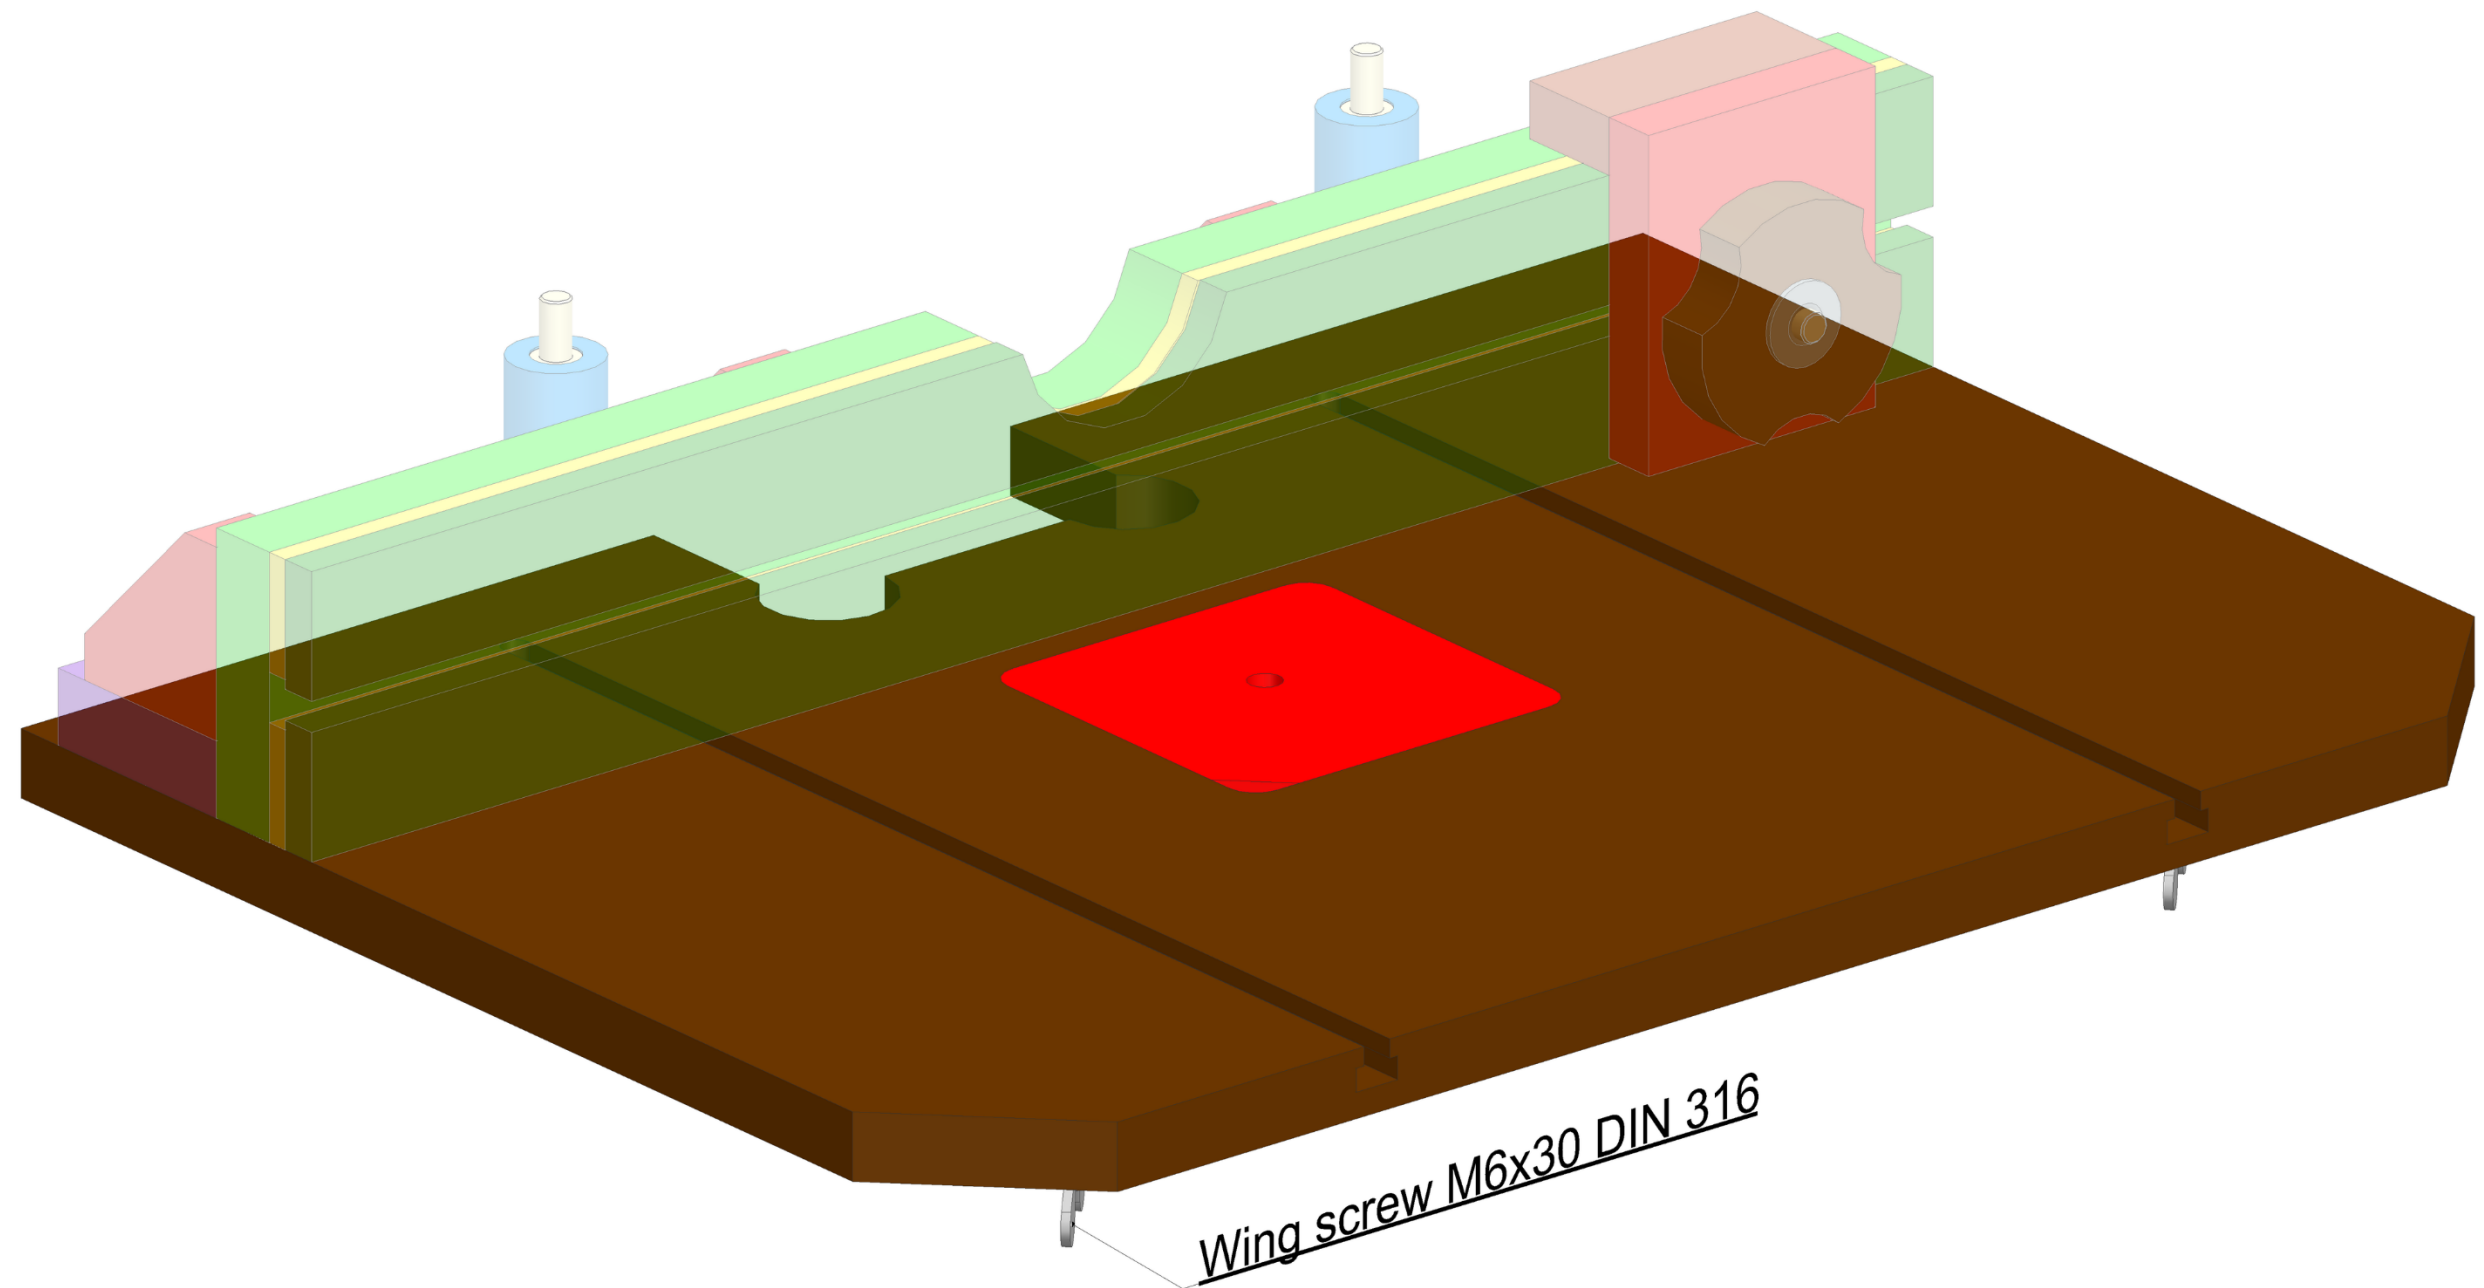


Fasteners:

- [Wing screw](#) M6x30 DIN 316

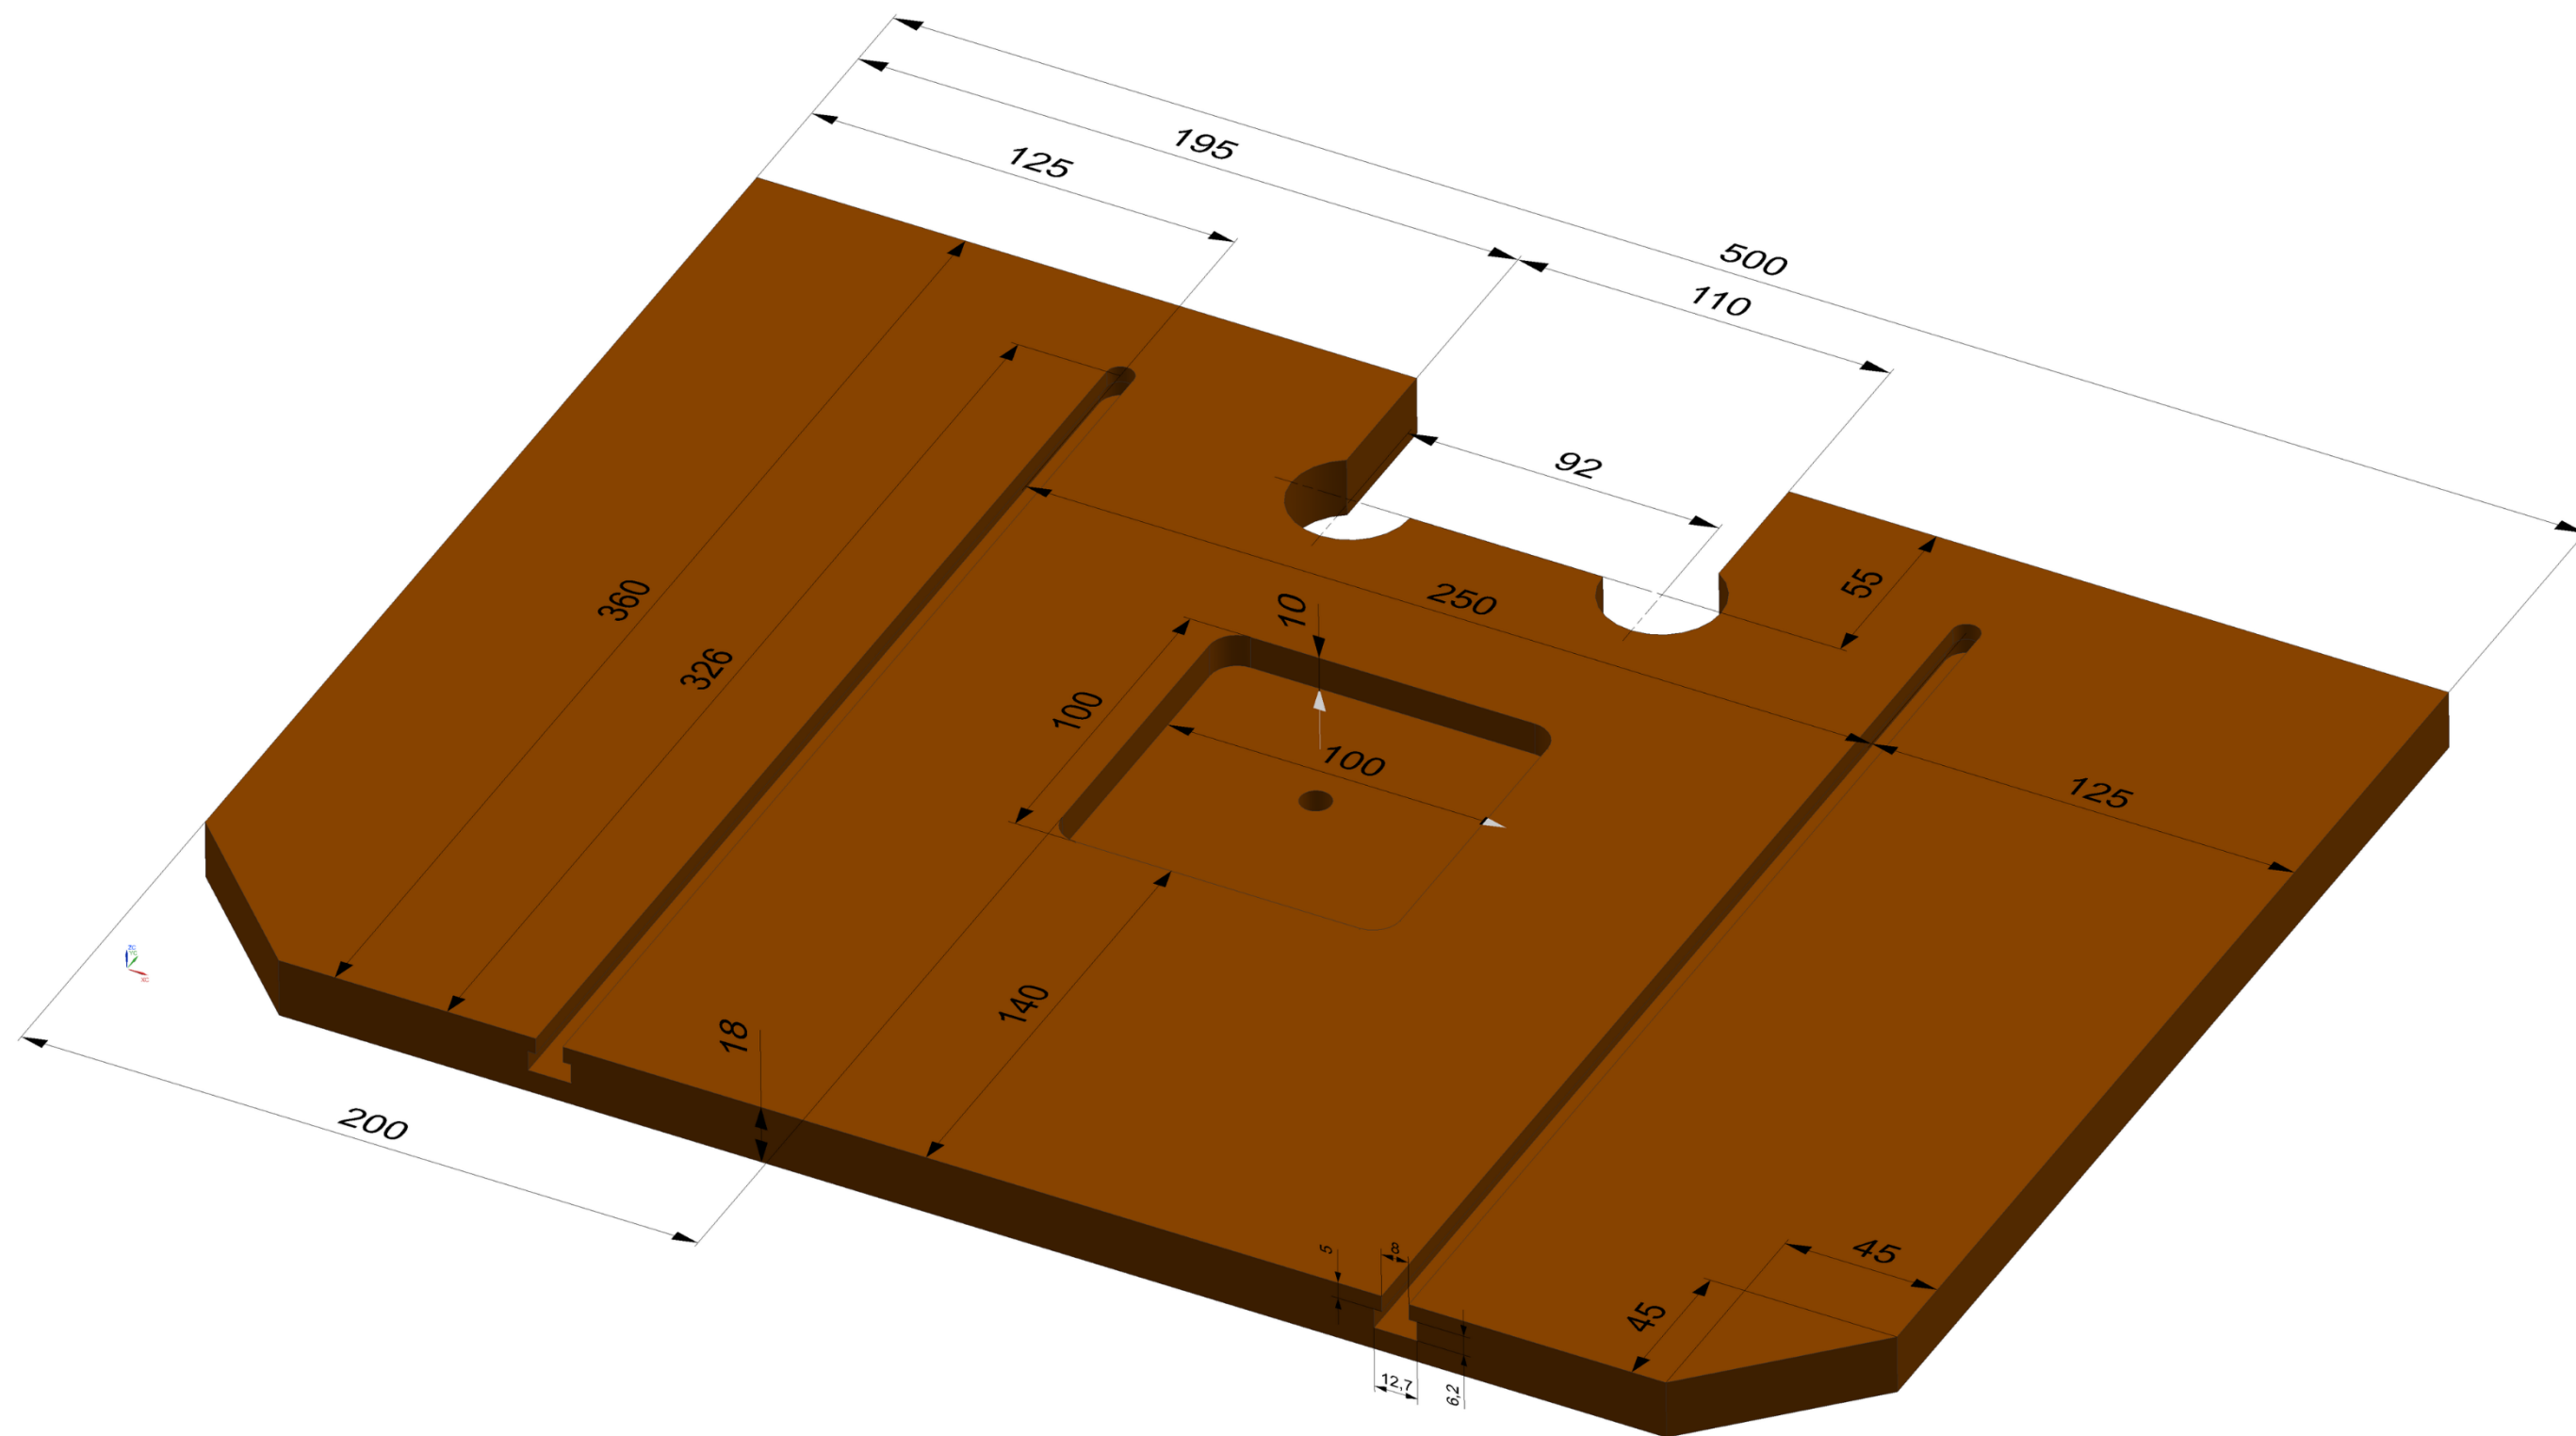


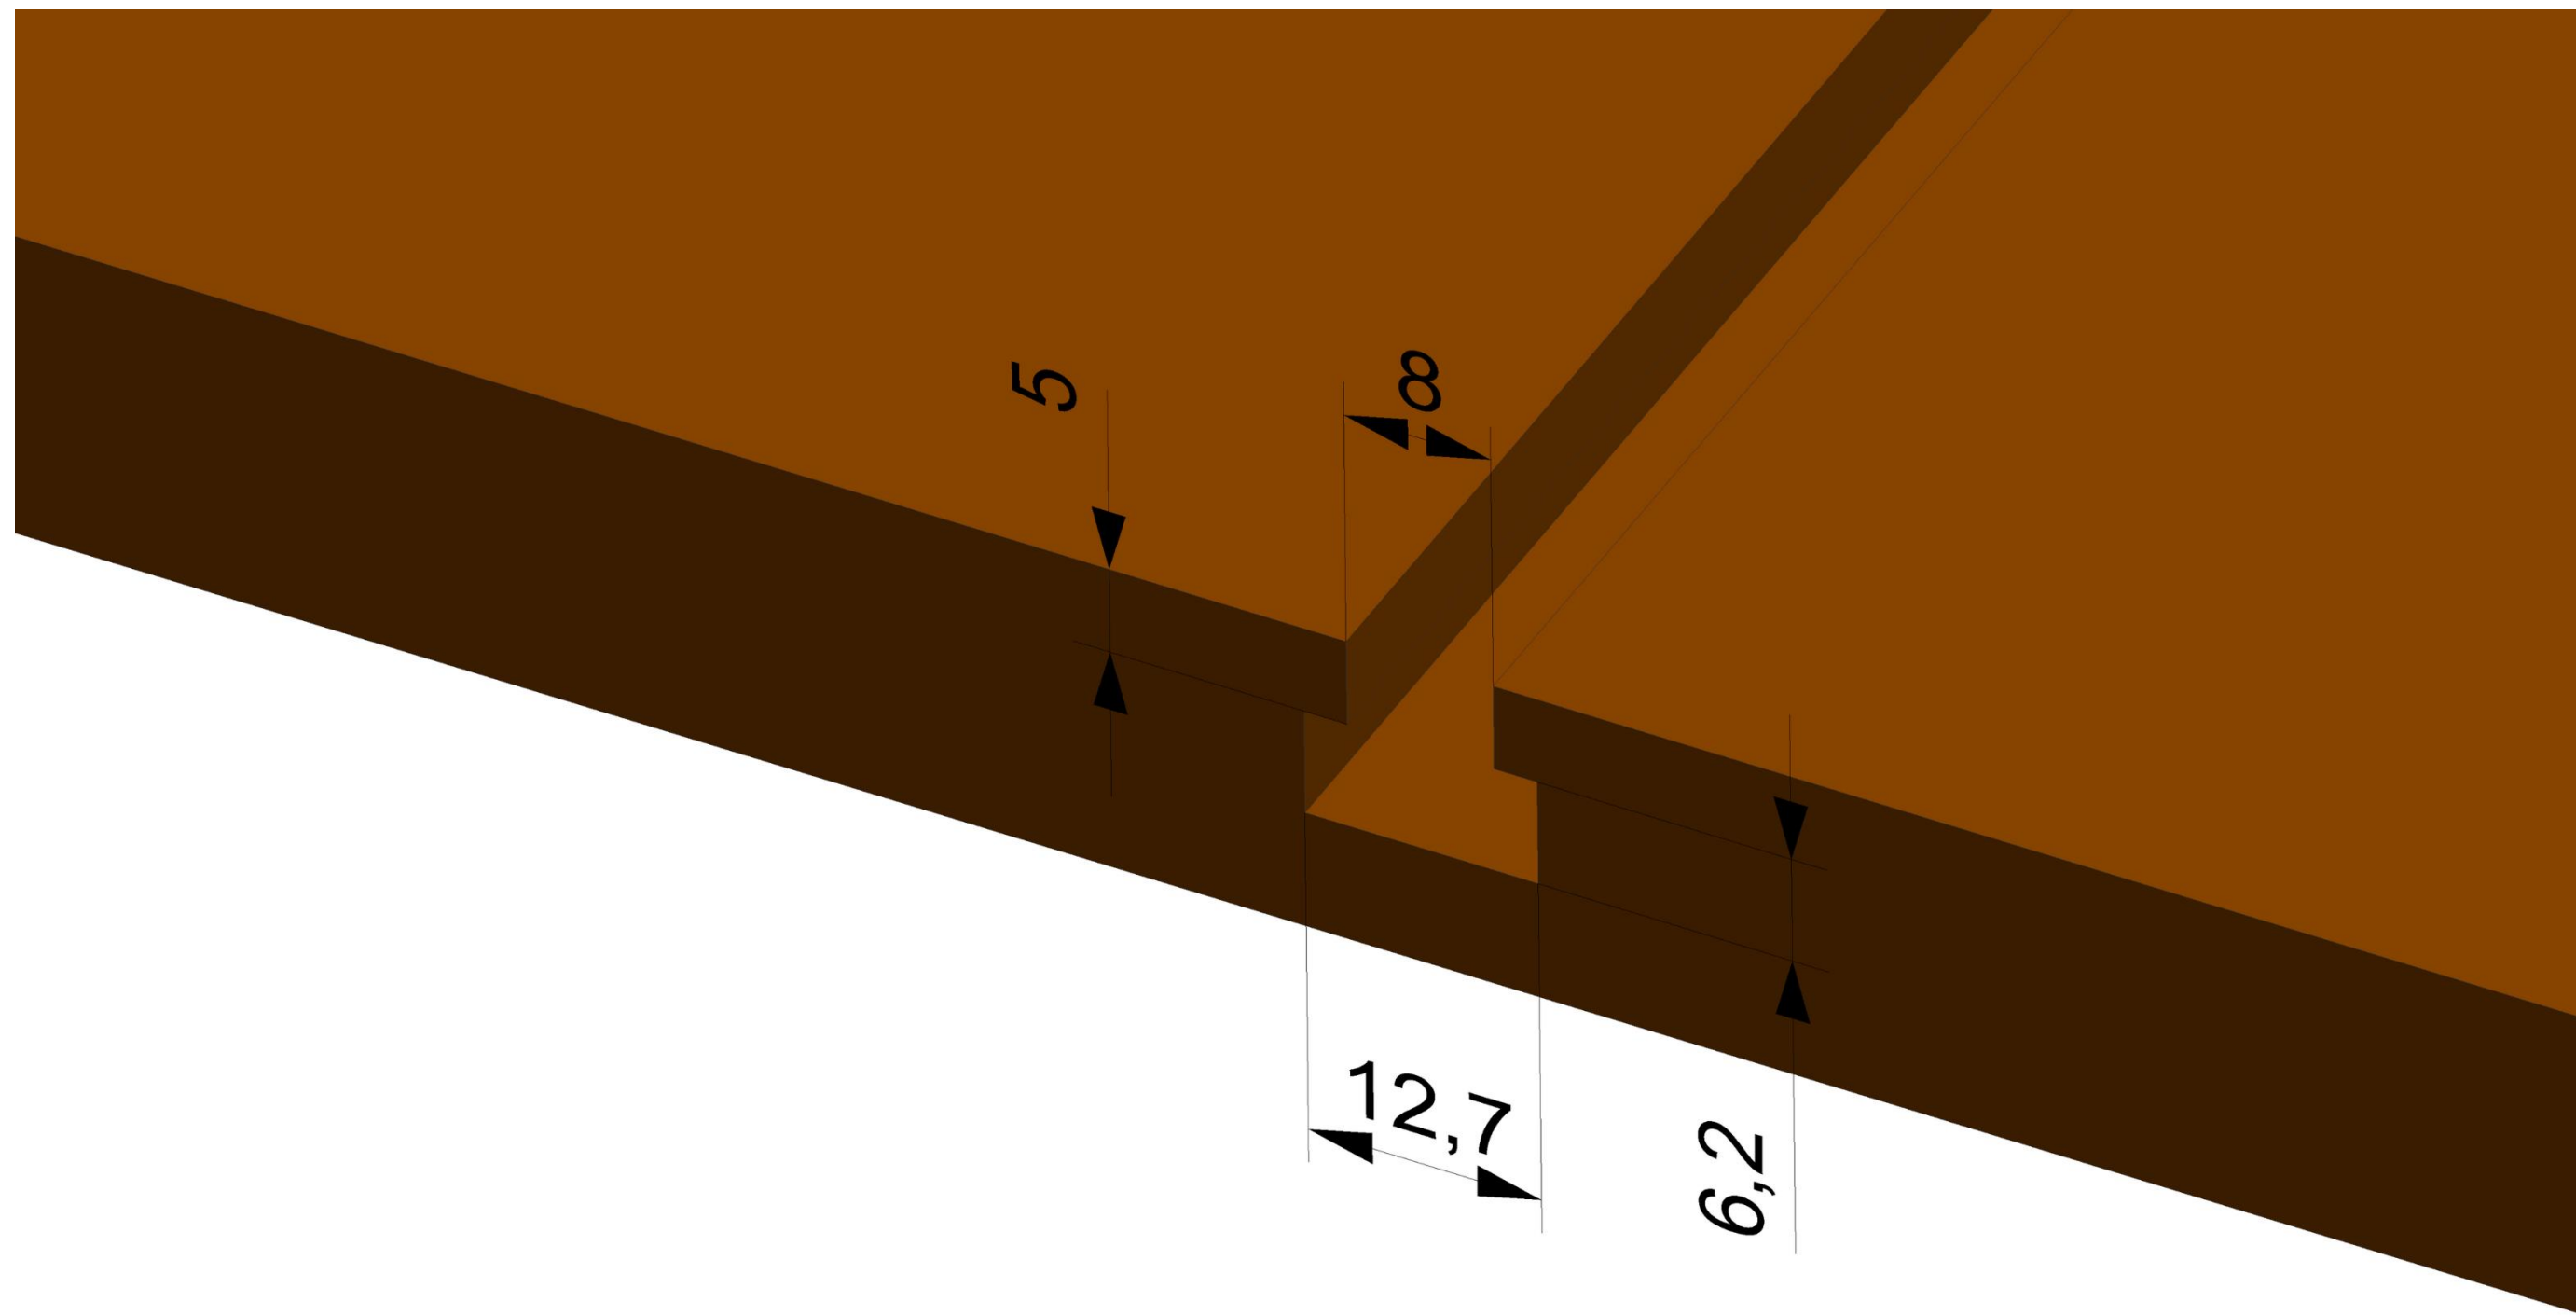


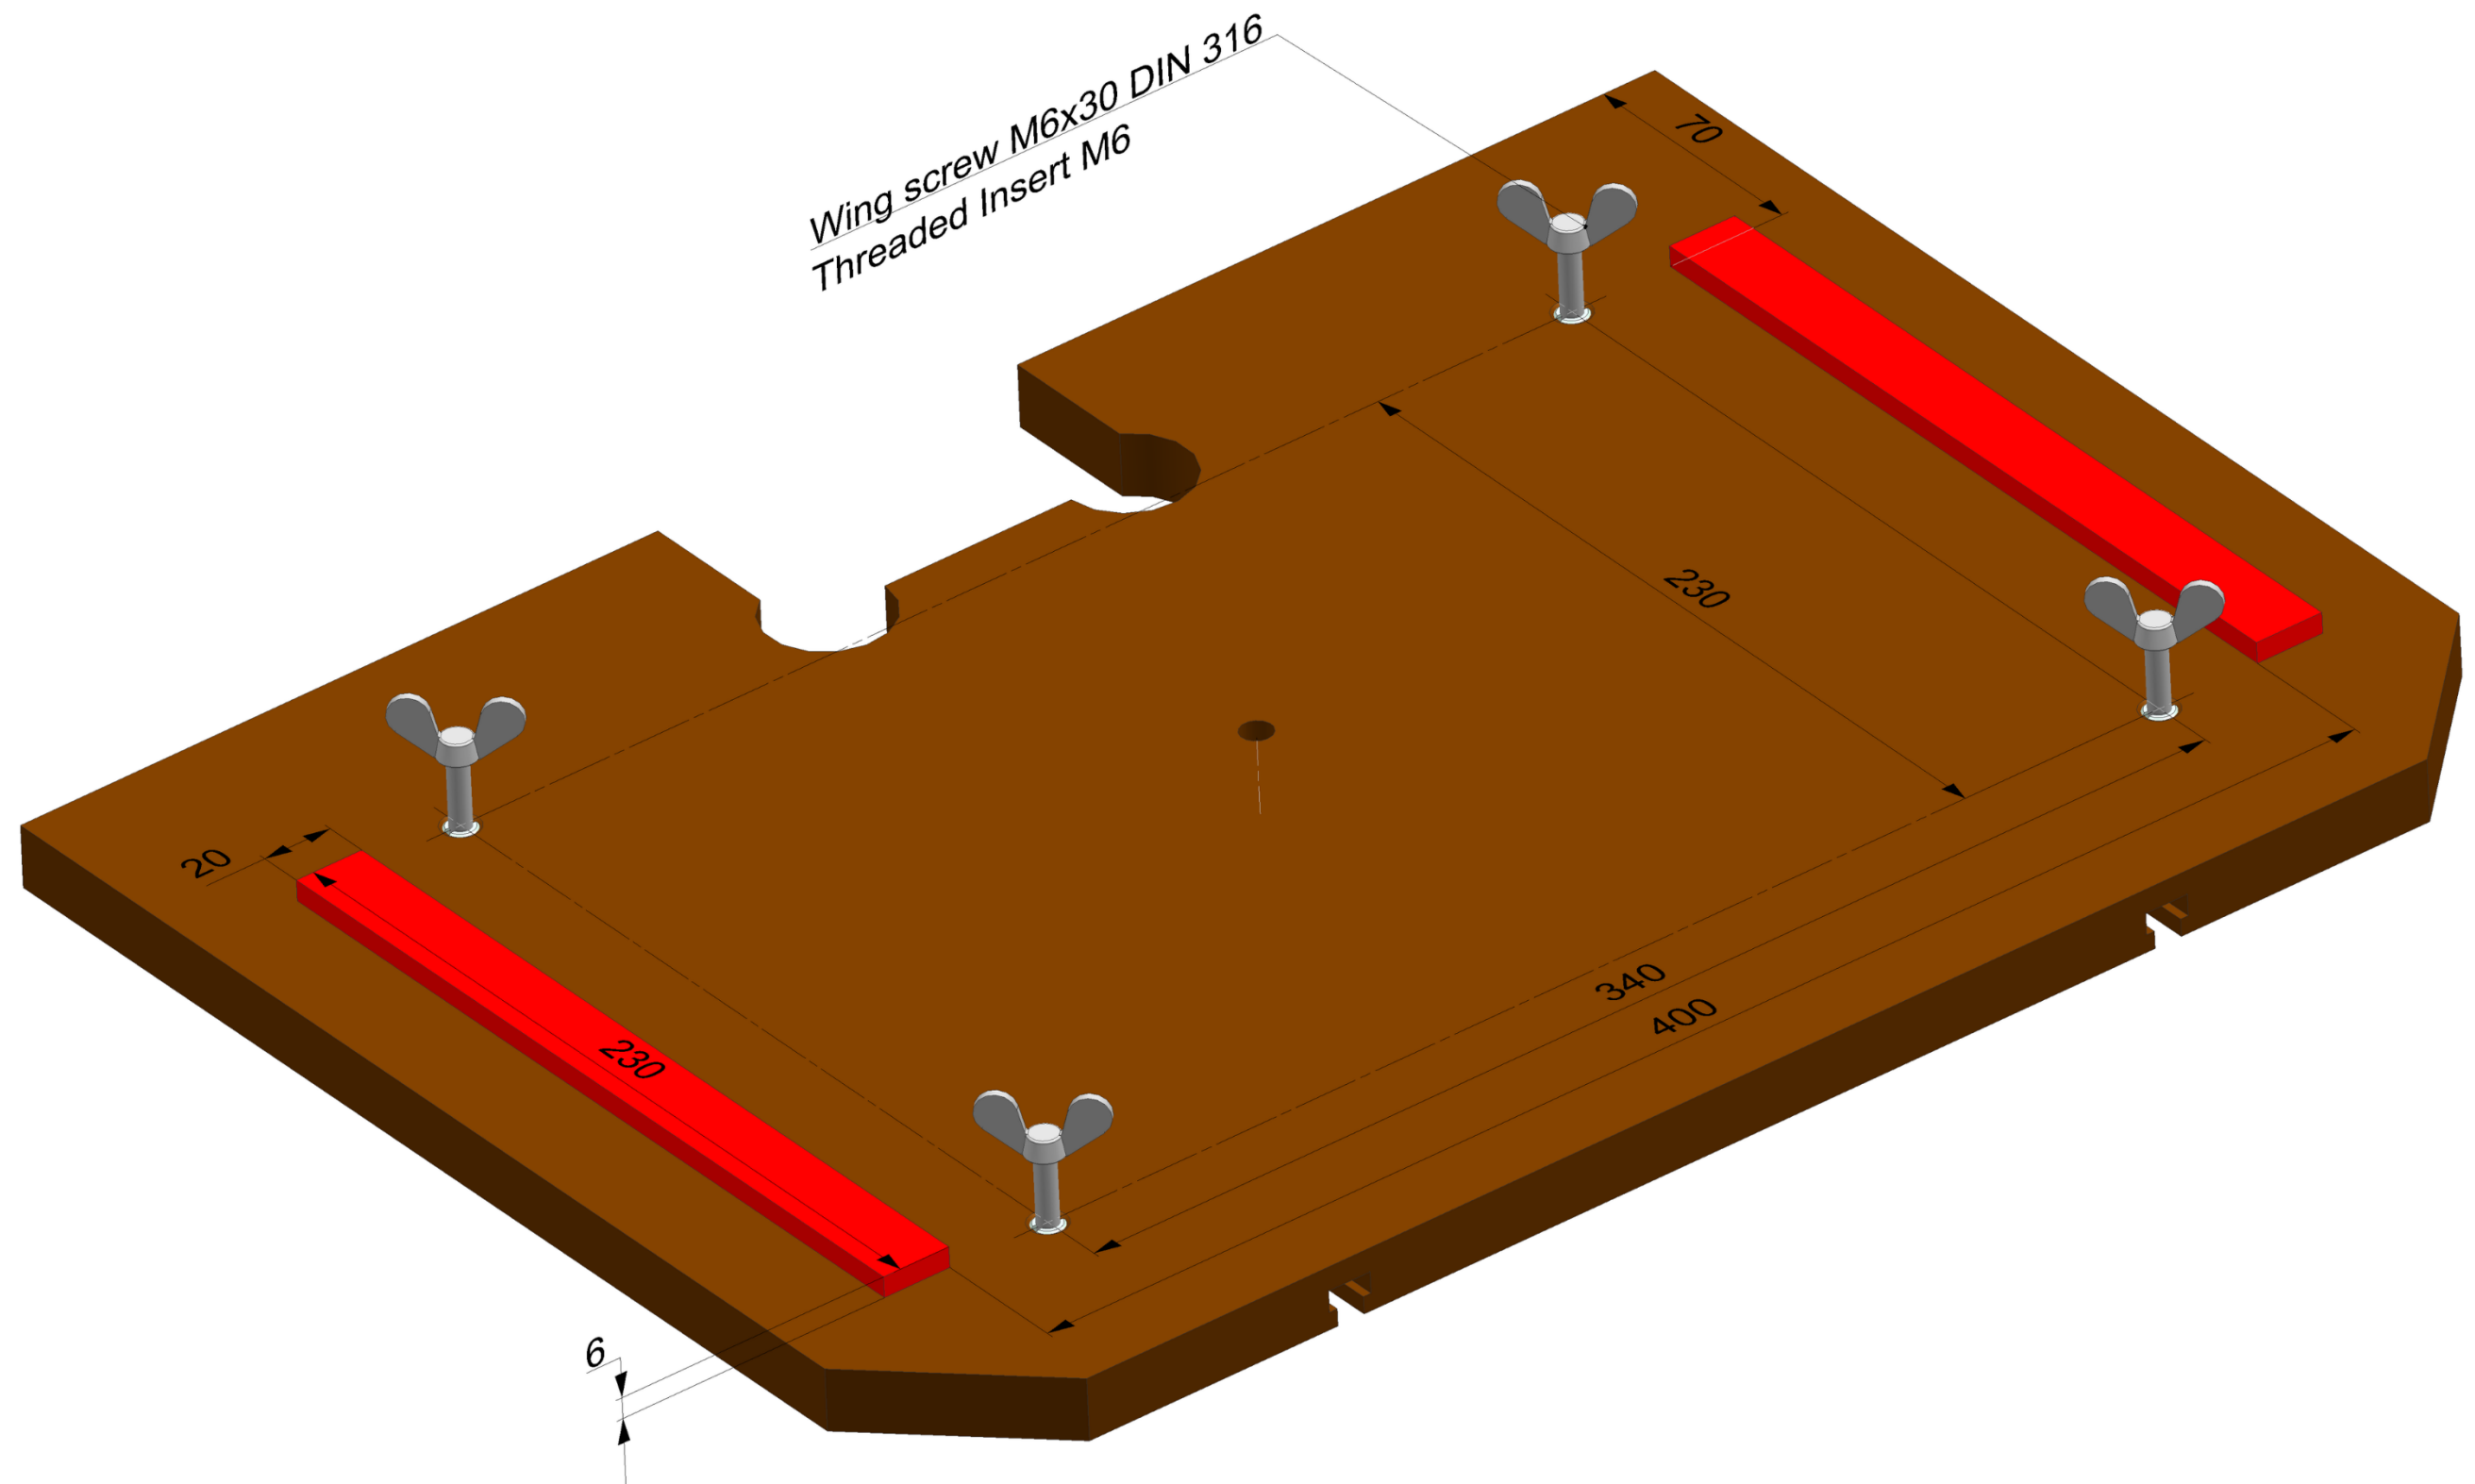



Fasteners:

- [Wing screw](#) M6x30 DIN 316 x 4
- [Threaded Insert M6](#)

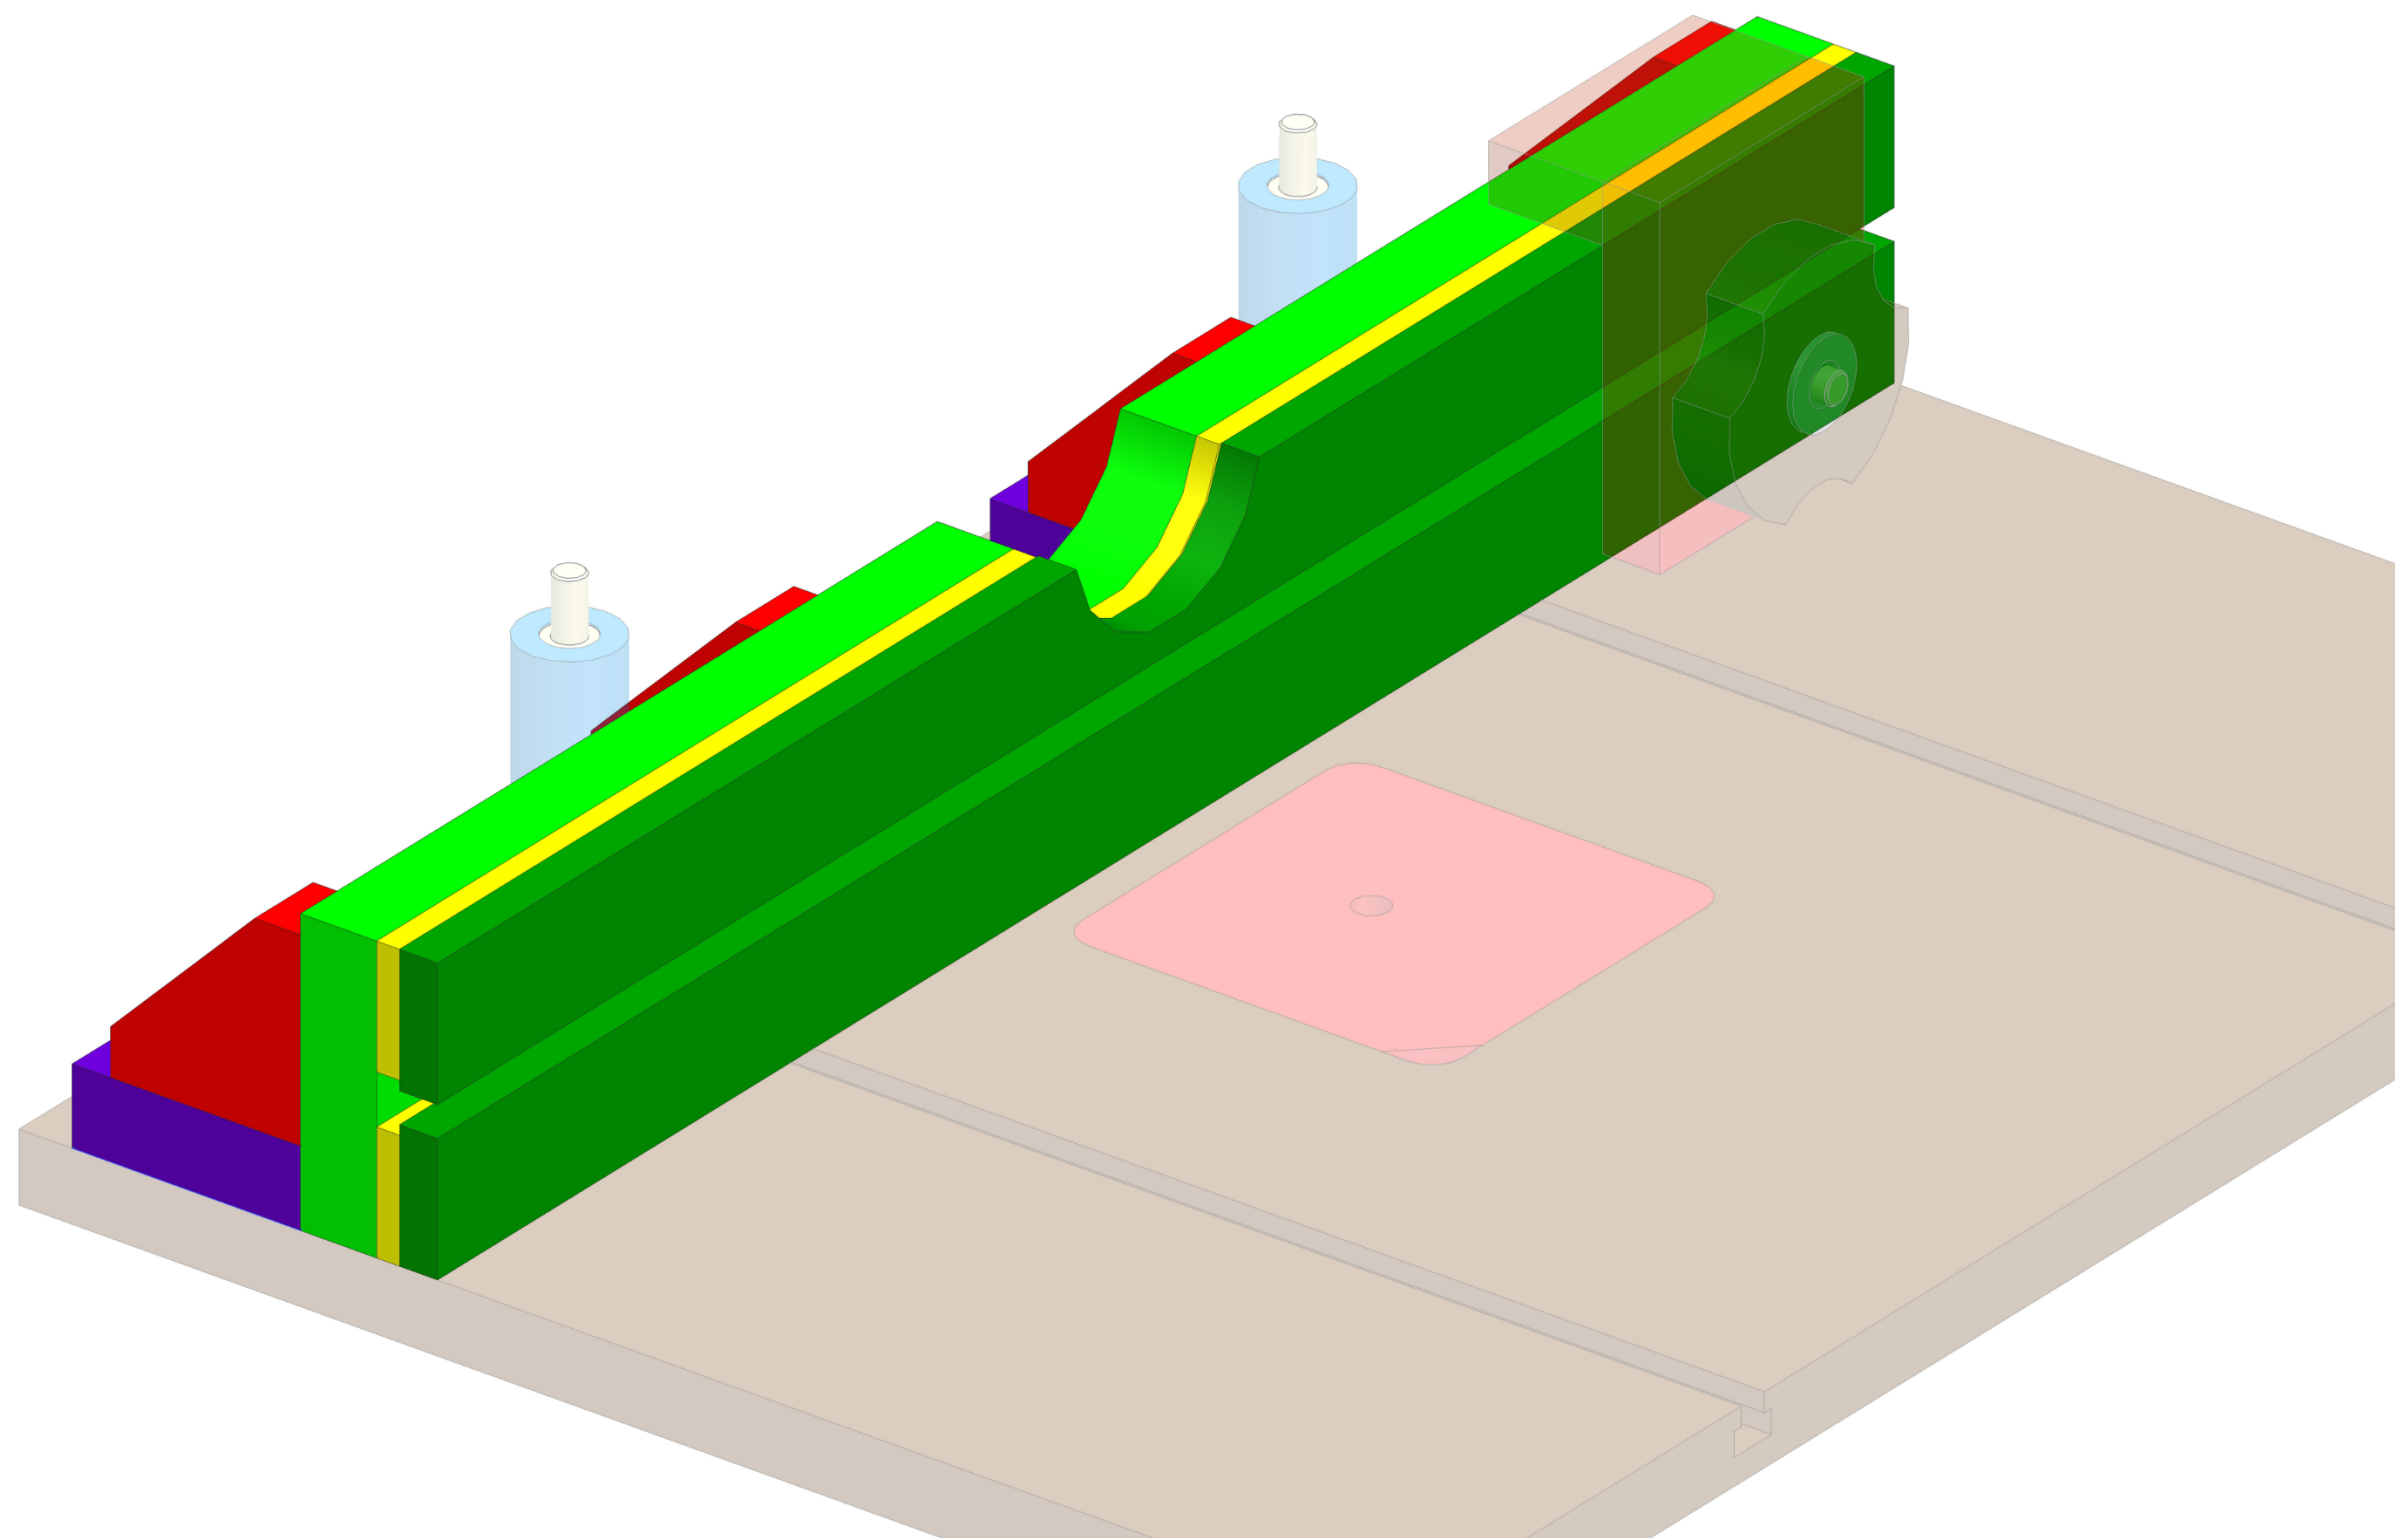

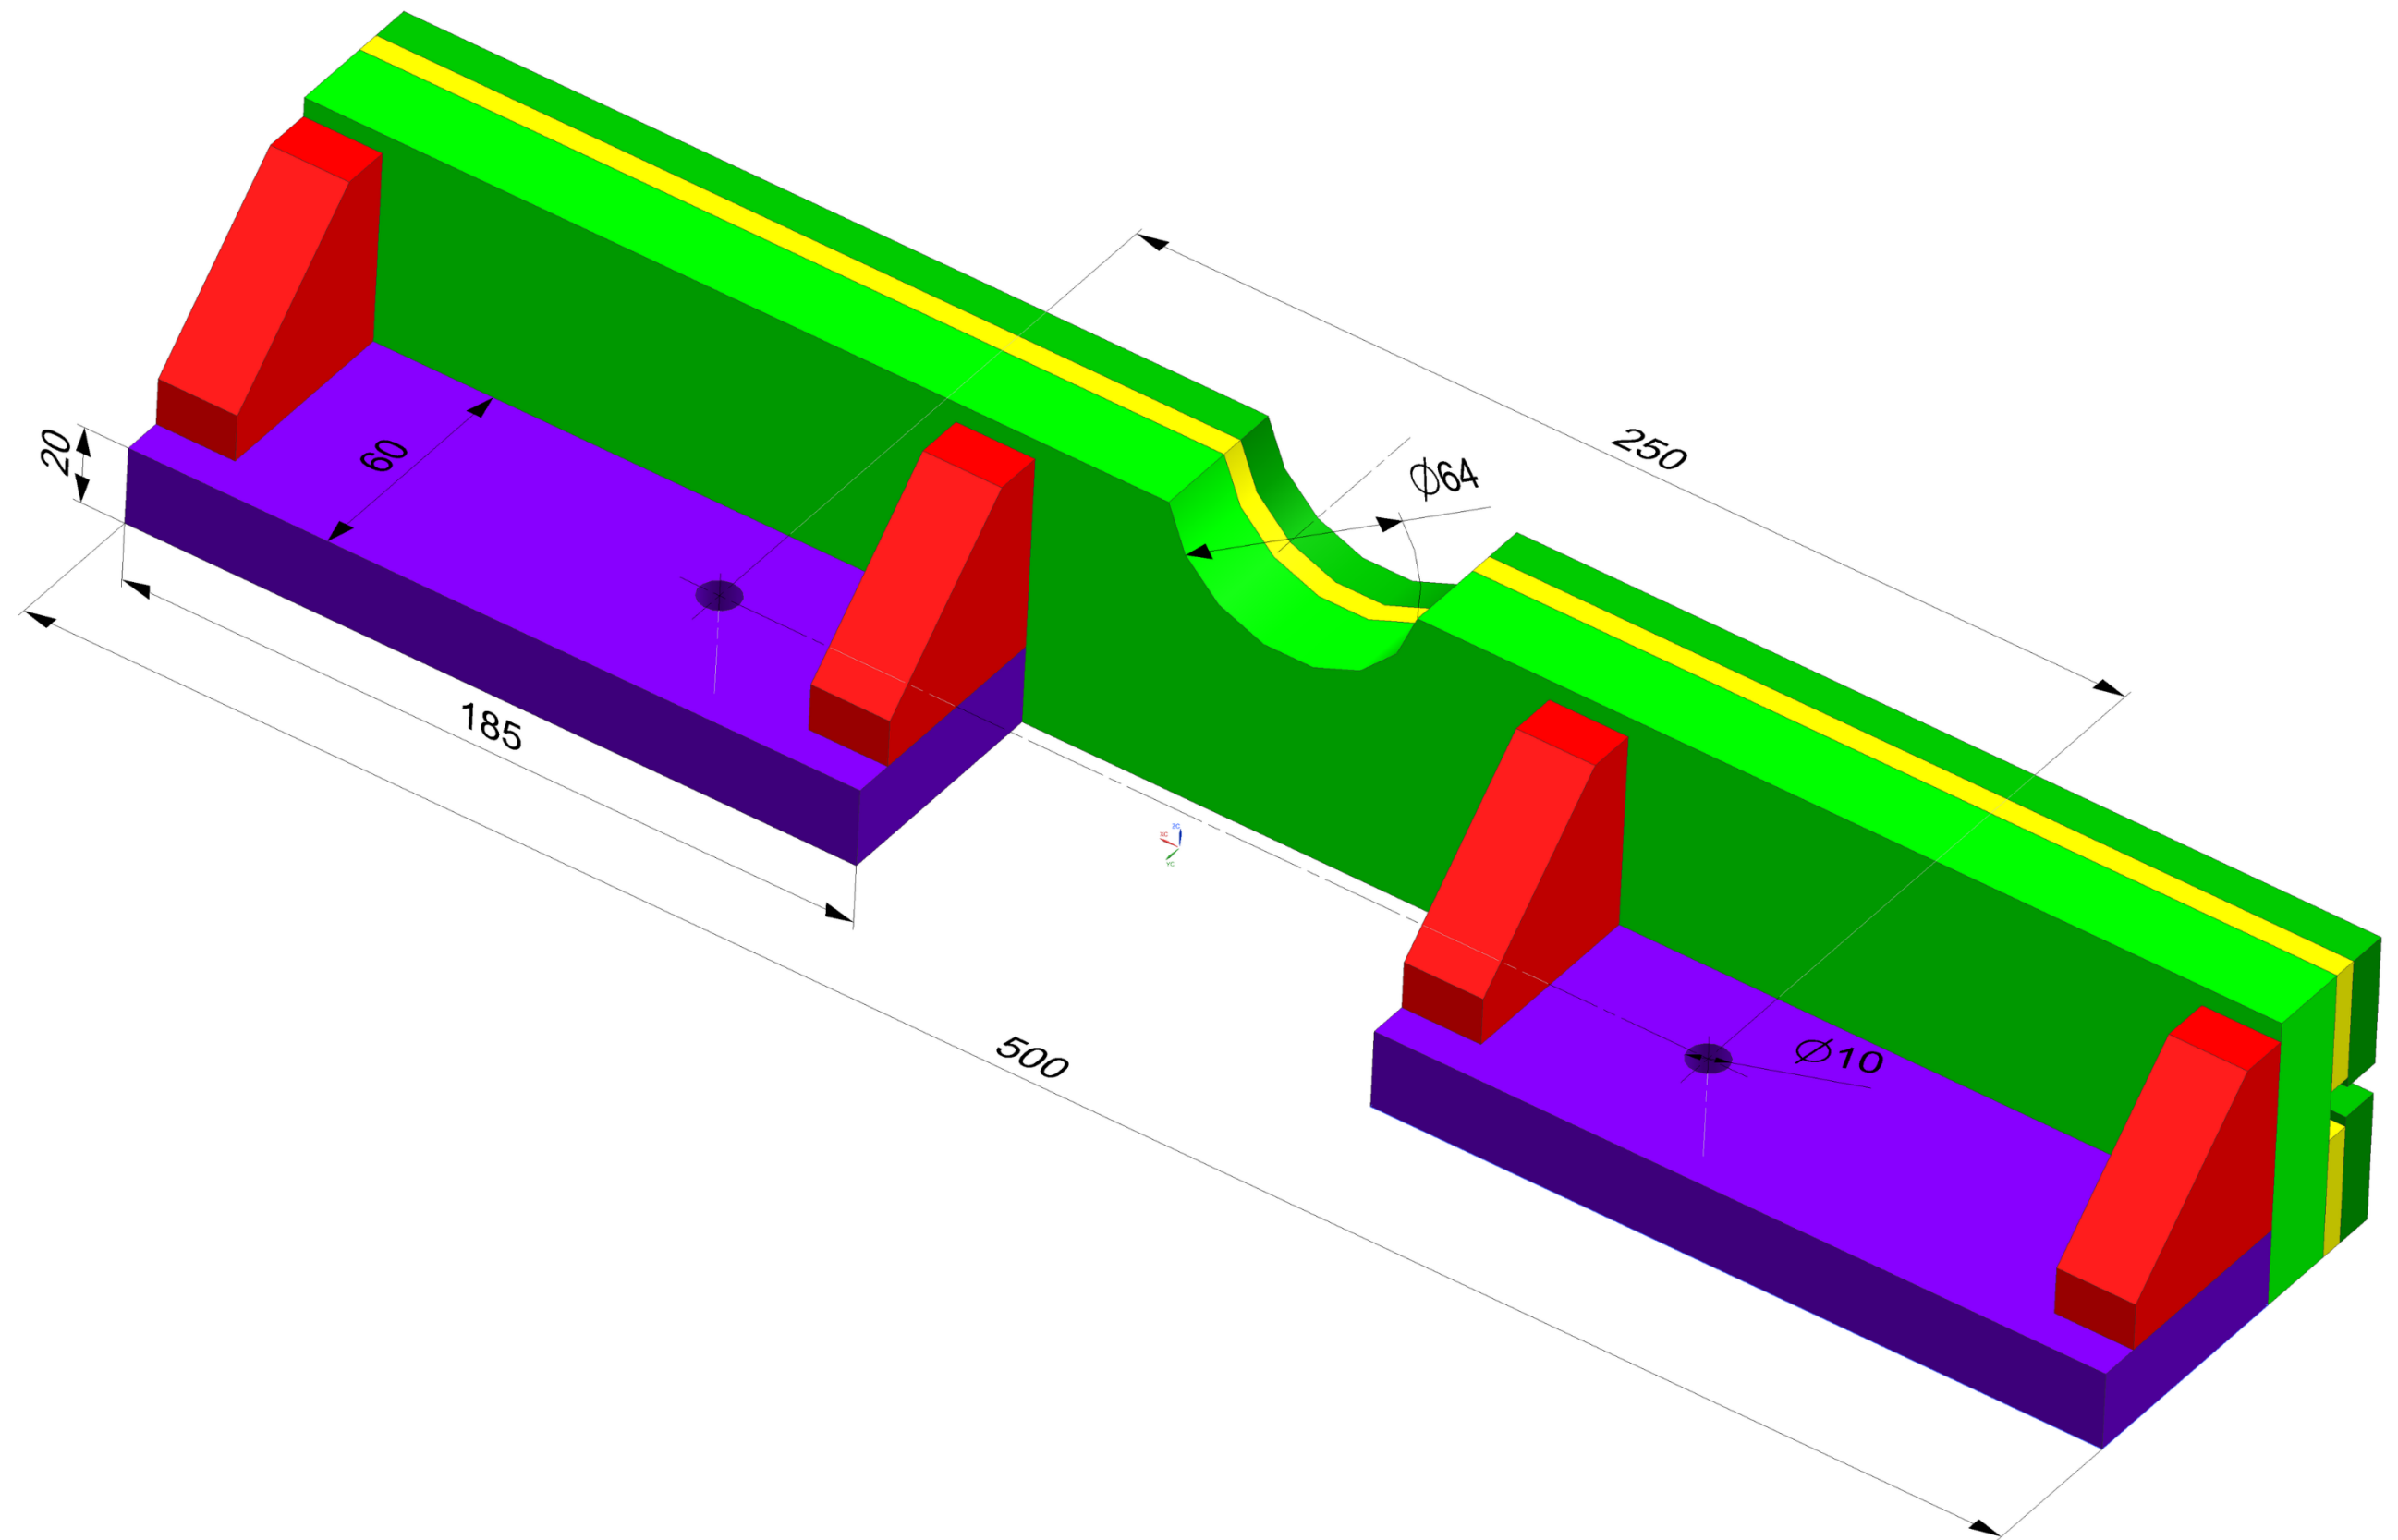

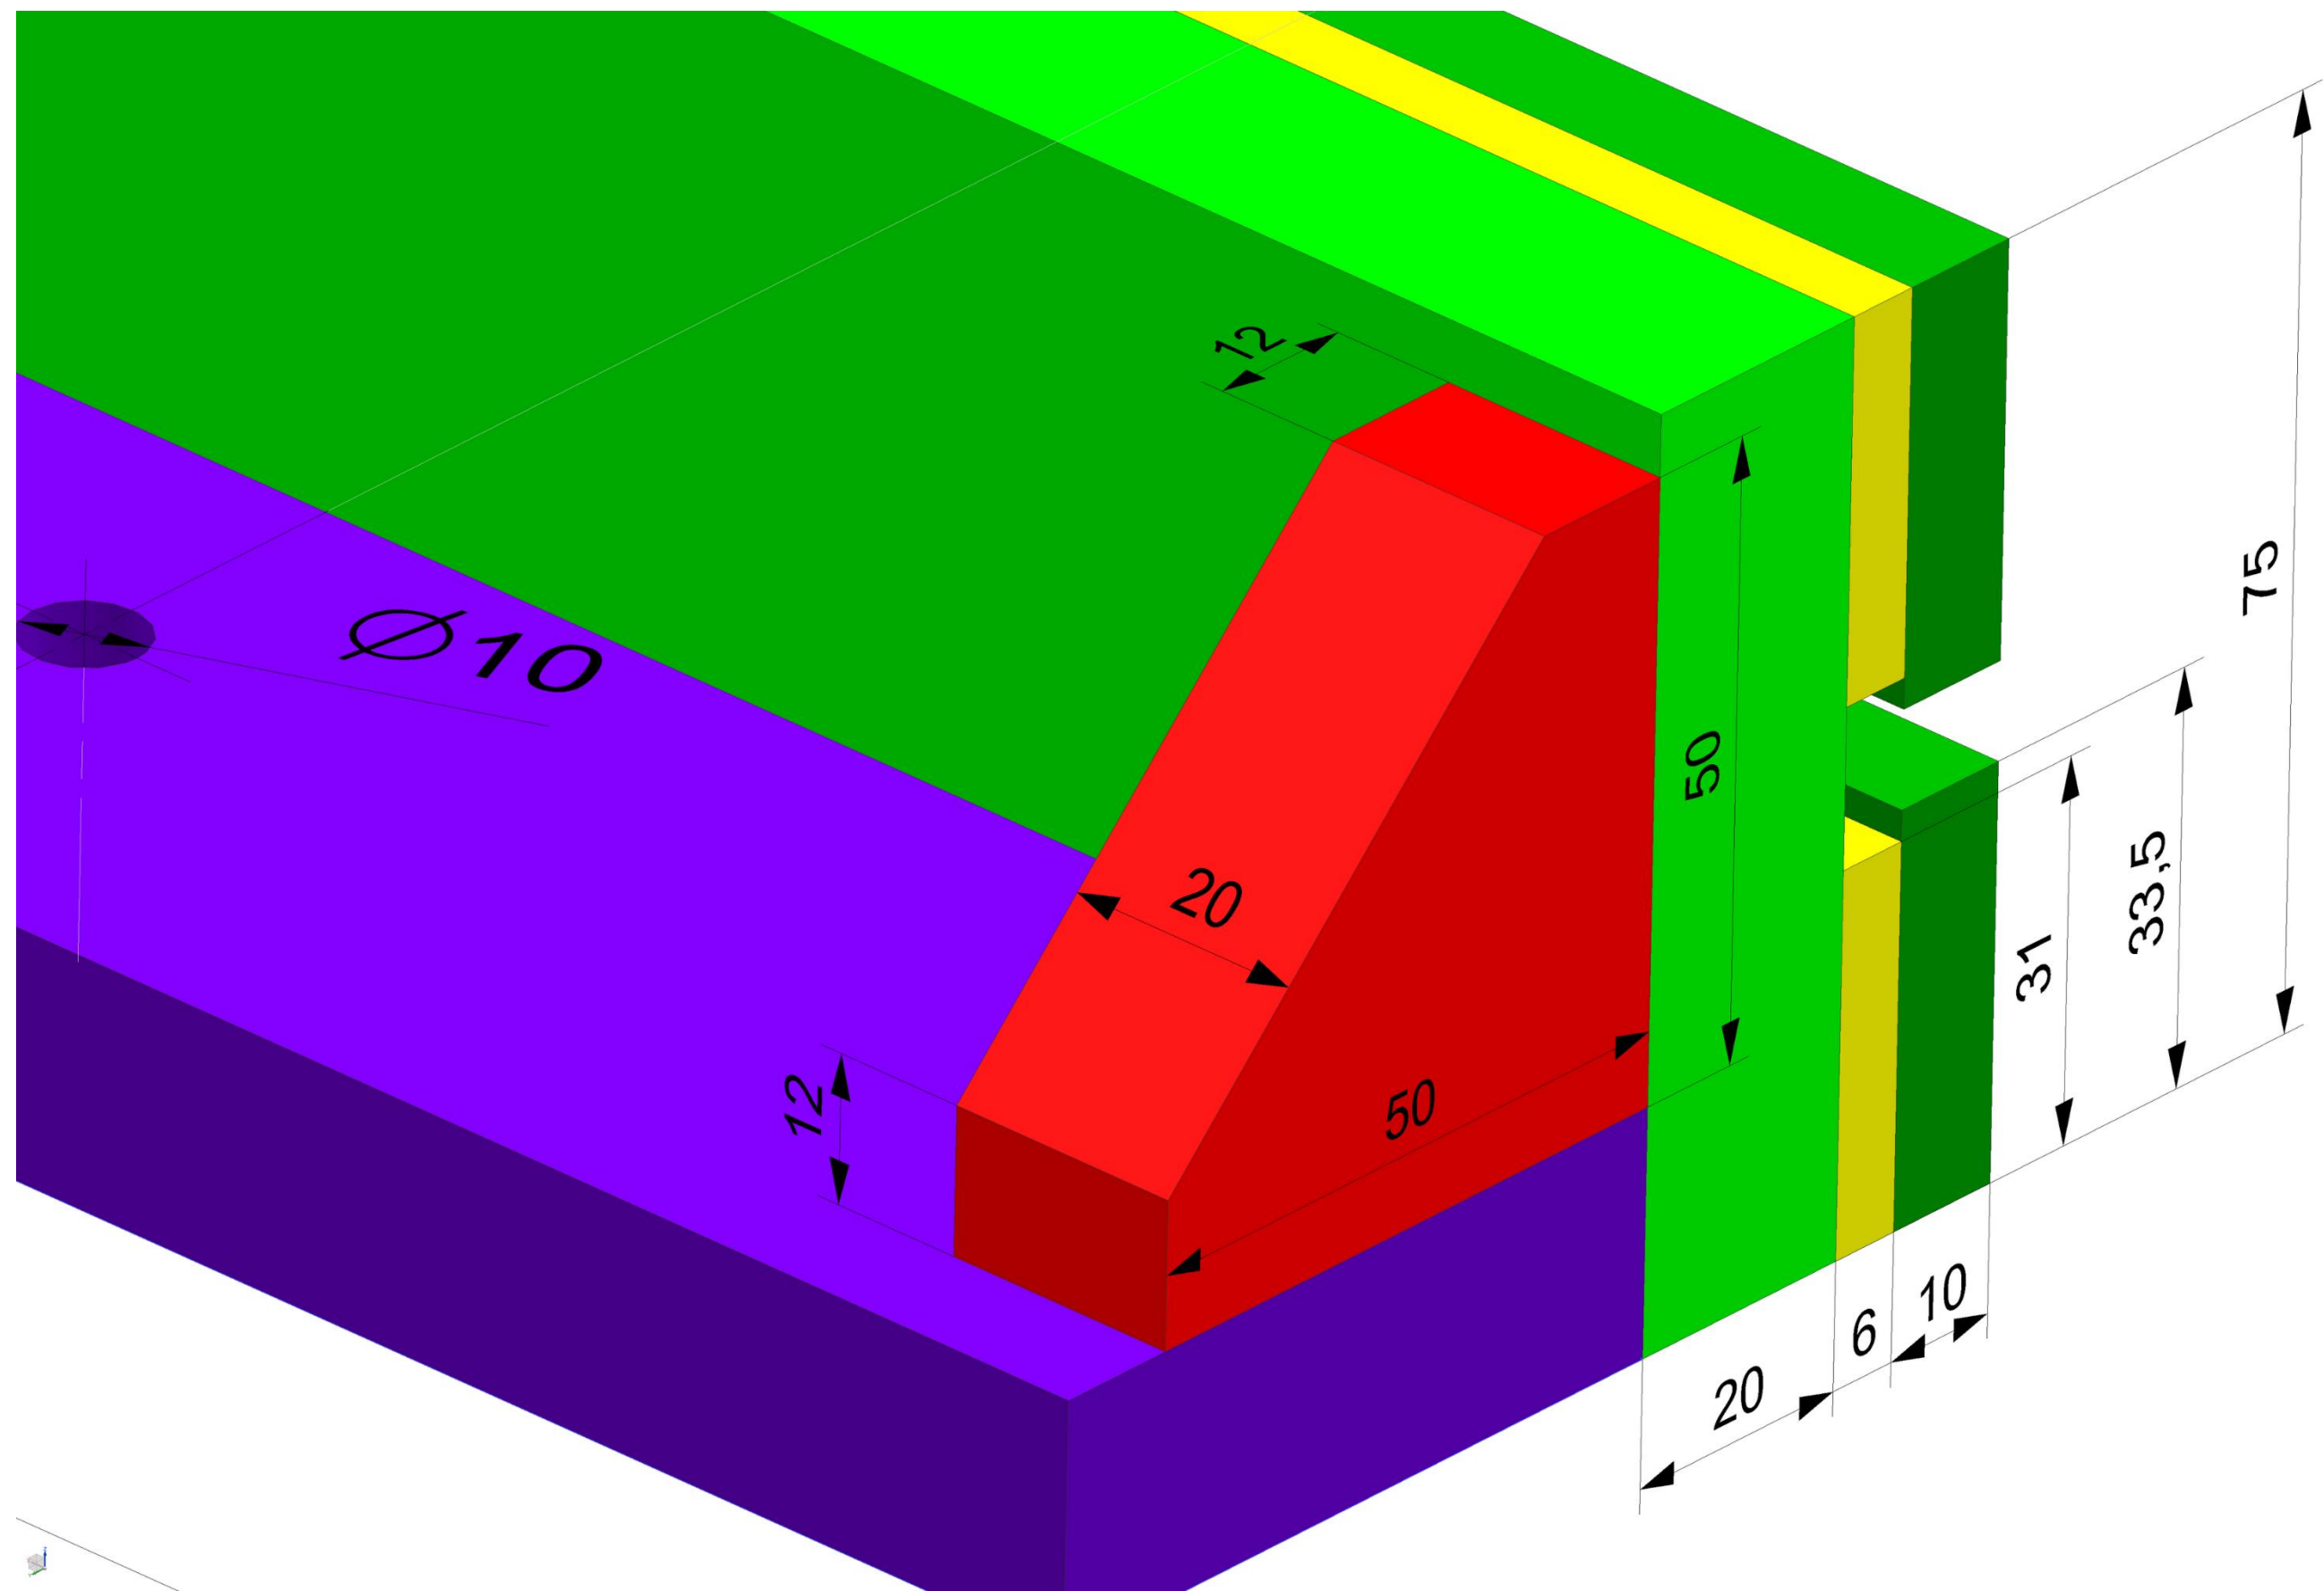


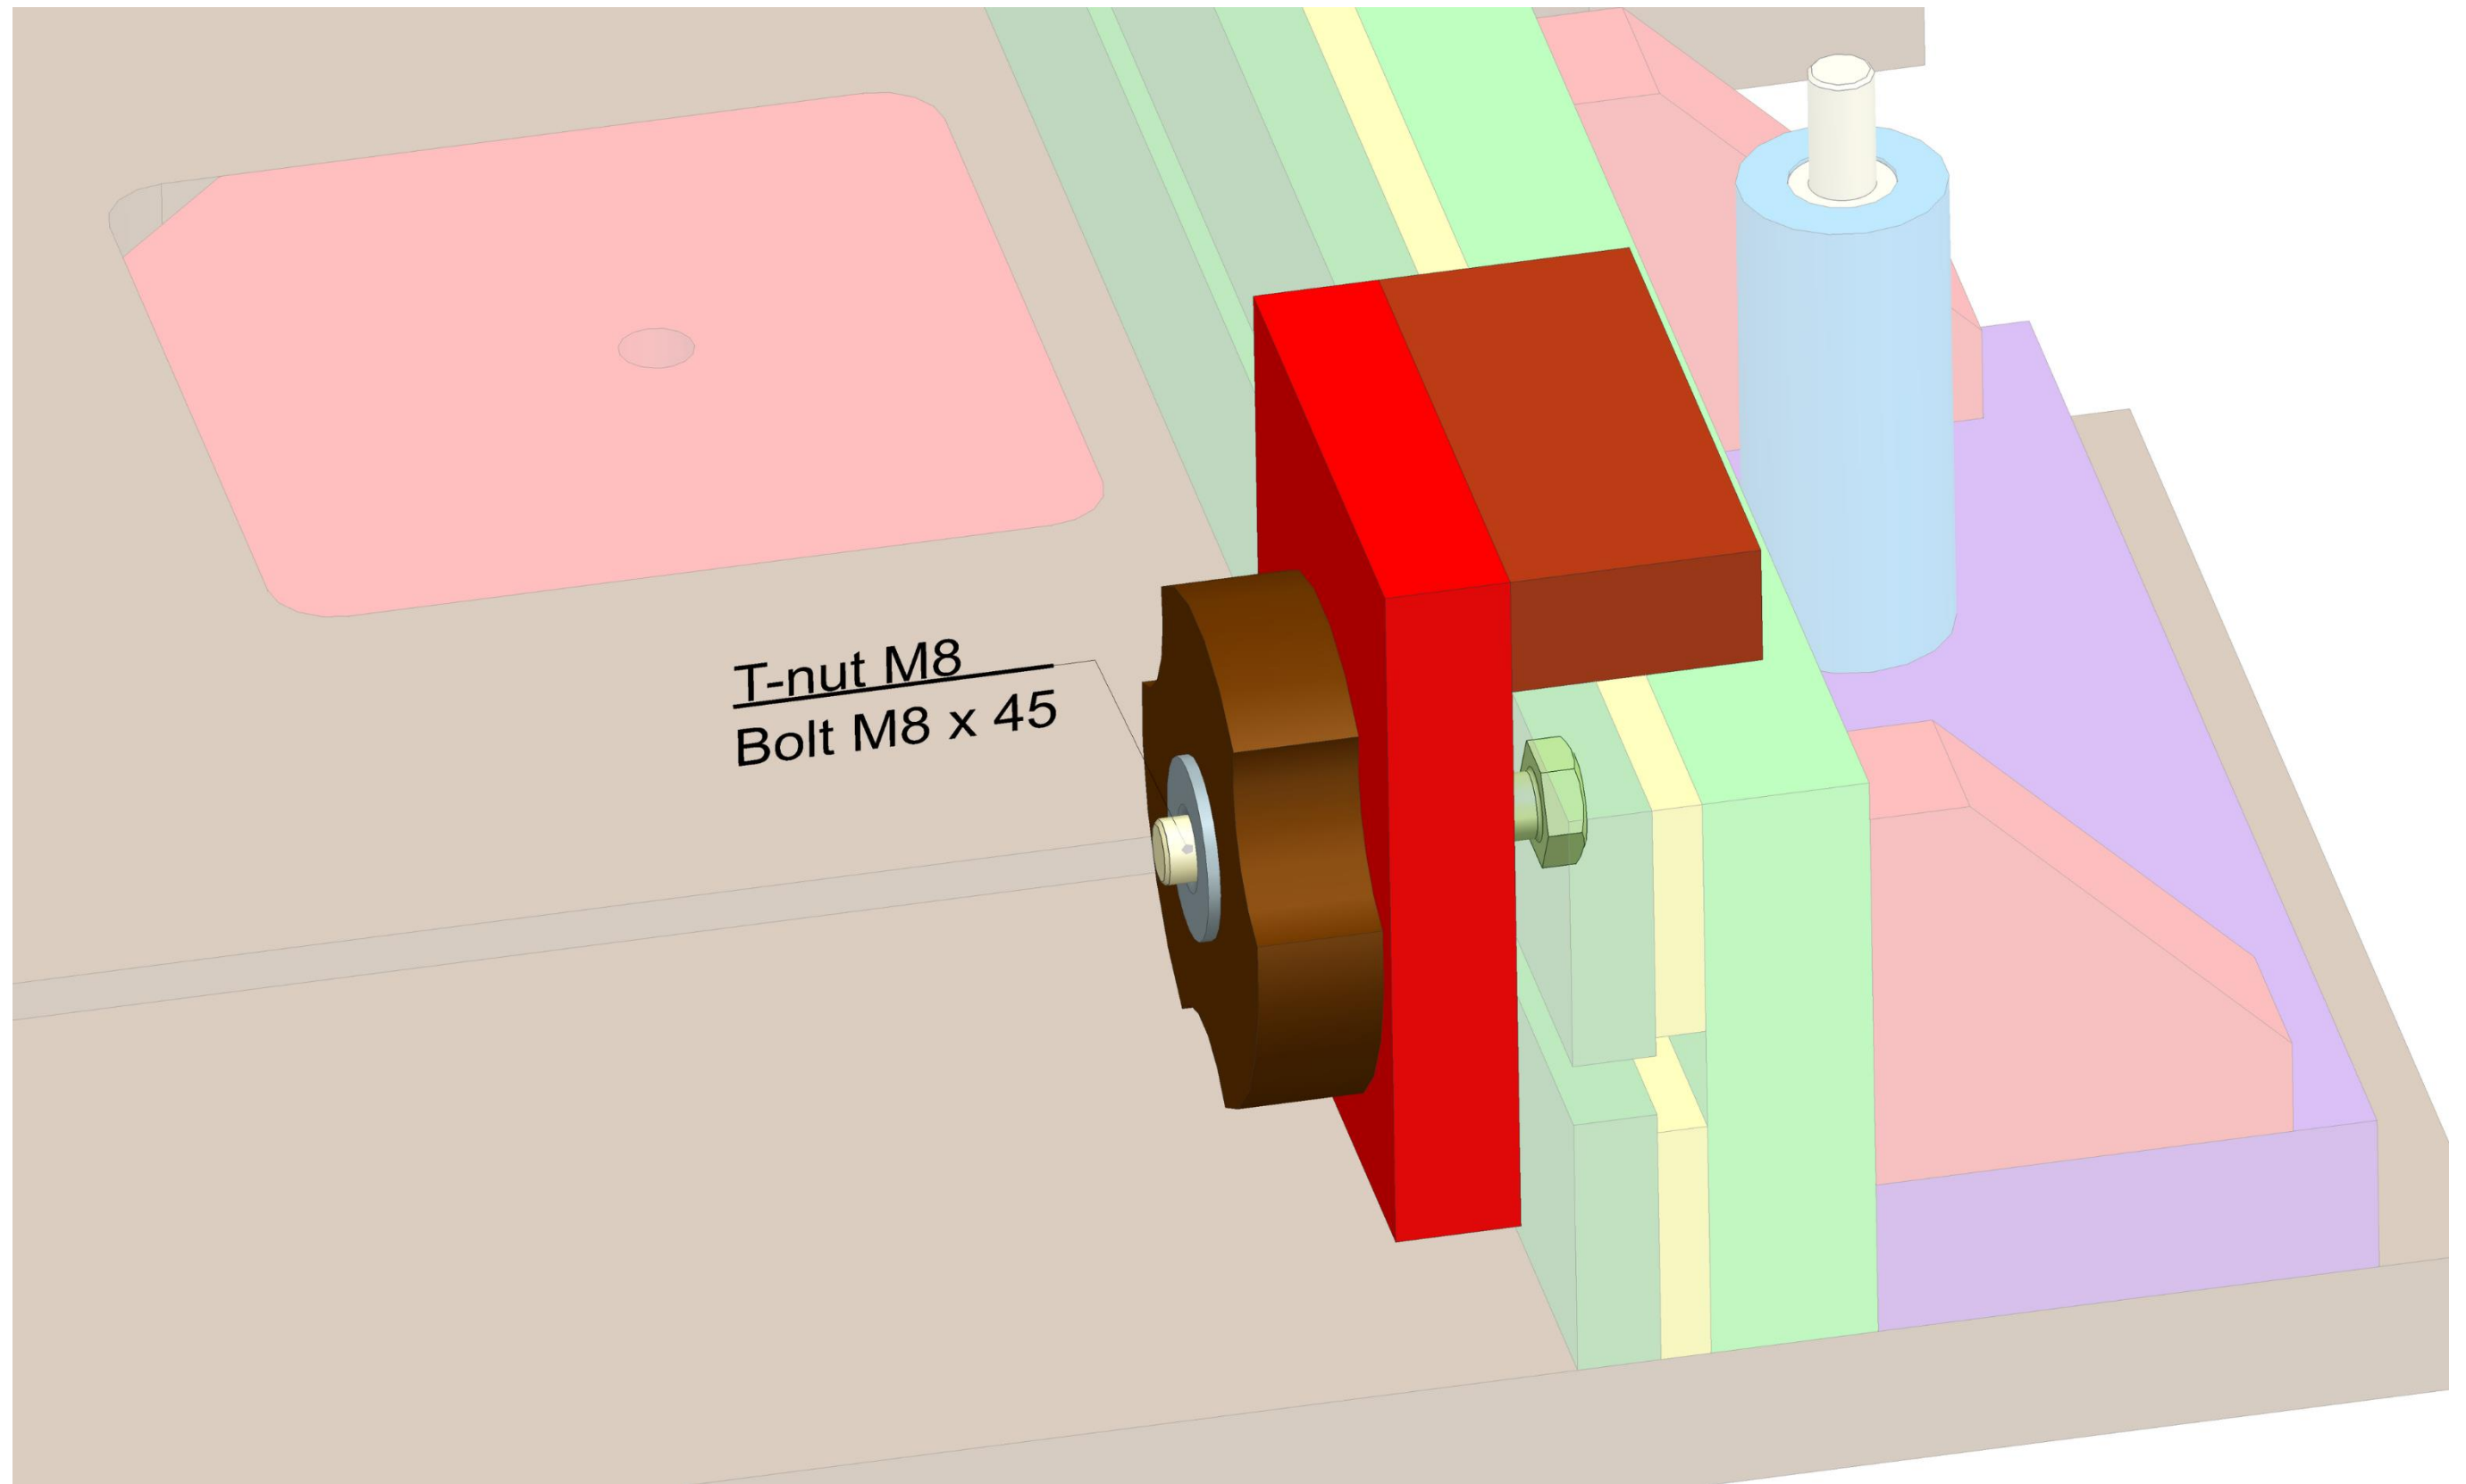


T-nut M8
Bolt M8 x 45

Fasteners:


- [T-nut M8](#)
- [Bolt M8 x 50](#)

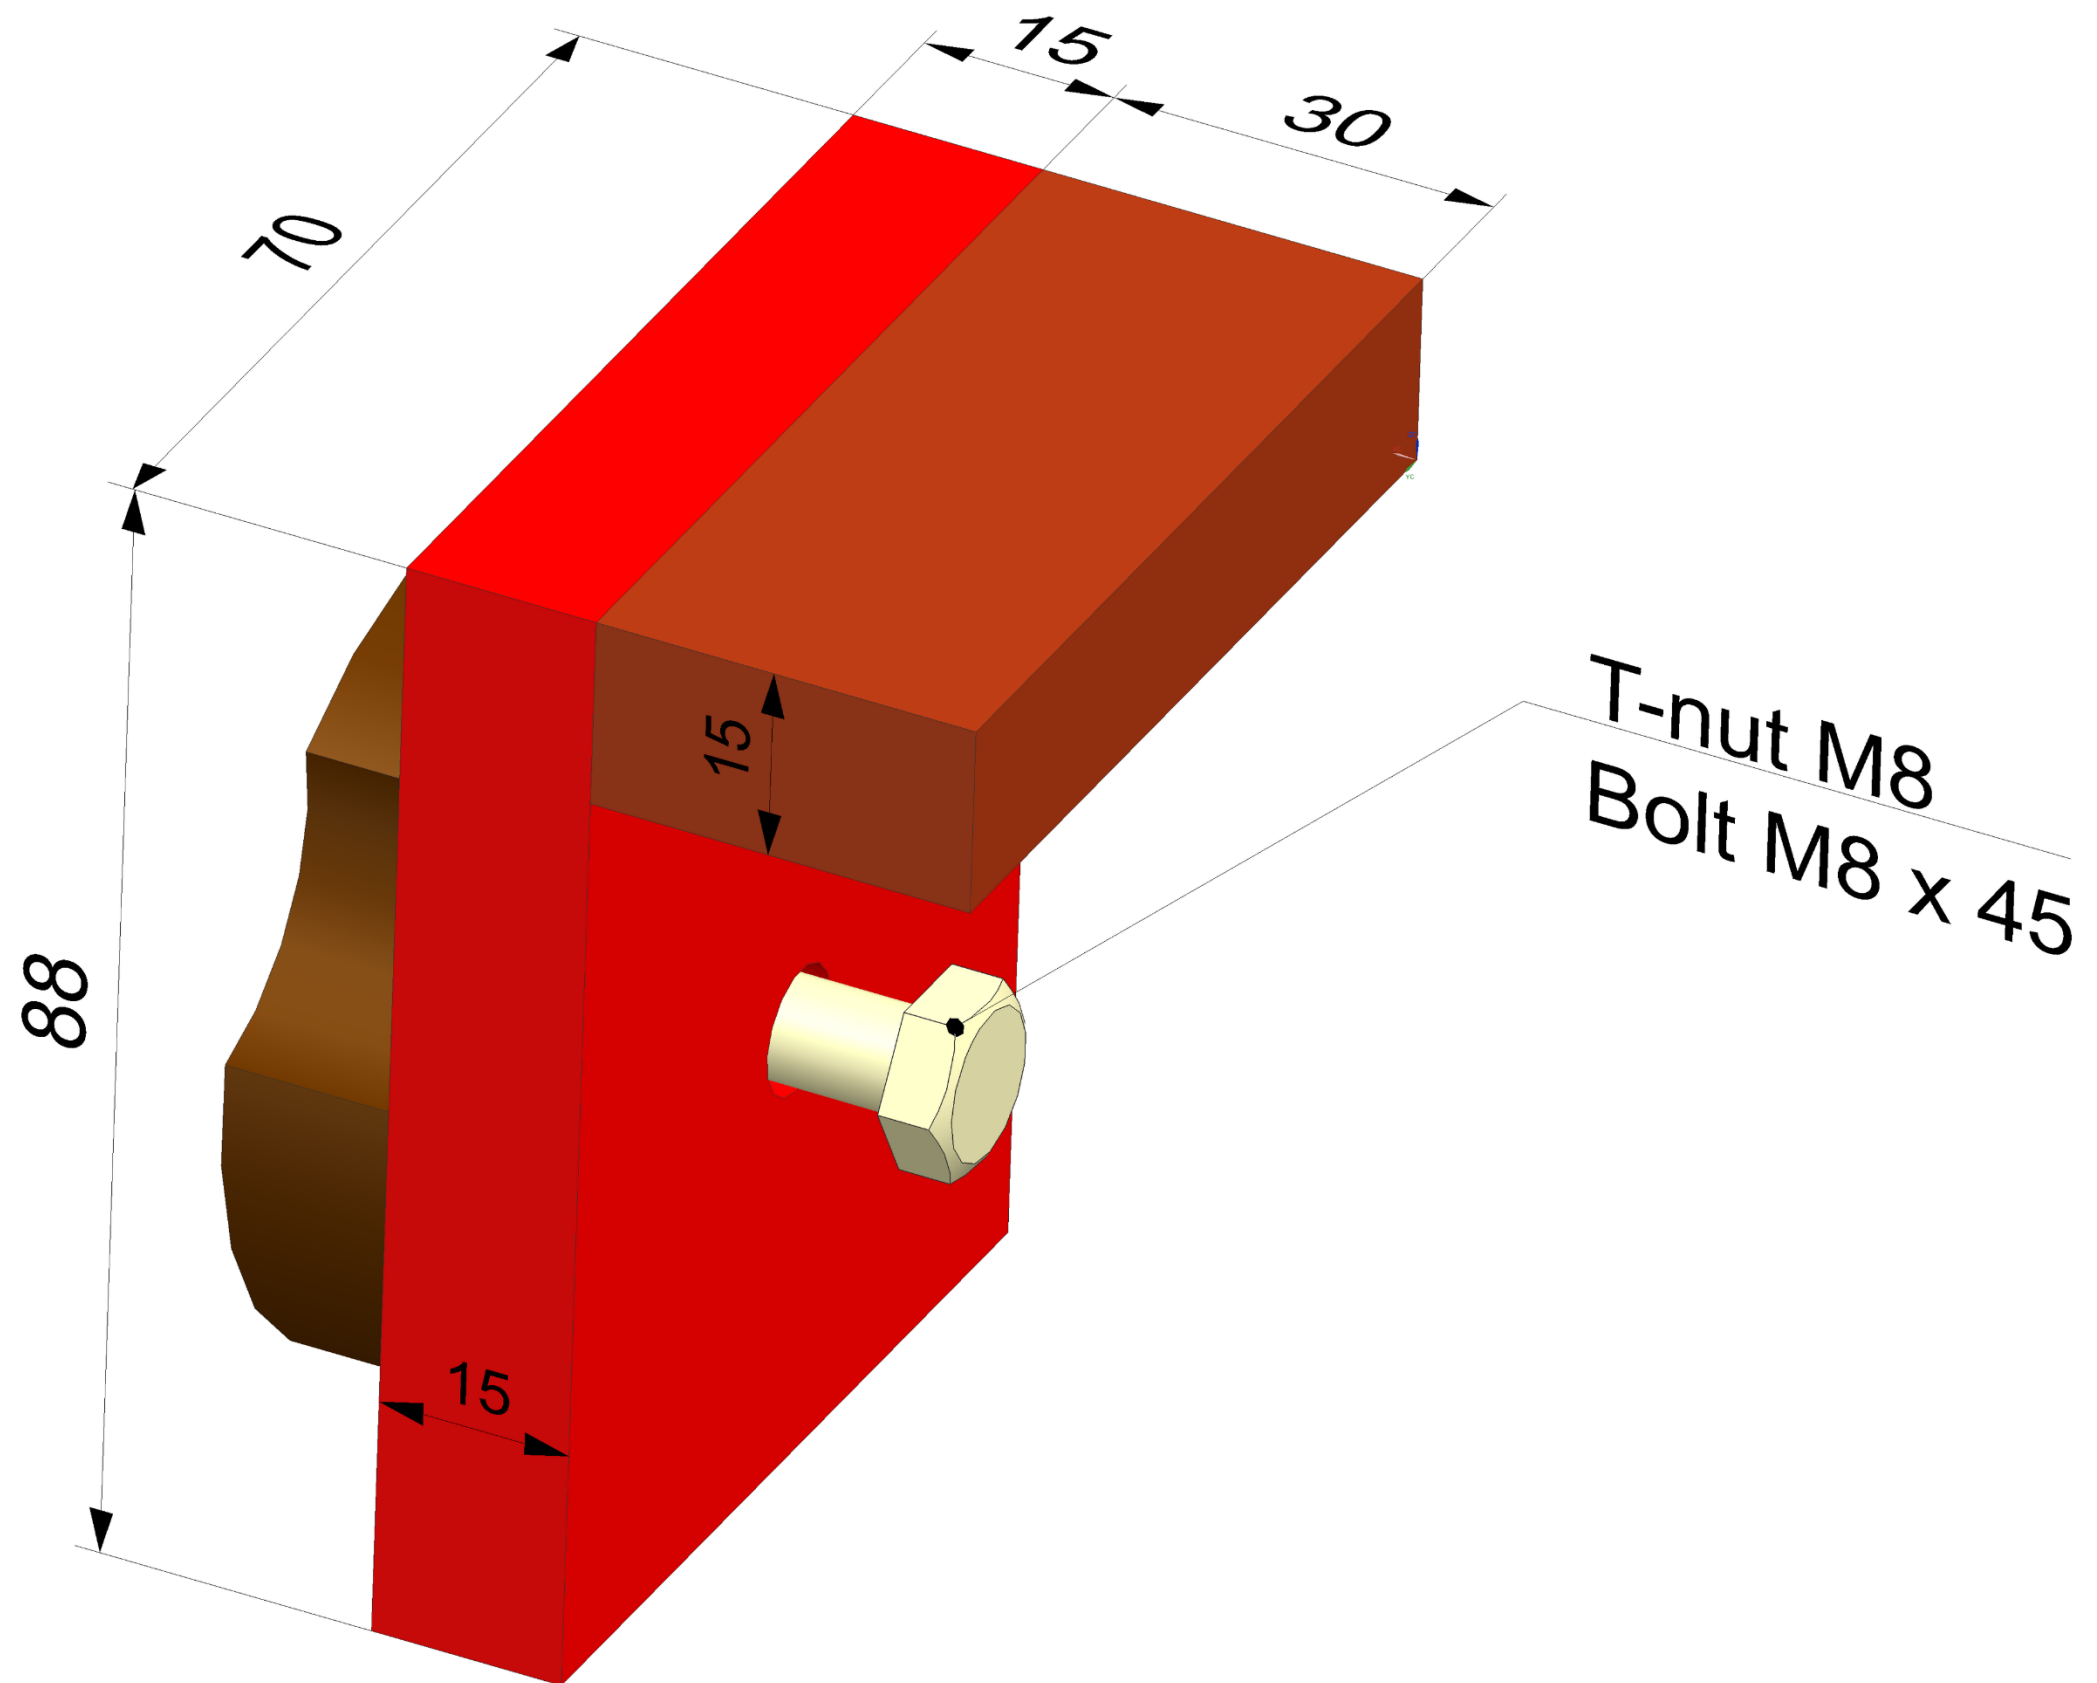

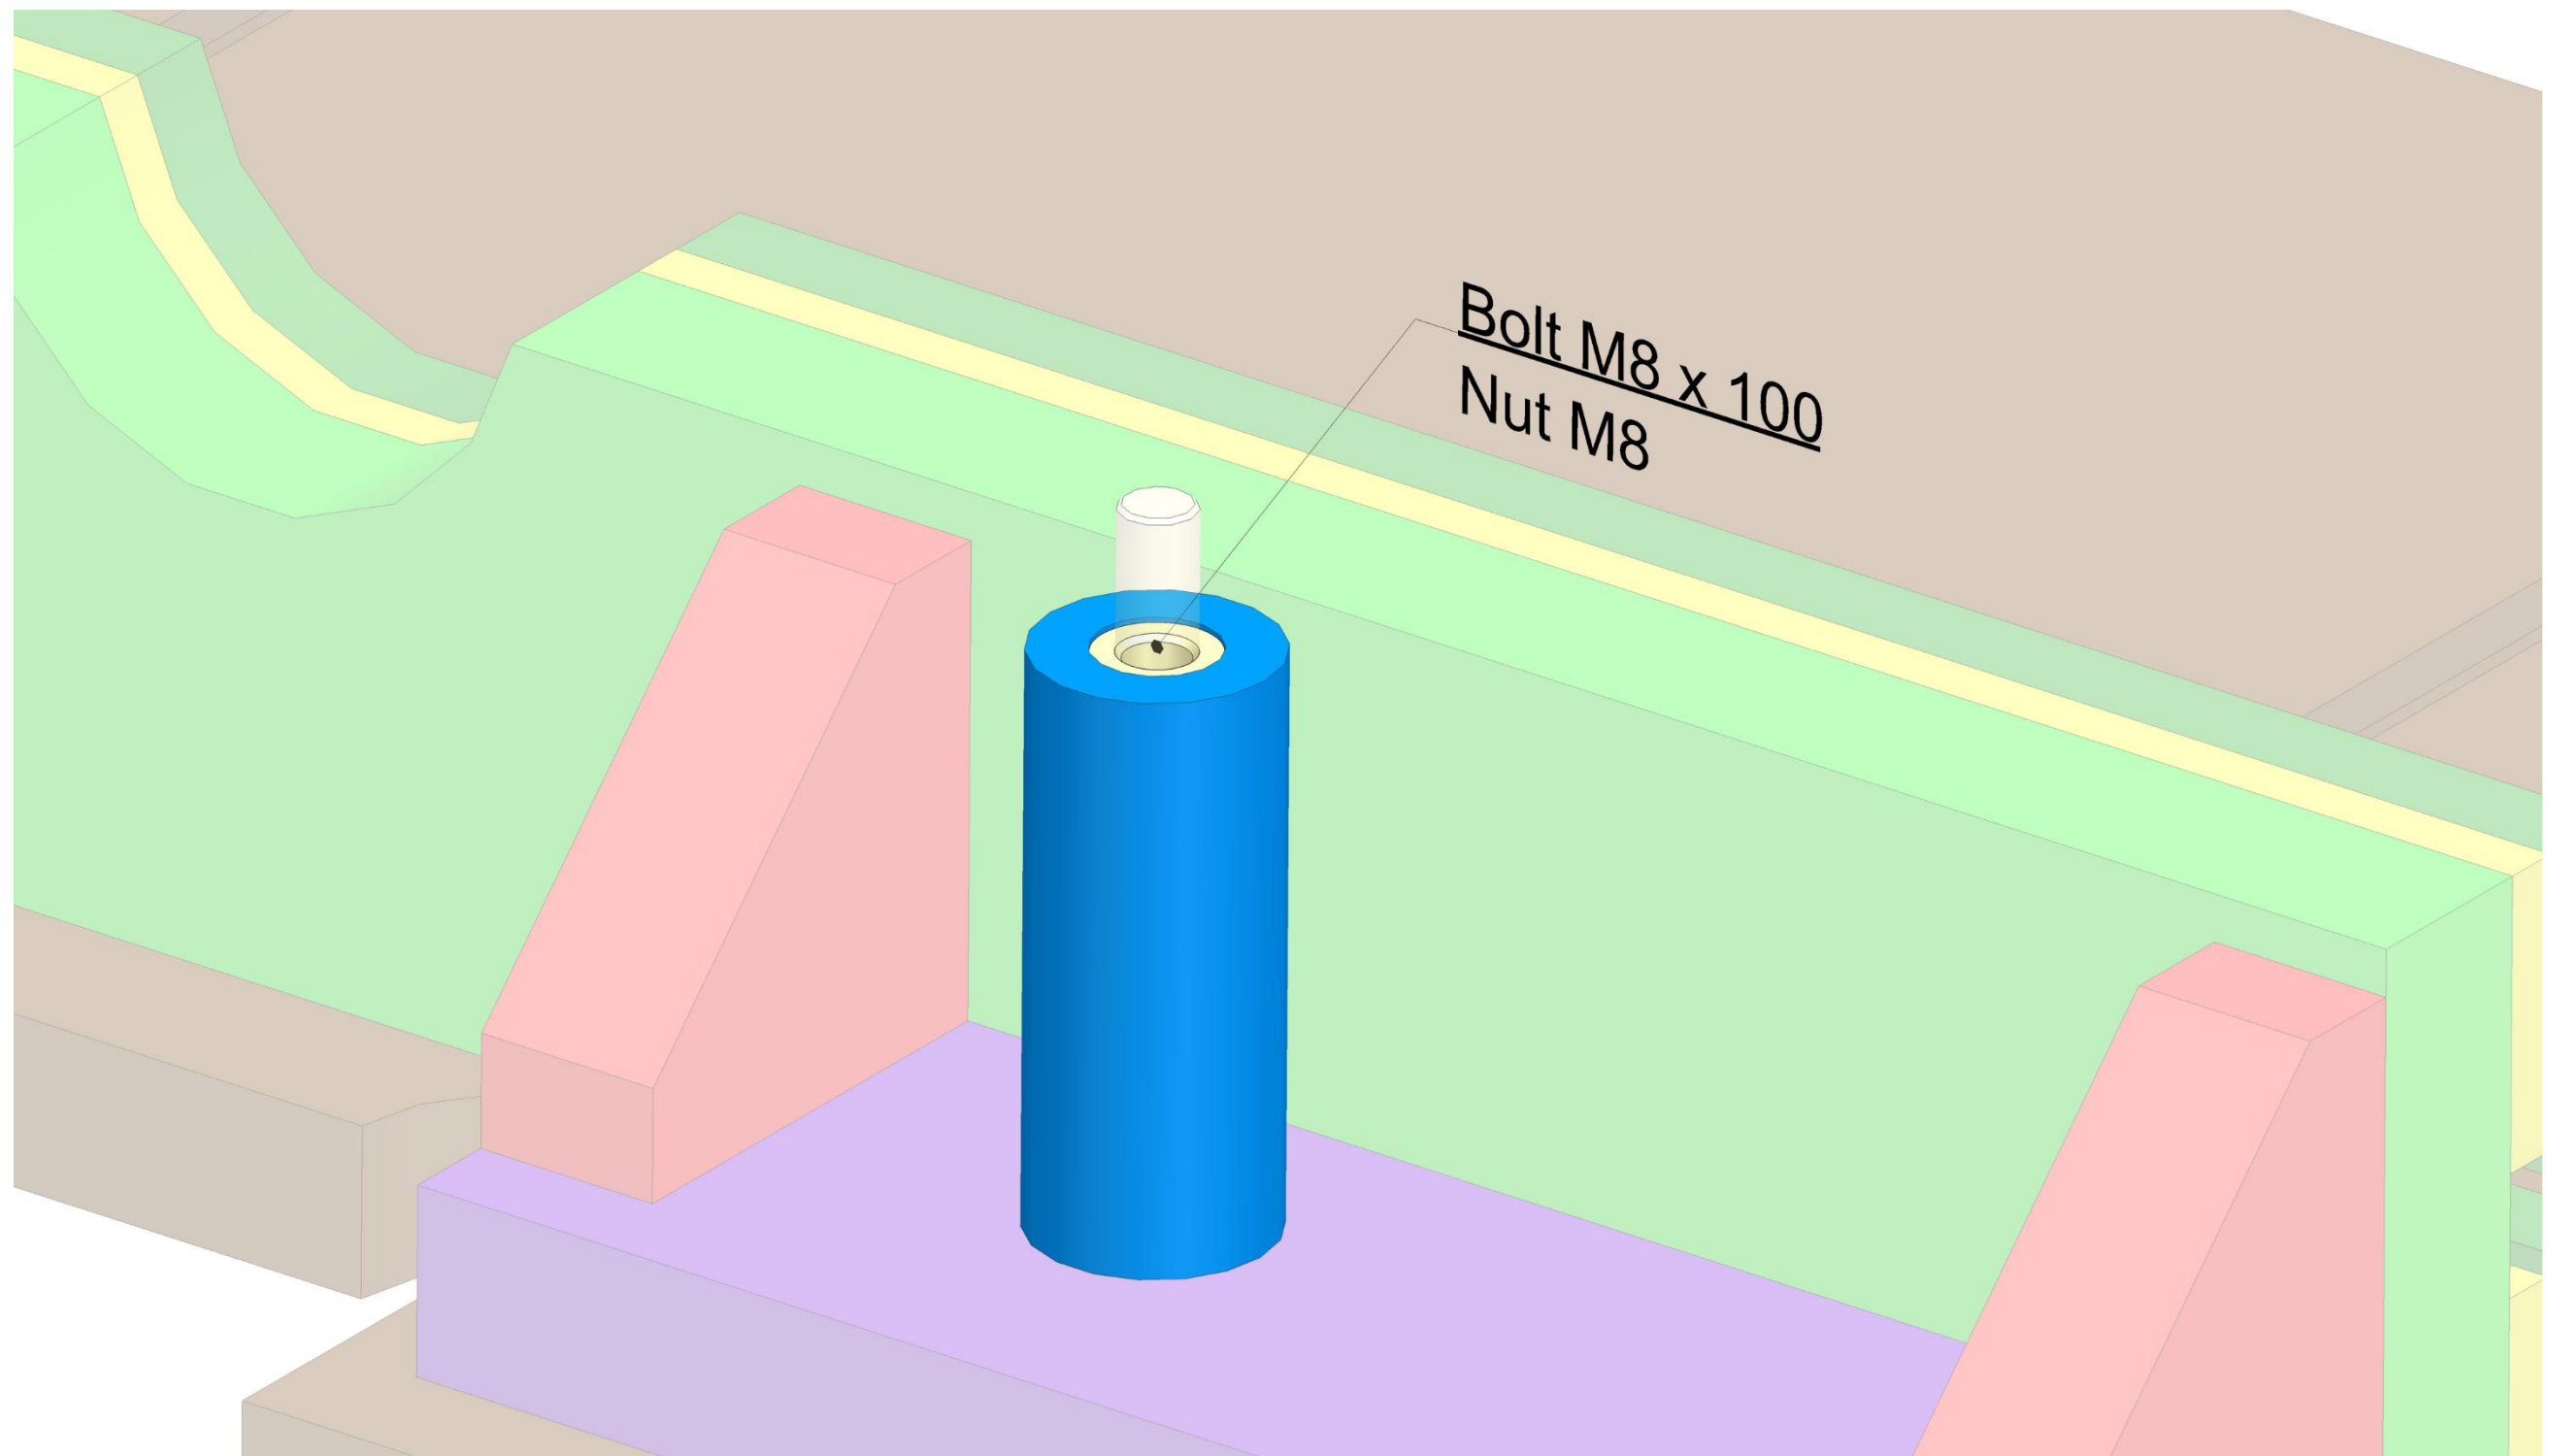

Fasteners:

- [Bolt M8 x 100](#)
- [Nut M8](#)

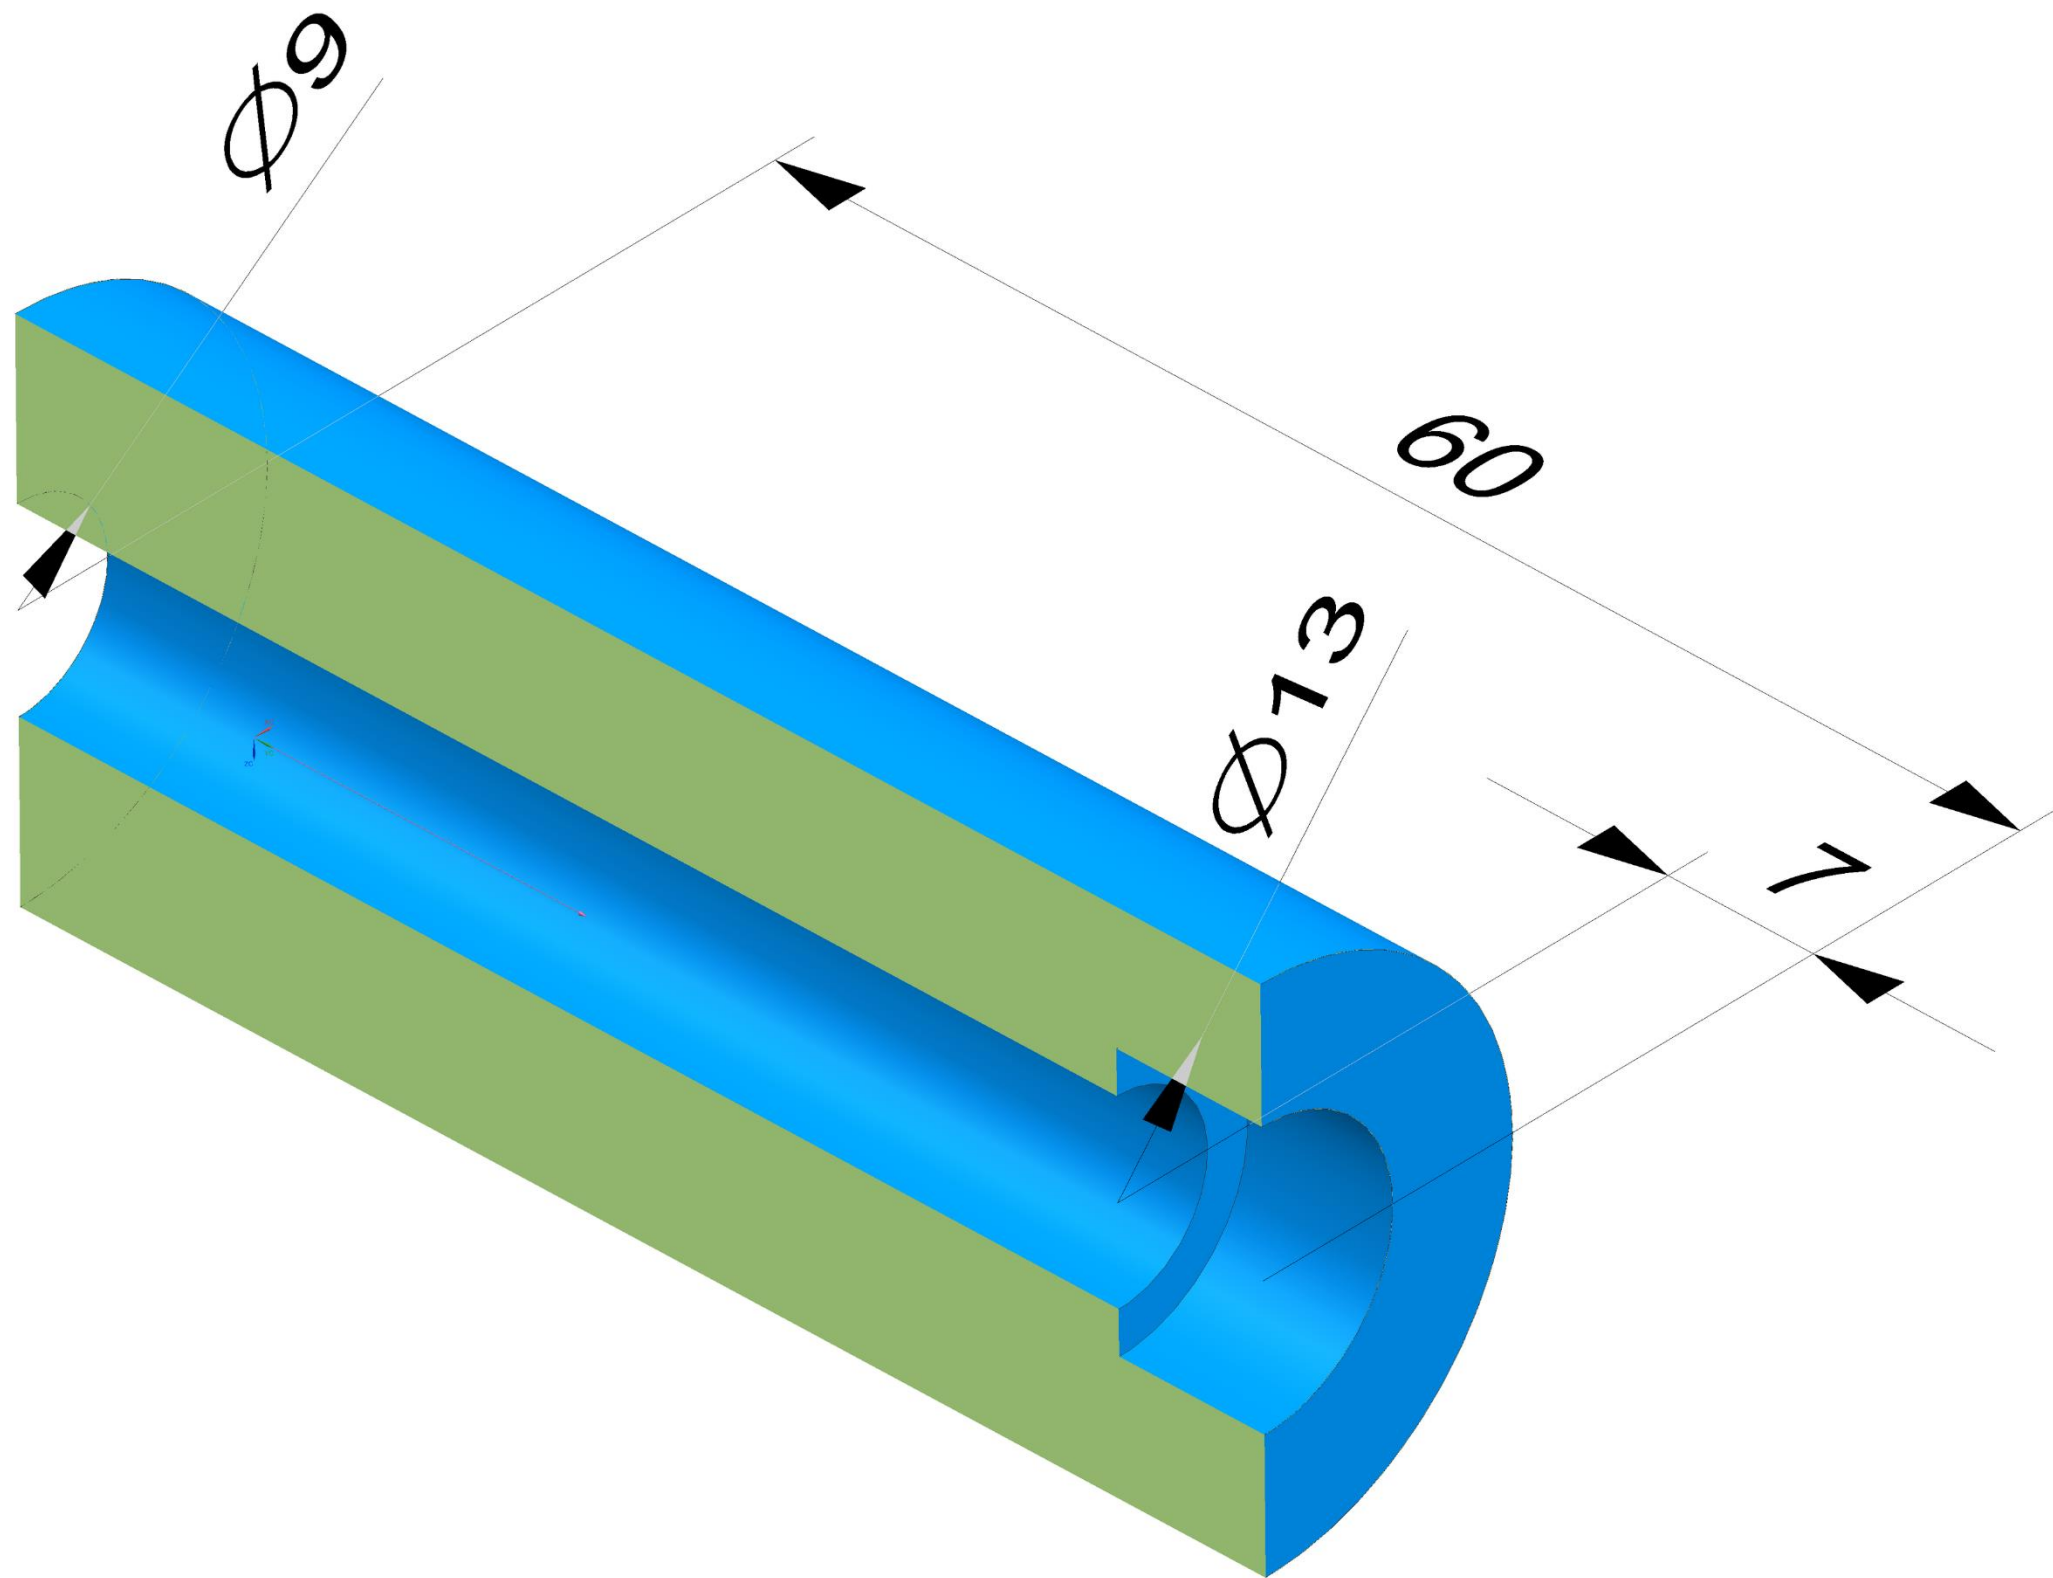



All dimensions are in millimeters (mm)

Other tools and jigs:

[DIY Drill Press Stand + Plans](#)
[DIY Hold down clamps + Printable templates](#)

