



DIY Drill Vise Plans

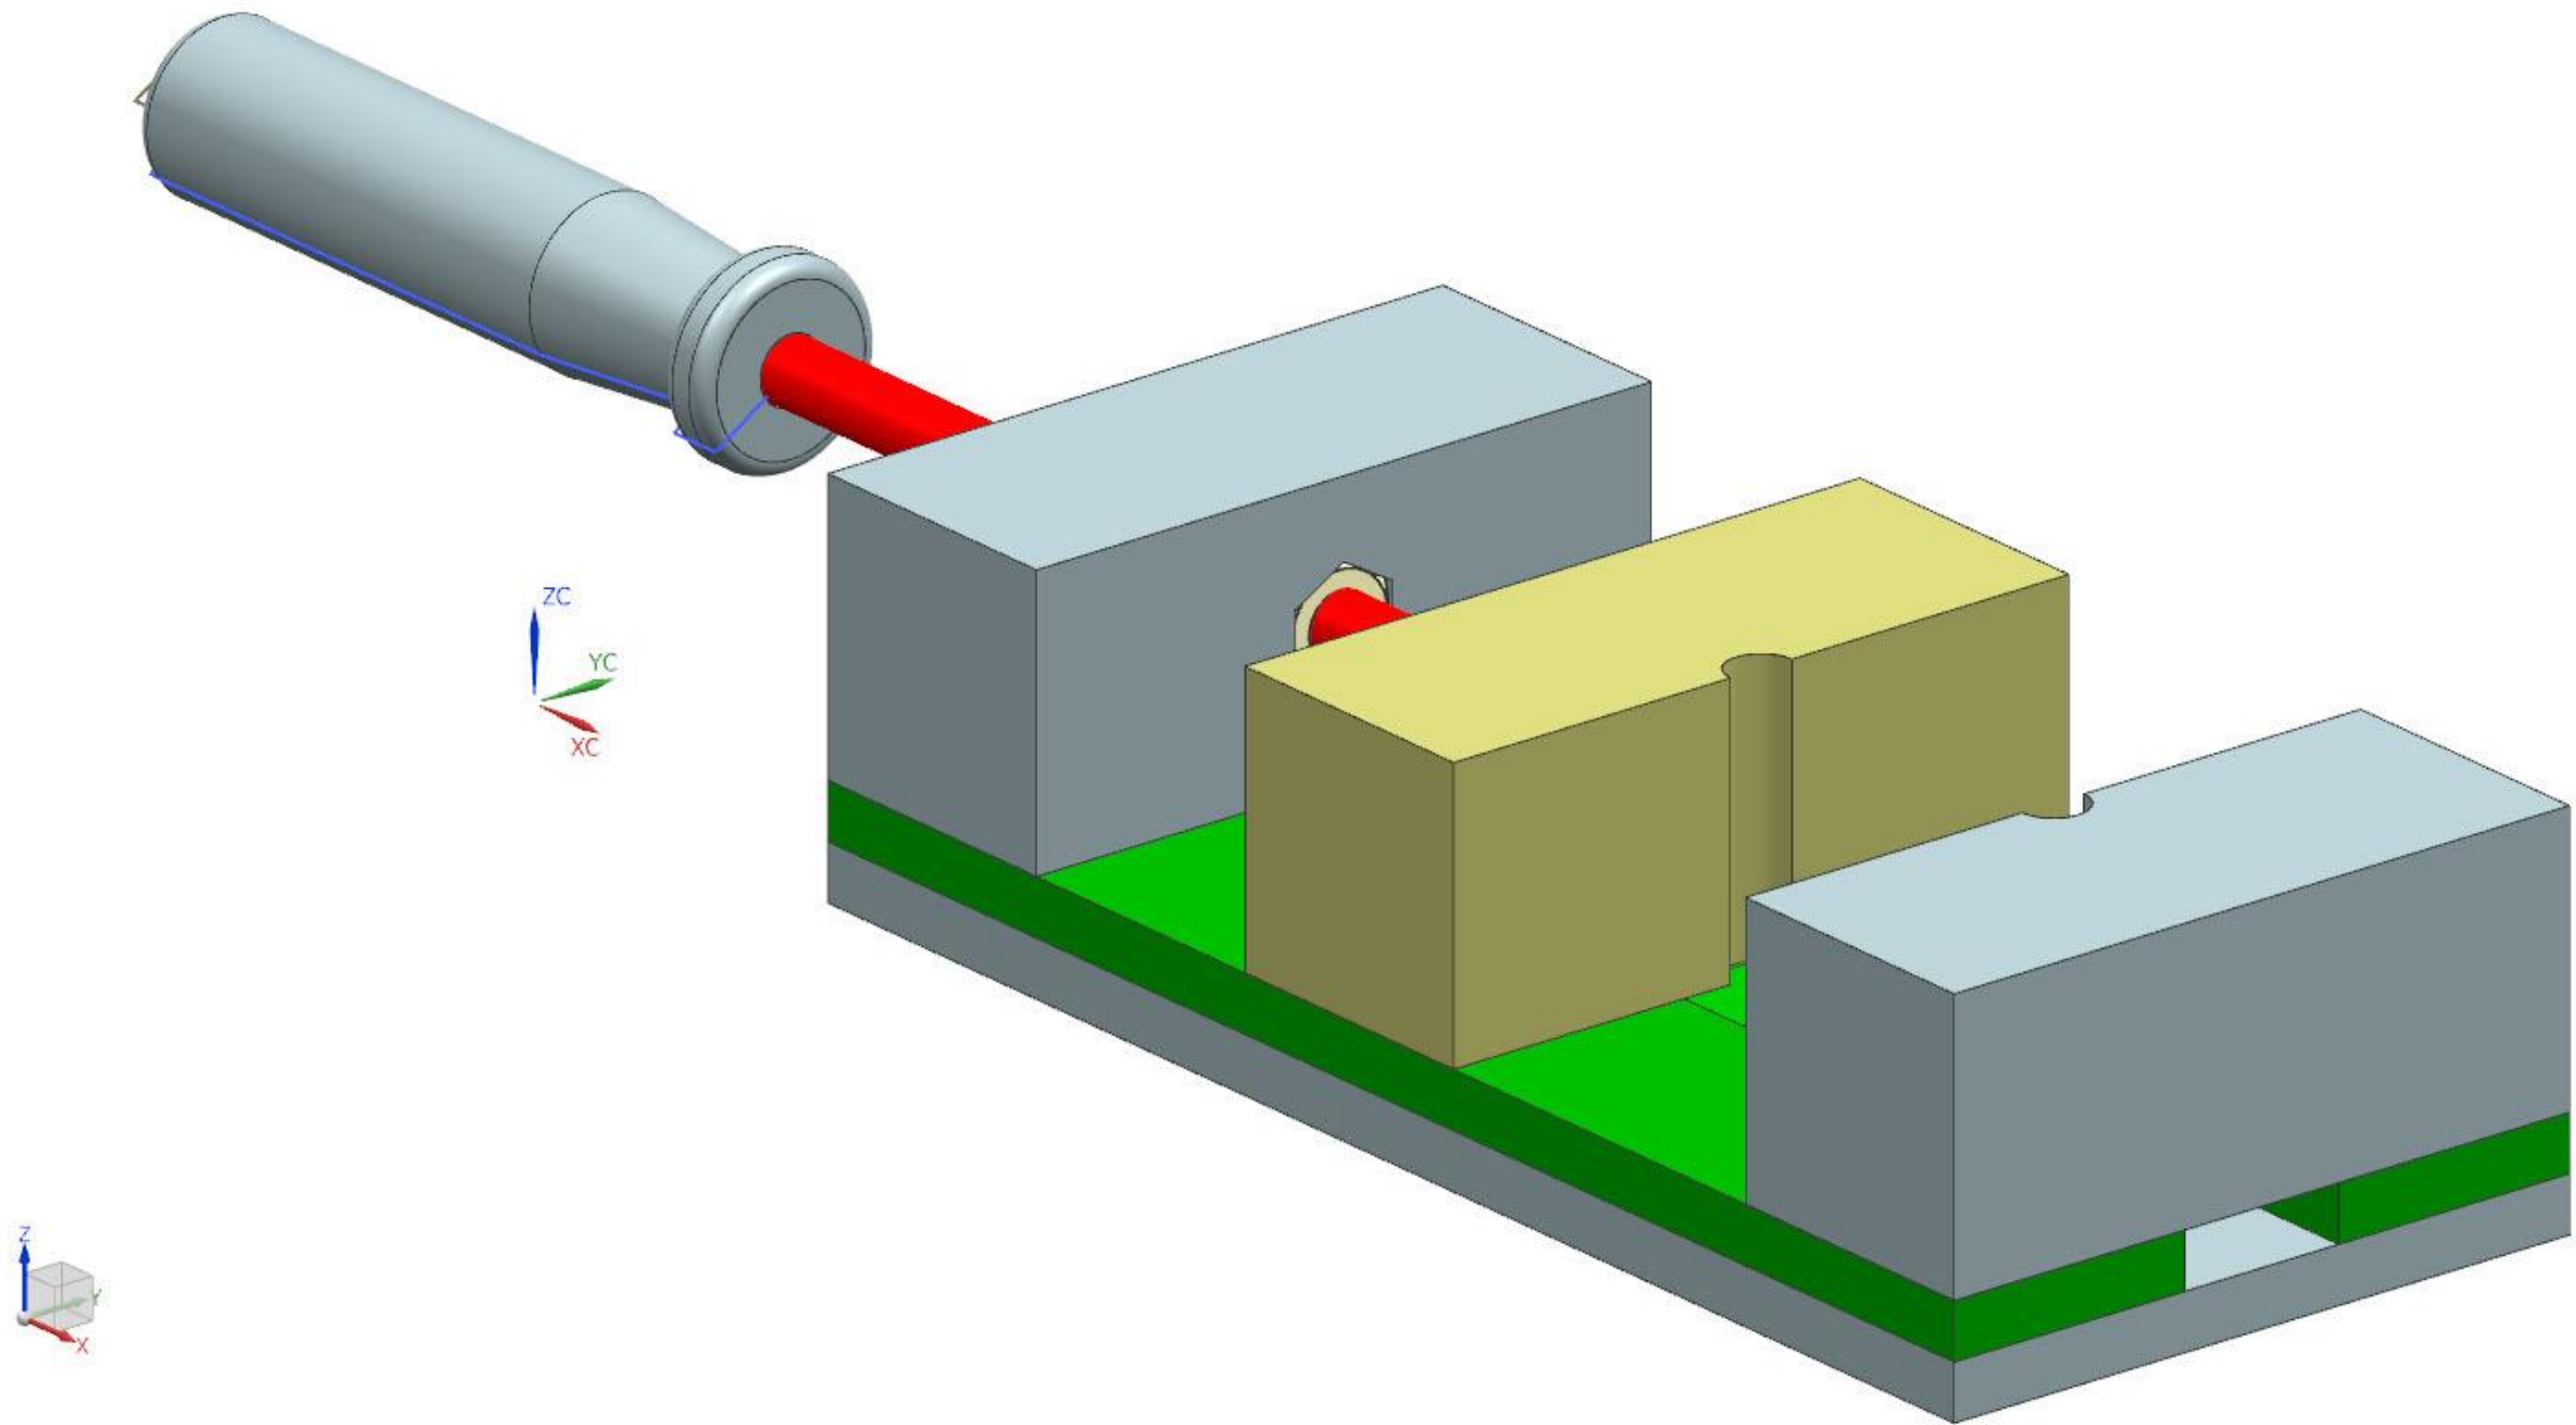


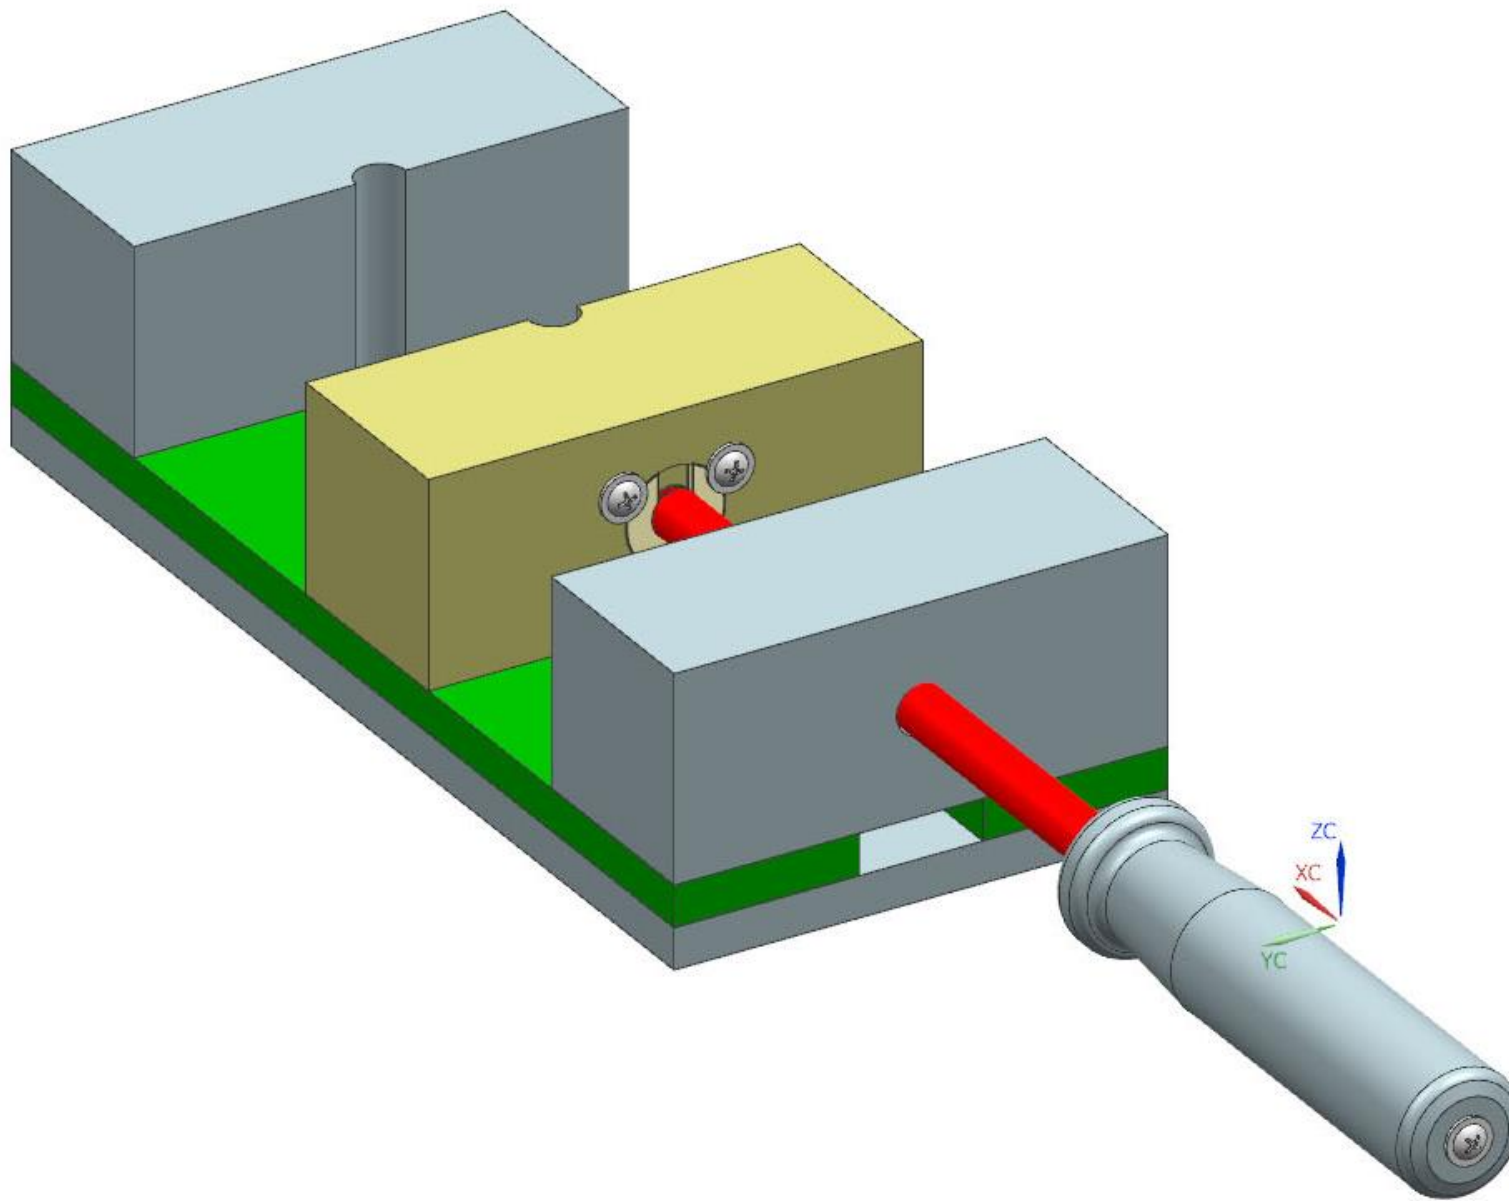



Fasteners and Materials:


1. [Nut M12](#) x 1
2. [Flat washer 6](#) x 1
3. [Flat Fender washer M8](#) x 1
4. [Threaded rod M12](#), length=250 mm
5. [Truss Head Screws](#) x 4
6. Plywood 10 or [12 mm](#)
7. Lumber 50×50 mm

Drill vise base

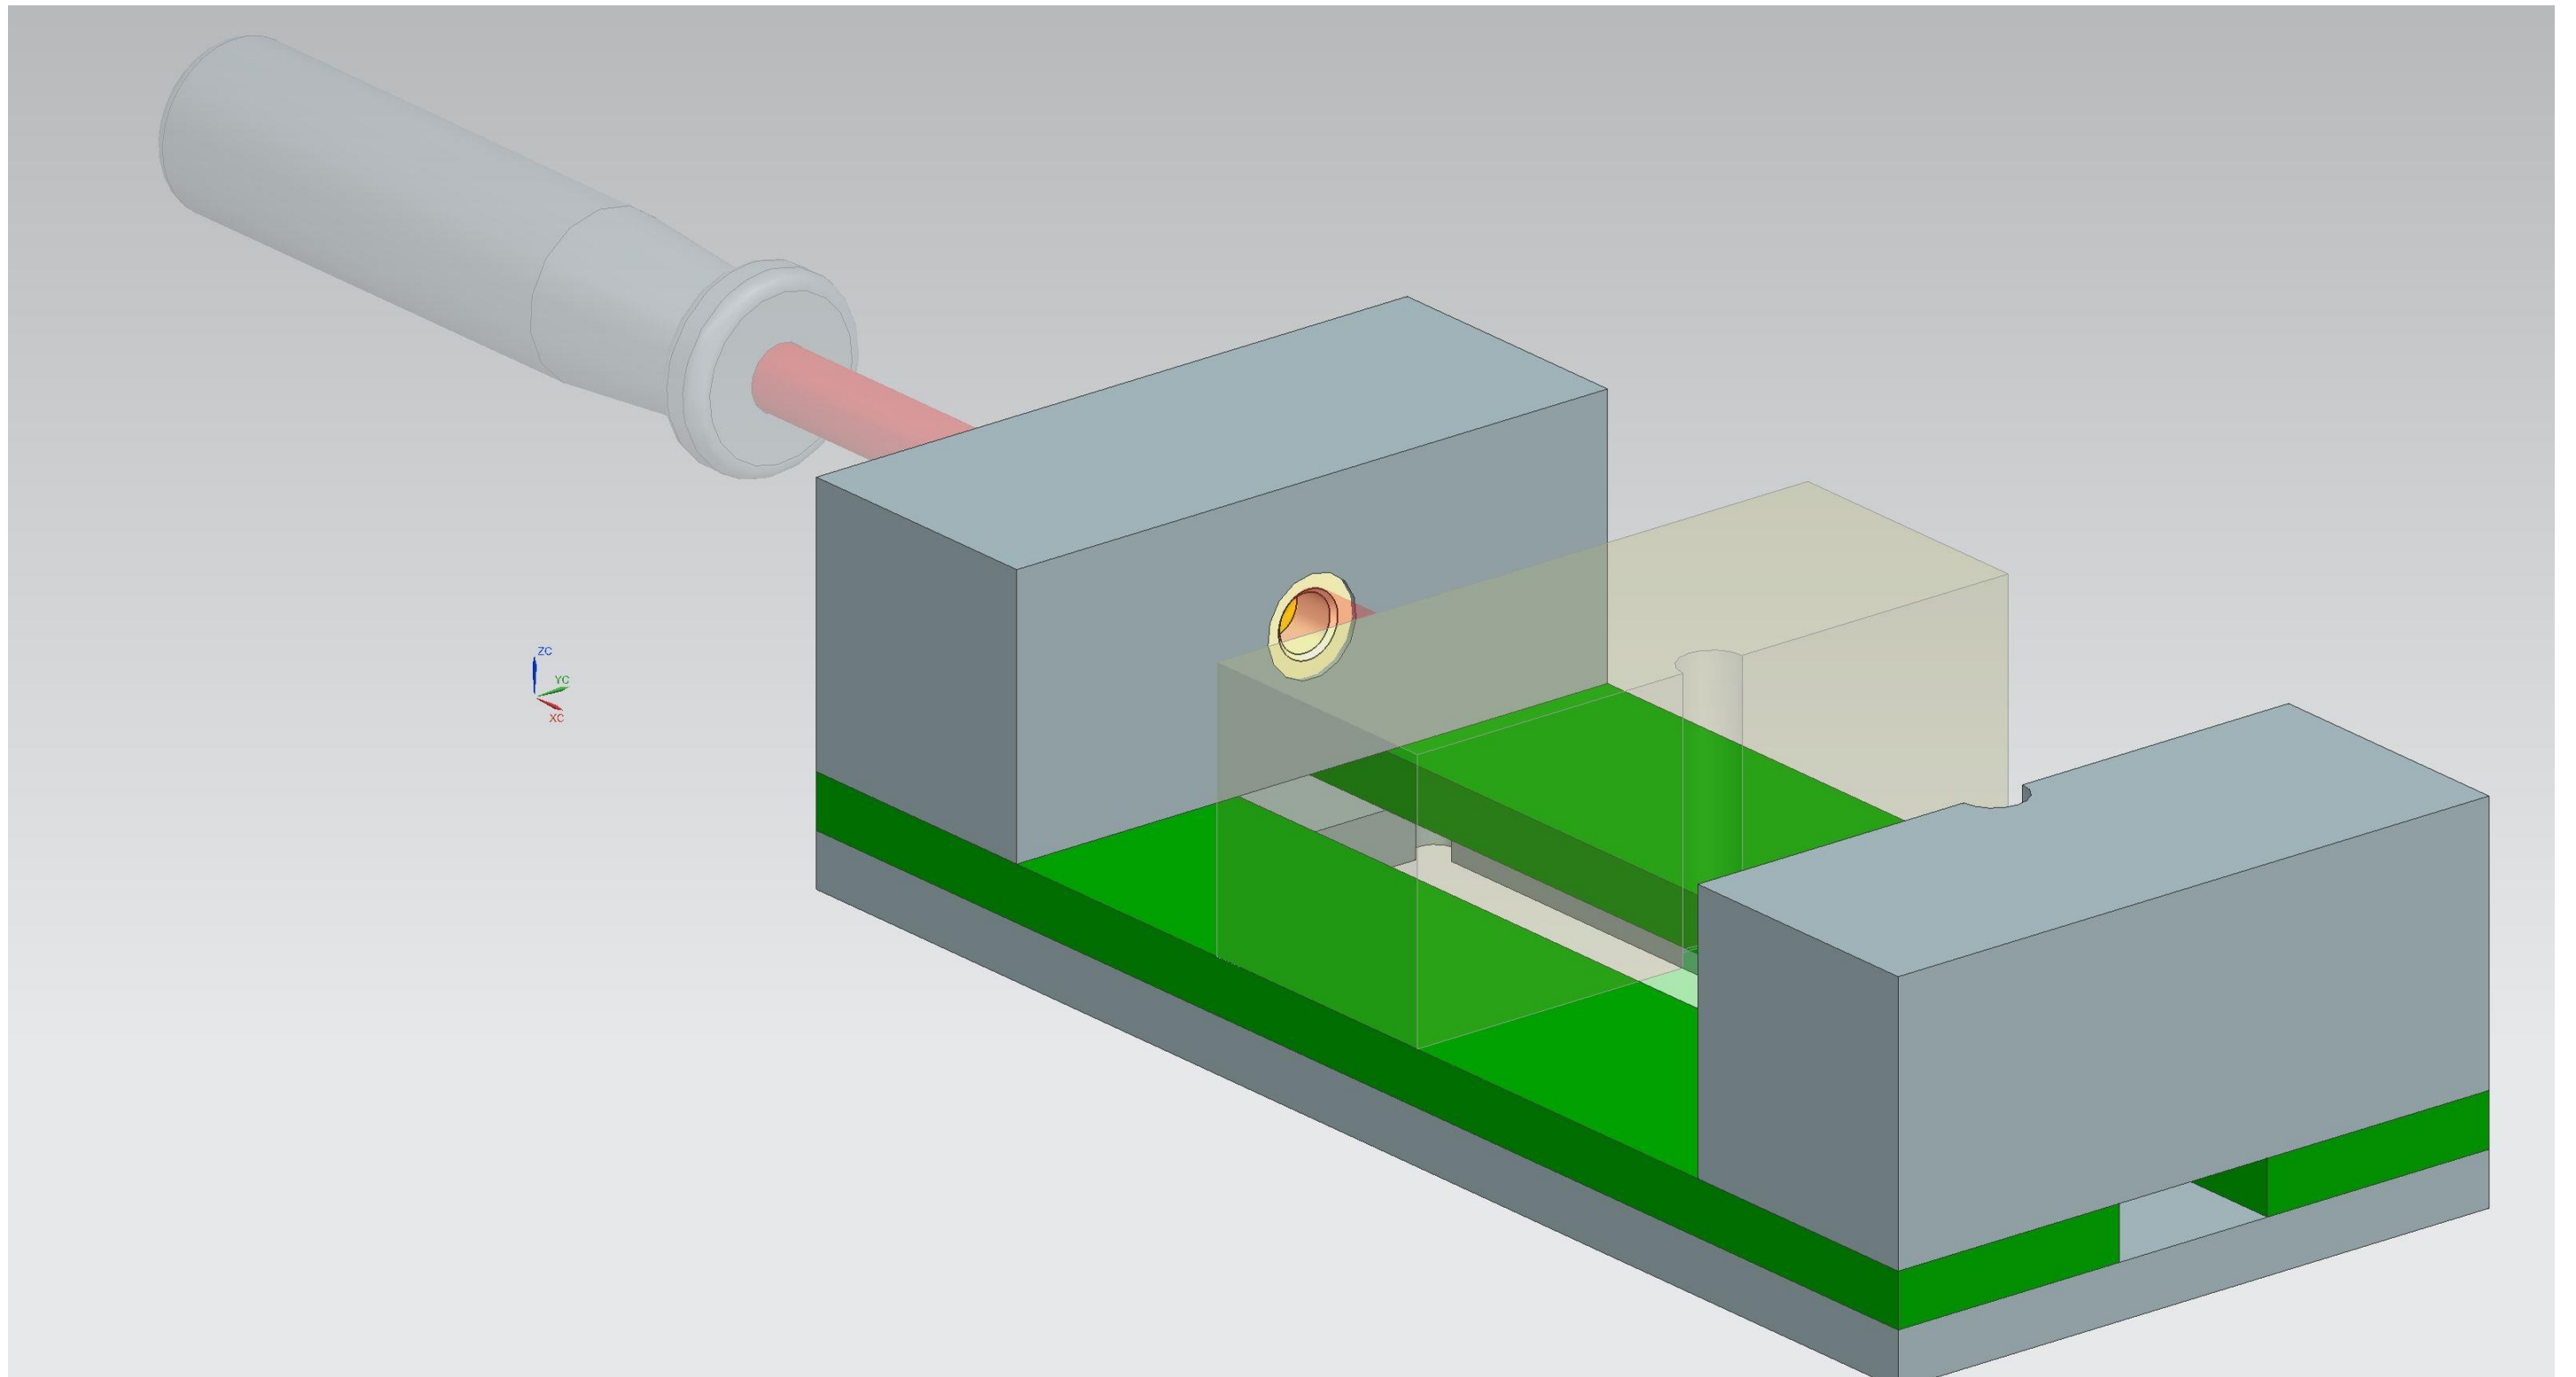


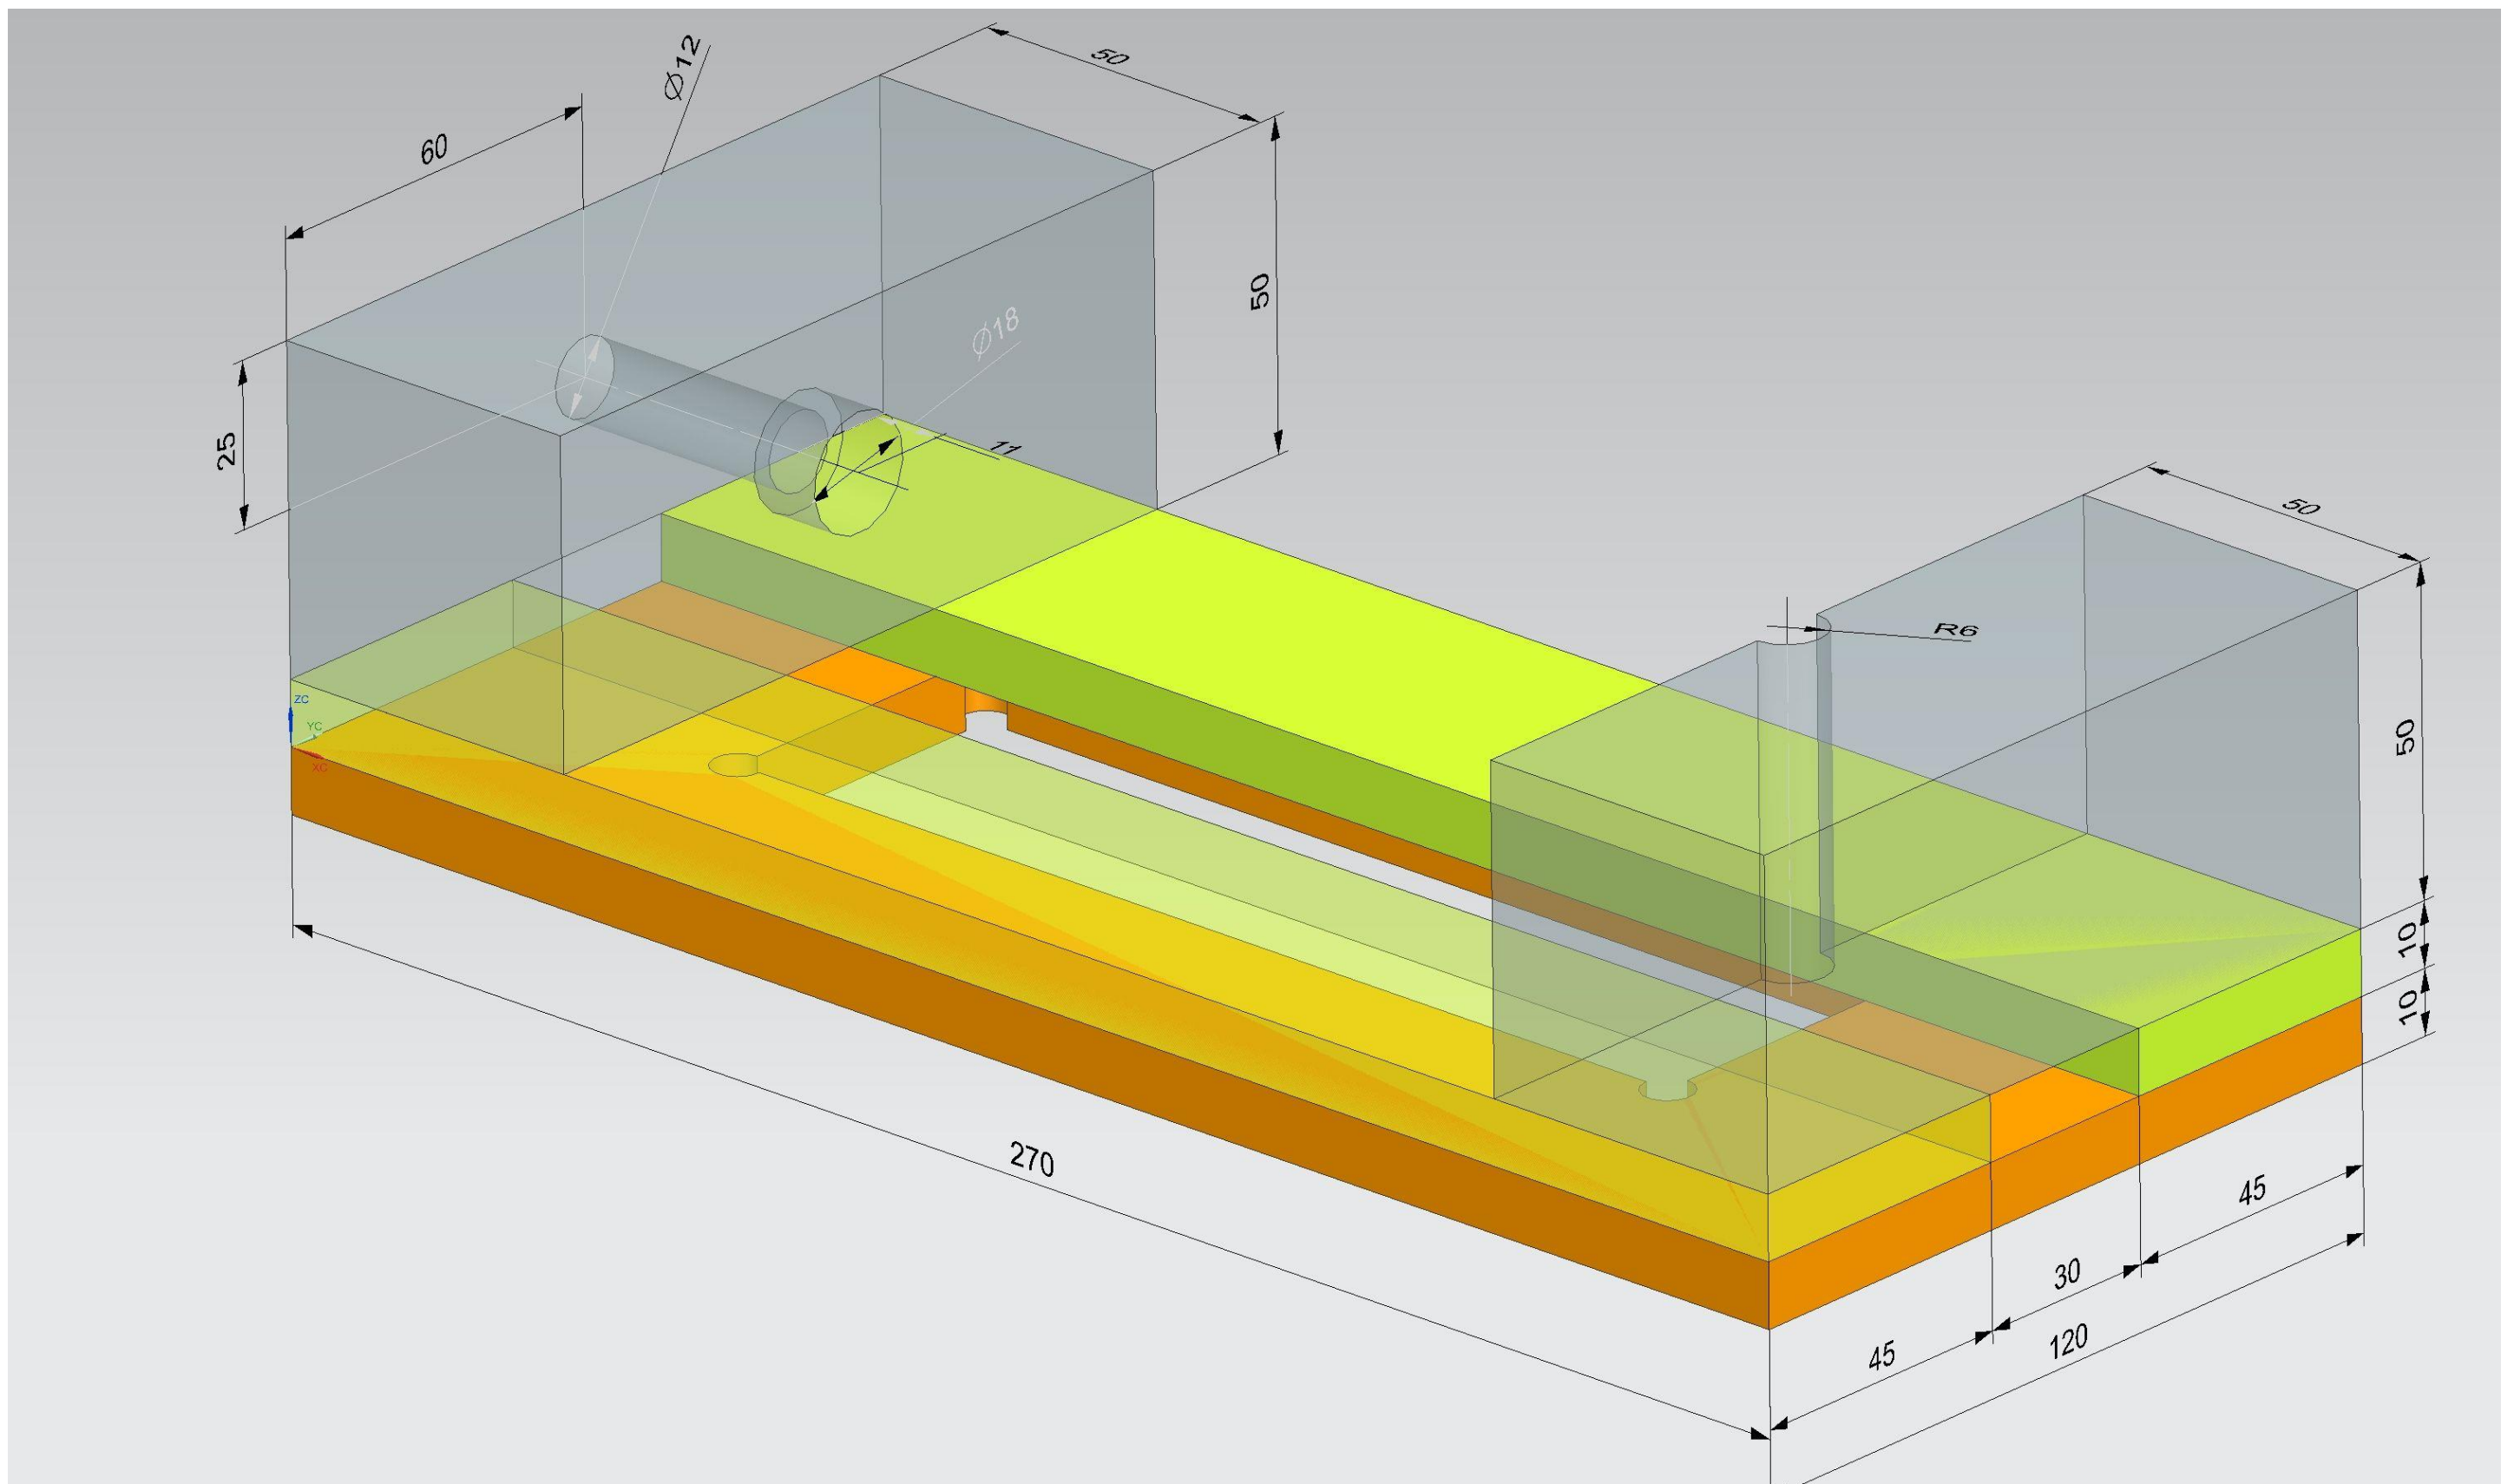


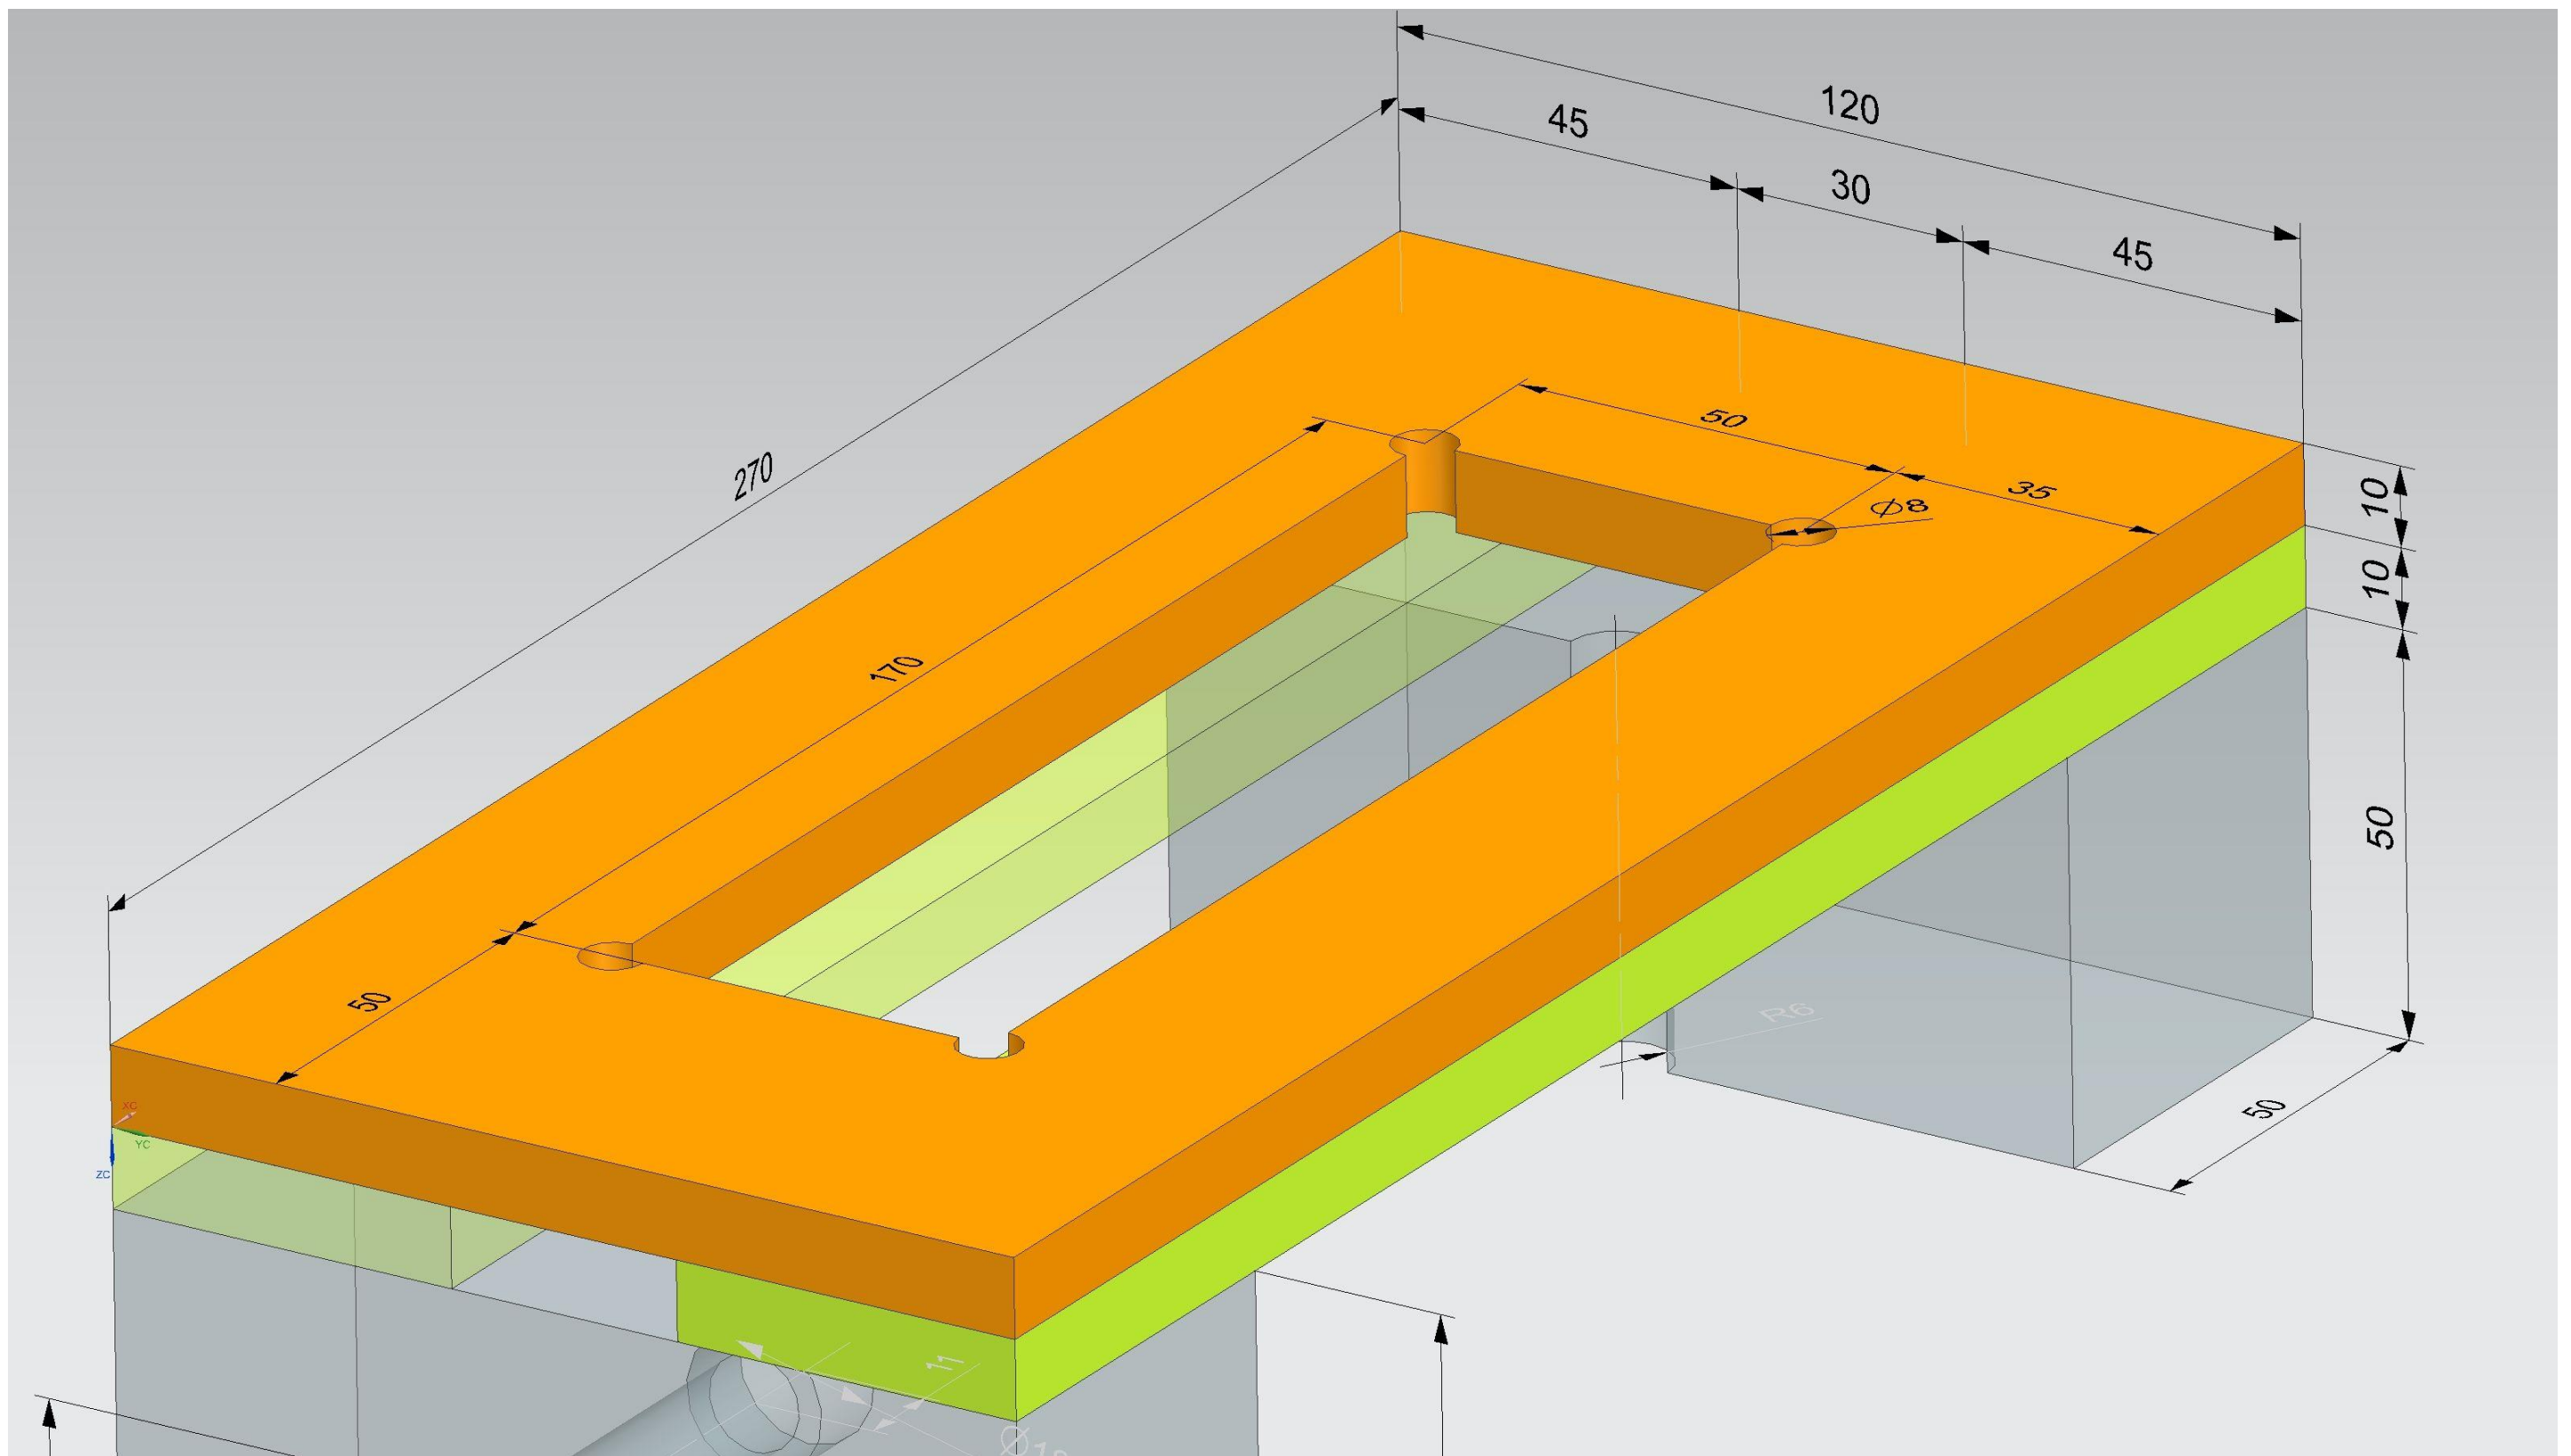

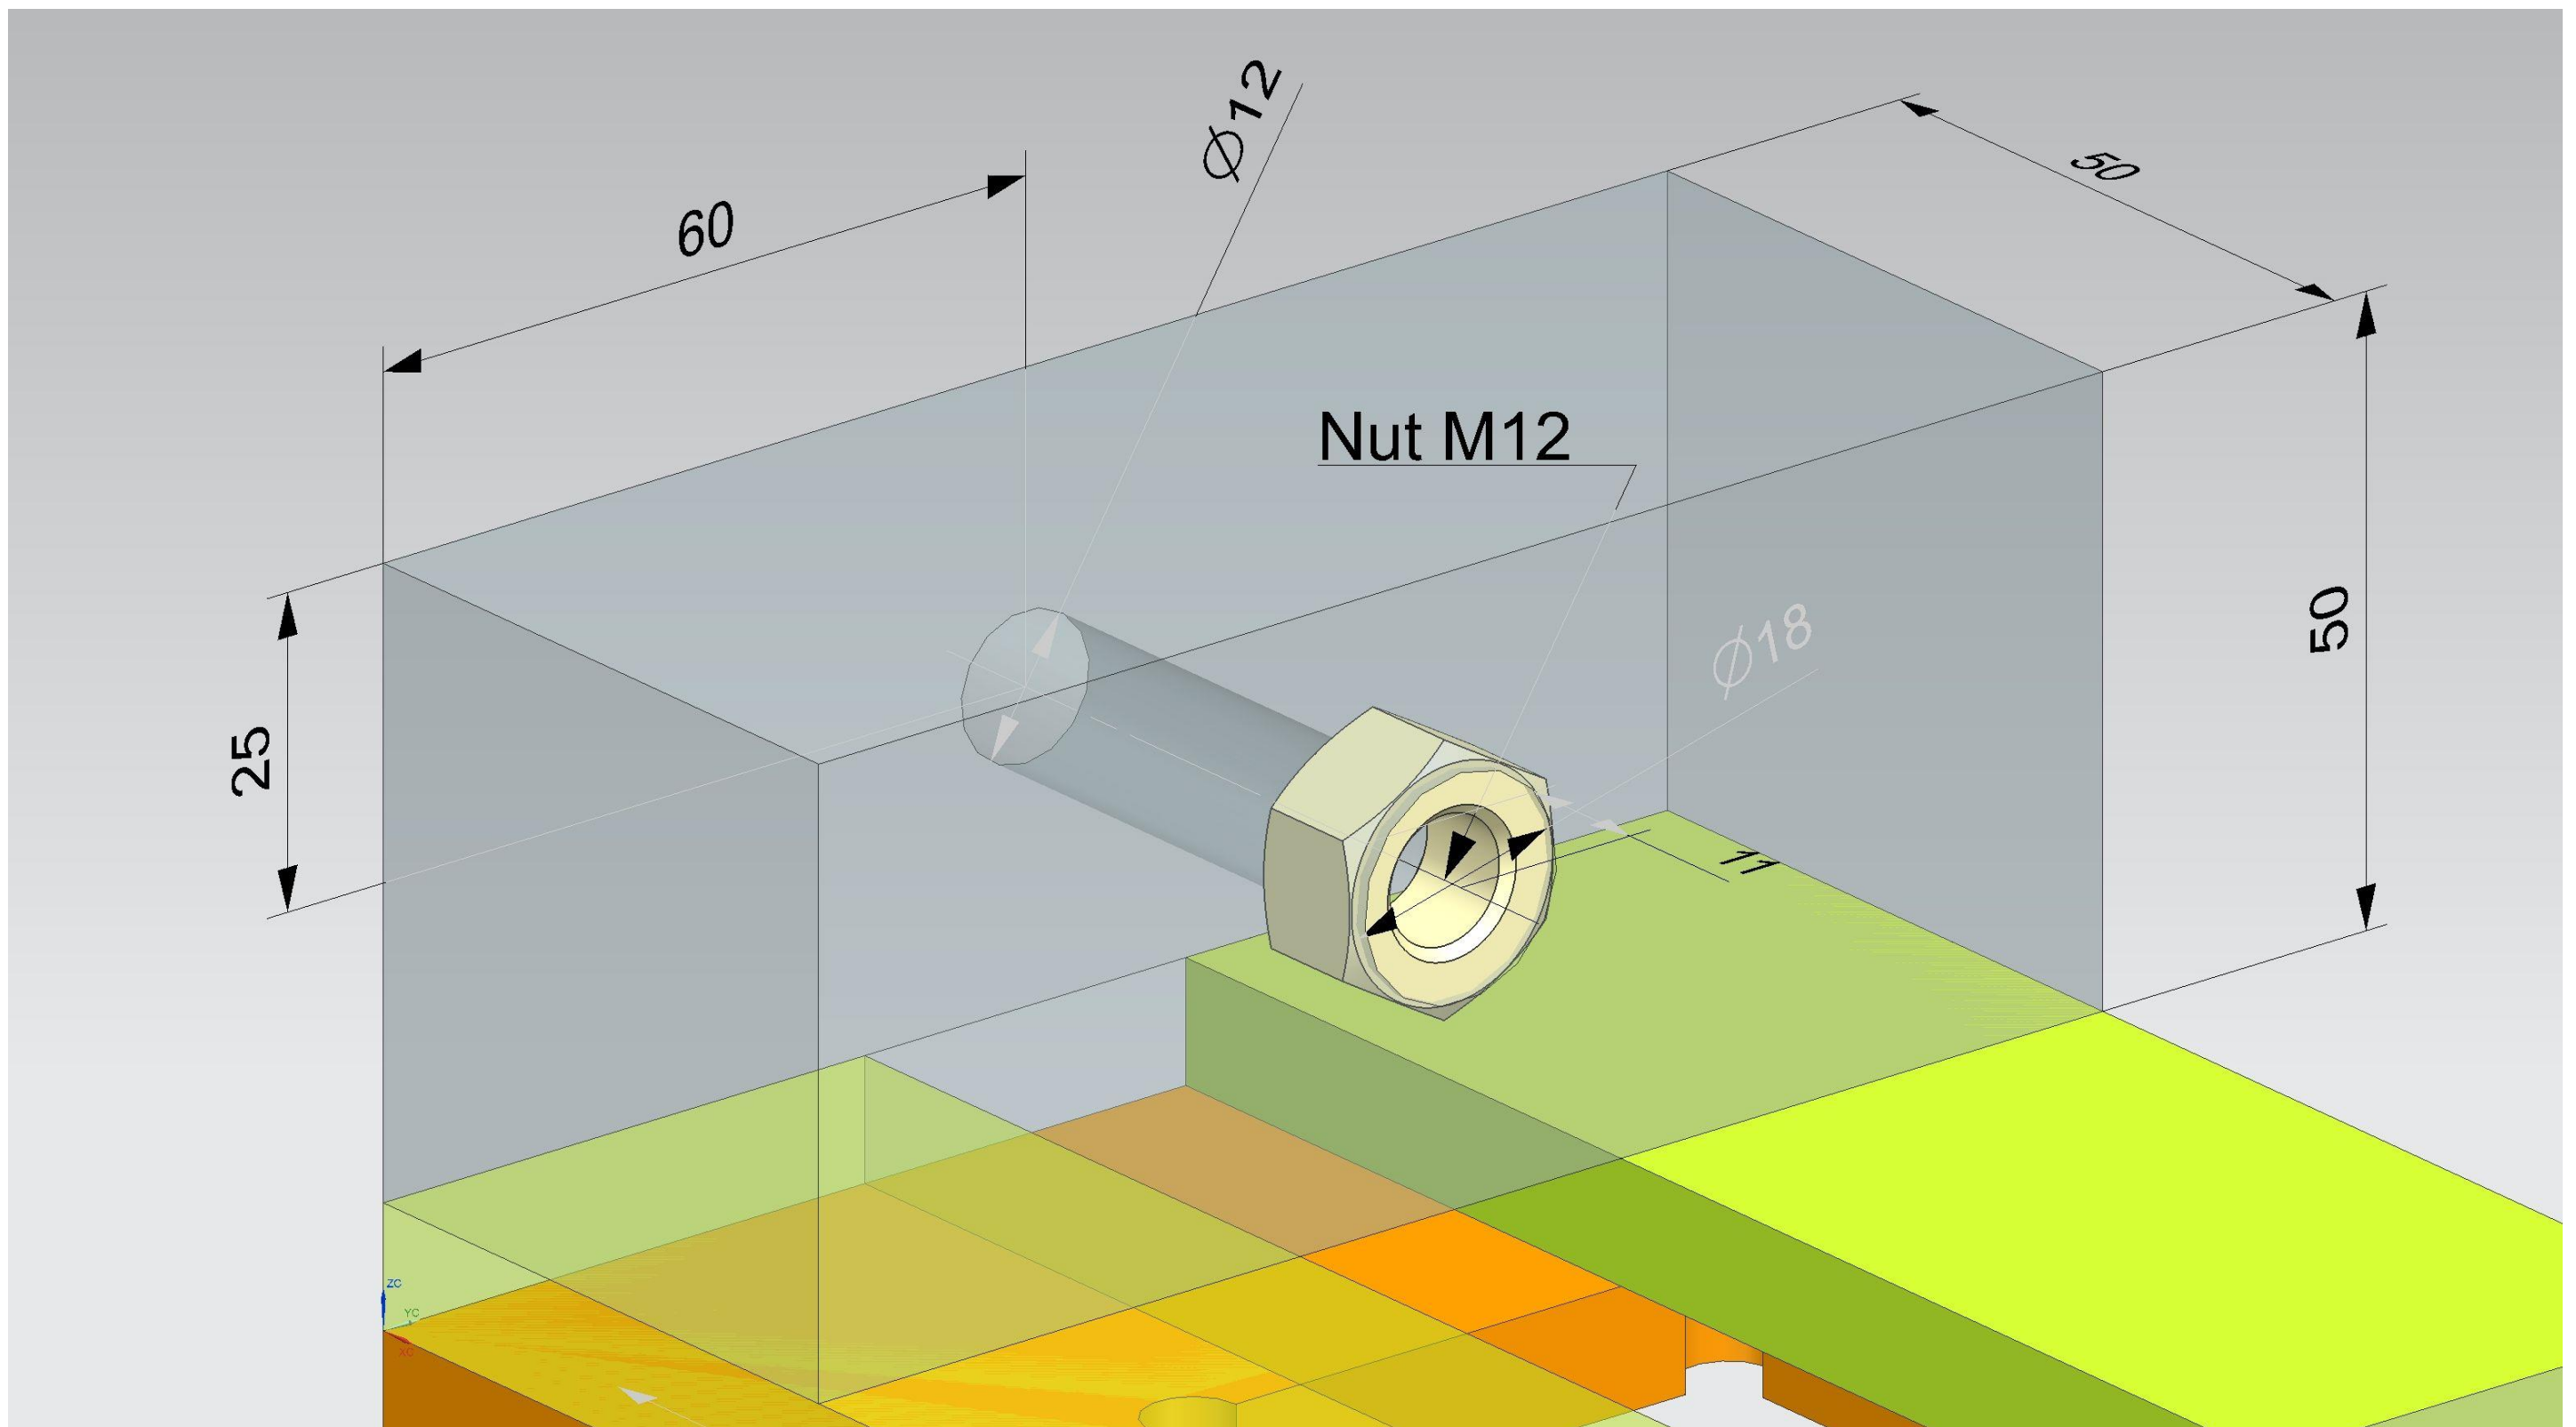

Lock

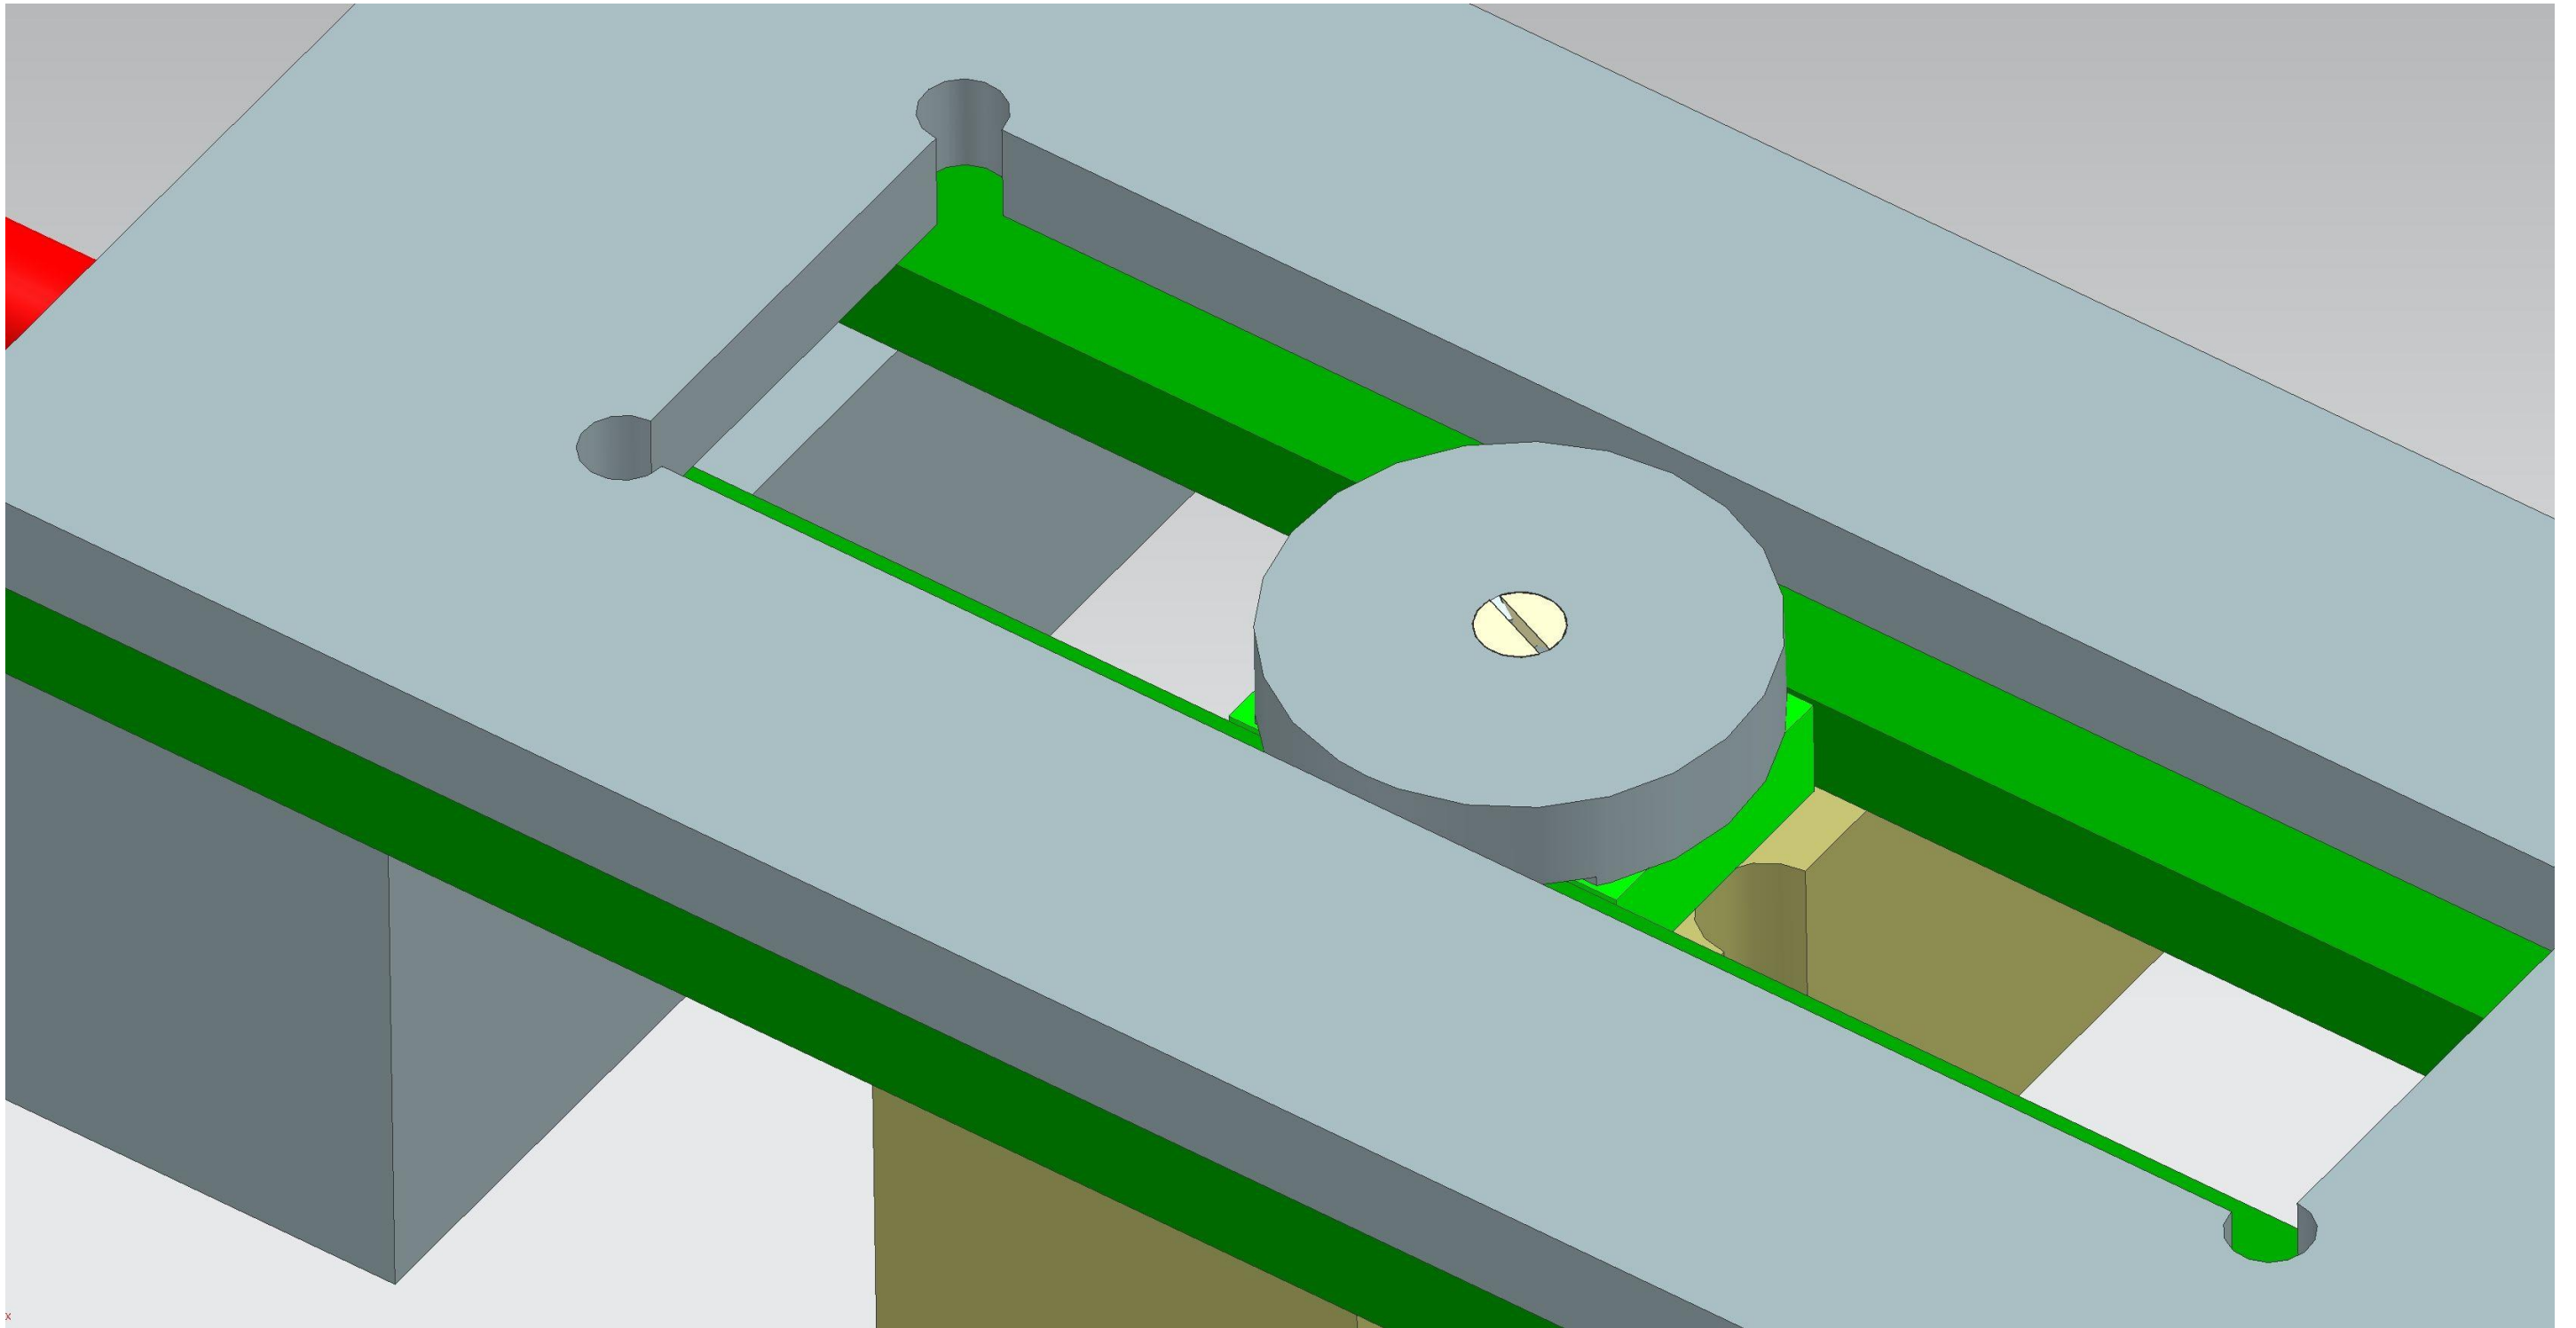

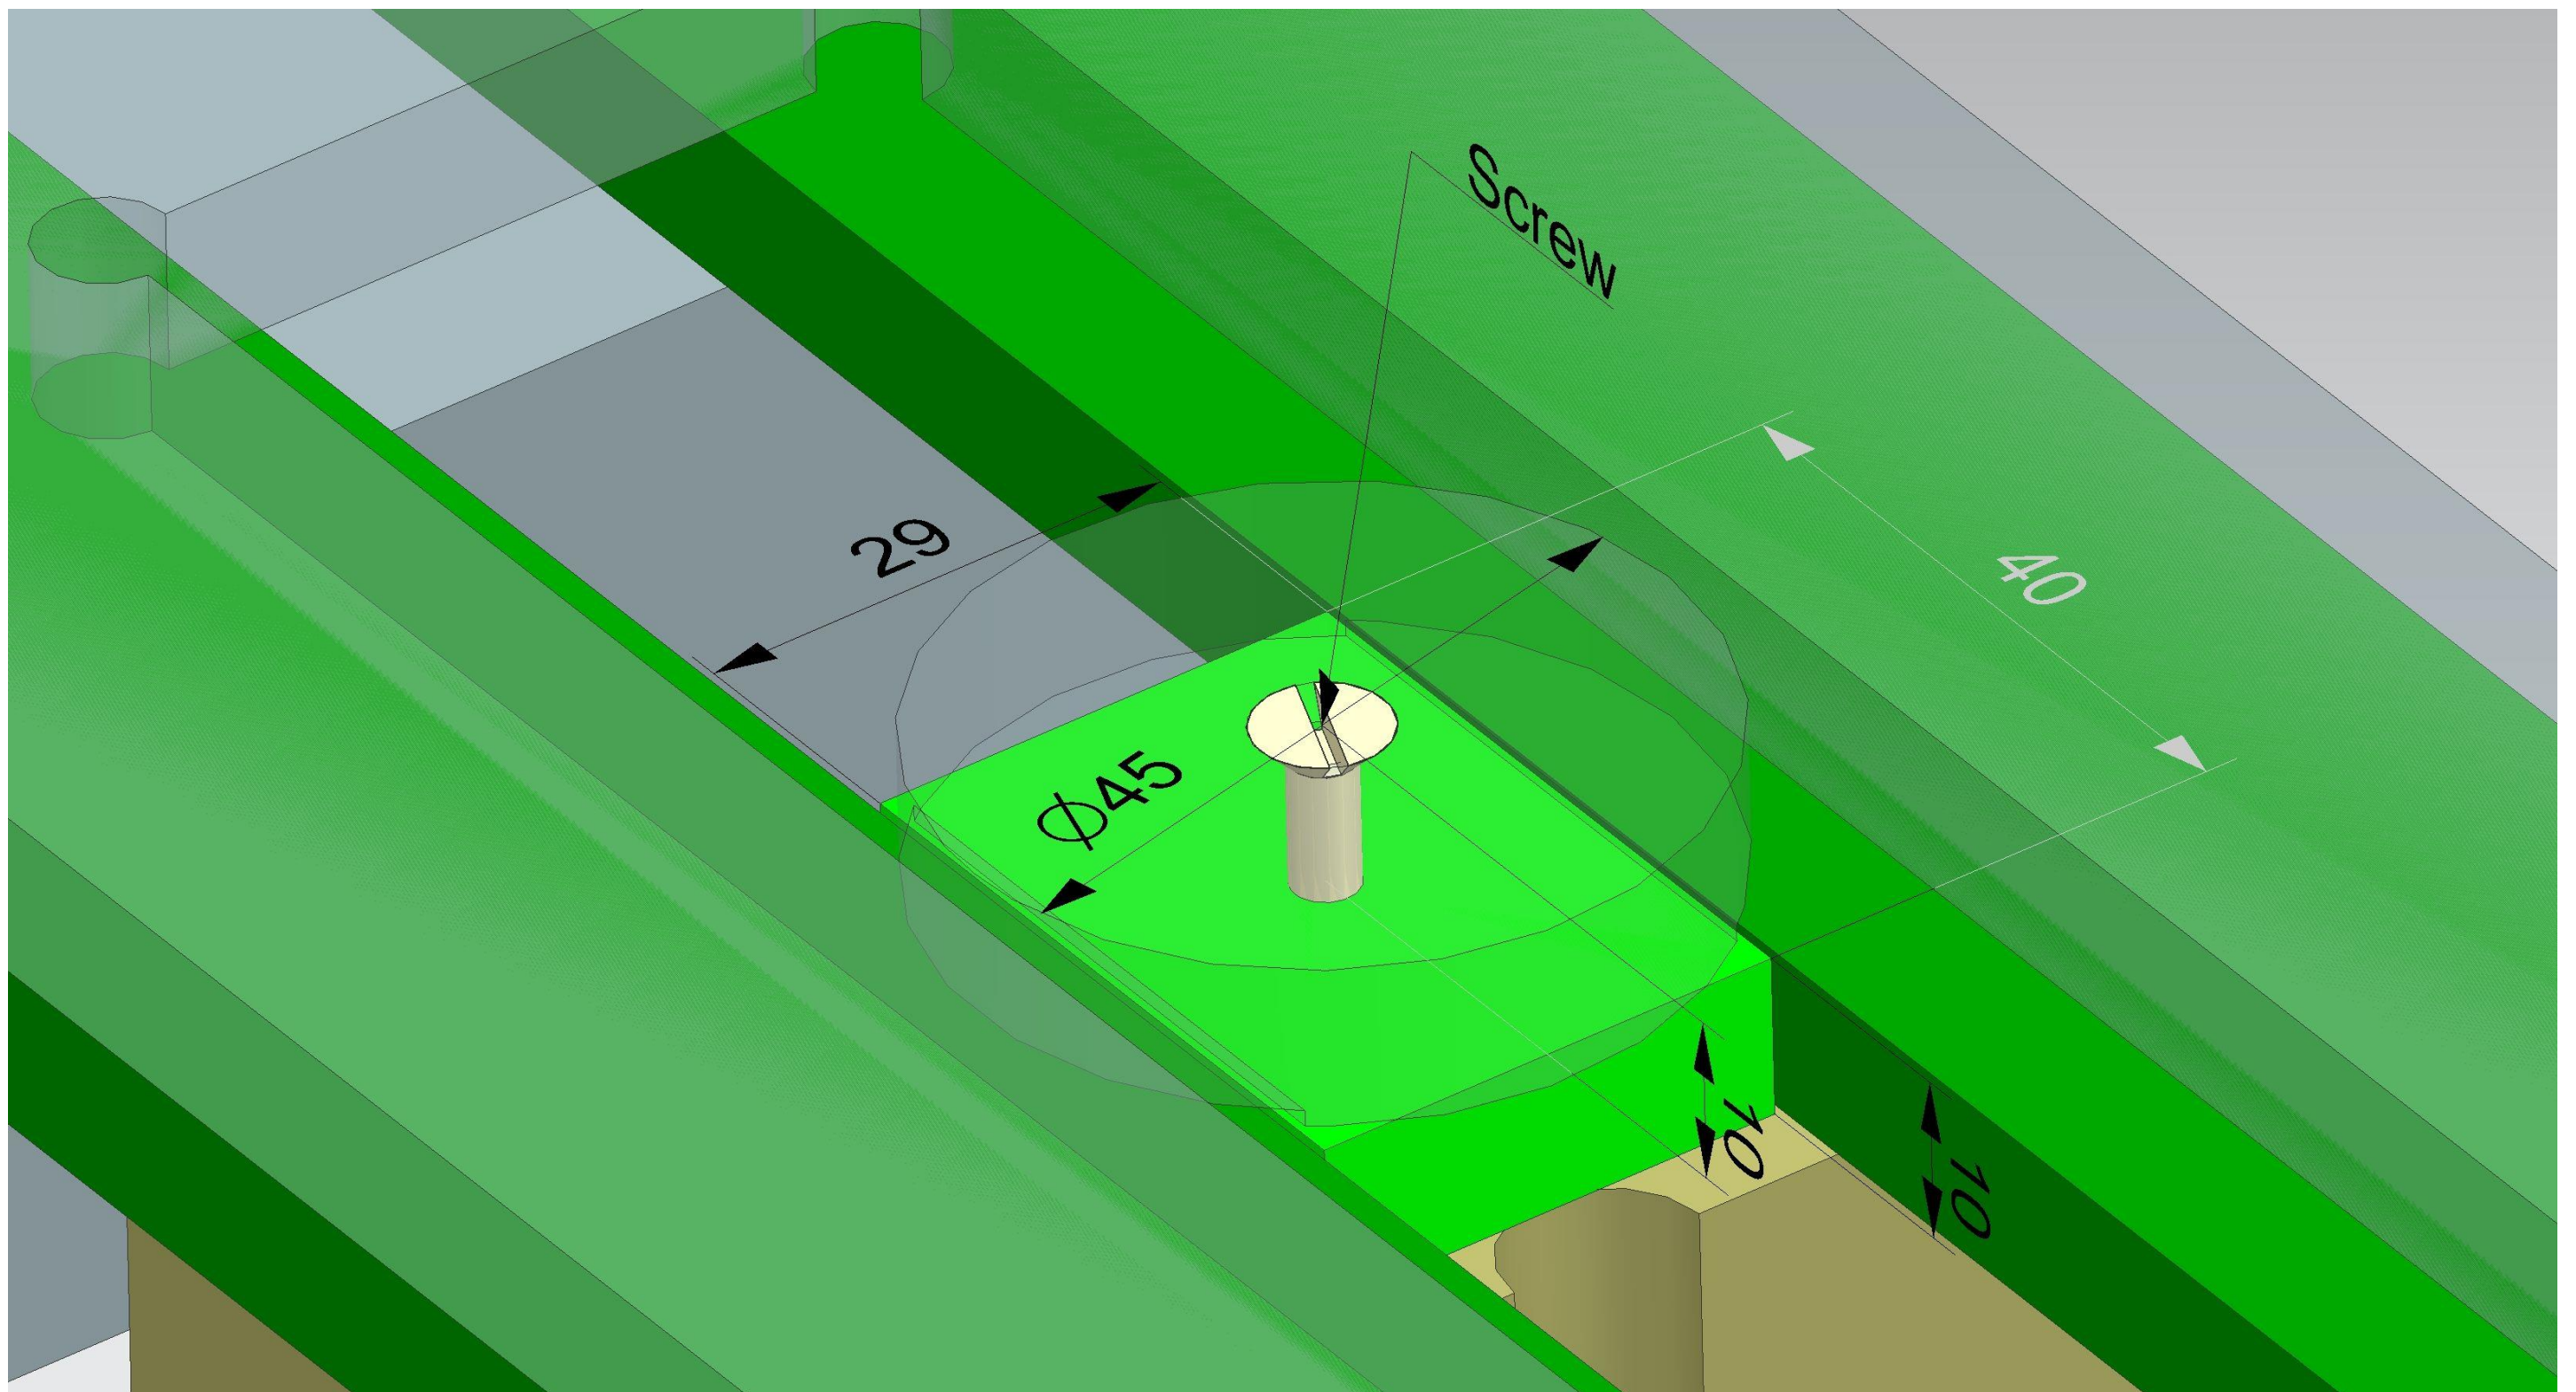

Movable jaw

