



DIY Kerfing Plane plans

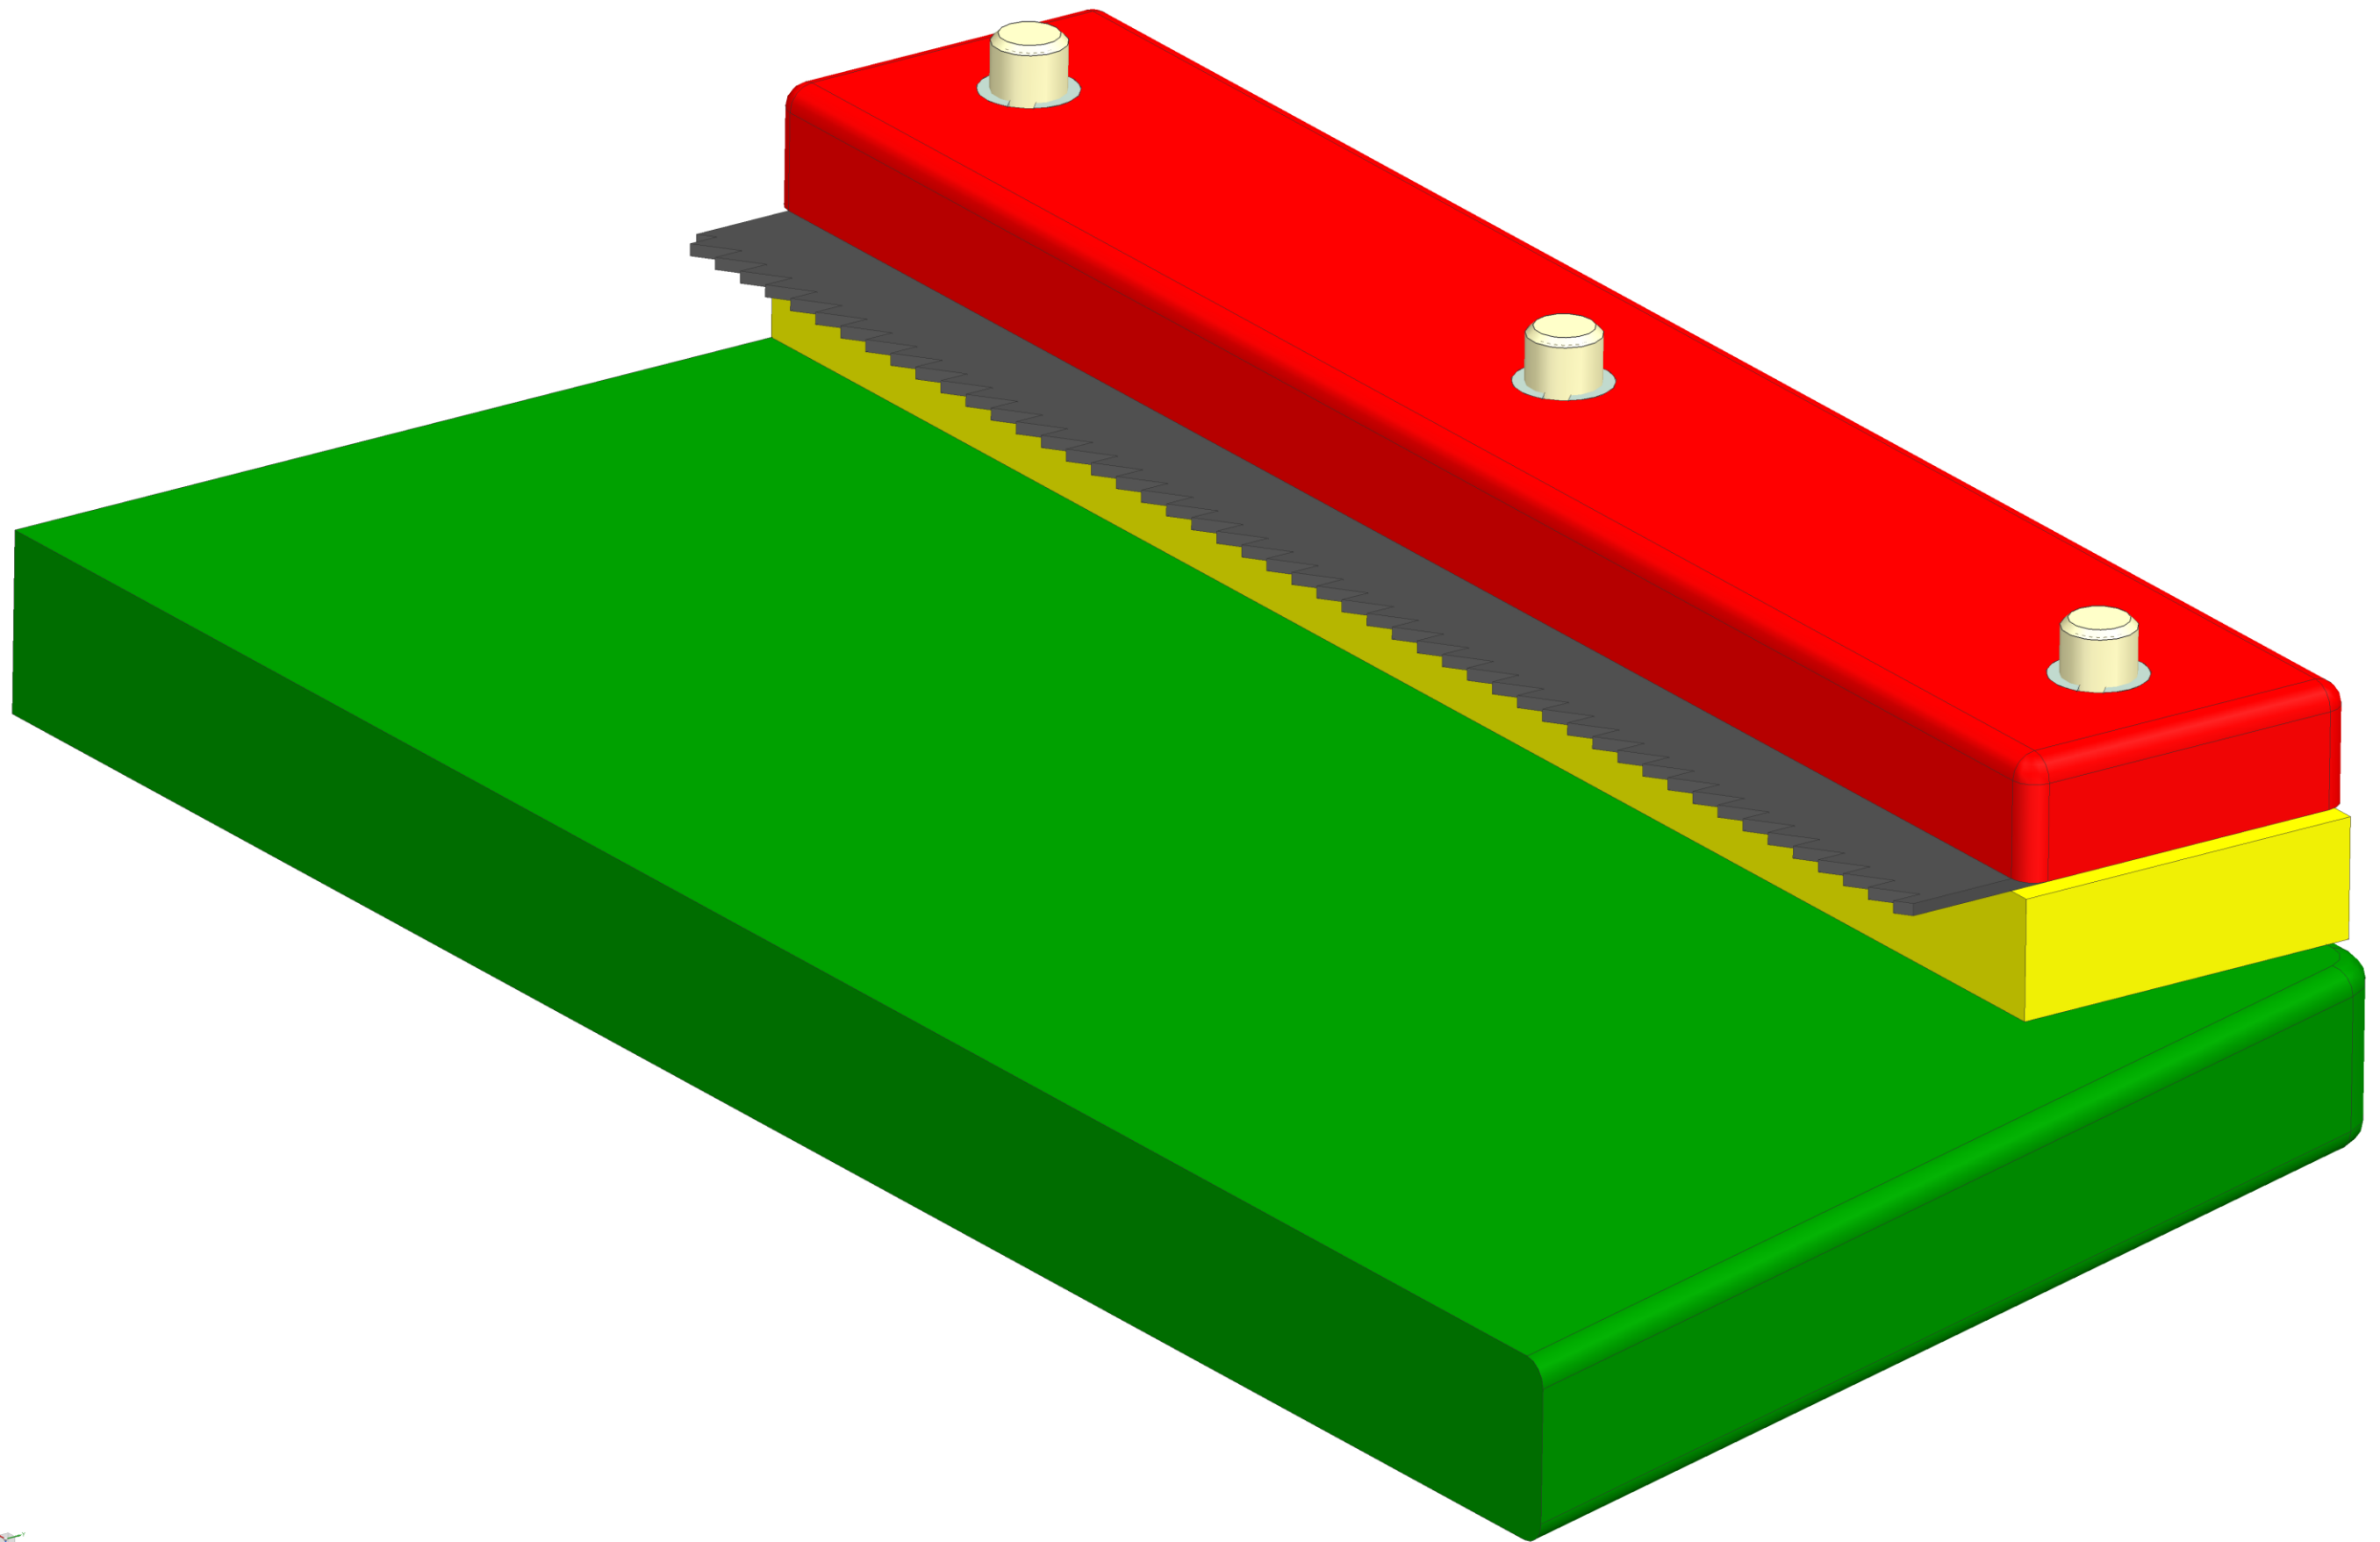



Fasteners and Materials:


1. [Flat Head Machine Screw M6x50](#) x 3
2. [Threaded Insert M6](#) x 3
3. Plywood 4 mm
4. [Plywood 6 mm](#)
5. Plywood 10 mm
6. [Plywood 12 mm](#)
7. Plywood 15 mm

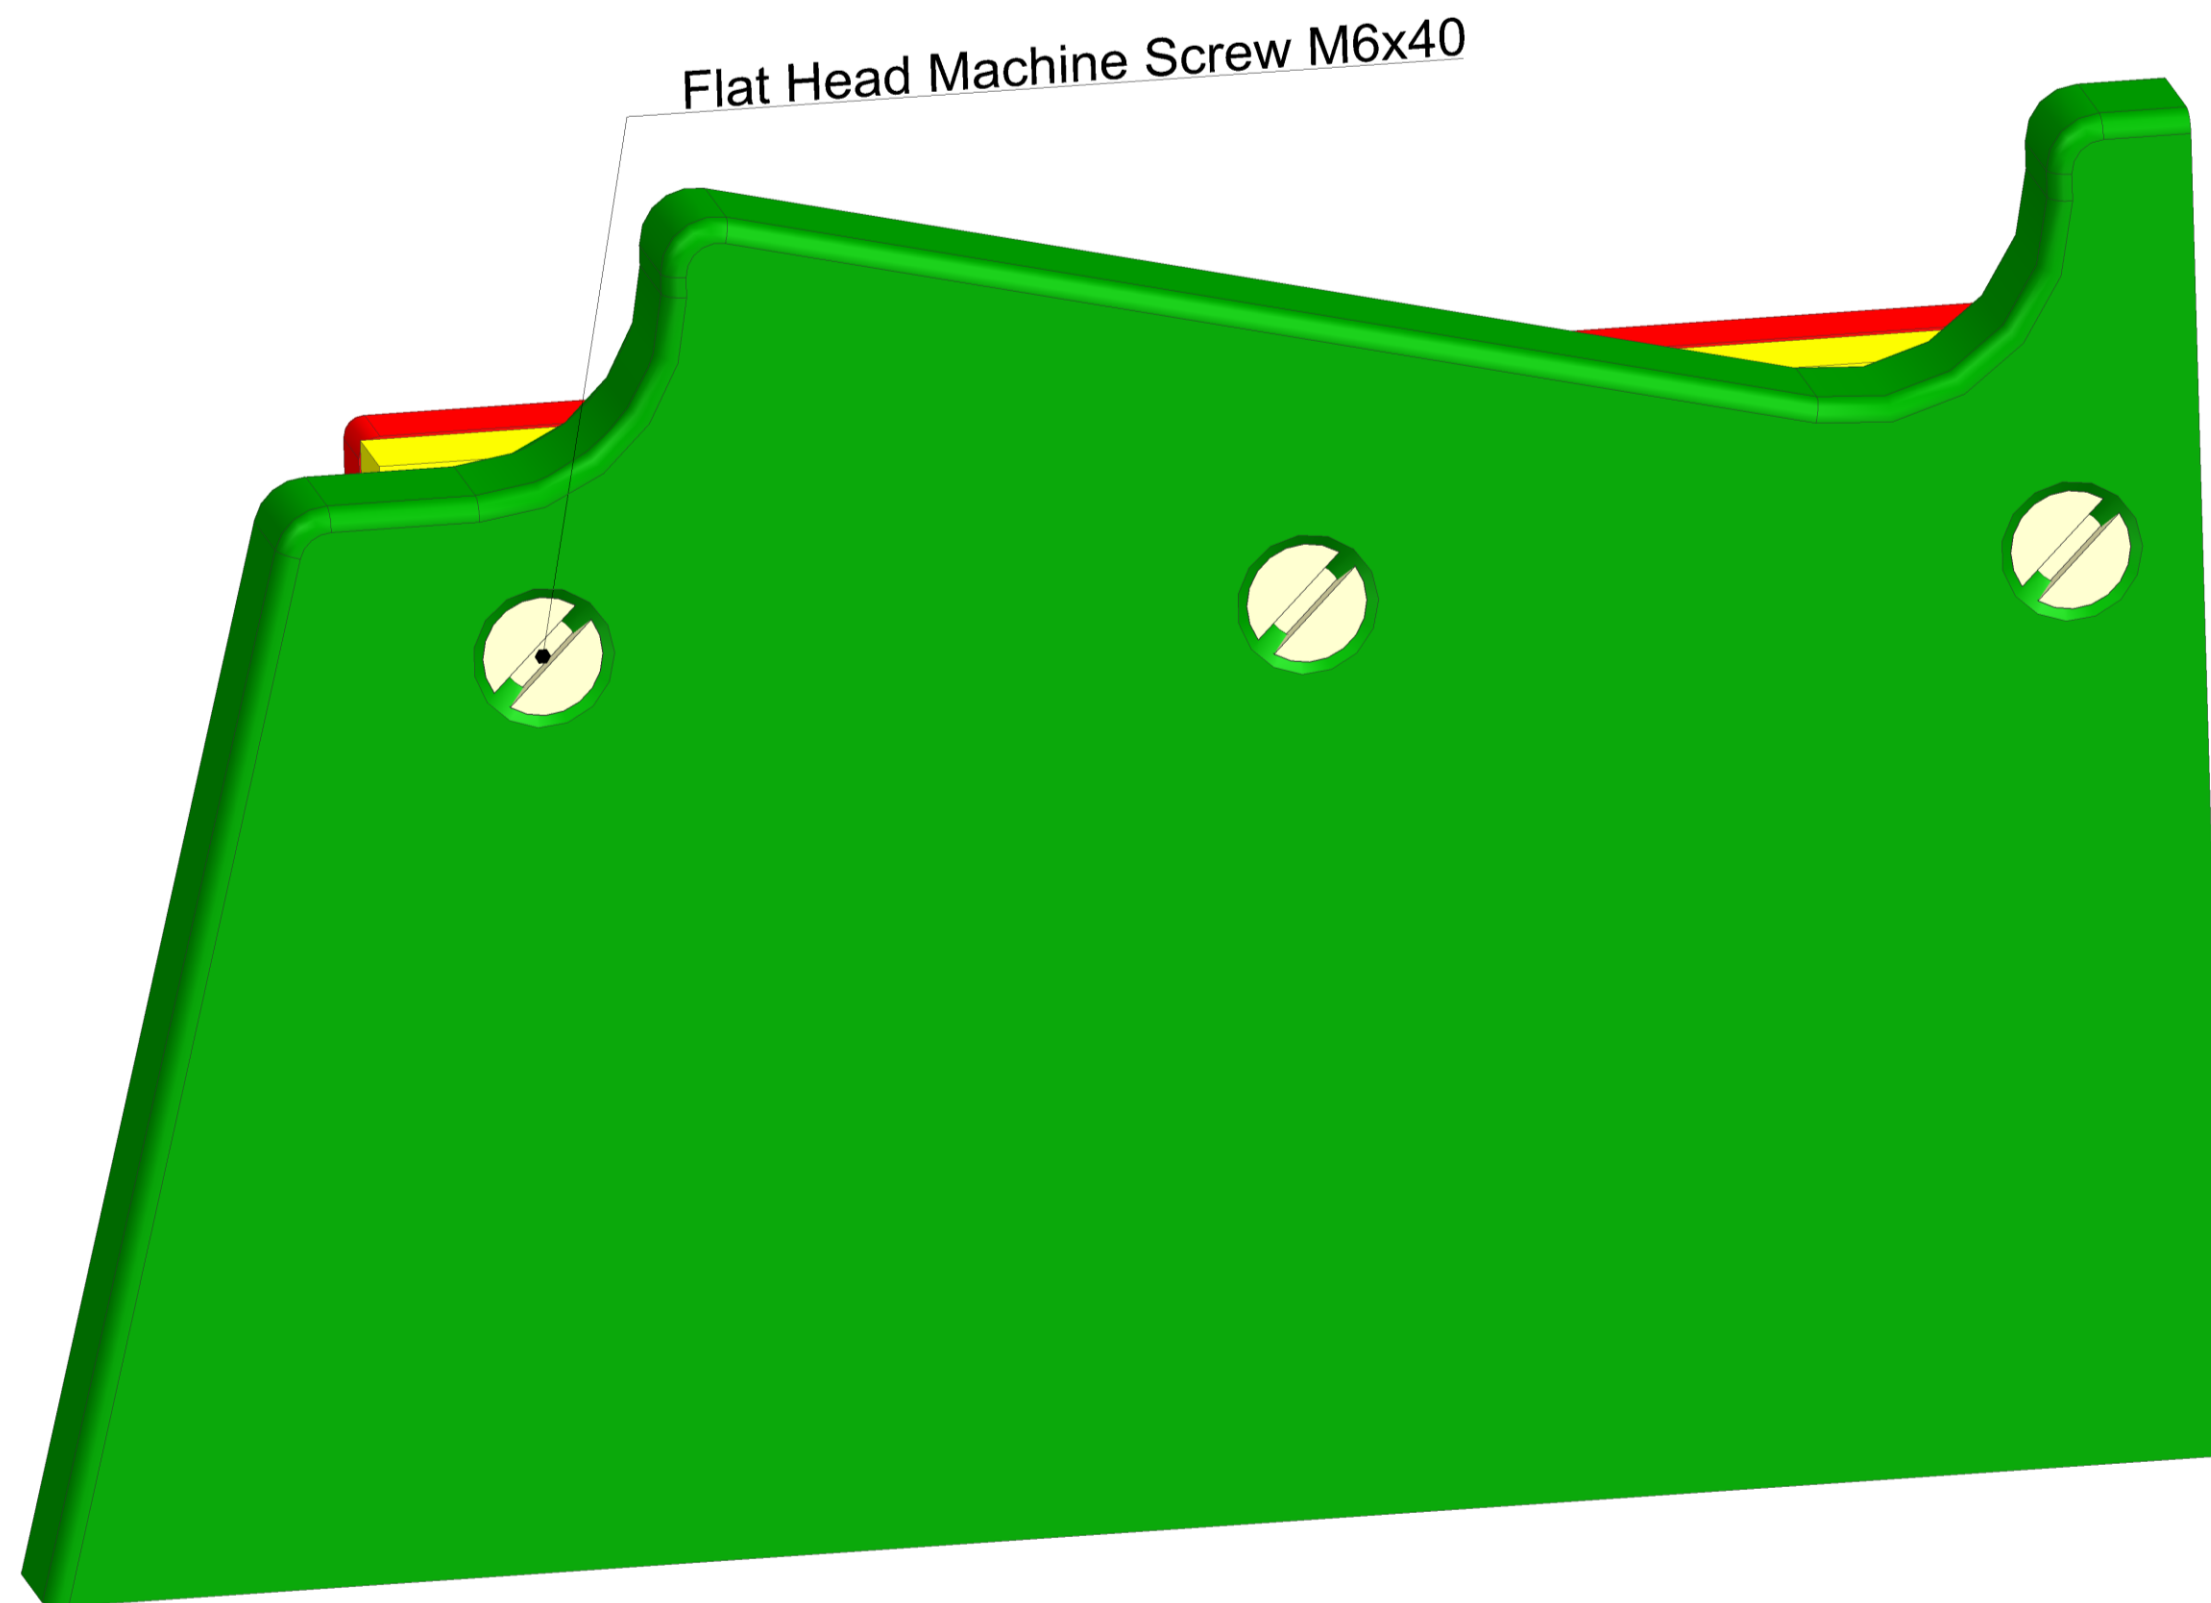



Flat Head Machine Screw M6x40


Fasteners:

- [Flat Head Machine Screw M6x50](#) x 3

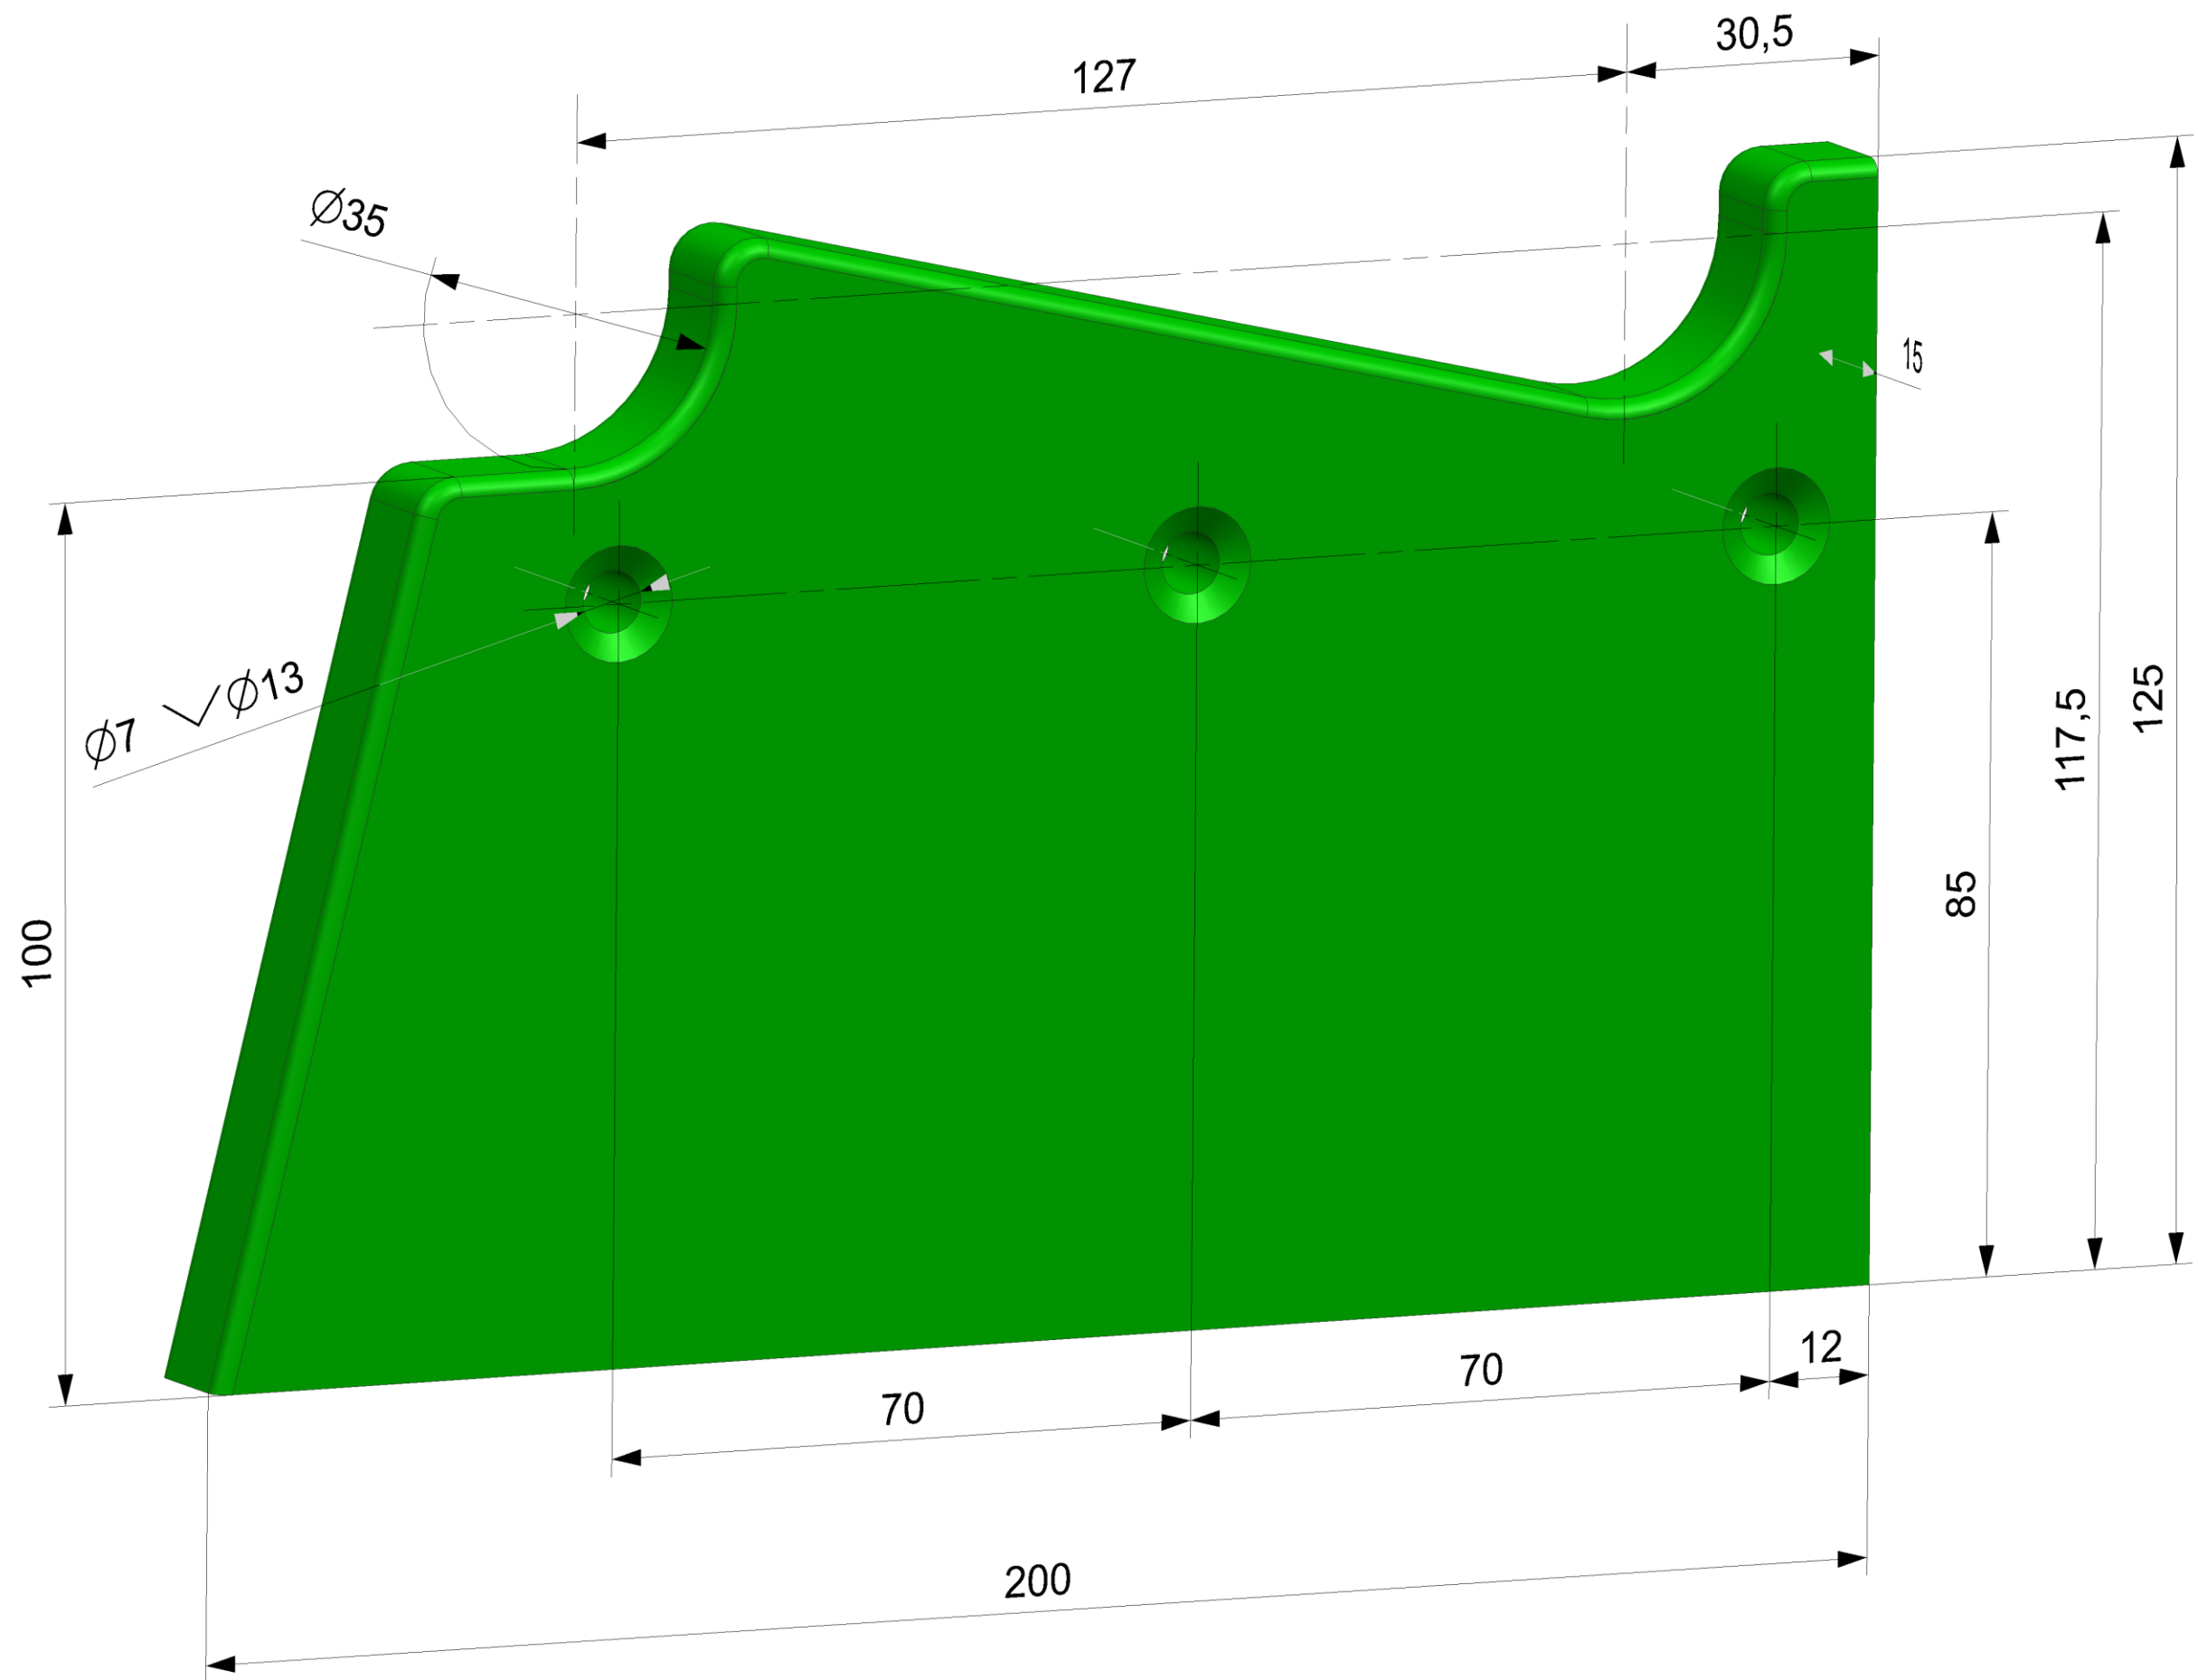

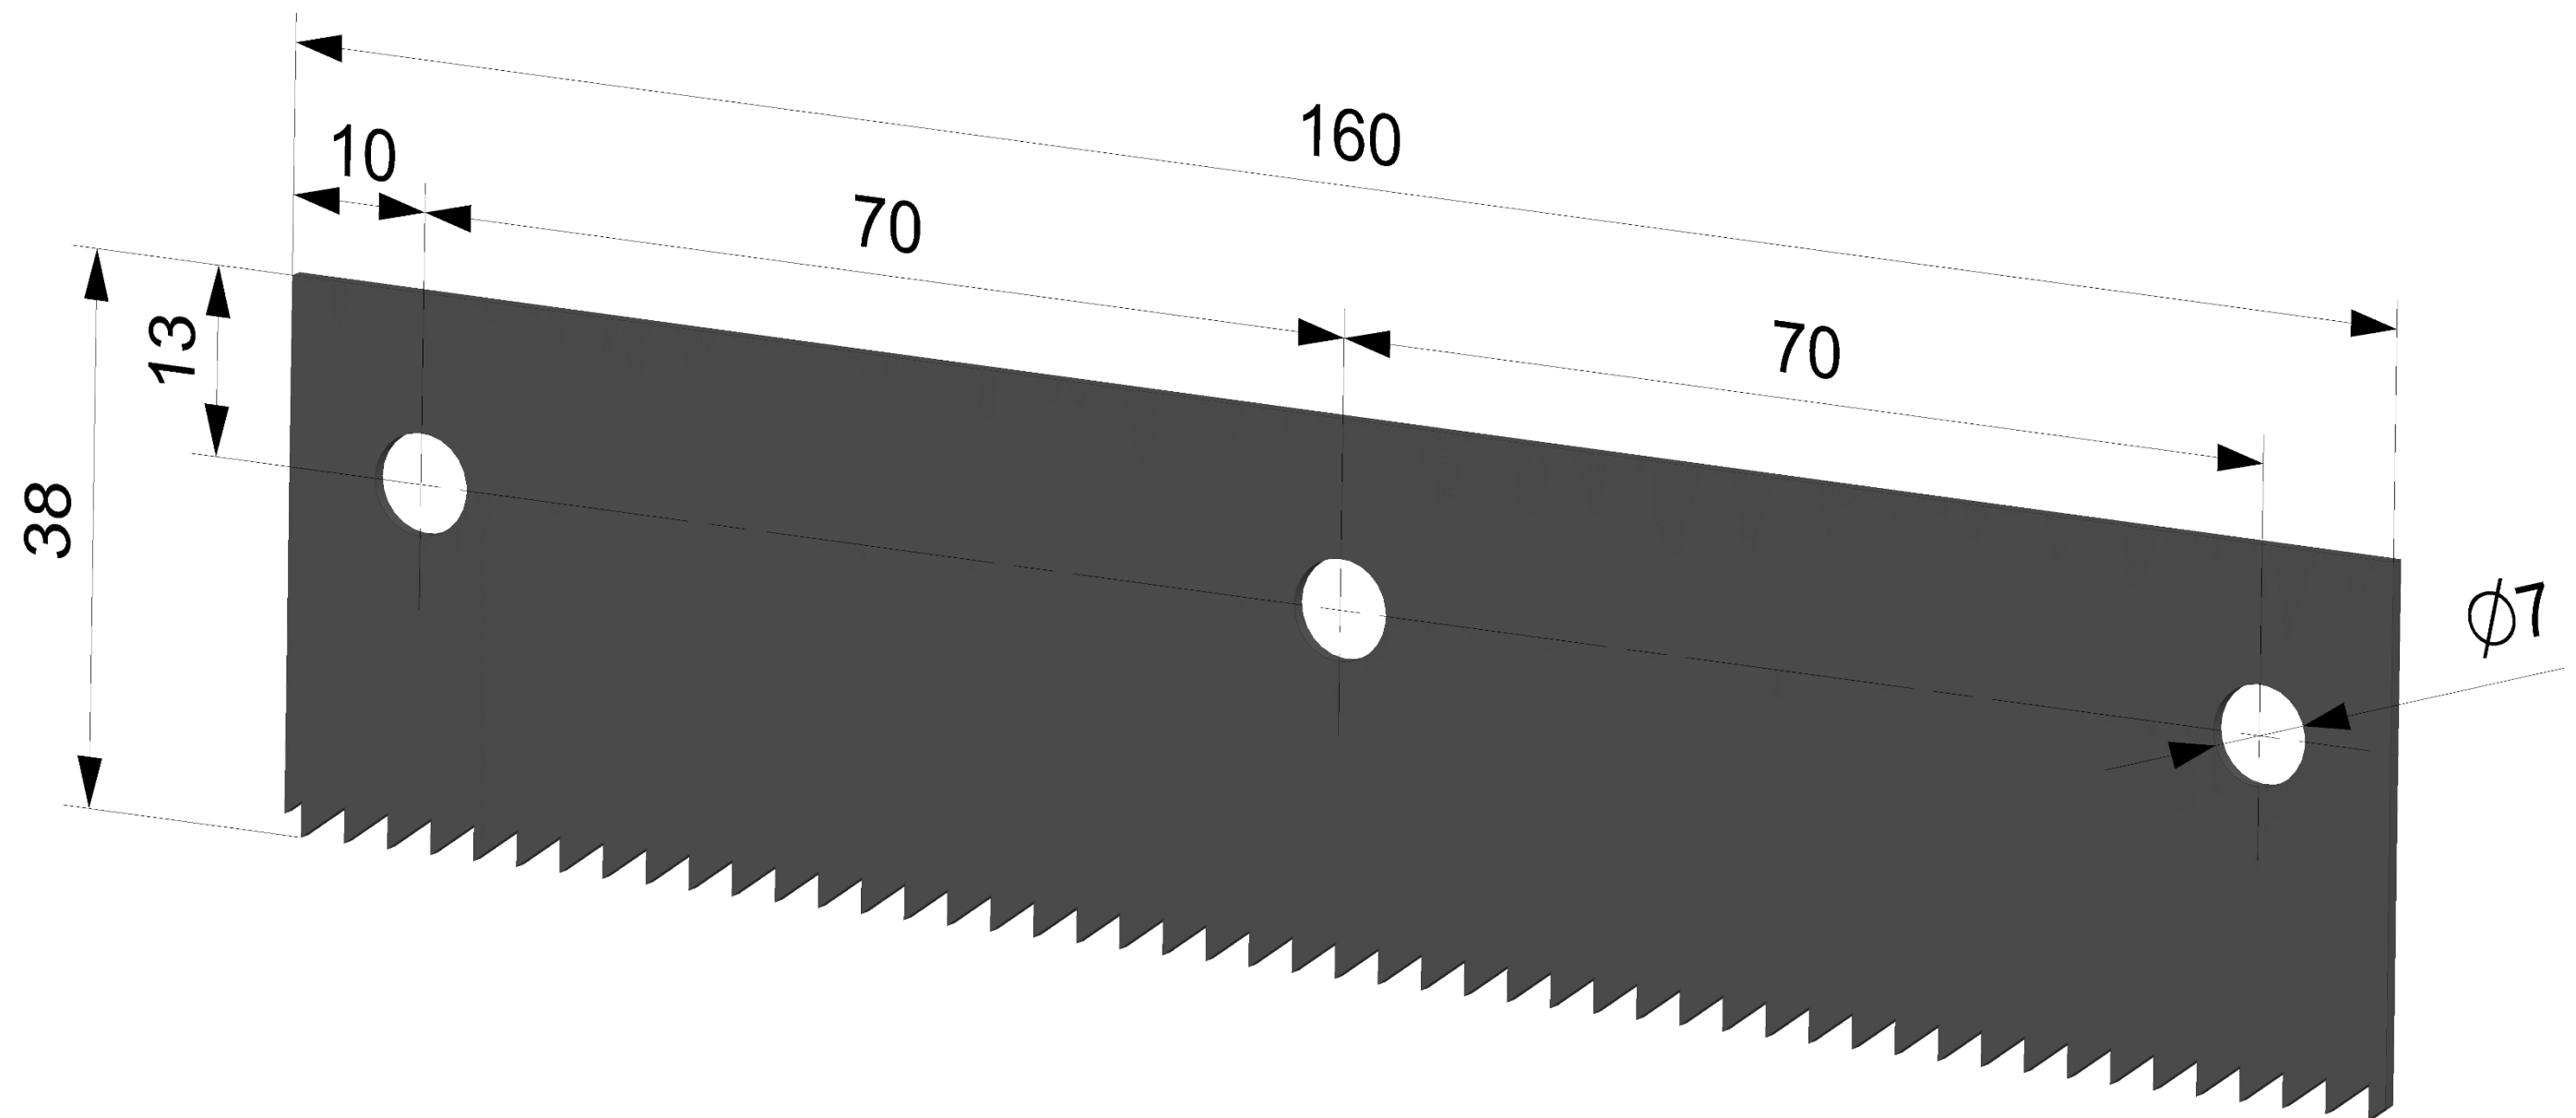

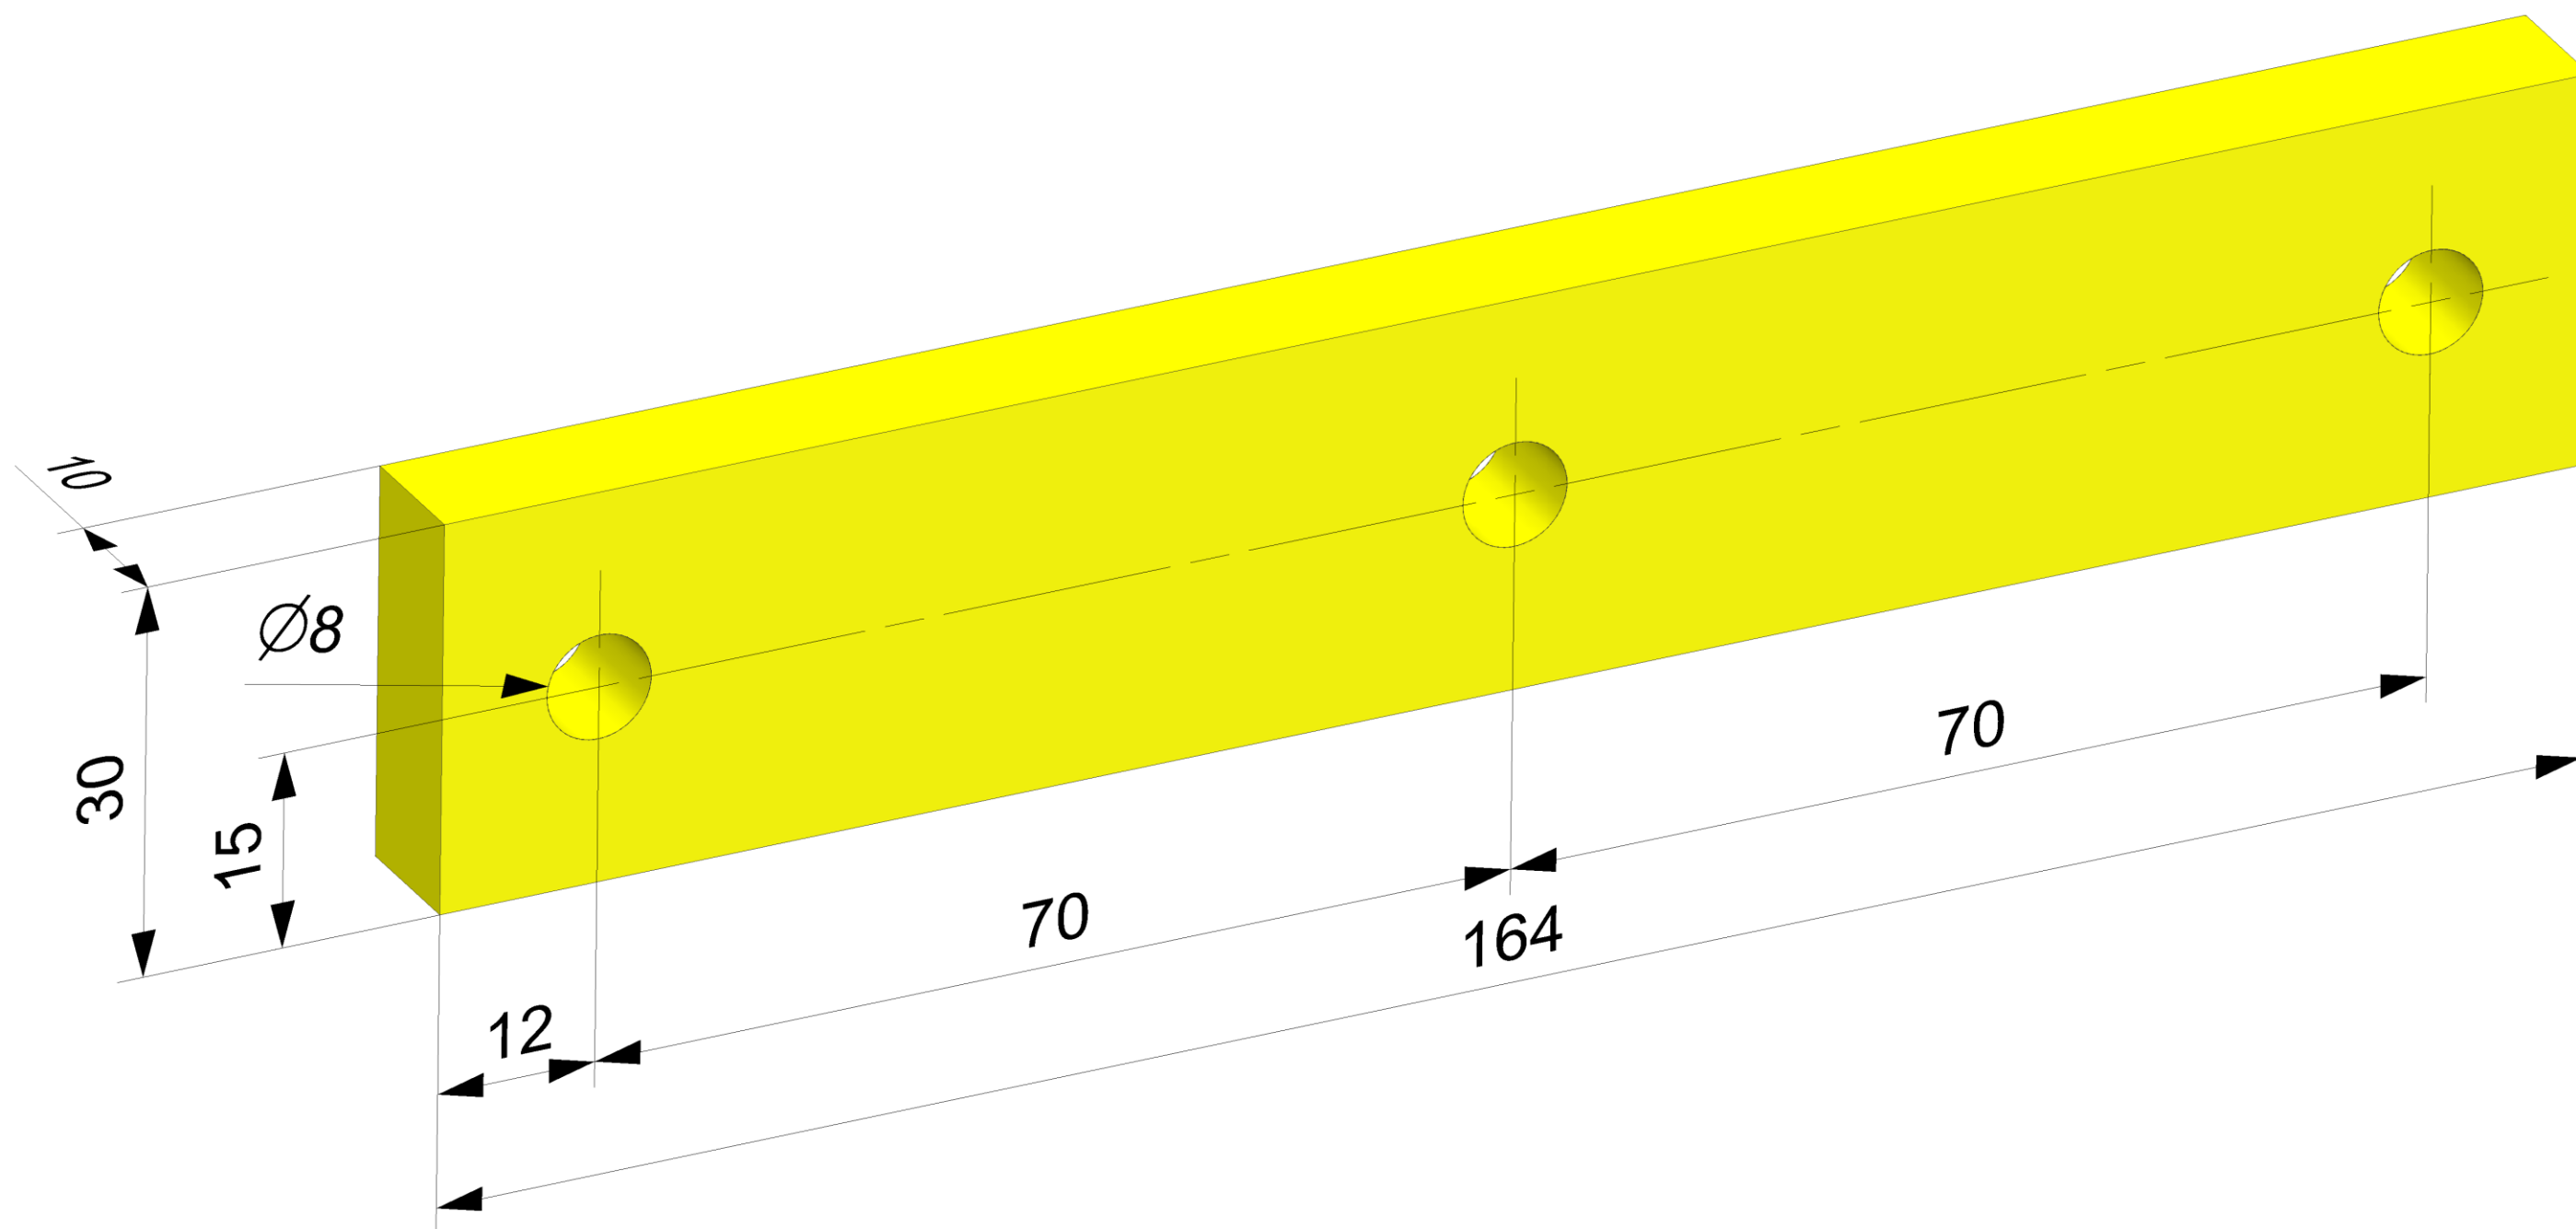


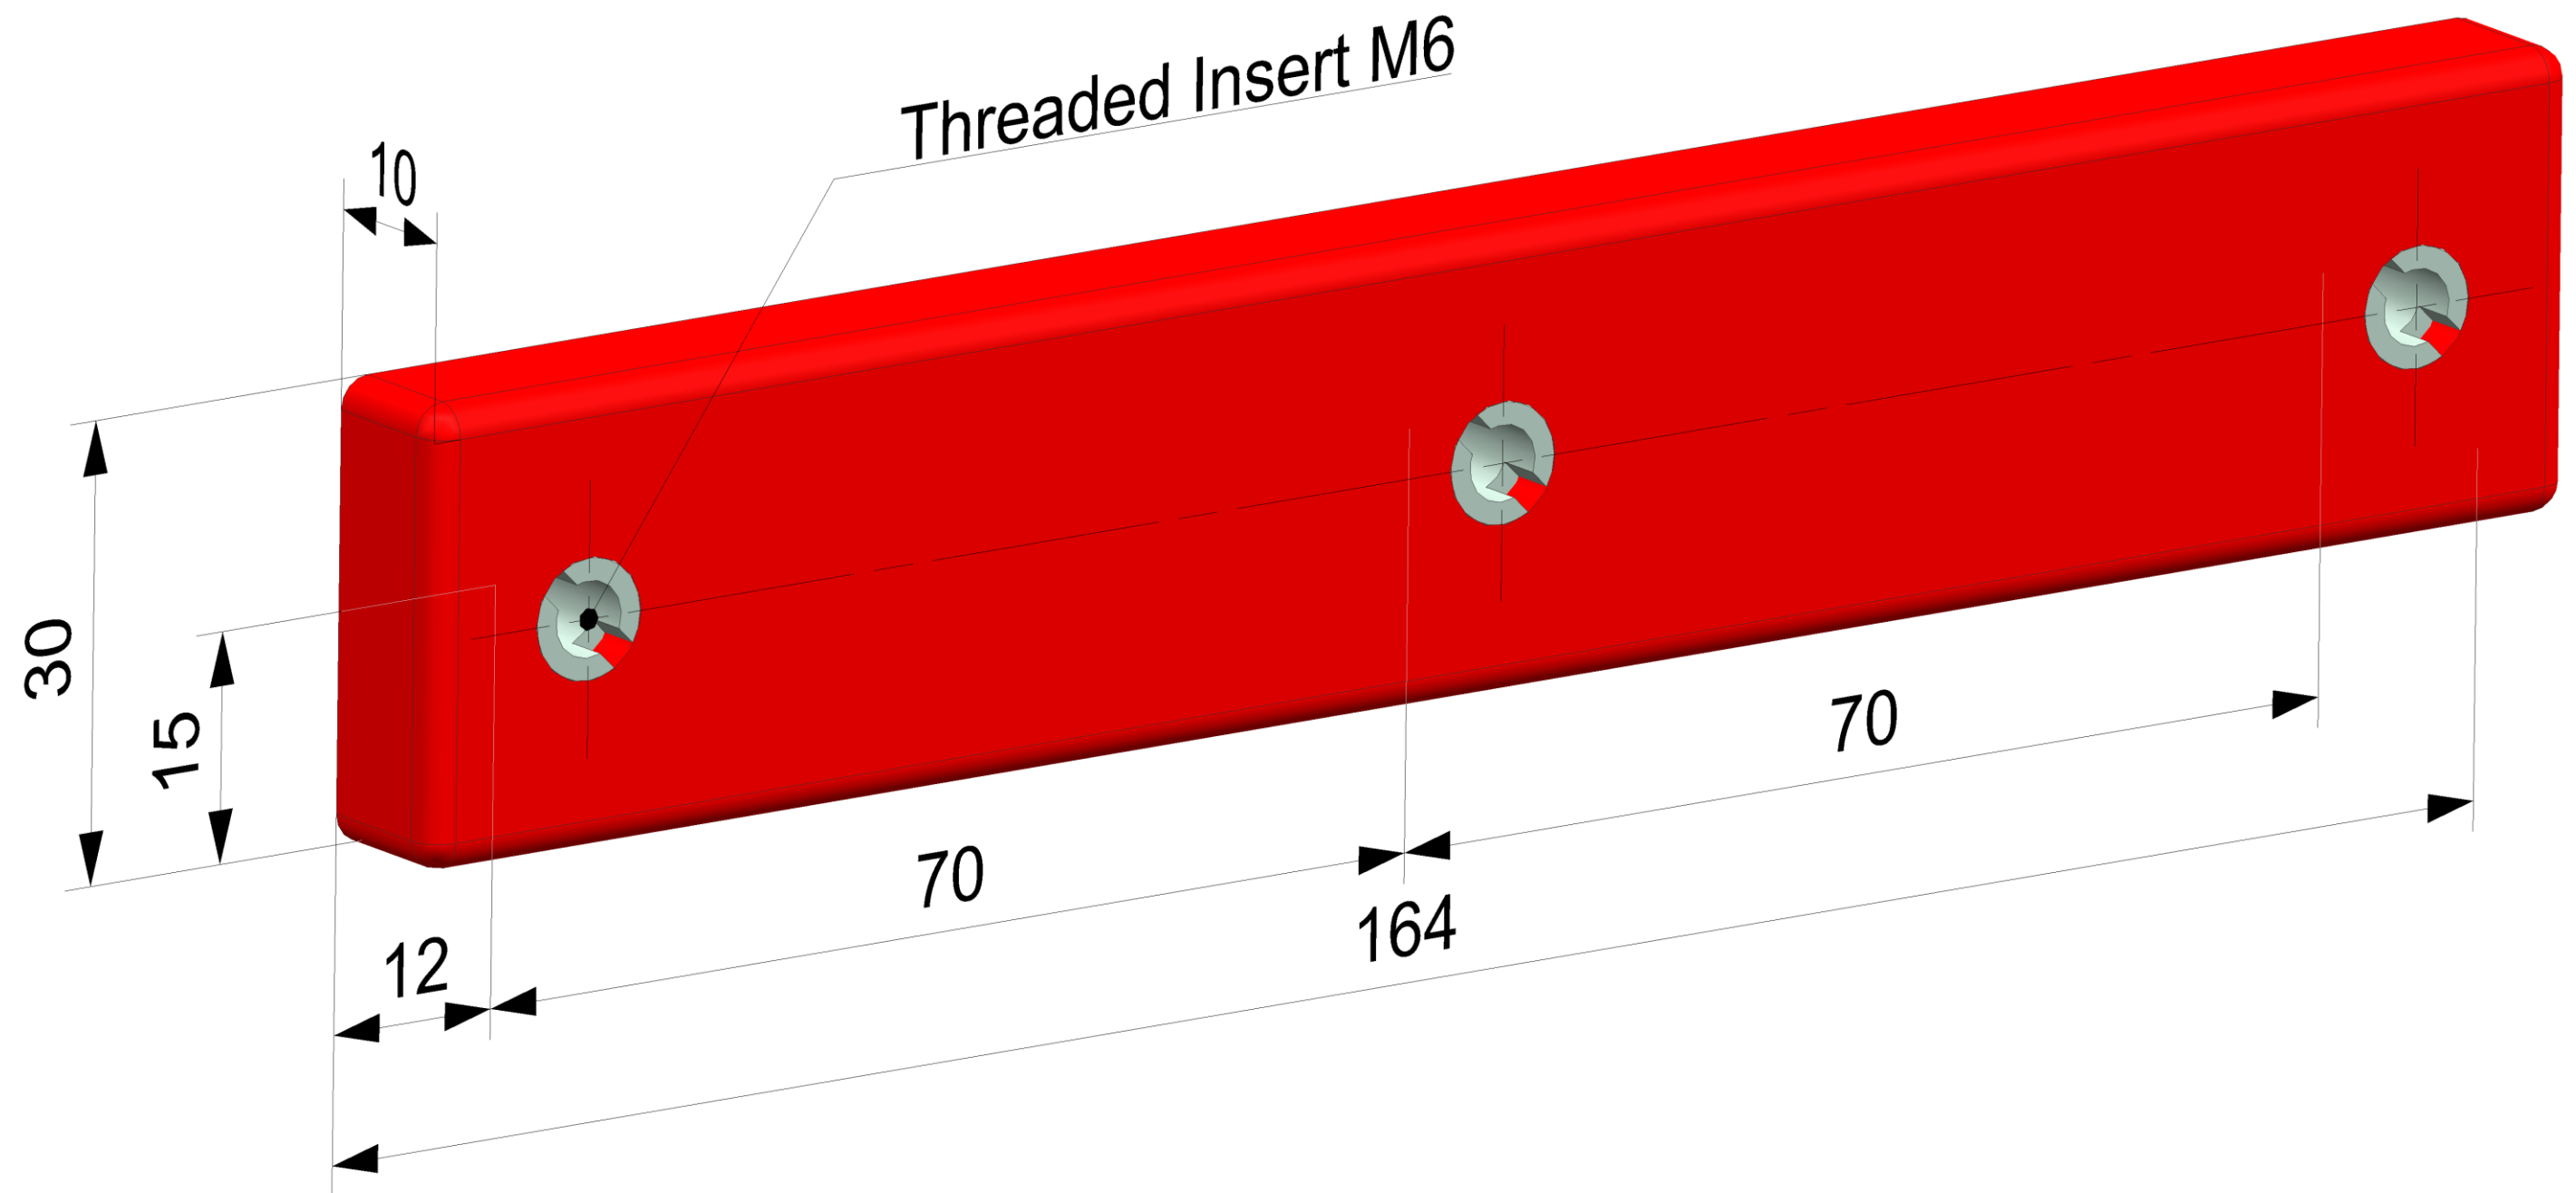


Fasteners:

- [Threaded Insert M6 x 3](#)

Flat Head Machine Screw M6x40

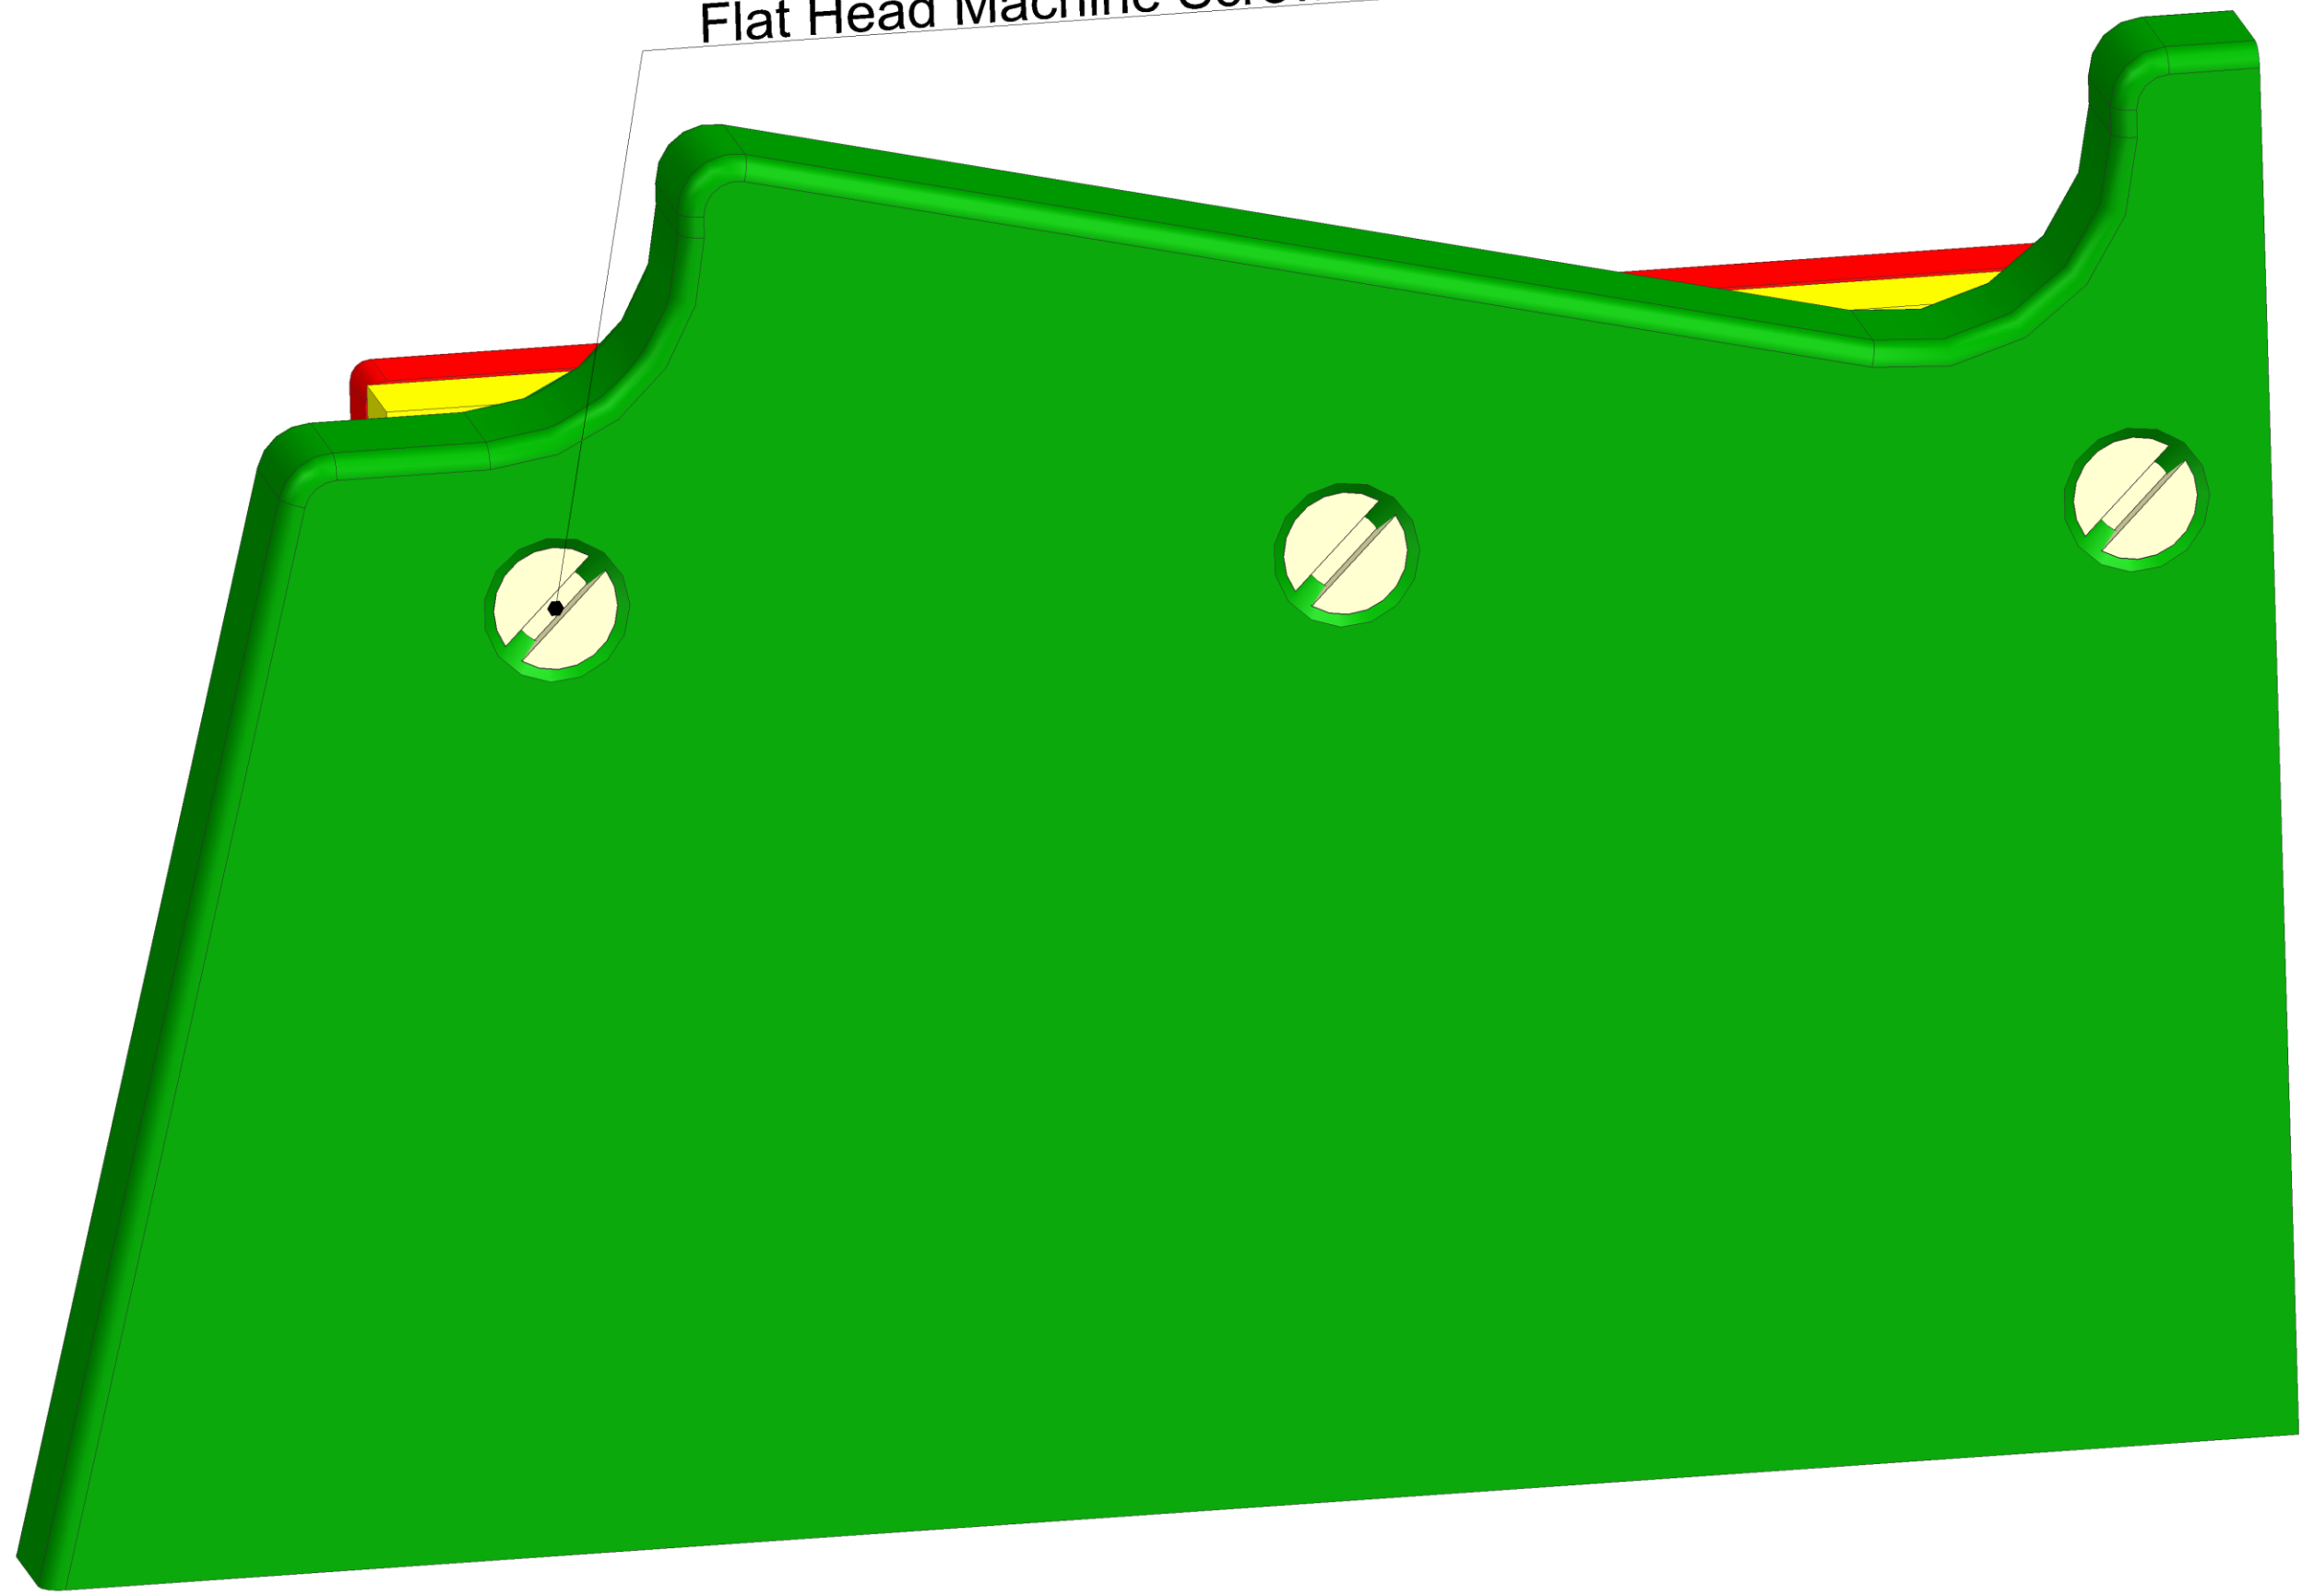

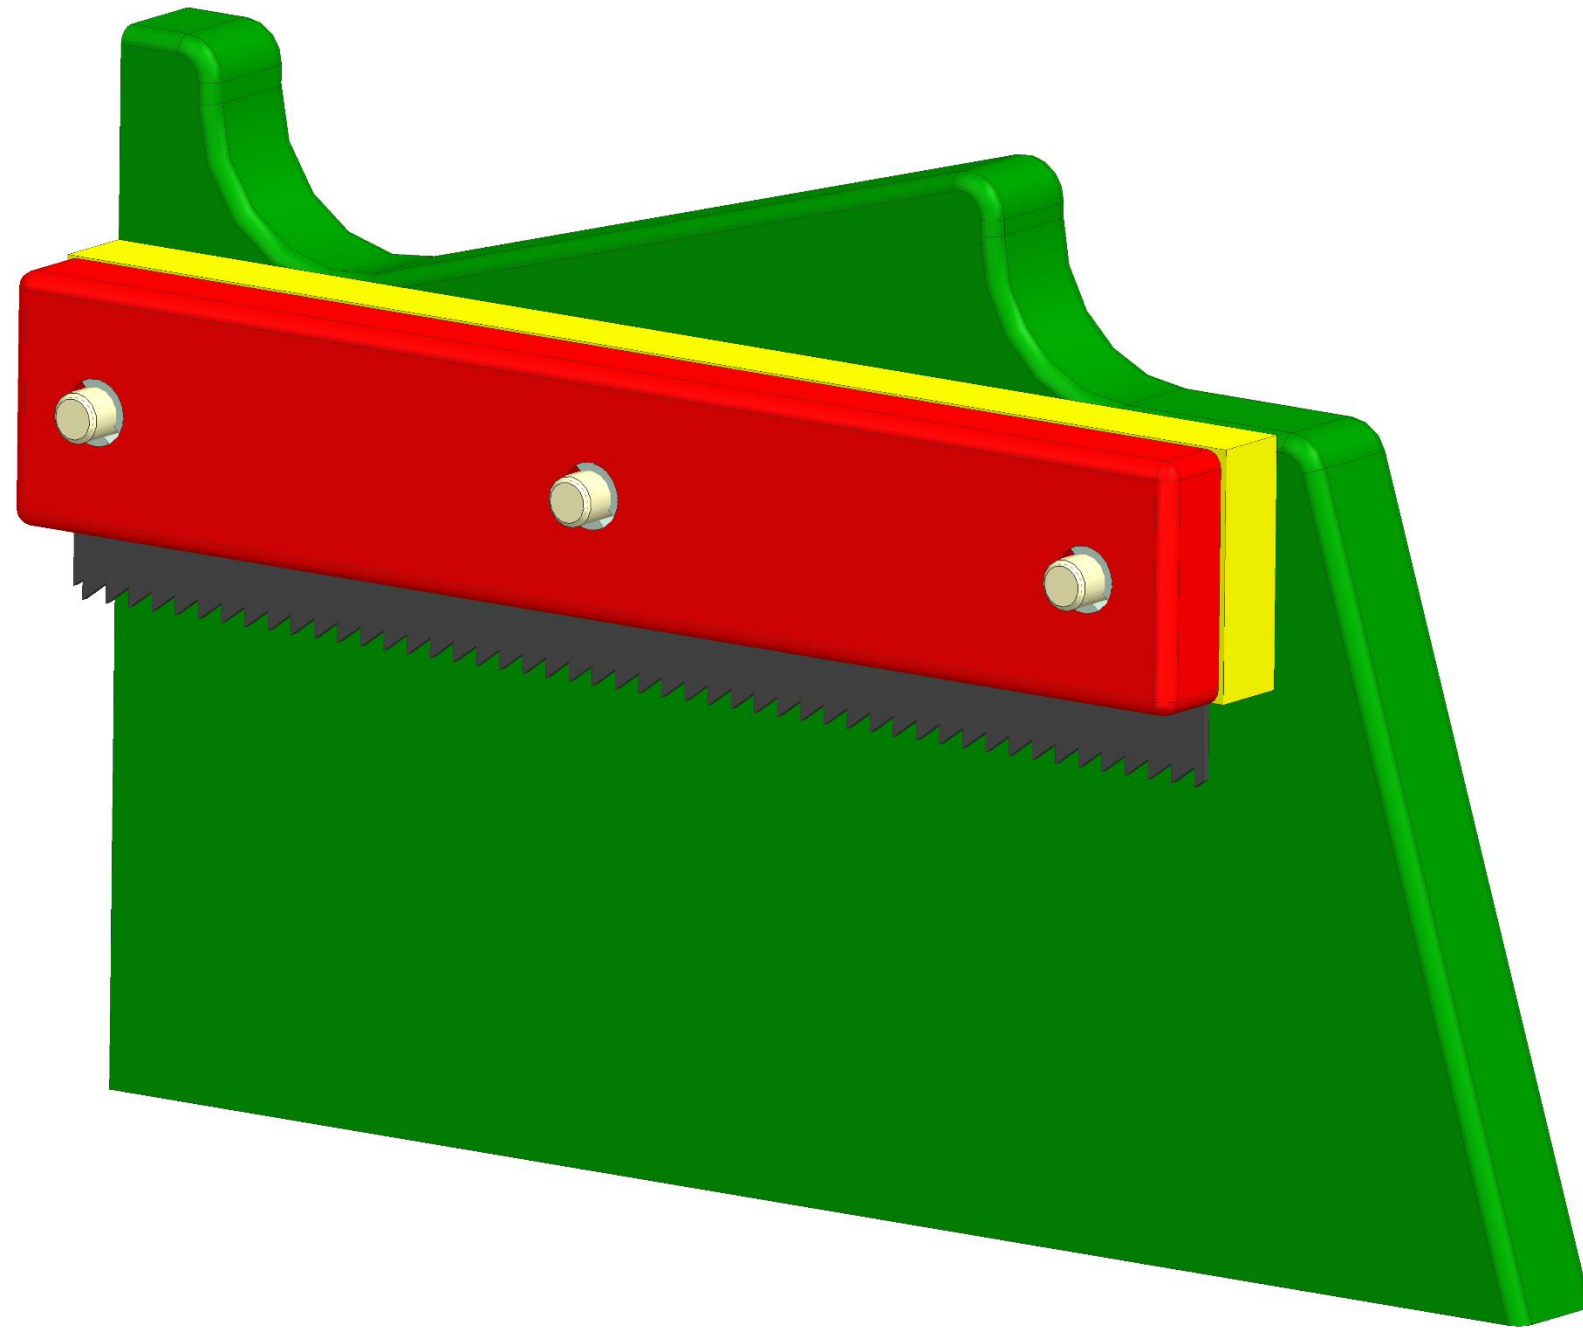

All dimensions are in millimeters (mm)

Other tools and jigs:

[DIY Angle Grinder Stand](#)

[Drill bit organizer + Plans](#)

[DIY Drill Press Stand + Plans](#)

[DIY Hold down clamps + Printable templates](#)